

Read instructions completely before installing remote control.

WARNING: If the color of the household supply wires is different than what is referred to in the instructions below, a professional electrician should determine proper wiring.

CAUTION:

- Do not install in damp locations. For indoor use only.
- Do not use with fans that have integrated remote controls.
- Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
- This unit is intended to control a ceiling fan with electrical source of AC 110/120V, 60Hz.
- To reduce the risk of fire or electric shock, do NOT use a full-range dimmer switch to control the fan speed.

• This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this

device must accept any interference received, including interference that may cause undesired operation.

ASSEMBLY INSTRUCTIONS

- 1. Use existing pull chains on the desired fan to set fan speed to high and to turn the light on.
- 1 Light Pull Chain Fan Pull Chain Chain Chain Chain Chain Chain Chain Chain Chain

I A A A A A

Black (hot/power)

White (neutral)

D

Black

Blue

Canopy

 Wrap electrical tape (not included) around each wire connector (F) down to the wire. Then, push wire connections into the outlet box. Place the Green and White wire connections on the opposite side of the outlet box from the Black and Blue wire connections.



6. Reinstall the canopy.





9 Small Plate G



A DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

- Lower the canopy of the previously assembled fan and insert receiver (E).
 Note: If installing this product with a new fan, insert the receiver (E) in the mounting bracket before wiring the fan; wire the fan according to these instructions, then continue fan assembly as directed in the fan's instruction manual.
- Disconnect existing wire connections, then secure all wire connections with wire connectors (F) and push-on connectors (D) according to diagram and these steps:
 - Connect the Blue wire with white label from the receiver to the Blue fan wire.
 - Connect the Black wire with white label from the receiver to the Black fan wire.
 - Connect the White wire with white label from the receiver to the White fan wire.
 - Connect the Red wire with red label from the receiver to the Black (hot/ power) supply wire.
 Connect the White wire with red label from the receiver to the White (neutral) supply wire.

- Turn on power supply and wall switch to the fan and wall control.
- 8. Remove the battery cover from the back of the remote (A) and install the two AAA batteries (C). Replace the battery cover and press the fan power button to ensure the LED indicator illuminates and the fan turns on.
- If desired, the wall bracket (B) can be attached to a wall using the mounting screws (G). Slide small plate over mounting screws (G), then rest the remote (A) in the wall

OPERATING INSTRUCTIONS

bracket (B) for easy storage.





Fan - Turns fan on and off. **Note:** Use fan pull chain to adjust fan speed as desired.

4

Antenna

Red

Black

Blue

White White

Light - Turns light on and off.

Learn - Syncs remote control to receiver. The remote was synced at the factory. Should it become necessary to re-sync the remote, turn off the main power, then turn it back on. Within 30 seconds, use a small screwdriver to press and hold the learn button on the remote for 3 seconds. The fan will turn on and light (if applicable) will blink three times, signaling a successful synchronization.

