




Pre-Lit Christmas Trees With Easy Light Technology®

Eliminates cord connections

Color Choice® LED Technology Assembly Instructions

Nicolas Holiday Ltd. thanks you for purchasing this pre-lit Christmas tree. Should you have any problems with your tree, visit us at www.geholidaylighting.com for more information. You can call our toll free number at 1-877-398-7337. Check our website for latest service hours and assembly instruction videos.


TREE ASSEMBLY DIAGRAM

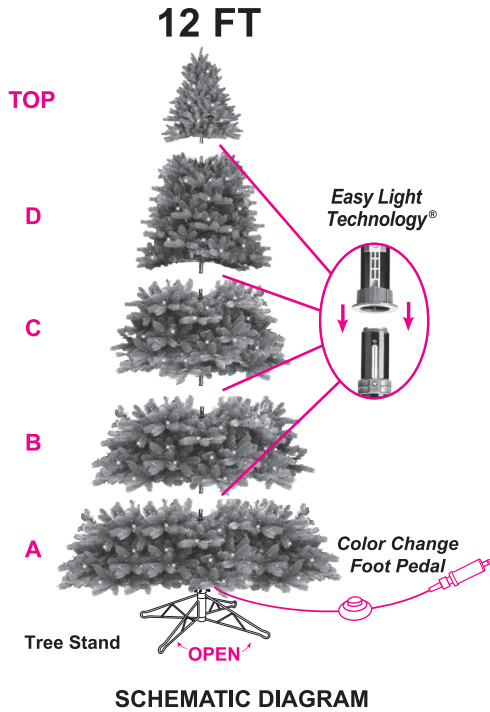


NOTE: No tools required

	Tree Sections	Tree Stand	Approx. Asm Time*
12 ft tree	5	Metal	5 – 10 minutes

- 1 Carefully unpack the carton. Remove bubble wrap and inspect the sections of your tree. **The carton should include sections labeled "A", "B", "C", "D" and "Top", as well as a Tree Stand.**

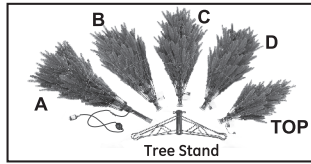



- 2 The tree stand should be open and set at 90° angle.

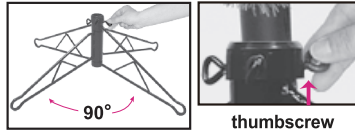

- 3 Insert Section labeled A into tree stand, tighten the thumbscrews. Then insert the plug into an electrical wall outlet.



- 4 Untie RED twist-tie to release branch panels. All branches should fall into place with a gentle pull on the outer layer of branches. **Fig. A. Start at the inner and stagger the tips. Move each tip up to 40°.** **Fig. B. Make tips 2 & 3 to horizontal, tip 4 to vertical and tips 5 and 6 up to 45°.**

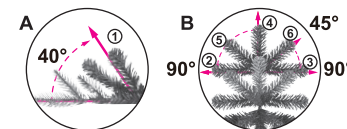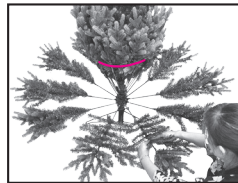

- 5 To assemble the section labeled "B" (or "C" or "D"), properly align and insert section "B" (or "C" or "D") into the top of section "A" (or "B" or "C"). (See Fig. C) Adjust branch tips, as needed, for a fuller look.

 


Fig. C
It is important that you align the mark when you connect two tree sections.

- 6 Repeat "Step 4" for shaping.




- 7 To assemble the tree top, properly align and insert the "TOP" section into the top of section "D". (See Fig. D) Adjust branch tips, as needed, for a fuller look.



Fig. D
It is important that you align the mark when you connect two tree sections.

- 8 Gently press on foot pedal to select the desired lighting function. (See below)

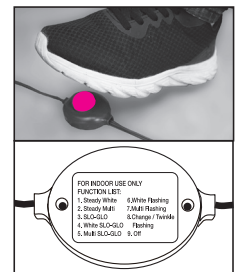

Troubleshooting Tips

If the tree does not illuminate, try stepping on the **Color Change Foot Pedal** and make certain the wall switch is turned on. If one section of your tree does not illuminate, check that section for loose or missing bulbs, all factory connections are properly made or that you properly made all the electrical connections between each tree section, i.e., tree plug to extension cord outlet.

DISCLAIMER : DO NOT USE OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. DOING THIS, WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

Disconnect the decorative item from the power source before performing any maintenance or cleaning.

For indoor use only 120V

THIS IS NOT A TOY, FOR DECORATIVE USE ONLY.
GE is a trademark of General Electric Company
and is under license by Nicolas Holiday Ltd.

Nicolas Holiday Ltd.

©2023 Nicolas Holiday Ltd.
Suite 2706 Skyline Tower, 39 Wang Kwong Road, Kowloon Bay, Kowloon, Hong Kong
All rights reserved. Printed in China **NHL Model No. 23140LO**

Tree Storage

1. Remove the tree's main extension cord plug from the wall outlet.
2. Starting at the top, disconnect the "TOP" from section "D" and then disconnect section "D" (or "C" or "B") from section "C" (or "B" or "A") **{Fig. 1}**
Note: Gently fold the tips in branches and fold the branches up toward the center. **{Fig. 2}**
Care should be taken to avoid damage to the lights.
3. Remove section "A" from the tree stand and close tree stand to place into the carton.
4. Refer to the drawing on how to repack your tree. **{Fig. 3}**

①



②



③ 12 FT TREE



Spare parts included	
Qty	22 pcs

