
ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench

(Included)

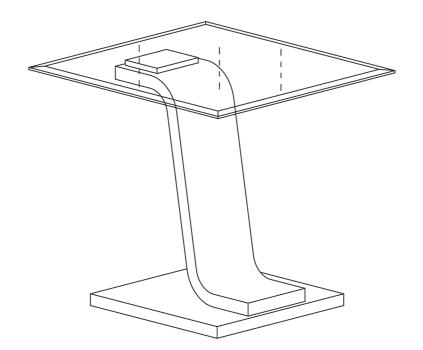



2 - People Recommended

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 20-12-23



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

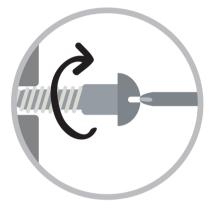

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

END TABLE



- · Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

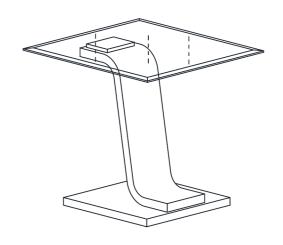


PARTS











   







Glass Top

Base

Iron box

Support Leg

HARDWARE





Chromed Bolt Ø1/4" x 1-3/4"

4pcs



4pcs

Bolt Ø1/4" x 1-1/2"



Chromed Flat Washer





Flat Washer

4pcs



Adjuster Ø1/4" x 1/2"

(#F) 1pc



Allen Wrench

is packed in 2 cases

Carton	Designation	Part	Hardware
	Glass	#1	
	Base	#2	#A 4pcs Chromed Bolt Ø1/4" x 1-3/4" #B 4pcs Bolt Ø1/4" x 1-1/2"
	Iron box	#3	#D 4pcs Chromed Flat Washer #D 4pcs Flat Washer #E 4pcs
	Leg	#4	Adjuster Ø1/4" x 1/2" #F) 1pc Allen Wrench

ASSEMBLY INSTRUCTIONS

1

Part #1 x1pc


Part #4 x1pc

Hardware #A × 4pcs

Hardware (#C) x4pcs

Hardware (#F) x1pc

- I. Carefully place the glass top (#1) onto a protected surface.
- II. Align the two support leg (#4) to the pre-drilled holes on the glass top (#1).
- III. Prepare 4 bolt assemblies by inserting a chrome flat washer (#C) onto the bolt (#A) and secure using the Allen wrench (#F).

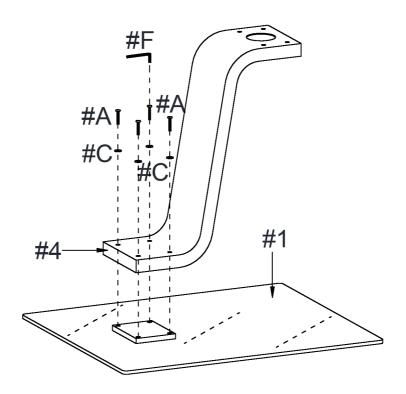

ASSEMBLY INSTRUCTIONS

2

Part #2 x1pc

Part #3 x1pc

Part #4 x1pc

Hardware(#B) x4pcs

Hardware(#D) x4pcs


Hardware(#E) x4pcs

Hardware(#F) x1pc


I. Align the pre-drilled holes on the base (#2) with iron box (#3) to the support legs (#4).

II. Prepare 4 bolt assemblies by inserting the flat washer (#D) to the bolt (#B) and secure using the Allen wrench (#F).

III. Insert the adjusters (#E).

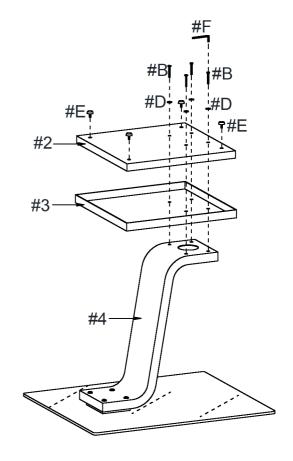

3

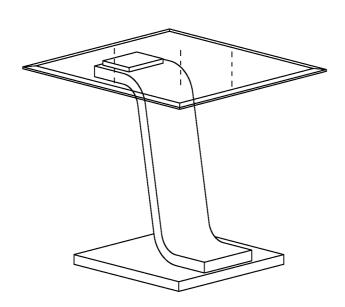

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.