



DIGITAL OIL FILLED RADIATOR HEATER



 
USER MANUAL

ITEM NO.: BE-7

PRE-OPERATION SAFETY INSTRUCTIONS



When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons and hyperthermia, including the following.

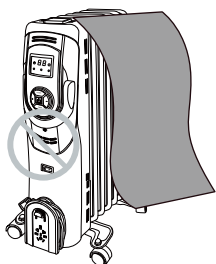


Do not cover the heater while in operation.




Do not use the Oil-filled heater near flammables and combustibles.

 
Placement Distance Attention

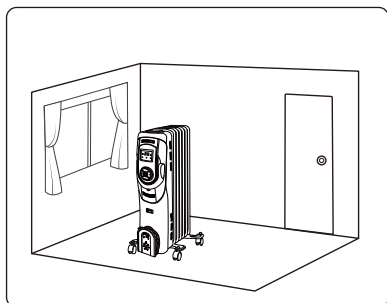

 1. Put the heater by the window to block the penetration of cold air from outside.

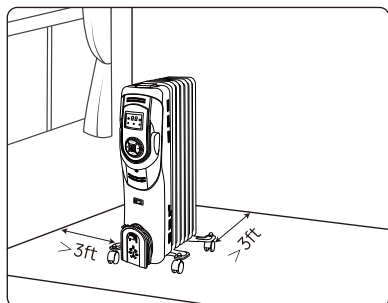

 2. Keep curtains and other furniture at least 3 ft away from the heater.

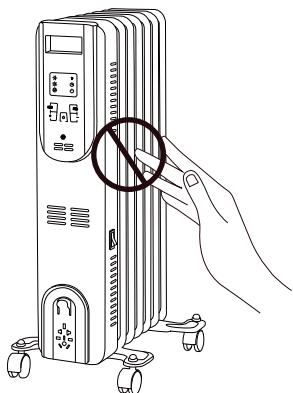

HOT SURFACE

THE HEATER CAN BE VERY HOT ON THE SIDES AND REAR. ONLY THE FRONT PANEL AND HANDLE ARE SAFE TO TOUCH DURING USE.

GENERAL SAFETY INSTRUCTIONS

↓ SAVE THE INSTRUCTION ↓

When using electrical appliances, follow basic safety precautions to reduce the risk of fire, electrical shock, personal injury and property damage. Read all safety precautions, and familiarize yourself with this manual prior to use.

WARNING: Use your heater only as described in this user manual. Any other use is not recommended by the manufacturer, and can cause fire, electrical shock, personal injury and property damage.

1. Your heater is for INDOOR HOUSEHOLD USE ONLY. DO NOT use your heater outdoors, or for industrial or commercial purposes.
2. DO NOT depend on the Power Control Switch as the sole means of disconnecting power from your heater. Disconnect the power cord from the electrical outlet when your heater is not in use, when changing locations, or prior to cleaning.
3. Place your heater on a stable, level surface, and route the power cord away from traffic areas.
4. Connect the power cord to an easily-accessible 120V AC electrical outlet so that your heater can be disconnected immediately in the event of an emergency.
5. Ensure that 3ft of clearance exists around your heater to avoid obstructing intake and exhaust flow.
6. For optimal operation and to avoid overloading a circuit, connect your heater to circuit that is not supplying power to other electrical appliances.
7. DO NOT operate your heater near curtains, plants, window covers, or other loose objects, keep objects 3ft away from the heater; such objects can become lodged in your heater's moving components, and cause a fire.
8. NEVER cover your heater or place your heater or its power cord under rugs, carpeting or similar objects, as fire can occur.
9. Your heater is not intended for use in bathrooms, laundry areas or similar damp locations. Never place your heater where it may come in contact with water or other liquids.

- 10. DO NOT use devices that would turn your heater on and off automatically, as the use of such devices can cause a fire.
- 11. Avoid contact with moving parts. NEVER insert your fingers or other objects through your heater’s grill.
- 12. DO NOT immerse or expose your heater to any form of liquid.
- 13. NEVER operate your heater near an open flame or in the presence of explosive or combustible gases or fumes, such as: gasoline, paint or other flammable liquids. Your heater has hot
- 14. internal components, and components that can spark during normal operation.
- 15. DO NOT expose your heater to excessive heat or humidity, as electrical component damage can occur.
- 16. DO NOT pull on the power cord. Always grasp the plug when connecting and disconnecting the power cord from the electrical outlet.
- 17. DO NOT use extension cords with your heater. Extension cords can overheat and cause a fire.
- 18. DO NOT remove, replace, repair or tamper with the originally-supplied plug.
- 19. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- 20. NEVER attempt to open or service your heater. Doing so may cause personal injury or property damage. Should your heater or its power cord malfunction or become damaged, discontinue operation immediately and consult a qualified repair technician.
- 21. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or dam-aged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjust-ment, or repair. Extreme caution is necessary when your heater is used near children, pets and invalids. Keep your heater out of the reach of children, pets and invalids to reduce the risk of personal injury and electrical shock.

Specifications

Model	BE-7
Rated Power	1500W
Input	120V~60Hz
Gross Weight	18.29lbs
Net Weight	21.27lbs

PARTS OF THE HEATER



1. Oil fins (x7)
2. Display
3. Control panel
4. Carry handle
5. Power cord storage
6. Rolling casters

DESCRIPTION	PART	QUANTITY
U-Shape Bolt & Wing Nut		2
U-Shape Bracket with Castor		2
Remote Control		1
User Manual		1

HOW TO ASSEMBLE THE HEATER

DO NOT OPEN OR REFILL/CHANGE OIL FINS. OIL FINS ARE PERMANENTLY SEALED AND DO NOT REQUIRE REFILLING OR CHANGING OIL. ATTEMPTING TO OPEN FINS WILL DAMAGE THE UNIT. THIS UNIT IS FILLED WITH A NON TOXIC MINERAL OIL.



CAUTION:

DO NOT OPERATE THIS HEATER WITHOUT CASTERS ATTACHED

Unpack your heater and find the wheel-holding plate and butterfly nuts between the fins. Make sure the heater is unplugged and in the "OFF" position.

 
Assembly Instructions

Step 1




Attach the Roll caster onto wheel-holding plates.

Step 2

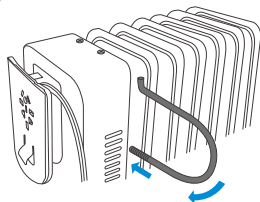


Turn the heater upside down.

 Step 3

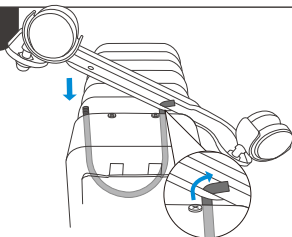


Put U-shape bolt in one hole of bracket.

 Step 4

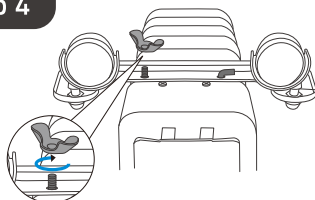

U-shape bolt through the holes in the casters, make sure the base and the caster are firmly fixed.

 Step 5

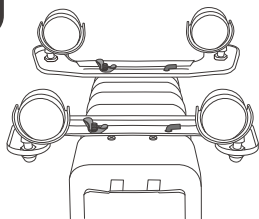

Unscrew nut and put U-shape bolt in one hole of bracket, then tighten them securely. Attach the bracket onto the heater with the U bolts

Step 6

Set the heater upright. Use the front handle to move to the desired location.



OPERATION INSTRUCTIONS

WARNING

Pre-operation Instructions

PLACEMENT OF THE HEATER

- 1 Turn the heater upright. Ensure legs are correctly installed and level.
- 2 Place heater on a flat and stable surface. Setting the heater on an incline or decline may cause damage to the unit and create a hazardous situation.
- 3 Processed to OPERATING INSTRUCTIONS
Pre-operation Instructions
- 4 Carefully remove your heater from its shipping box. (The shipping box can be reused for off-season storage)
- 5 Place your heater on a firm, level surface. Completely uncoil the power cord, and connect your heater directly into a 120 Volt, grounded AC electrical outlet.
- 6 Insert 2 AAA batteries into the remote control before using.



Tip-over hazard.

Do not operate without the casters properly installed.



Fire hazard.

Operate the heater in the upright position only. Any other position can cause damage to this heater and even a fire hazard.



Burn hazard.

Unplug and allow the heater to cool before using the handle to move the heater.

IMPORTANT

Note: The power cord has a **polarized plug** (with one blade wider than the other) that will only fit in a **polarized** outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet. DO NOT defeat the safety purpose of the **polarized plug**.

FUNCTION OPERATION INSTRUCTIONS

CAUTION: TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

All Functions



Low Power Level (600W)



Medium Power Level (900W)



 
High Power Level (1500W)



TIMER Mode



Power on / off

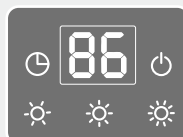

Two Ways to Control the Heater

Controls on product



After plug in, press to power on and start operation, or press to stop operation and set the heater into standby mode.



 
To set the power level, MAX, MED, MIN.



To set the timer.



Turn up/down the temperature to the desired temperature.

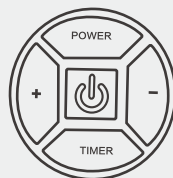

Controls on remote control



After plug in, press to power on and start operation, or press to stop operation and set the heater into standby mode.



To set the power level, MAX, MED, MIN.



To set the timer.



Turn up the temperature.



Turn down the temperature.



Setting the temperature

The heater has a thermostat which enables you to set the temperature from 59°F to 95°F. Once a temperature has been set, the heater will remain on until the room temperature has reached the temperature on the digital display. The thermostat will cycle on and off to maintain the set room temperature.

- Plug in the heater, the display symbol  will be lighted. Press  or Power button, the desired temperature 86°F and power level  will be shown on the screen. Press Power button to set the desired power level.
- Use the [+] and [-] buttons to set the desired temperature, from 59°F to 95°F.
- While the heater is warming up the room, the heat level symbol will keep lighting on the display until the desired temperature has been reached. The symbol will stop lighting then. The heater comes on again when the room temperature drops below the desired temperature.
- Use the [+] and [-] buttons to change the desired room temperature at any time.

Setting the time

 
When the heater is powered on. You can set the timer to switch off the appliance automatically after a certain period of time (01 to 12 hours from the timer function is set).

1. Power on the heater. Press Timer button to set the desired power off time. The display will show 00 and start flashing on the screen.
2. Use the Timer buttons to set the heater operation time (between 01 and 12 hours). The function will activate once the timer icon stops flashing.
3. The heater will cycle on and off as per the set temperature setting and discontinue operation when the set time has run out.


Example: It is now 4pm. The heater is on and you want it to shut off at 11pm automatically. Set the timer-off function to 7 hours: the heater will cycle on and off to maintain the set temperature. It will stop operating at 11pm and go into standby mode.

CLEAN AND MAINTENANCE

1. Press power button to turn off the heater.
2. Disconnect the power cord from the electrical outlet , and waiting until the unit cool down.

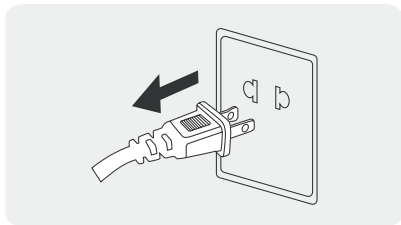

 Always turn off and unplug before cleaning.

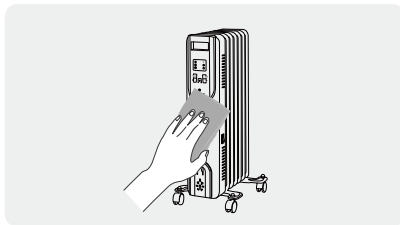

Outer Surface

Use a soft, dry cloth to gently wipe clean the outer surface.



ATTENTION



DO NOT unscrew the unit.



DO NOT use cleaning agents.



DO NOT use abrasive scrubbers.



Fire or electrical shock hazard. **DO NOT** immerse the main unit in water. **NEVER** allow water to get inside the heater.



Except for cleaning, any servicing should be performed by an authorized service representative.



Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

 
WARNING: Do not expose the heating elements or switches to water, cleaning liquids or other chemicals, as fire, electrical shock, personal injury and property damage can occur.

CAUTION: Do not use gasoline, benzene or thinner to clean your heater, as these chemicals can cause surface damage.

1. Use a vacuum cleaner with a crevice tool to remove dust from the interior or your heater.
2. Use a clean, soft and lightly damp cloth to gently wipe the surface of the enclosure.
3. Allow the enclosure to dry completely prior to operating your heater.

Off -season storage instructions

1. Secure the power cord, and place your heater in its original shipping container, or a similar container.
2. Store the container in a cool, dry location.
3. Take out the remote batteries (to prevent corrosion) as shown below. Store the remote in a safe place.

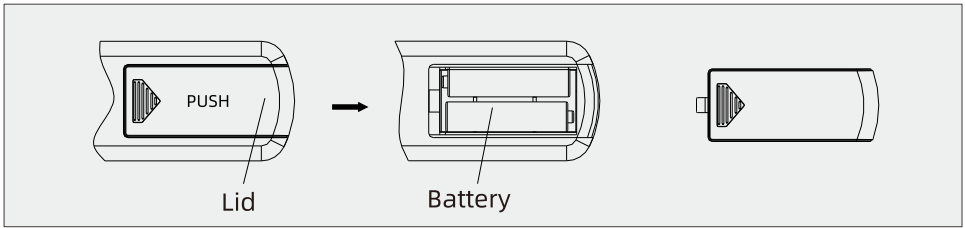

Safety features

Your heater is equipped with a Tip-Over Safety Switch. When your heater tips over, it will turn off automatically.

Your heater is equipped with an Overheat Protection System. When the threshold temperature has been reached, your heater will turn off automatically. To reset your heater when the Overheat Protection System has been activated, Perform the following.

1. Disconnect the power cord from the electrical outlet.
2. Allow your heater to cool down for approximately ten minutes.
3. Ensure that both the intake and the exhaust vents are clear of obstructions.
4. Connect the power cord to the electrical outlet.
5. Press the power button, and set the desired temperature to 95°F.
6. If your heater does not operate normally, power off the heater and disconnect the power cord from the electrical outlet. And consult an authorized repair technician.

Troubleshooting

If your heater fails to operate, perform the following:

1. Review this manual to ensure that you understand the basic operations and features of your heater.
2. Check your household circuit breaker or fuse.
3. Check for obstructions at the intake and exhaust vents.
4. If obstructions are present, refer to the instructions for resetting your heater when the Overheat Protection System has been activated.
5. If no obstructions are present, and your heater still does not operate normally, power off the heater, disconnect the power cord from the electrical outlet, and consult an authorized repair technician.

Problem	Possible Causes	Solution
Malfunction codes on LED display	EE-Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
Heater does not start/The heater suddenly stops during heating	The heater was tipped over	Place the heater back on a flat, level and stable surface and wait for the indicator to light to turn the heater on.
	The heater surpassed the overheating protection	Unplug the heater and allow it to cool before plugging it back again, Remove any objects on or near the heater.
Heater does not start/The heater suddenly stops during heating	No power is passing through the unit	Ensure that your circuit breaker or fuse is working properly. Ensure that your heater is placed on a flat and even surface. Ensure that the temperature is set to be higher than the ambient temperature.
The heater doesn't raise temperature	Temperature raises too slowly	This heater uses convection, which may take longer, but allows it to deliver heat uniformly without making air too dry. You can use the timer function to heat your room before.
	Only heats a small area	This heater is not recommended for open areas or outdoor use.

Questions, problems, missing parts? Before returning it, please e-mail our customer service Team:

support@ccgiru.com

A large, stylized, light gray 'G' logo serves as the background for the entire image. It is composed of several concentric, curved segments that create a sense of depth and movement.

Thanks for choosing
CCGIRU