
 


Dog Cage

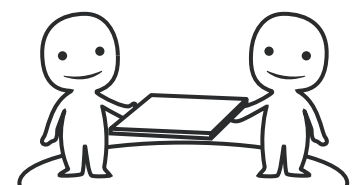

ASSEMBLED BY 2 ADULTS

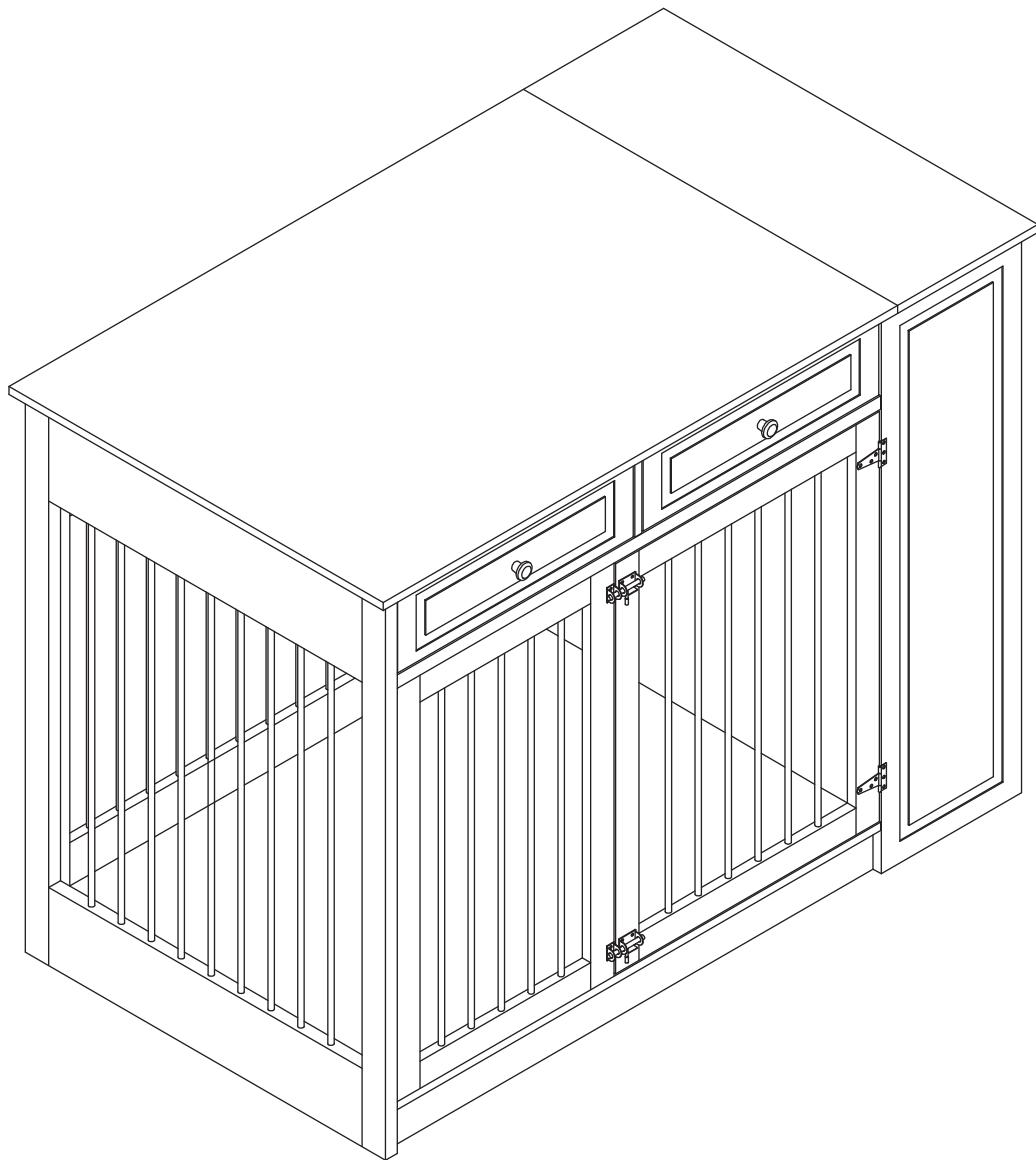

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



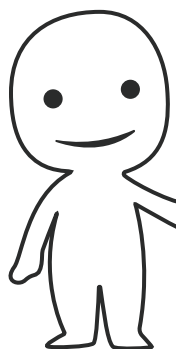


Please prepare the following tools

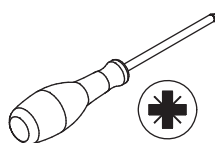  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 83+6</p> <p>Ø 6 x 35 mm</p>	<p>B x 75+5</p> <p>Ø 15 x 12 mm</p>	<p>C x 8+1</p> <p>Ø 15 x 9.5 mm</p>	<p>D x 62+5</p> <p>Ø 6 x 30 mm</p>	<p>E x 26+4</p> <p>Ø 3 x 14 mm</p>
<p>F x 2</p> <p>Ø 3.5 x 50 mm</p>	<p>G x 3</p> <p>Ø 4 x 20 mm</p>	<p>H x 2</p> <p>Ø 3.5 x 14 mm</p>	<p>J x 2</p> <p>Ø 3.5 x 14 mm</p>	<p>K x 12+2</p> <p>Ø 3.5 x 30 mm</p>
<p>L x 2</p> <p>350 mm</p>	<p>M x 2</p> <p>350 mm</p>	<p>P x 1</p> <p>250 mm</p>	<p>Q x 1</p> <p>250 mm</p>	<p>R x 2</p> <p>Ø 240 mm</p>
<p>S x 8</p> <p>Ø 3 x 16 mm</p>	<p>T x 84</p> <p>Ø 20 mm</p>	<p>U x 1</p>		

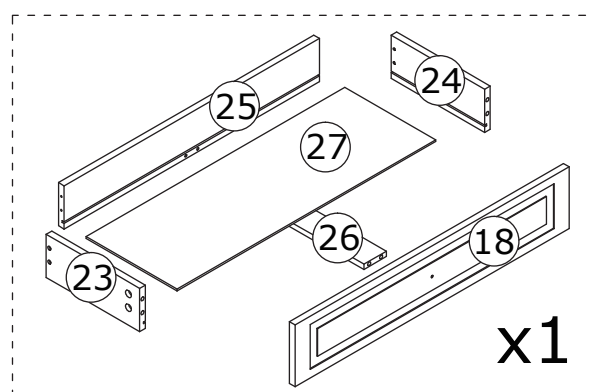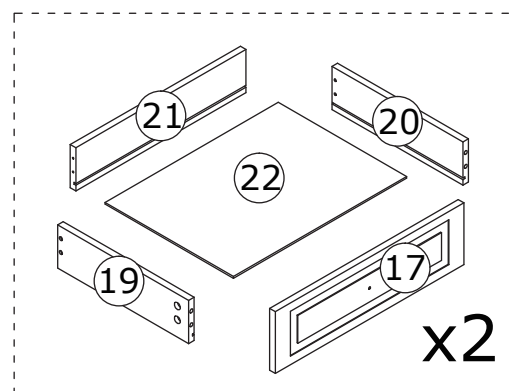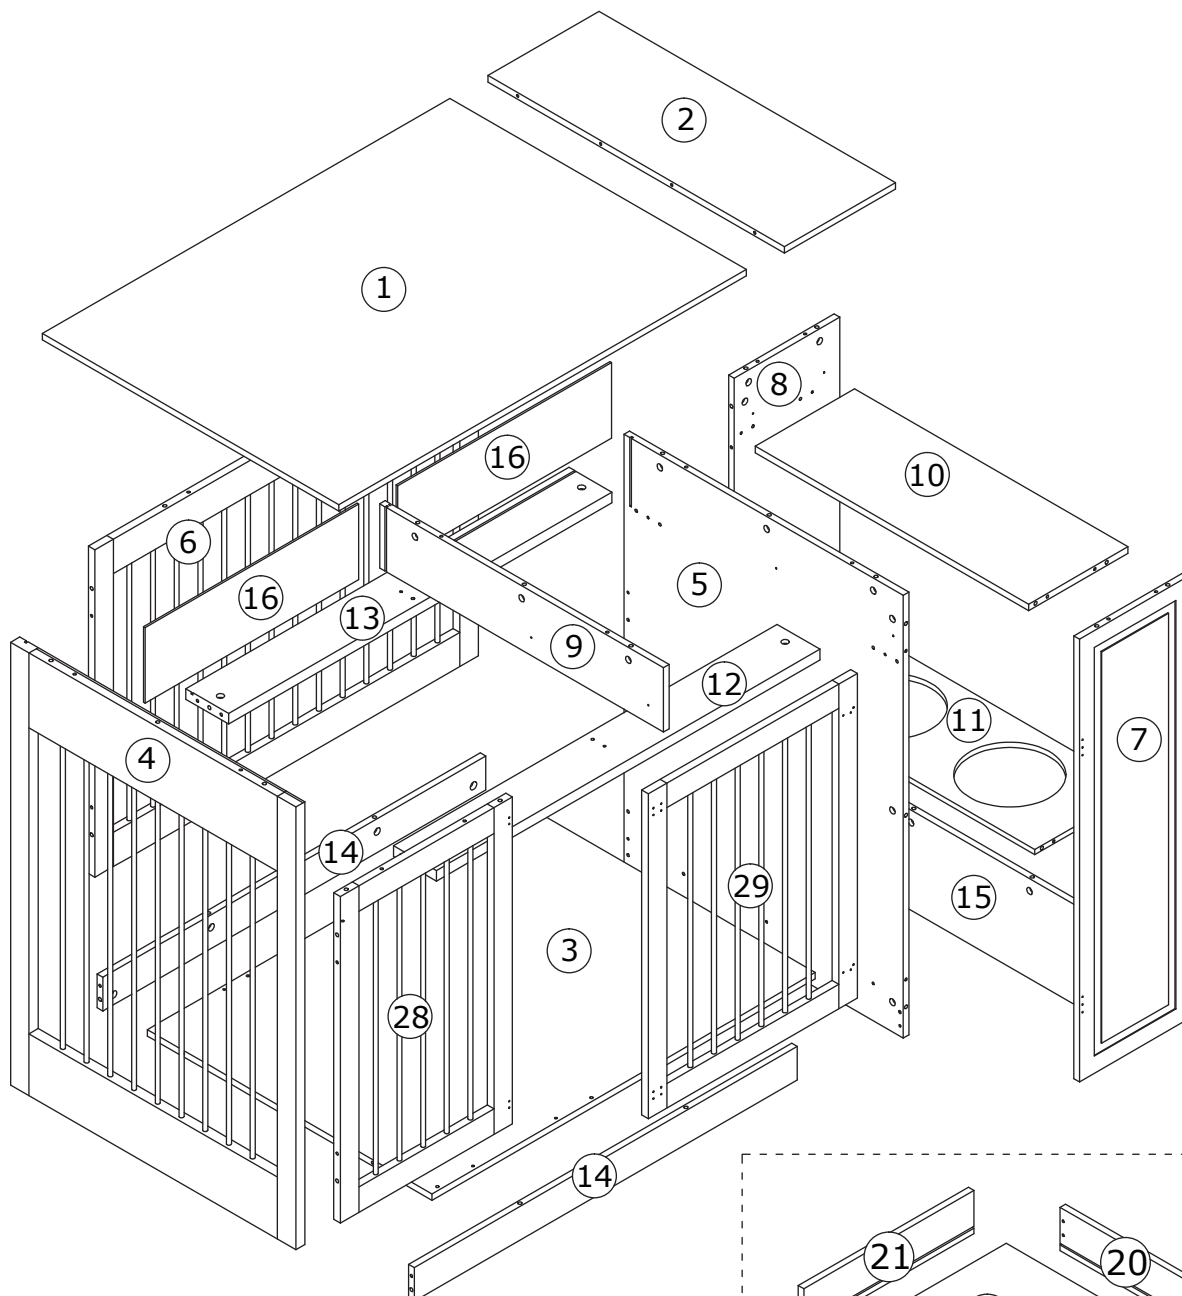   

⚠ WARNING

 
 
 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
 
 
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


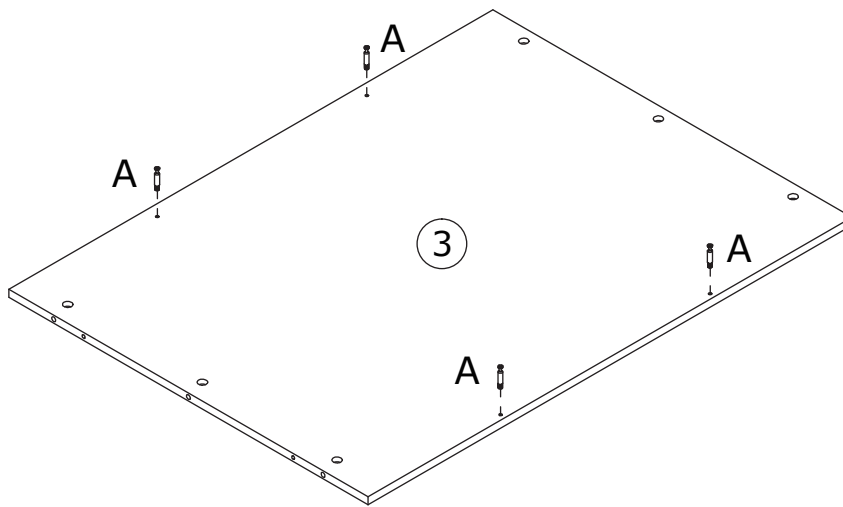 
1

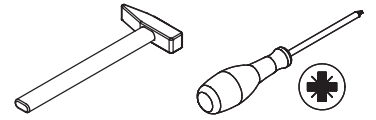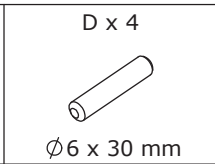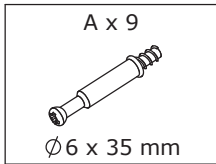




Screw eccentric rod(A) and insert wooden dowel(D) into board 3 as shown.

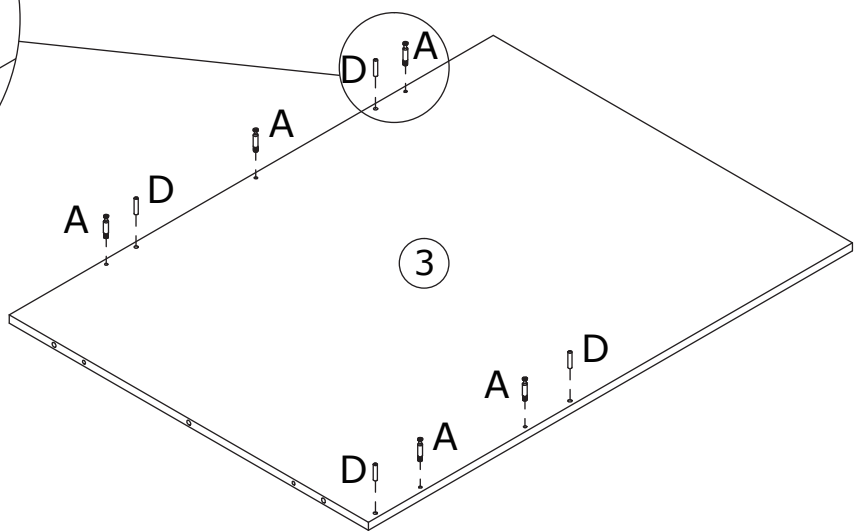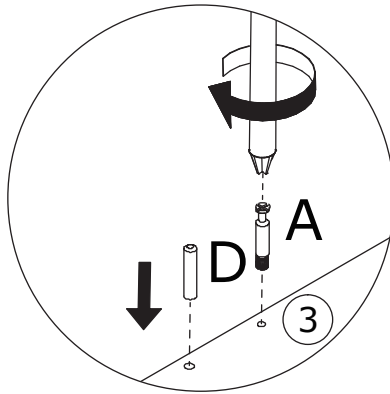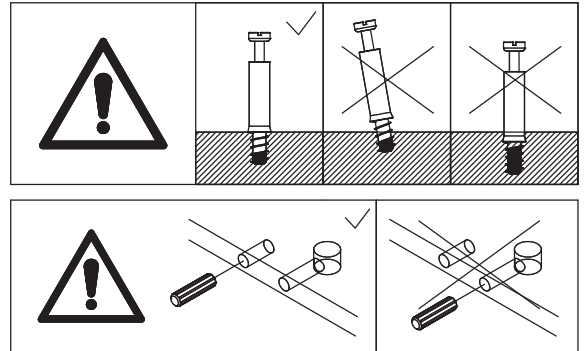

    
180°


 

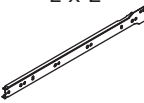
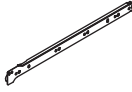
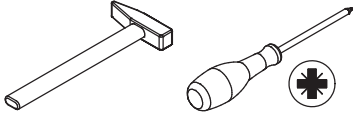
2

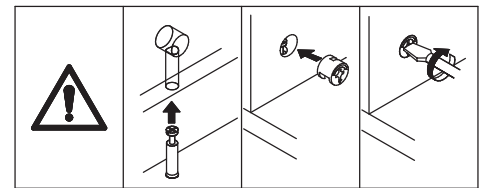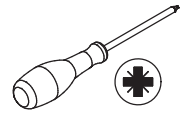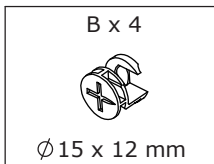



Attach board 14 to board 3, add cam lock(B)
into board 14 and turn clockwise to tighten as shown.

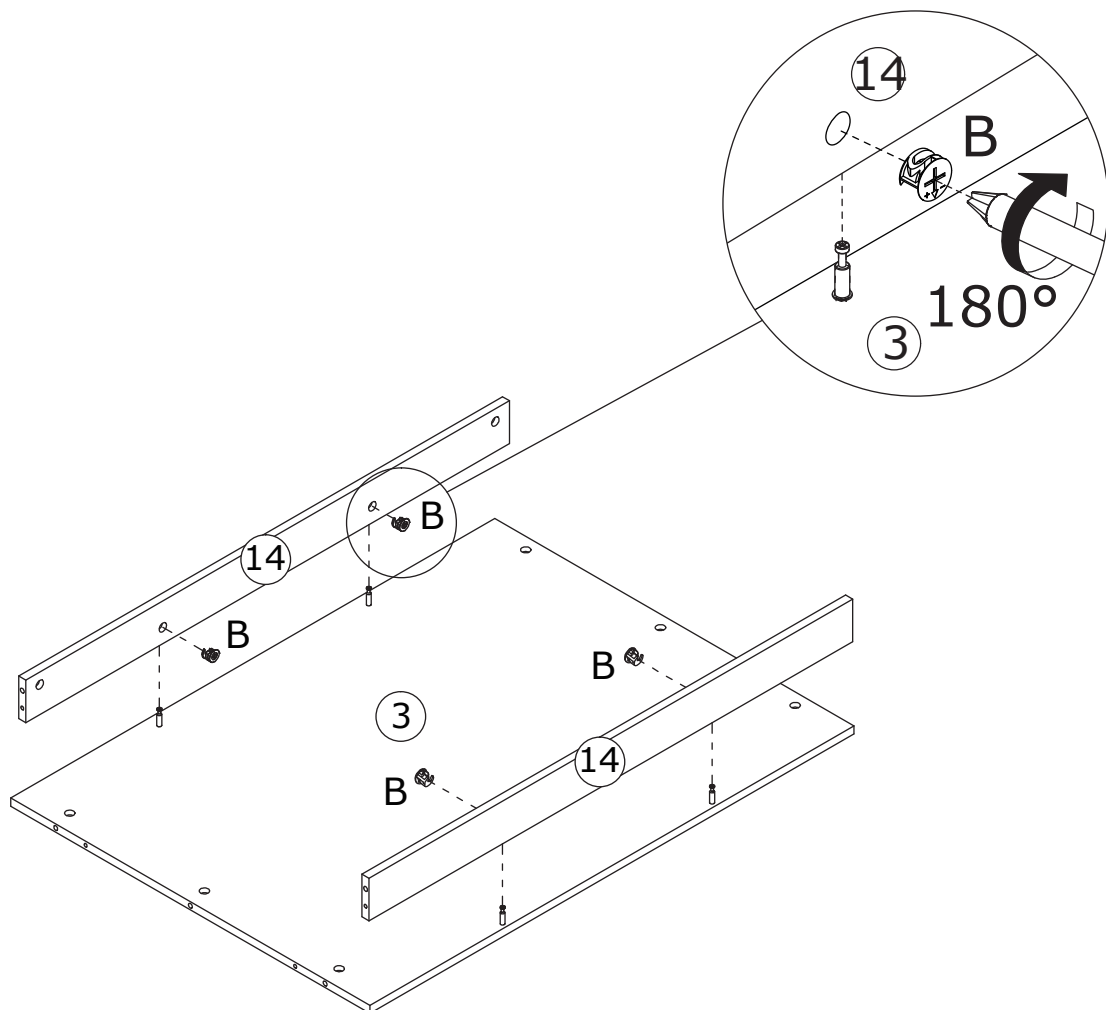




3
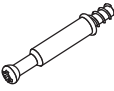
<p>A x 11</p>  <p>Ø 6 x 35 mm</p>	<p>D x 12</p>  <p>Ø 6 x 30 mm</p>		
<p>E x 6</p>  <p>Ø 3 x 14 mm</p>	<p>L x 2</p>  <p>350 mm</p>	<p>M x 1</p>  <p>350 mm</p>	

      
Screw eccentric rod(A) and insert wooden dowel(D) into board 4 as shown. Fix rail(L) to board 4 and 9 respectively with screw(E) at first. Flip board 9 to back, fix rail(M) with screw(E) as shown.

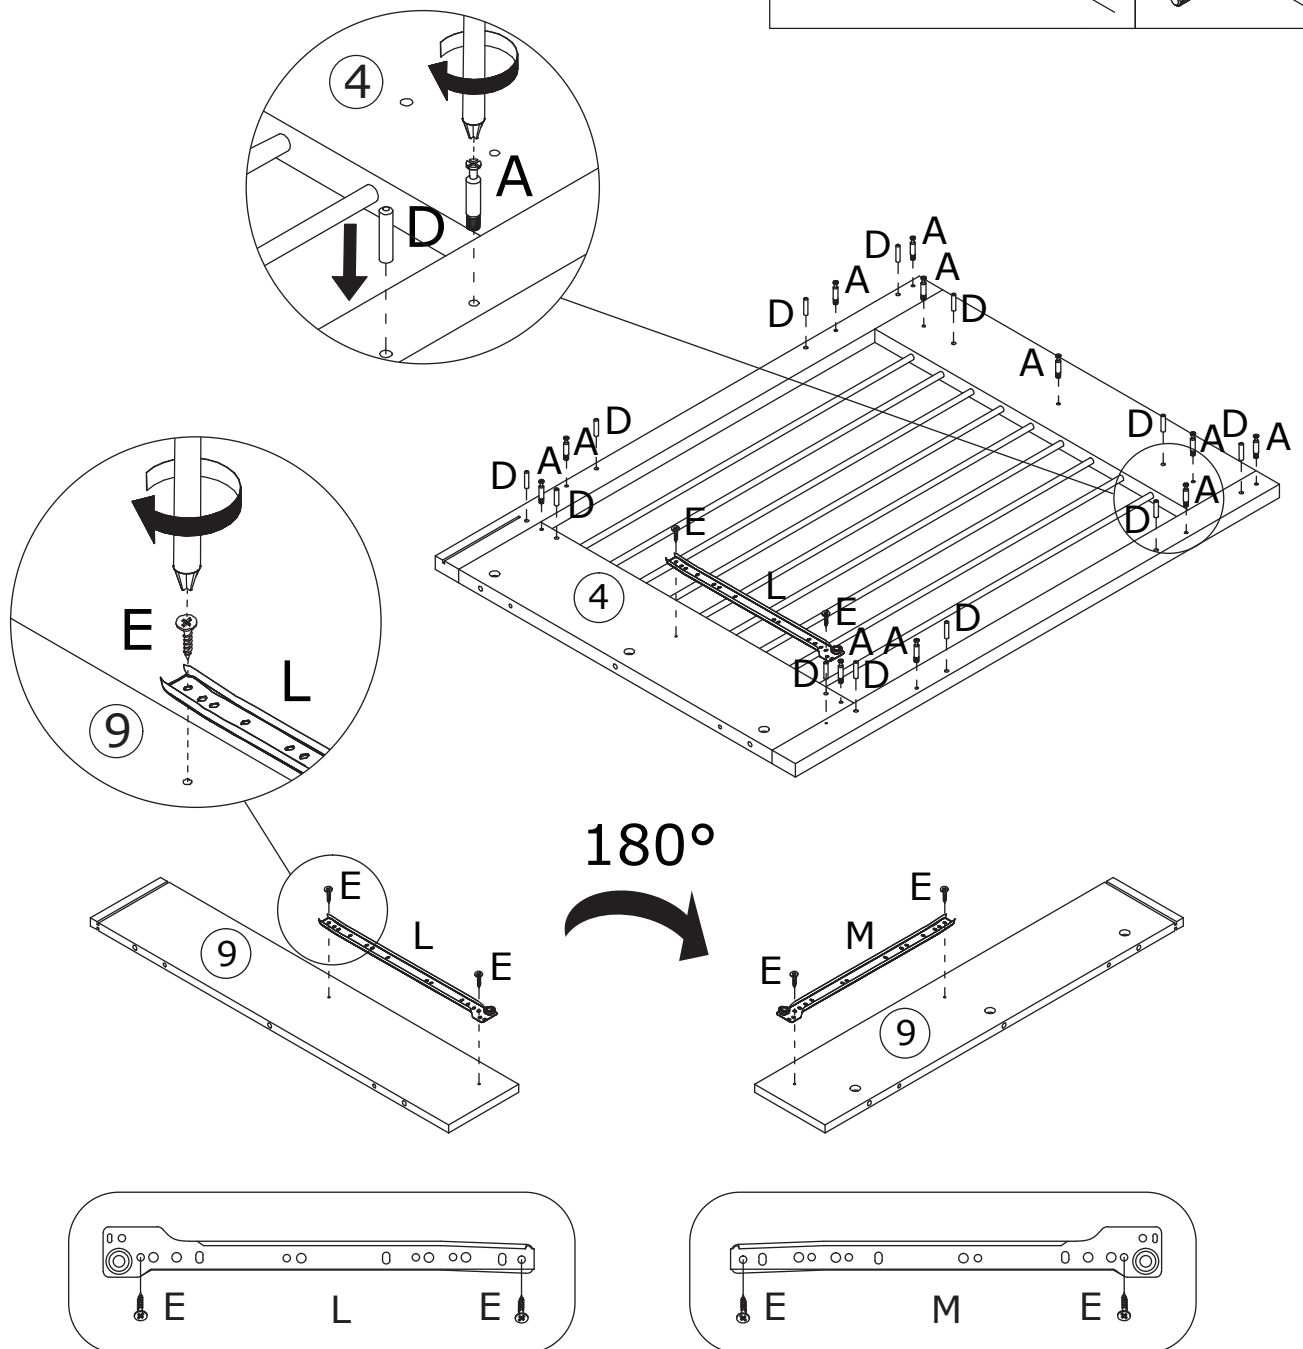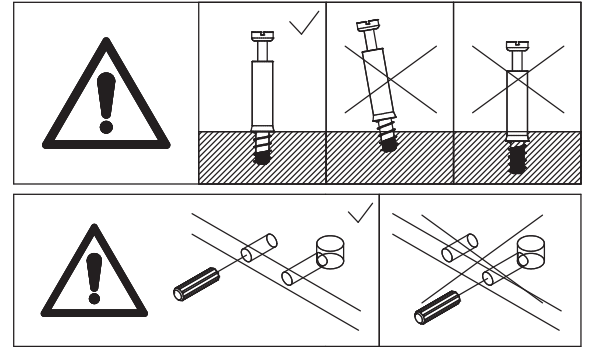


 

 
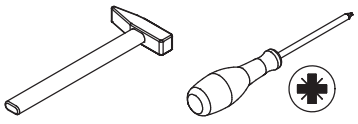
4

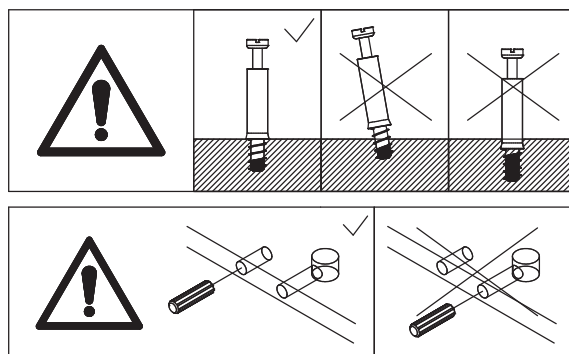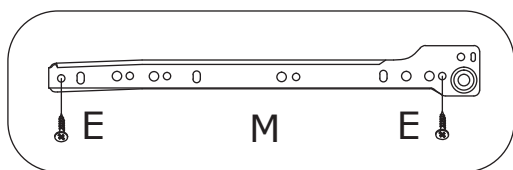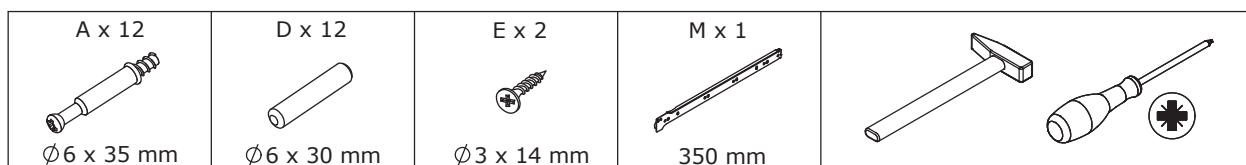


Screw eccentric rod(A) and insert wooden dowel(D) into board 5 as shown. Fix rail(M) to board 5 with screw(E) at first. Flip board 5 to back, screw eccentric rod(A) and insert wooden dowel(D) into as well.

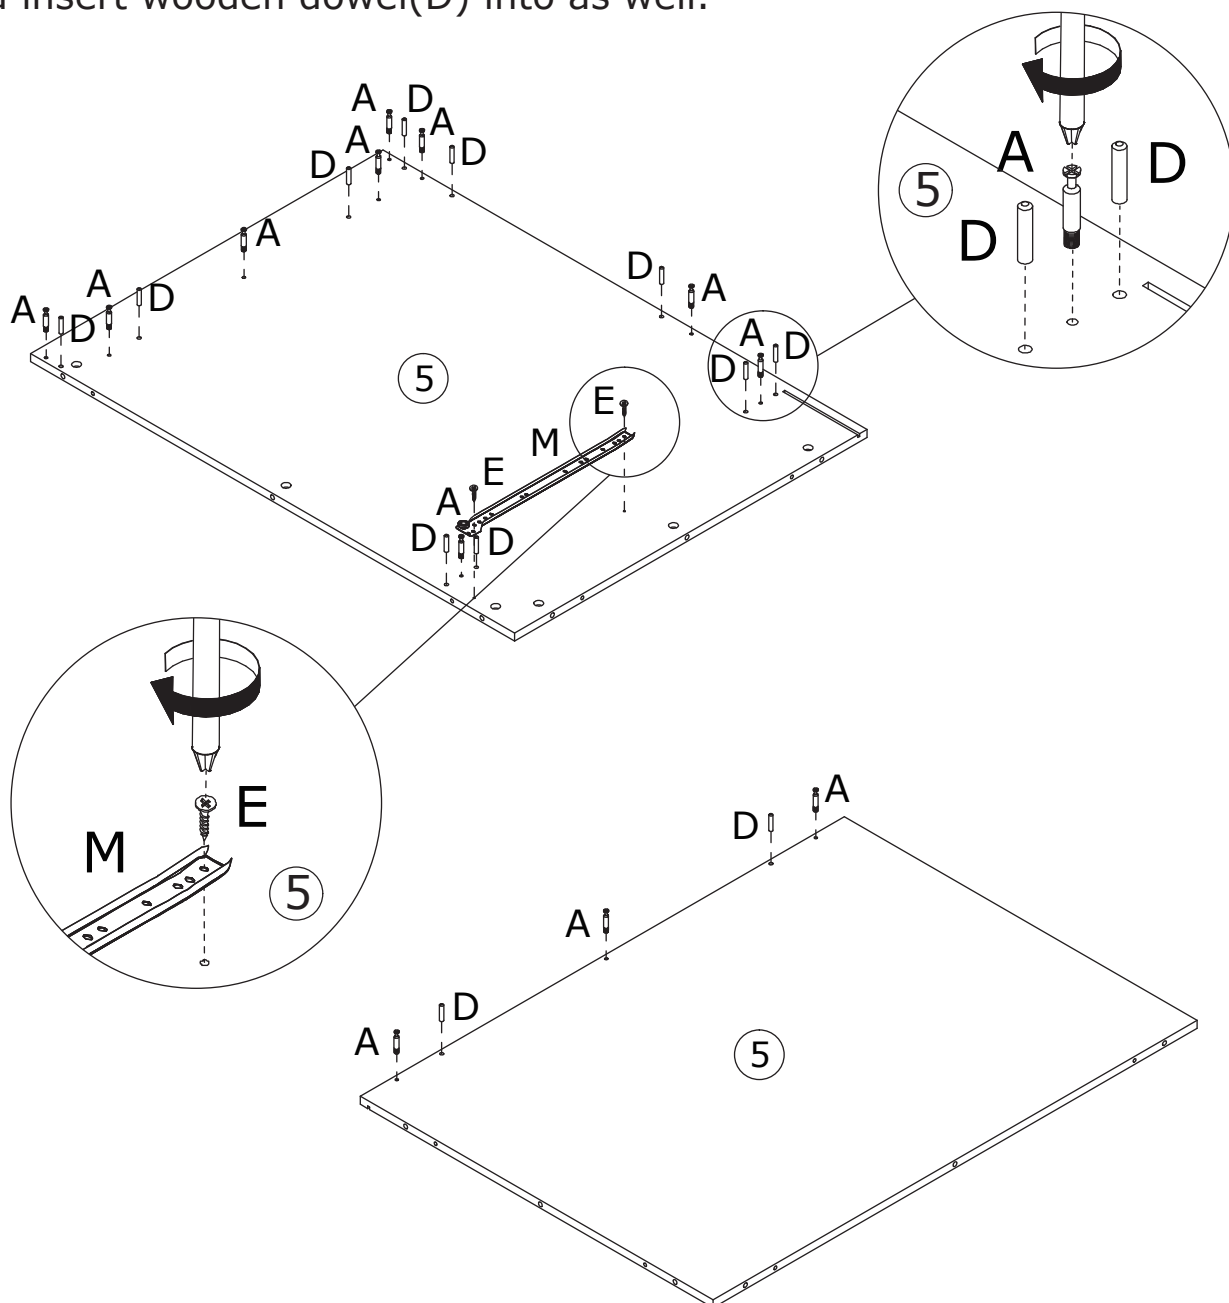


5
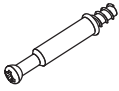
<p>A x 5</p>  <p>Ø 6 x 35 mm</p>	<p>D x 4</p>  <p>Ø 6 x 30 mm</p>	<p>E x 2</p>  <p>Ø 3 x 14 mm</p>	<p>U x 1</p> 	
---	---	---	---	---

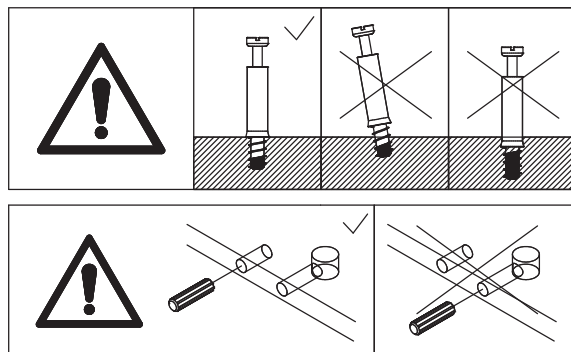 

 Screw eccentric rod(A) and insert wooden dowel(D) into board 12 and 13 as shown.
Fix part(U) to board 12 with screw(E) as shown.


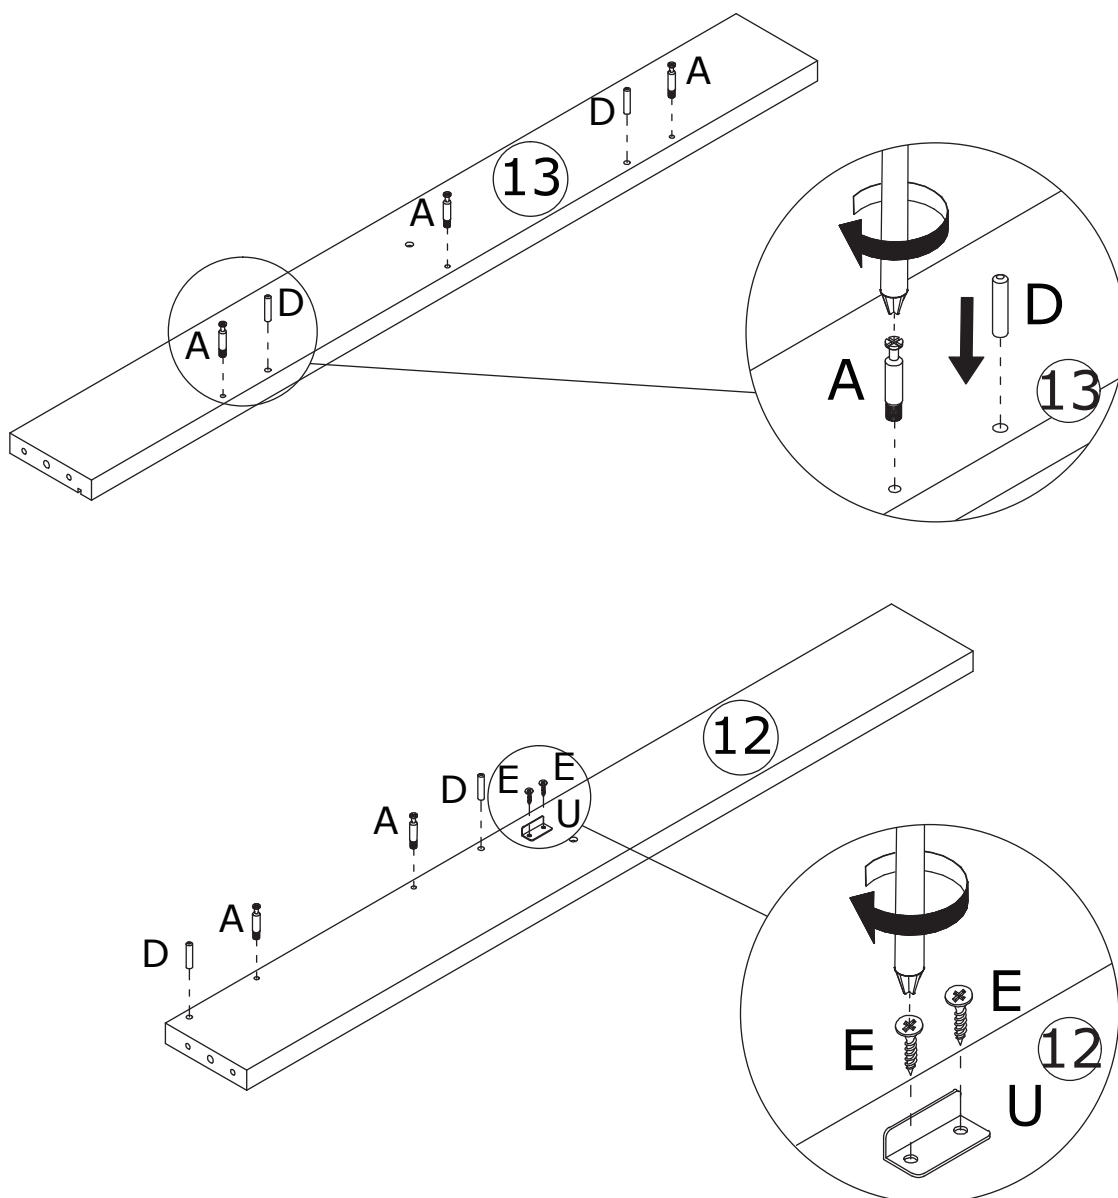


6


B x 5



 Ø 15 x 12 mm

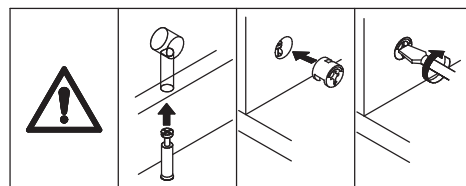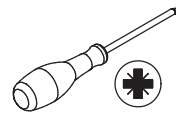

 Attach board 6 and 28 to board 3, add cam lock(B) into board 6,28 and turn clockwise to tighten as shown.


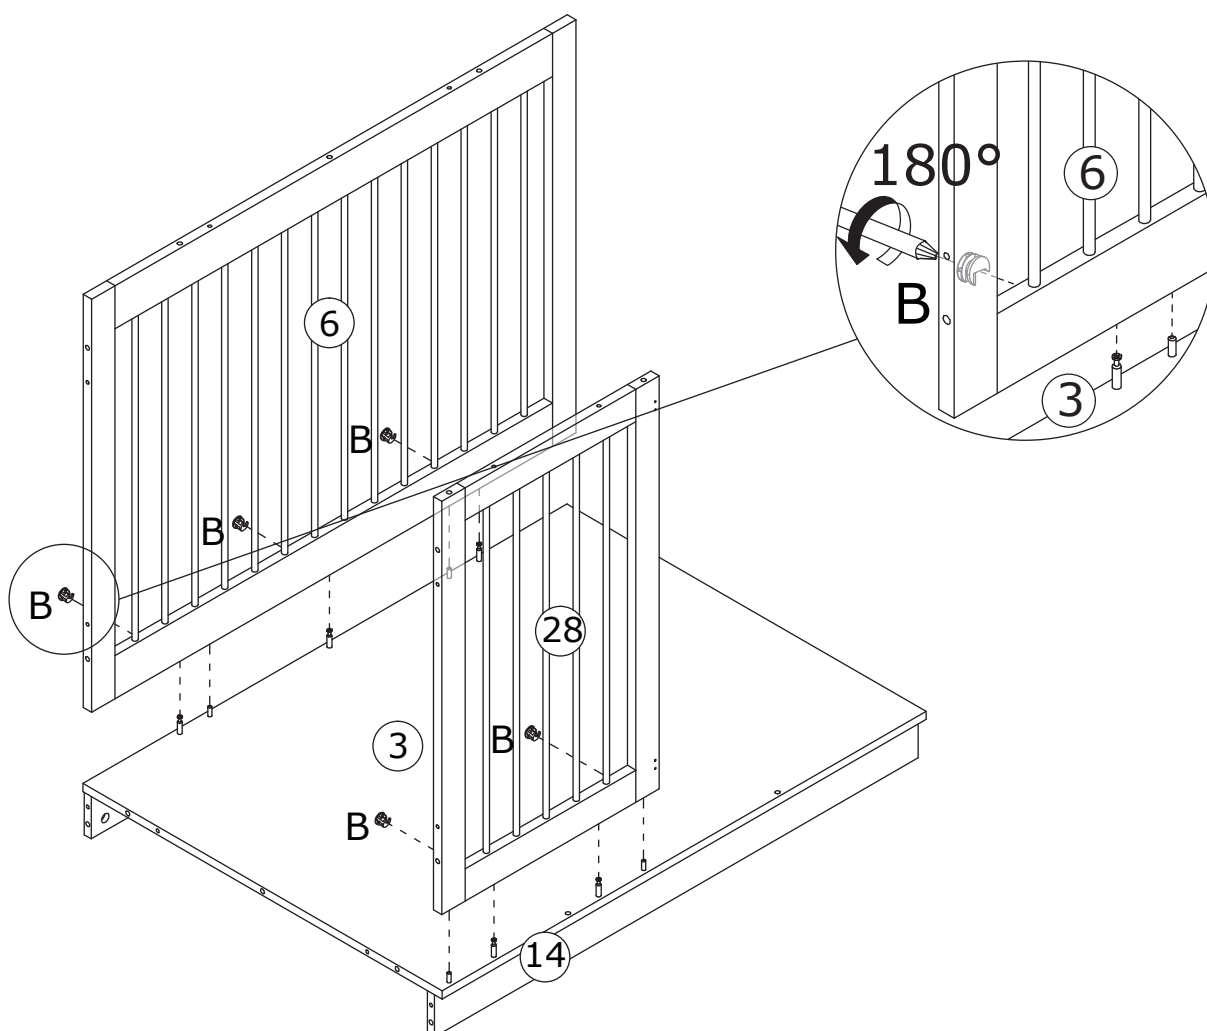


7

   
B x 5




 

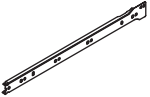
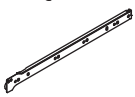
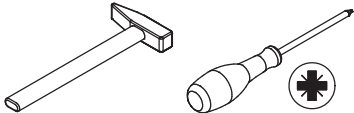
Ø 15 x 12 mm

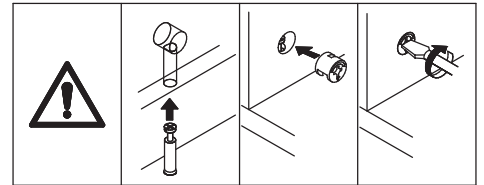



Attach board 13 and 12 to board 6 and 28,
add cam lock(B) into board 6,28 and turn
clockwise to tighten as shown.

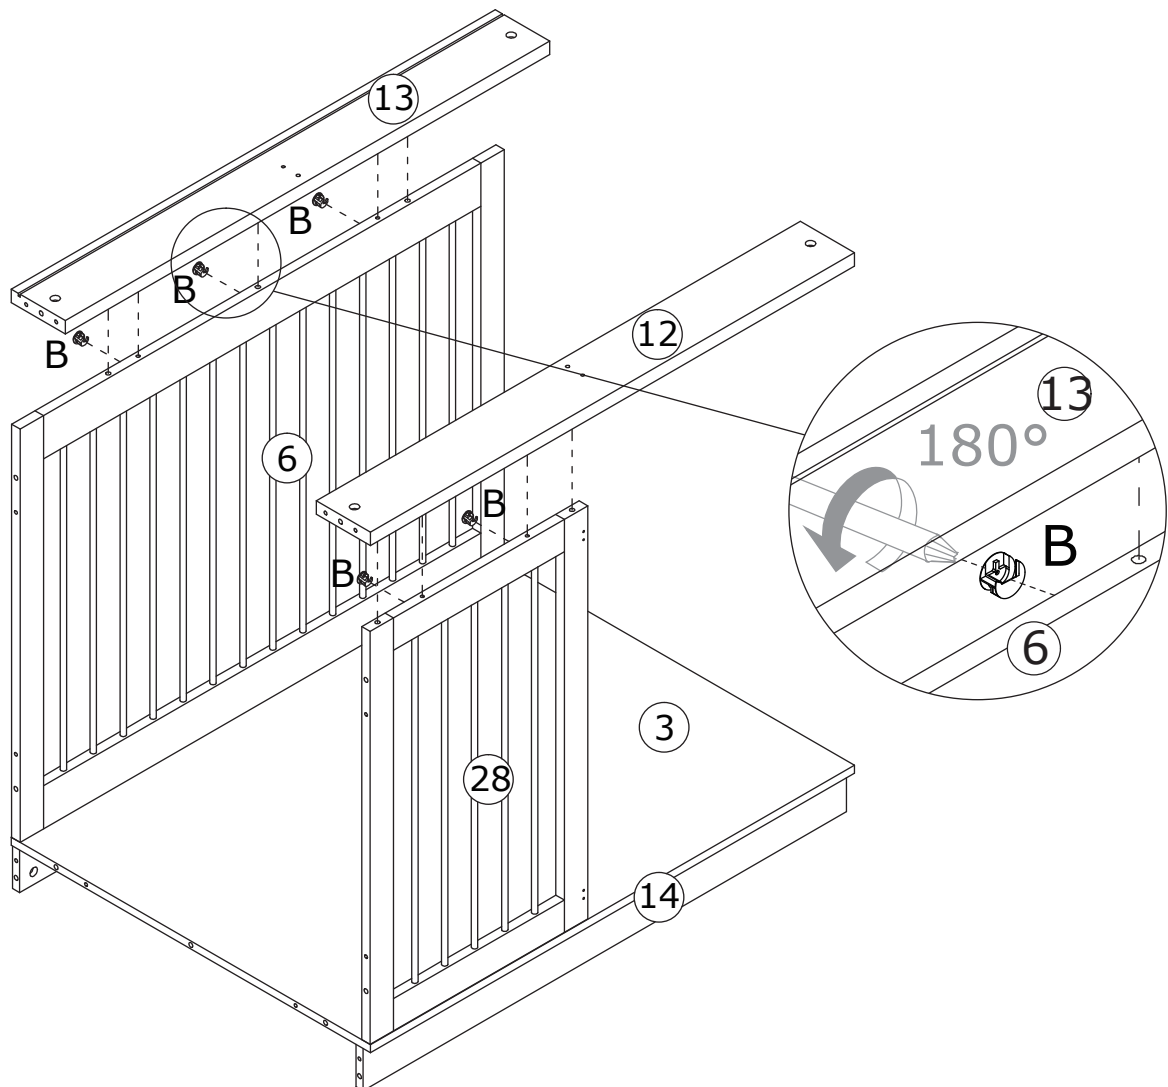

8
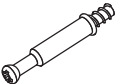
<p>A x 17</p>  <p>Ø 6 x 35 mm</p>	<p>D x 14</p>  <p>Ø 6 x 30 mm</p>		
<p>E x 4</p>  <p>Ø 3 x 14 mm</p>	<p>P x 1</p>  <p>250 mm</p>	<p>Q x 1</p>  <p>250 mm</p>	

  Screw eccentric rod(A) and insert wooden dowel(D) into board 7 and 8 as shown. Fix rail(P) and (Q) to board 7 and 8 respectively with screw(E) at first. Screw eccentric rod(A) into board 11 as shown.

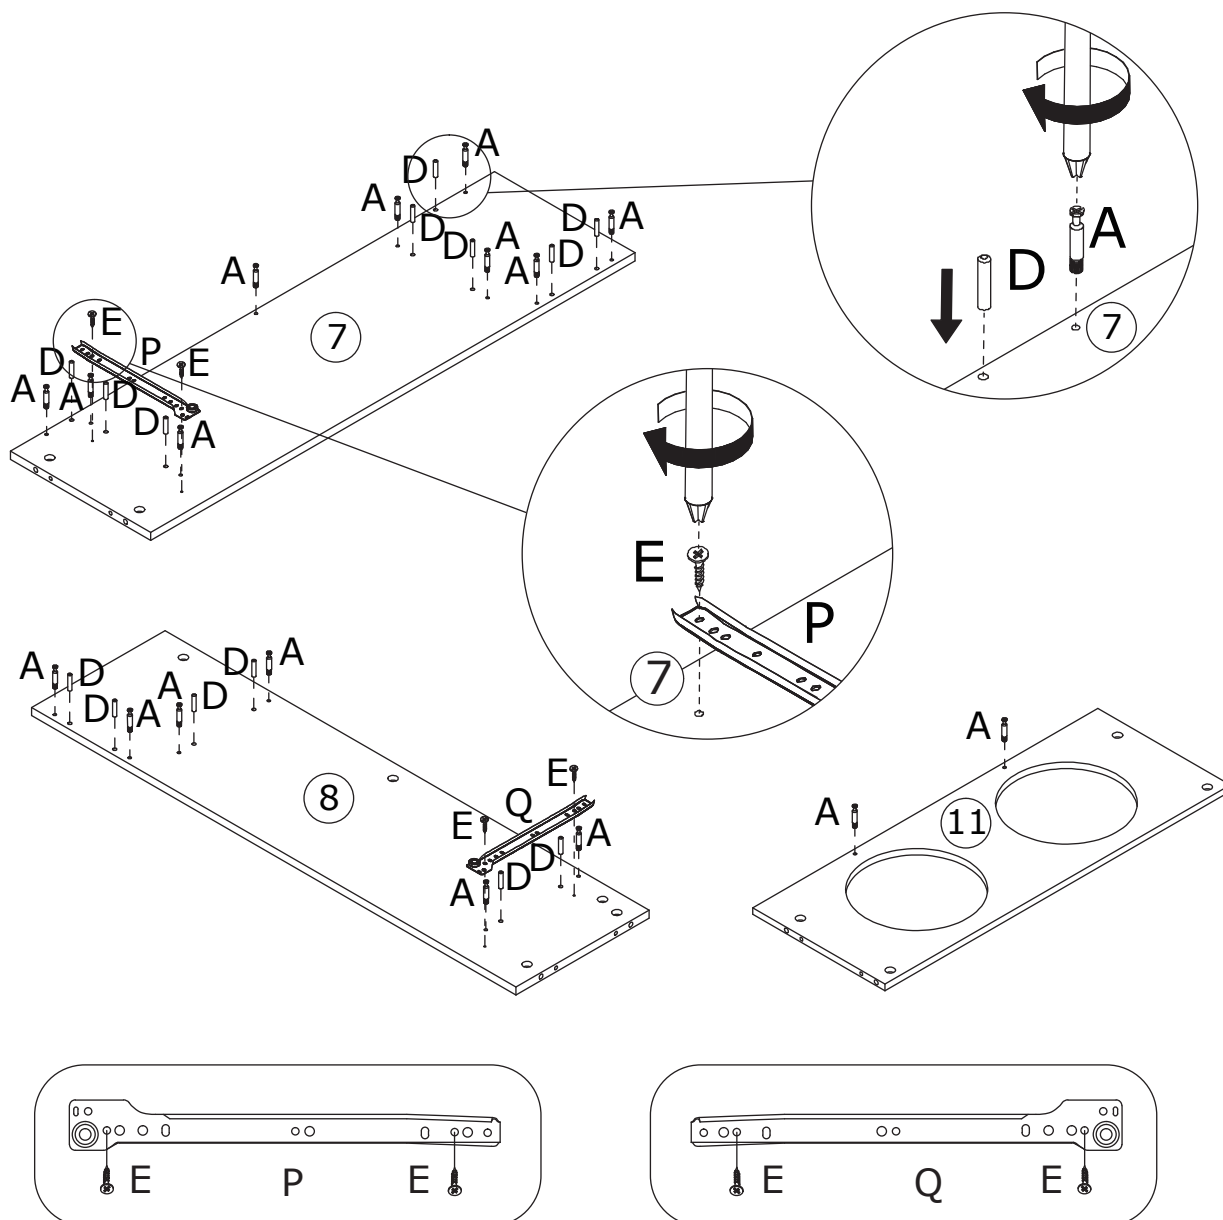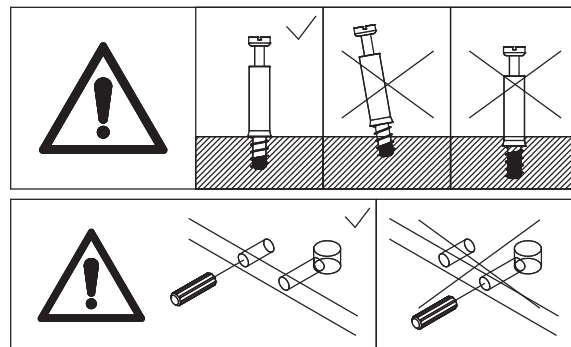


9


B x 2



 Ø 15 x 12 mm

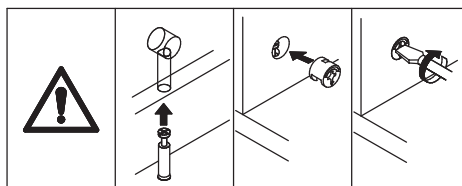

 Attach board 15 to board 11, add cam lock(B)
into board 15 and turn clockwise to tighten as shown.

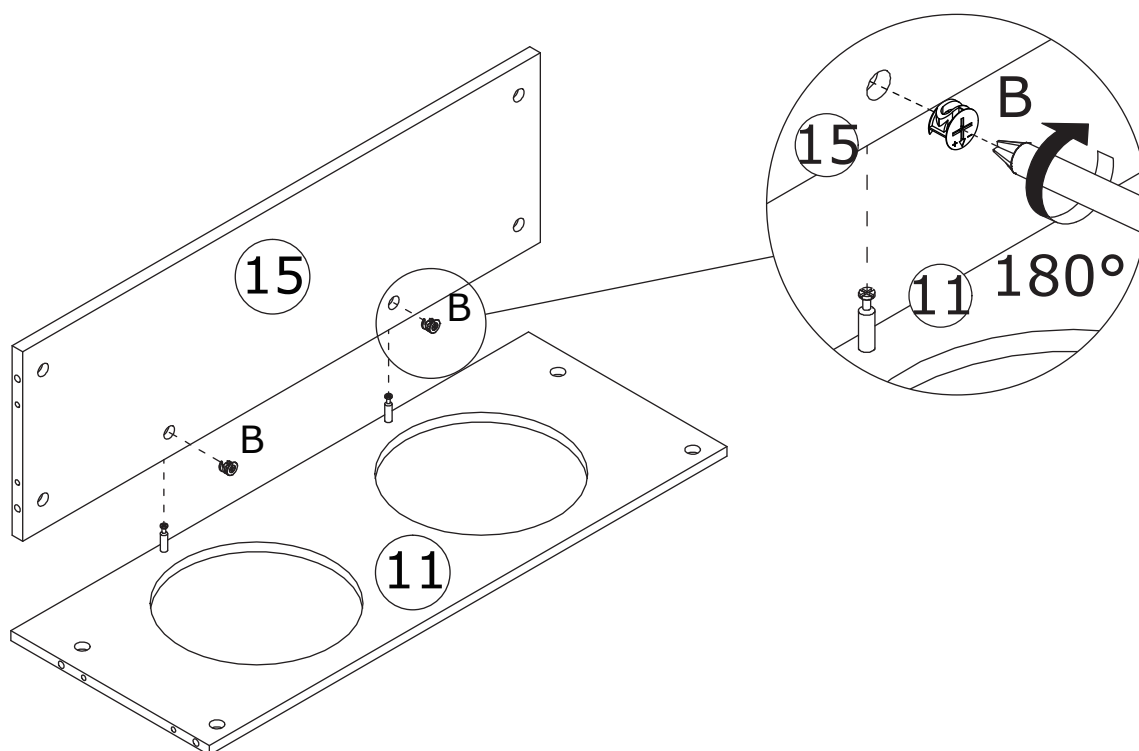

10

B x 4

 
 
 
 


Ø 15 x 12 mm


C x 2



Ø 15 x 9.5 mm

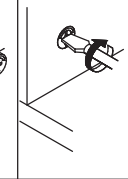

 Attach board 10, 11 and 15 to board 8, add cam lock(B) into board 10,15; add cam lock(C) into board 11 and turn clockwise to tighten as shown.


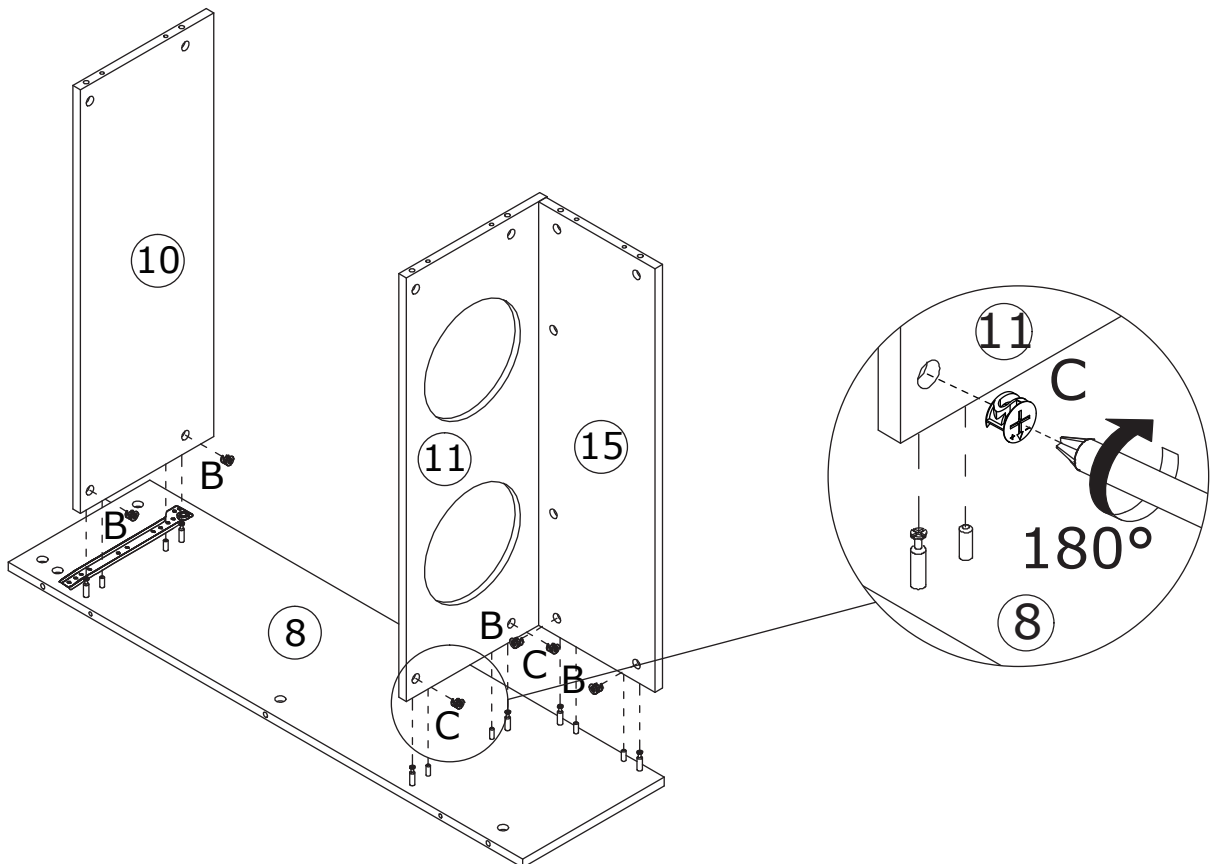


11


B x 3



  Ø 15 x 12 mm

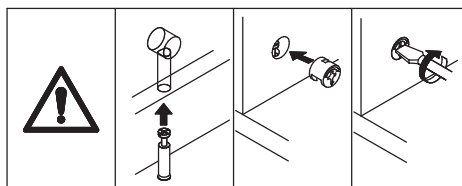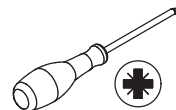

 Attach board 5 to board 8, add cam lock(B) into board 8 and turn clockwise to tighten as shown.

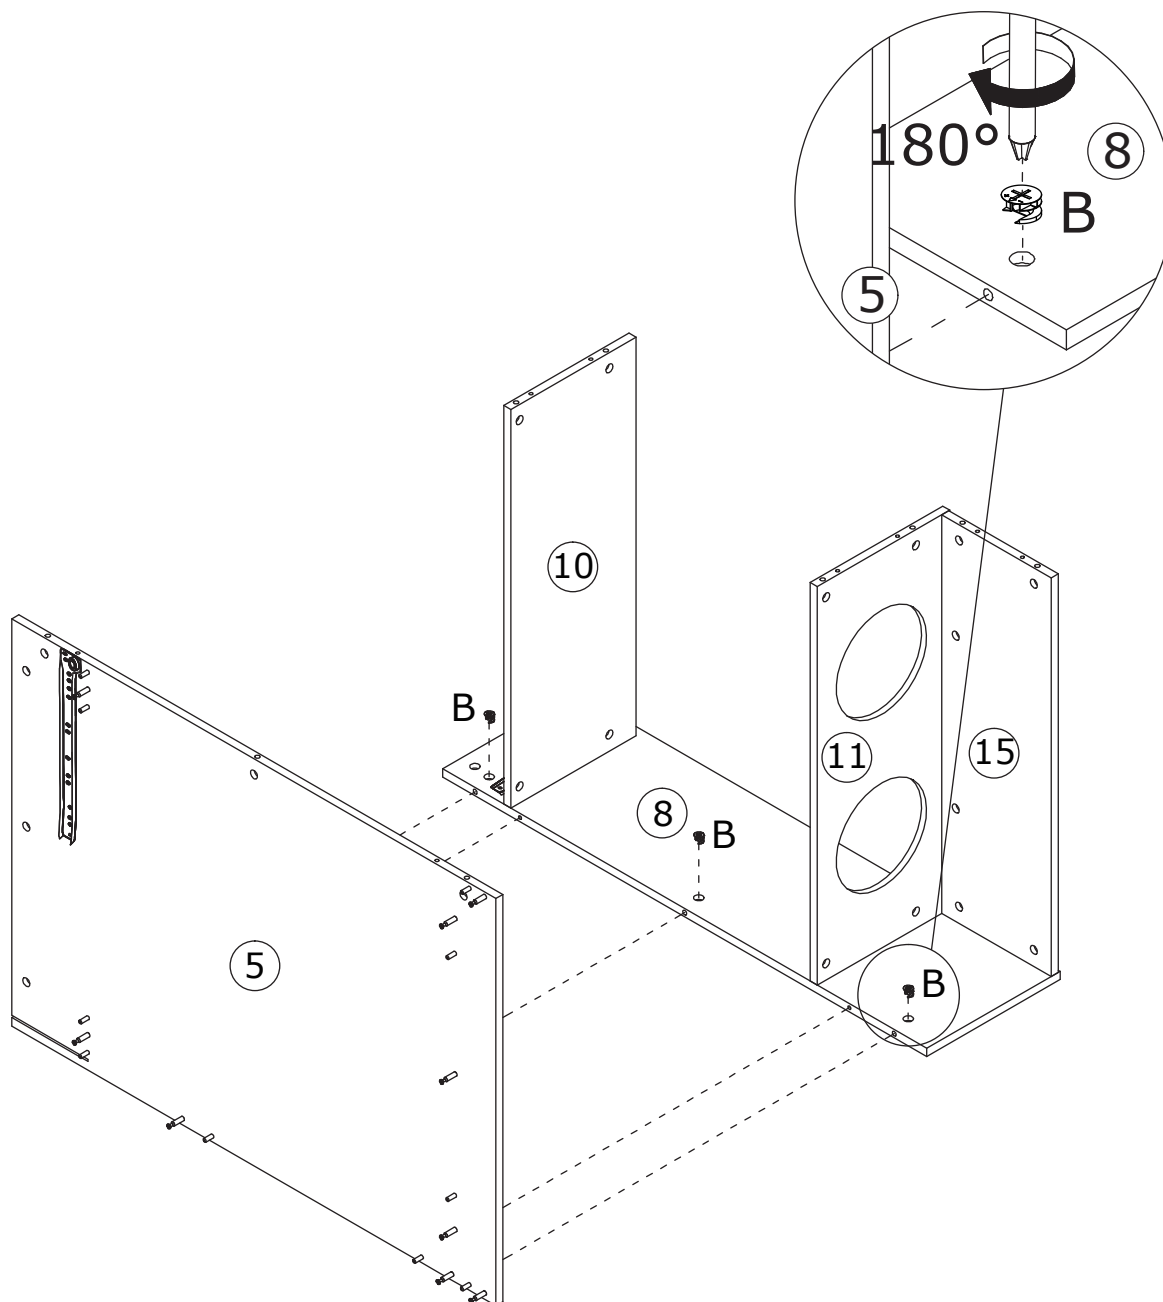

12

B x 7

 
 
 



Ø 15 x 12 mm


C x 2



Ø 15 x 9.5 mm

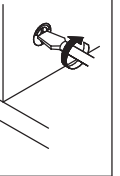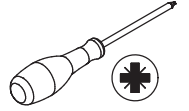

 Attach board 7 to board 10, 5, 11 and 15, add cam lock(B) into board 10,5,15; add cam lock(C) into board 11 and turn clockwise to tighten as shown.


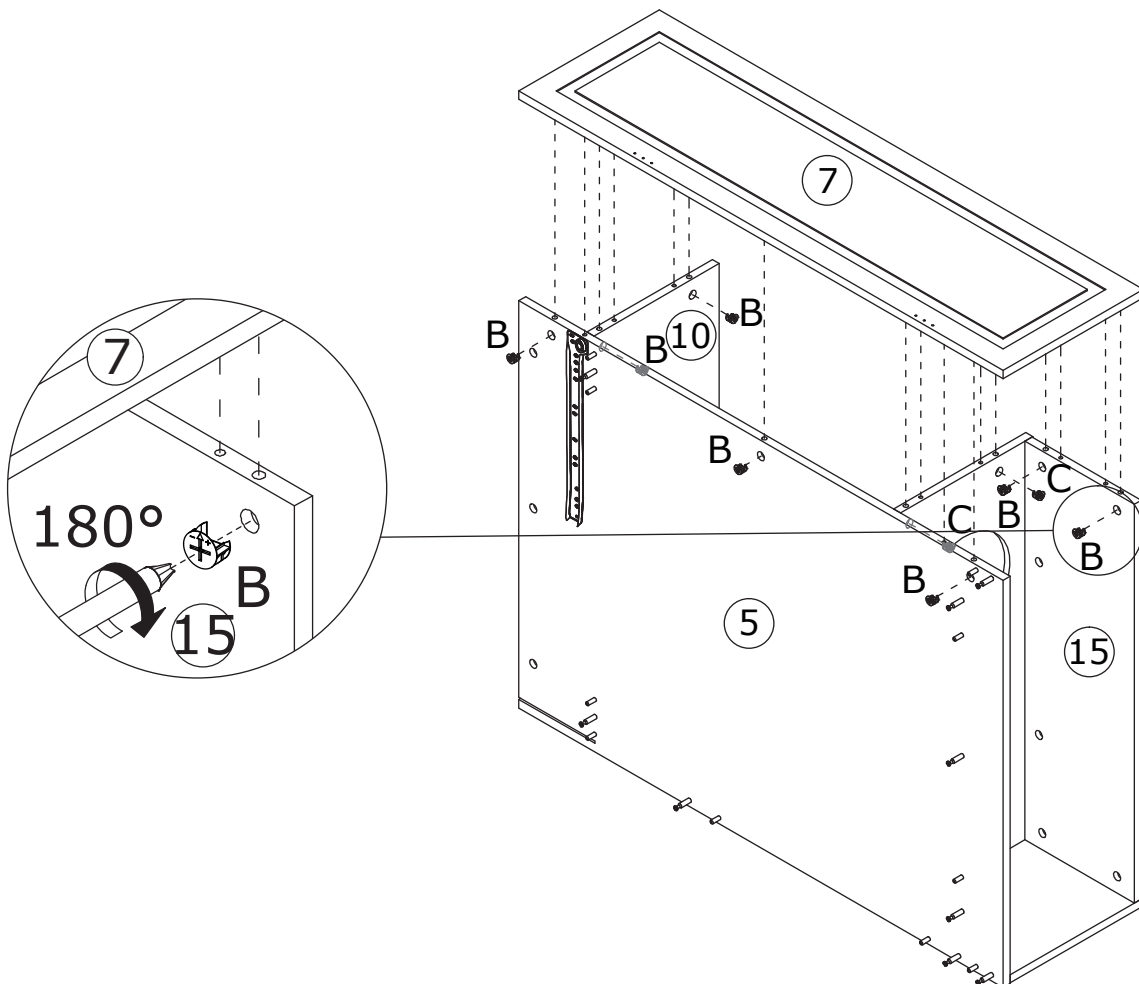


13


B x 10



  Ø 15 x 12 mm

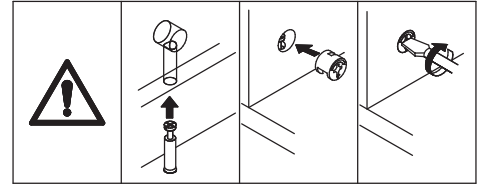

 Connect board 4 and 5 to board 13, 6, 3, 14, 28 and 12, add cam lock(B) into and turn clockwise to tighten as shown.


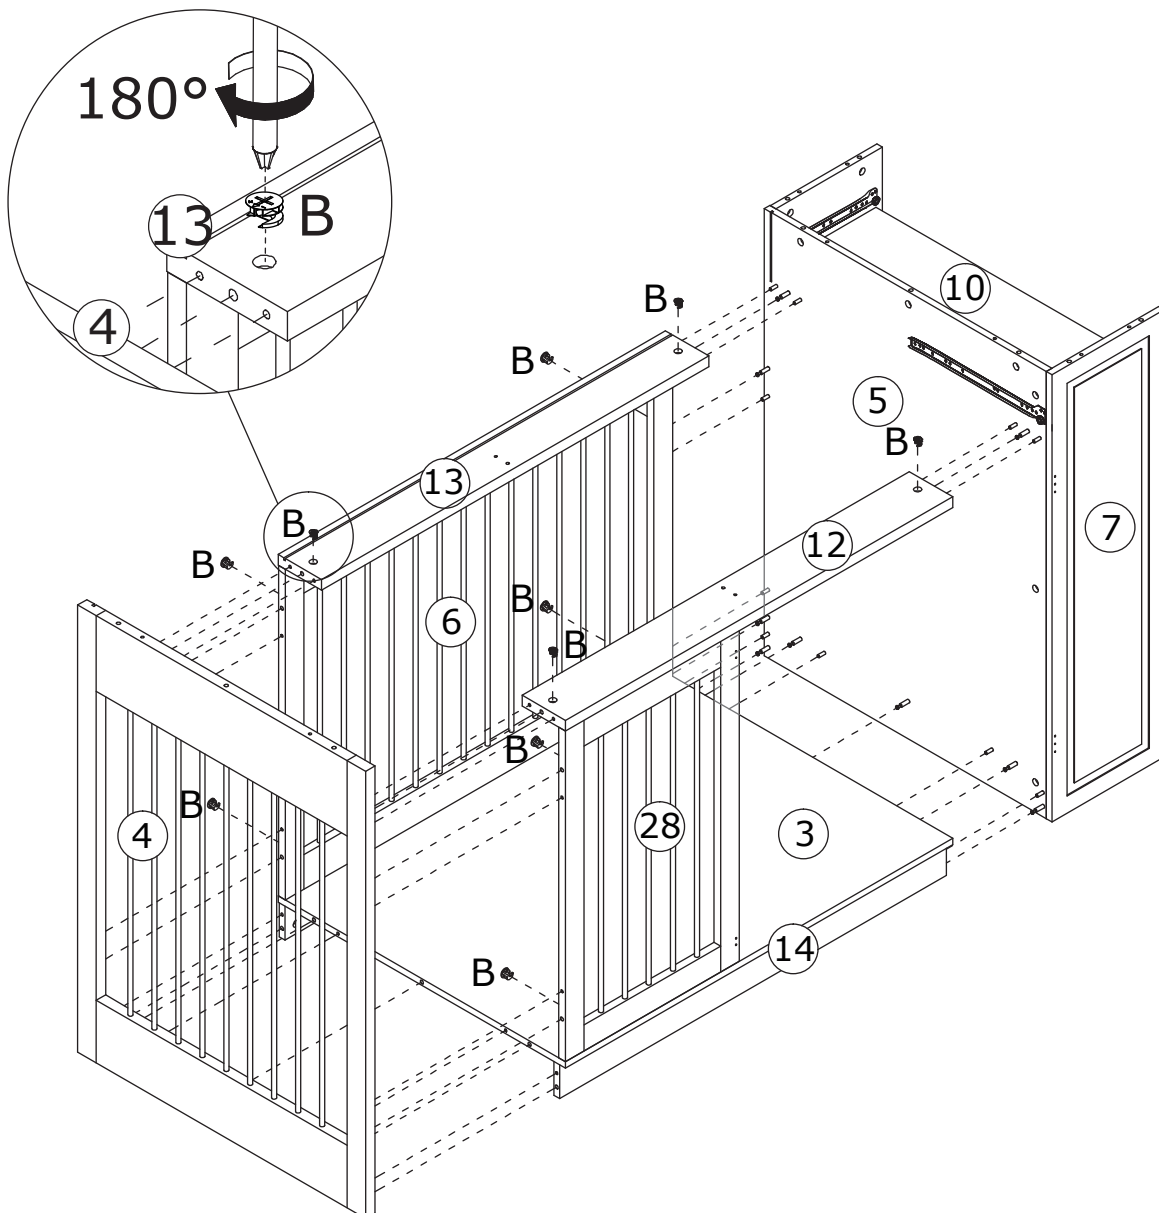


14



B x 10



  Ø 15 x 12 mm

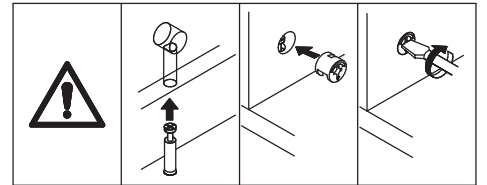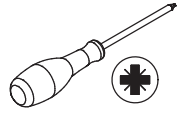


  Add cam lock(B) into board 3, 4, 5, 14 and turn clockwise to tighten as shown.


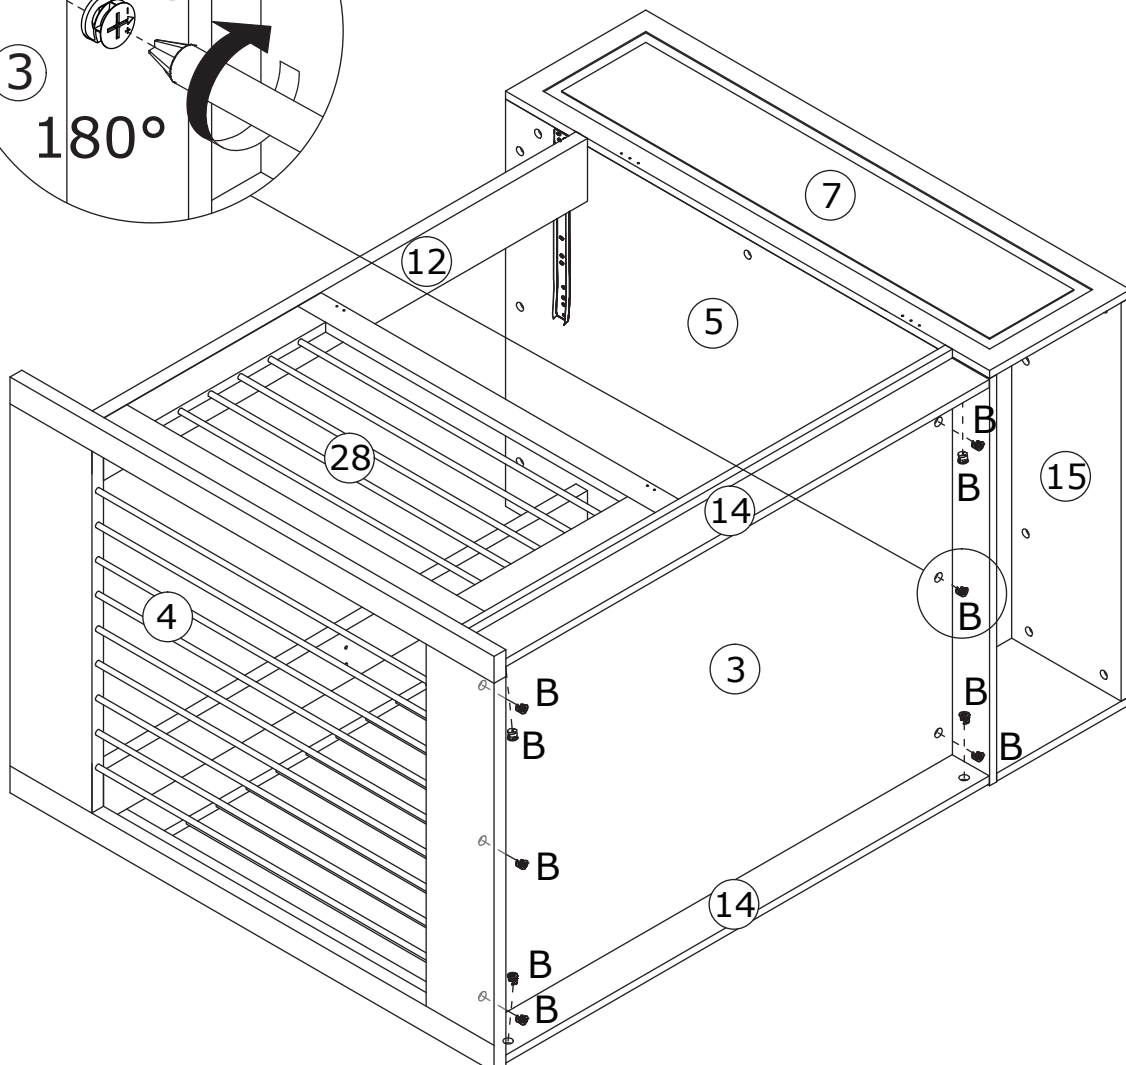
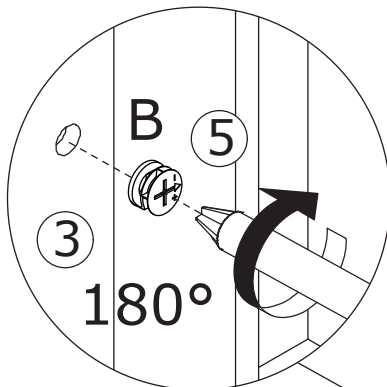


15


 
D x 2



F x 2

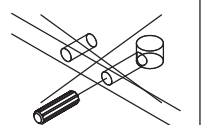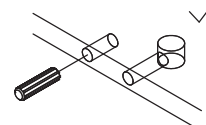   


  Attach board 9 to board 12 and 13 using wooden dowel(D), and fix with screw(F) as shown.

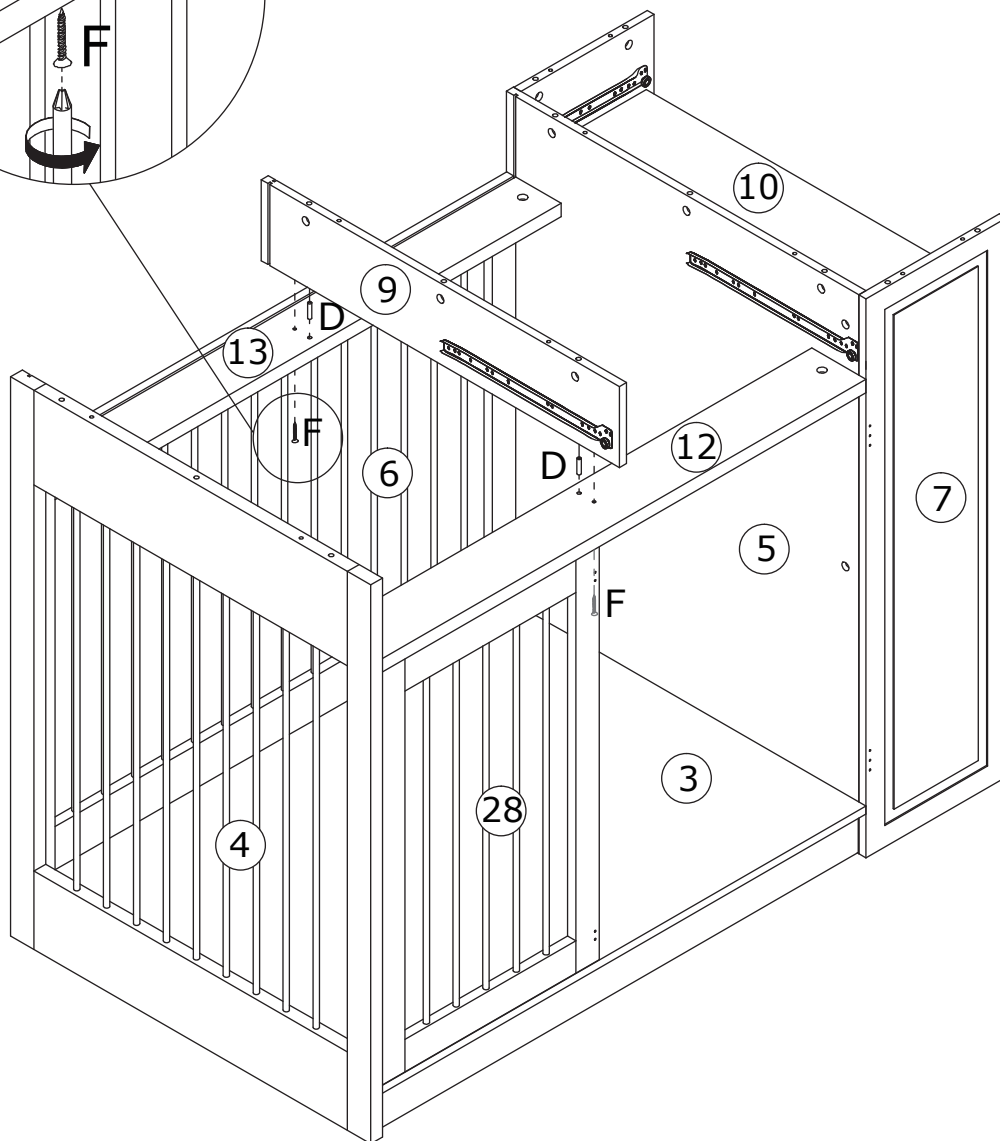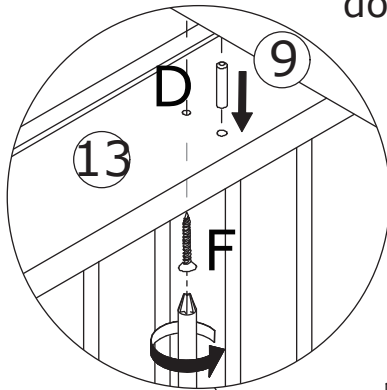

16

 Insert back board 16 along available grooves as shown.

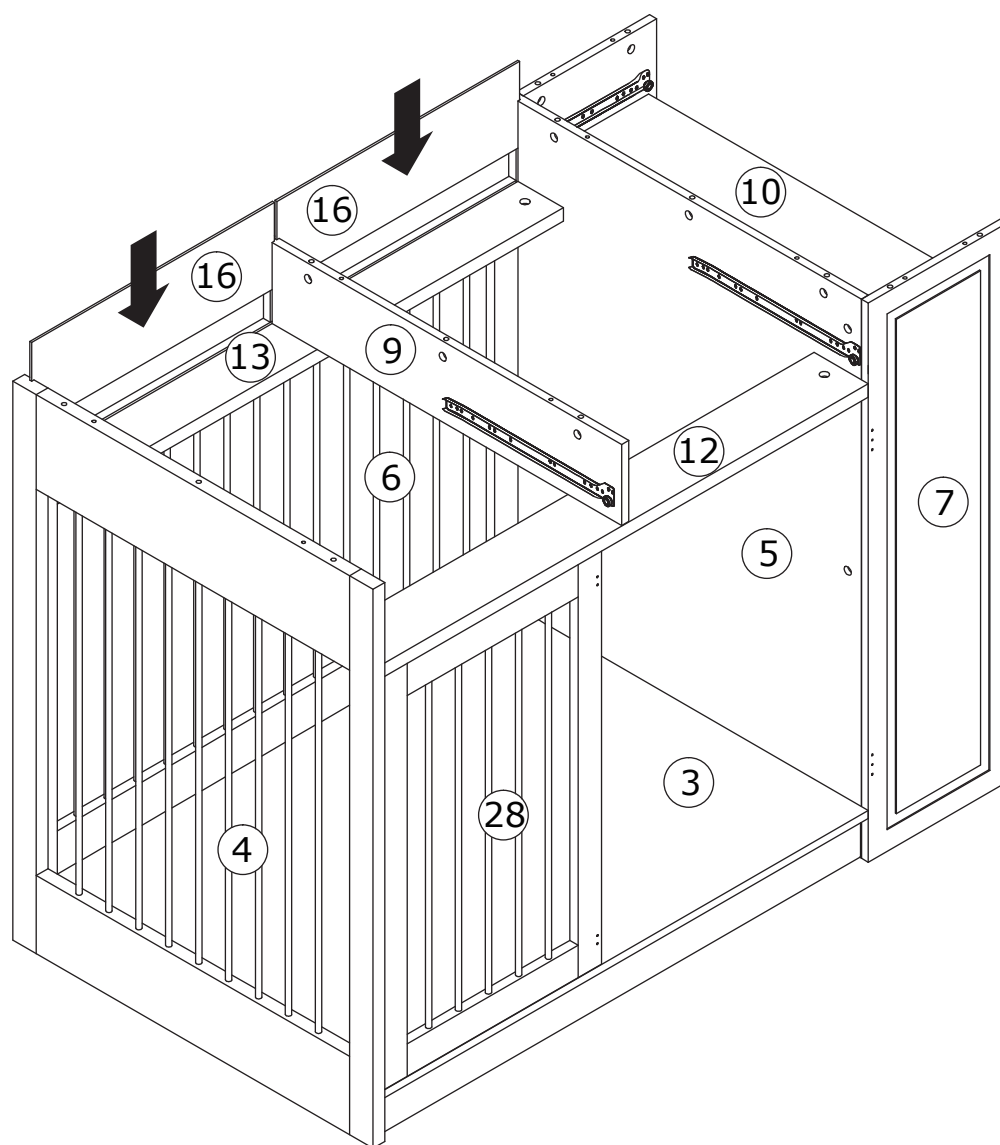

17

A x 13

 
 
 


D x 14




Ø6 x 35 mm

Ø6 x 30 mm

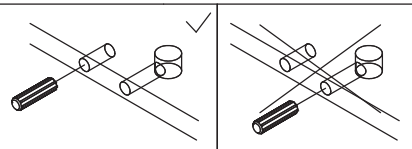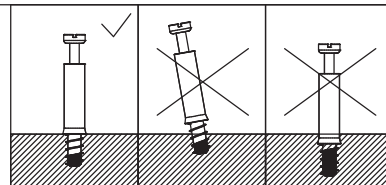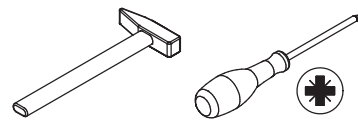

 Screw eccentric rod(A) and insert wooden dowel(D) into board 1 and 2 as shown.
Connect board 1 and 2 as shown.


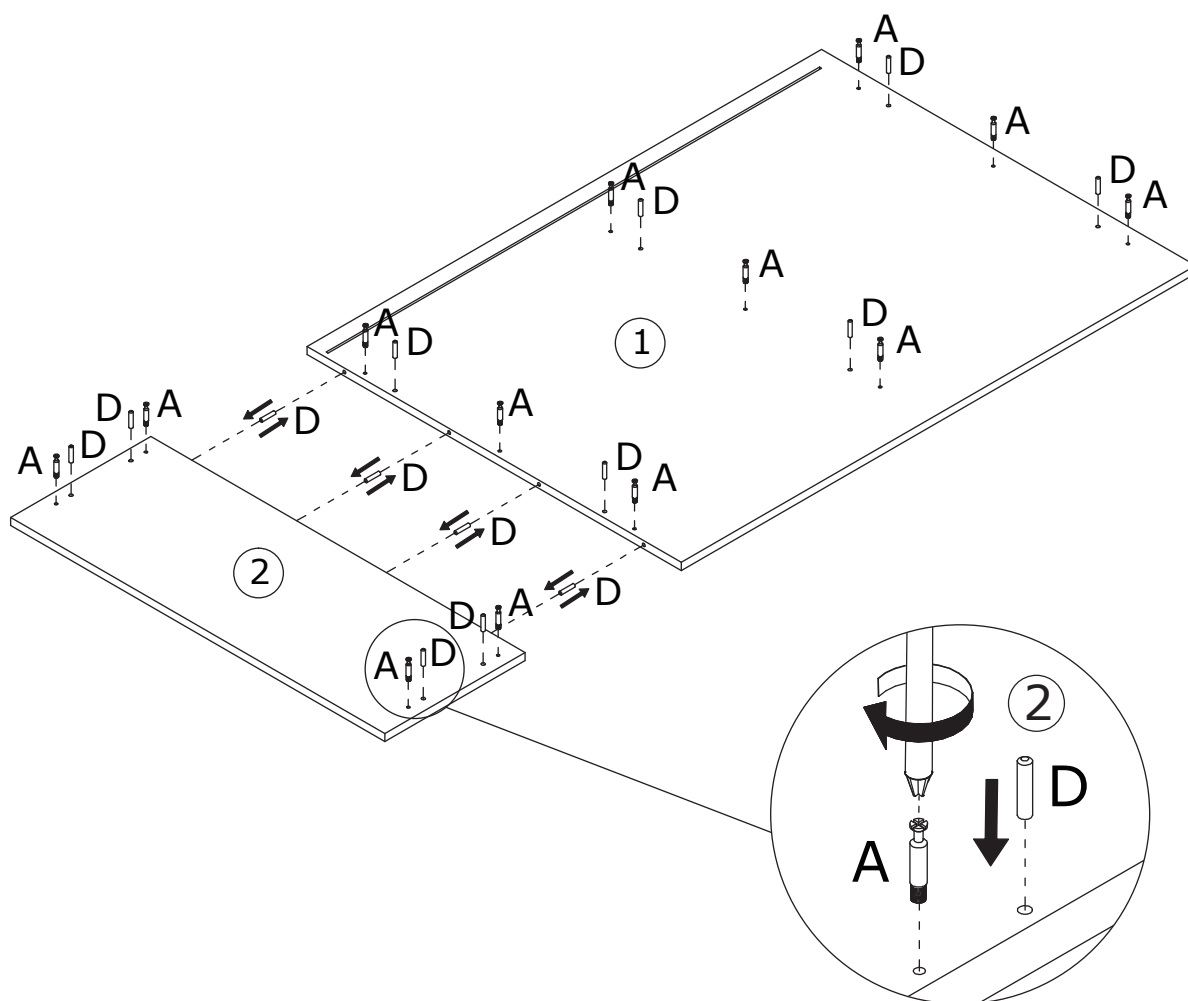


18

   
 
B x 13





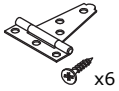
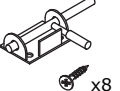
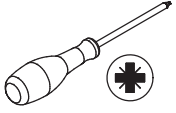
Ø 15 x 12 mm

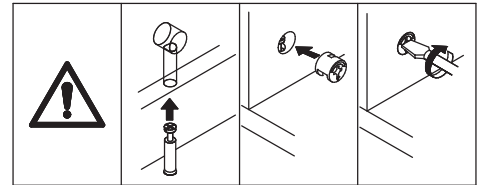



Cover board 1 and 2 to the top, add cam lock(B) into and turn clockwise to tighten as shown.

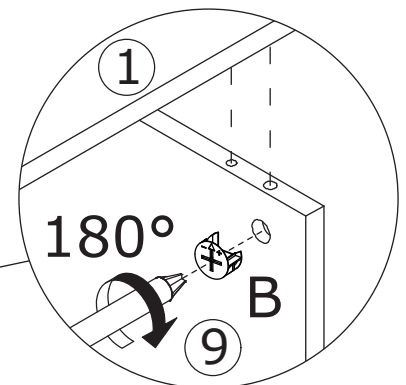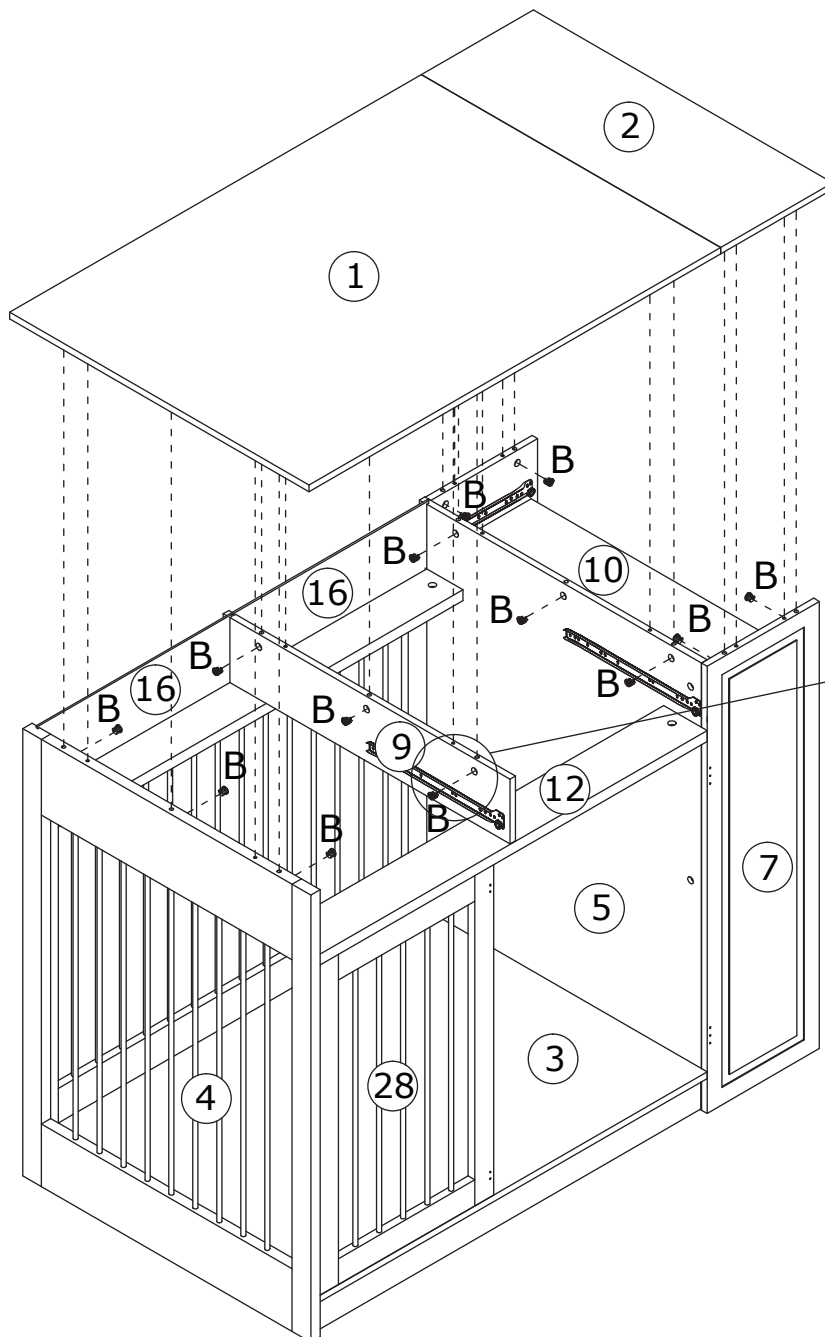

19
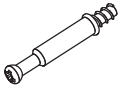
<p>A x 16</p>  <p>Ø 6 x 35 mm</p>	<p>G x 3</p>  <p>Ø 4 x 20 mm</p>	<p>H x 2</p>  <p>Ø 3.5 x 14 mm x6</p>	<p>J x 2</p>  <p>Ø 3.5 x 14 mm x8</p>	
--	---	--	---	---

  
Fix hinge(H) and bolt(J) to board 29 as shown.
Screw eccentric rod(A) into board 17, 18 and 25 as shown.
Fix knob(G) to board 17 and 18.

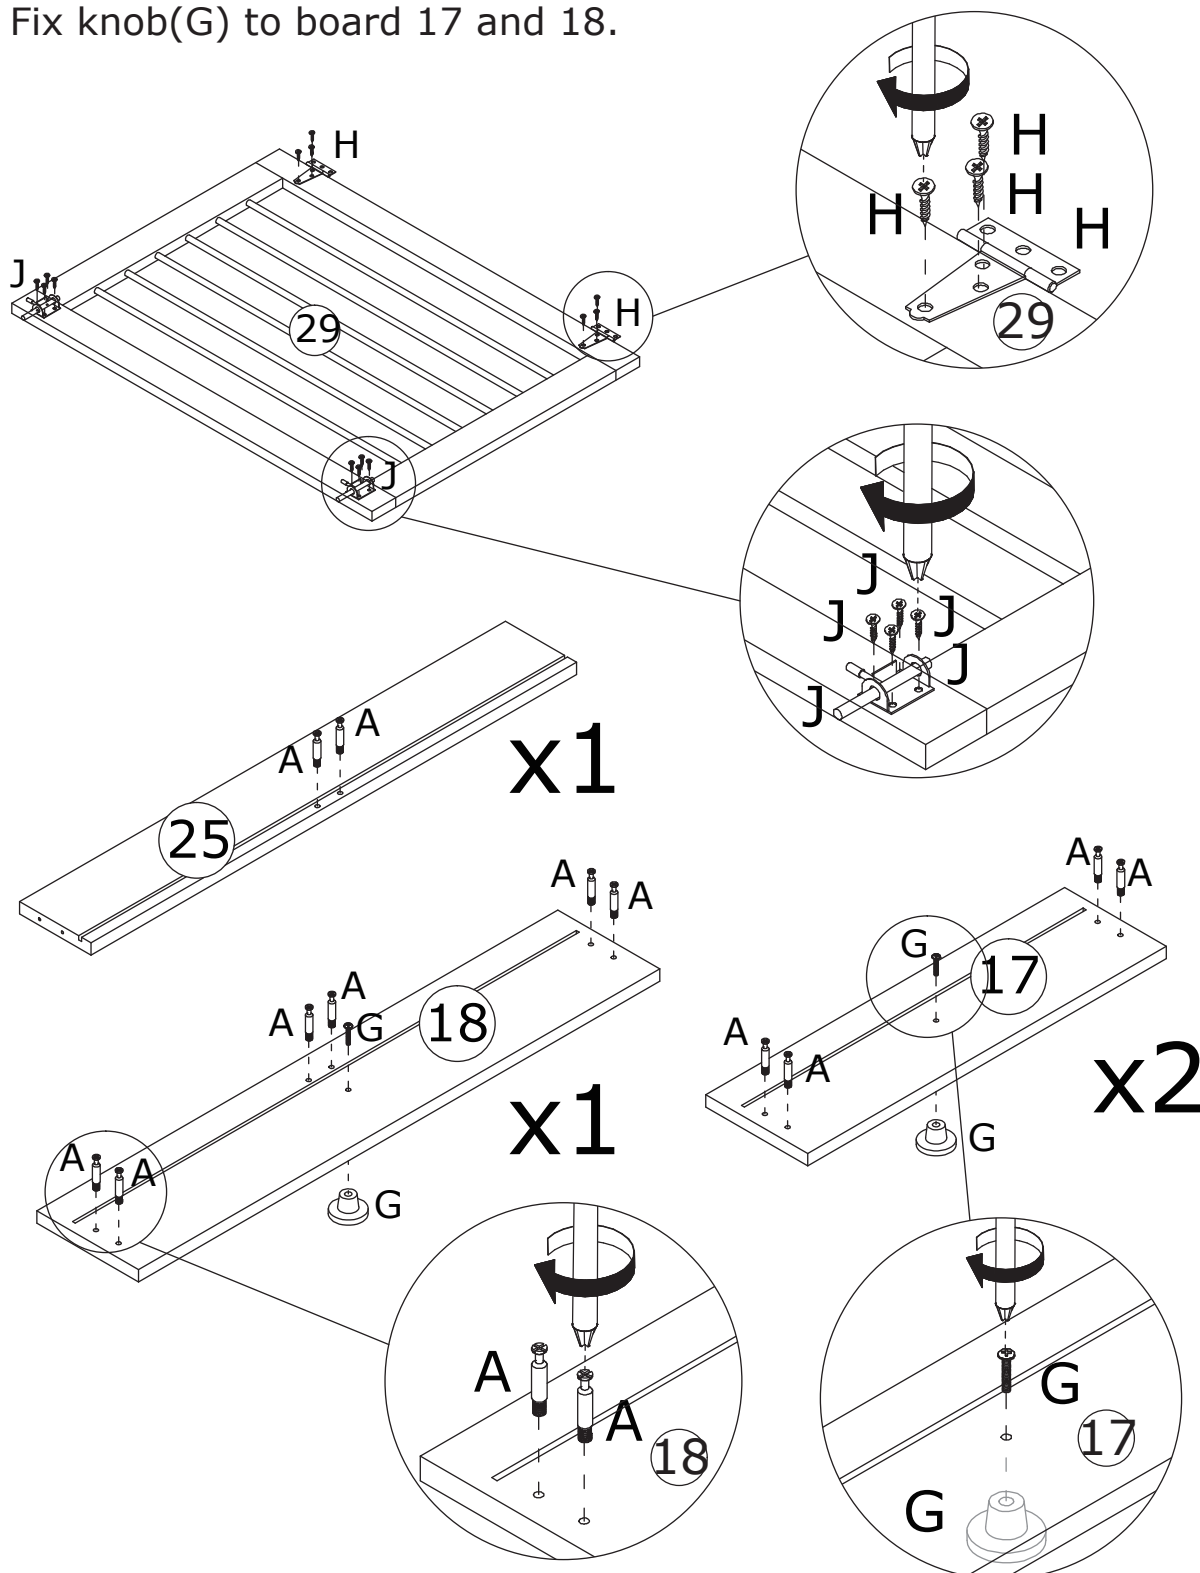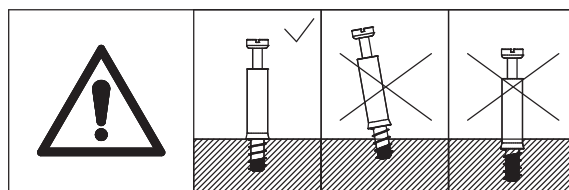



20



 
Fix door 29 to board 7 by
fixing hinge(H) as shown.
Fix bolt(J) to board 28 as shown.

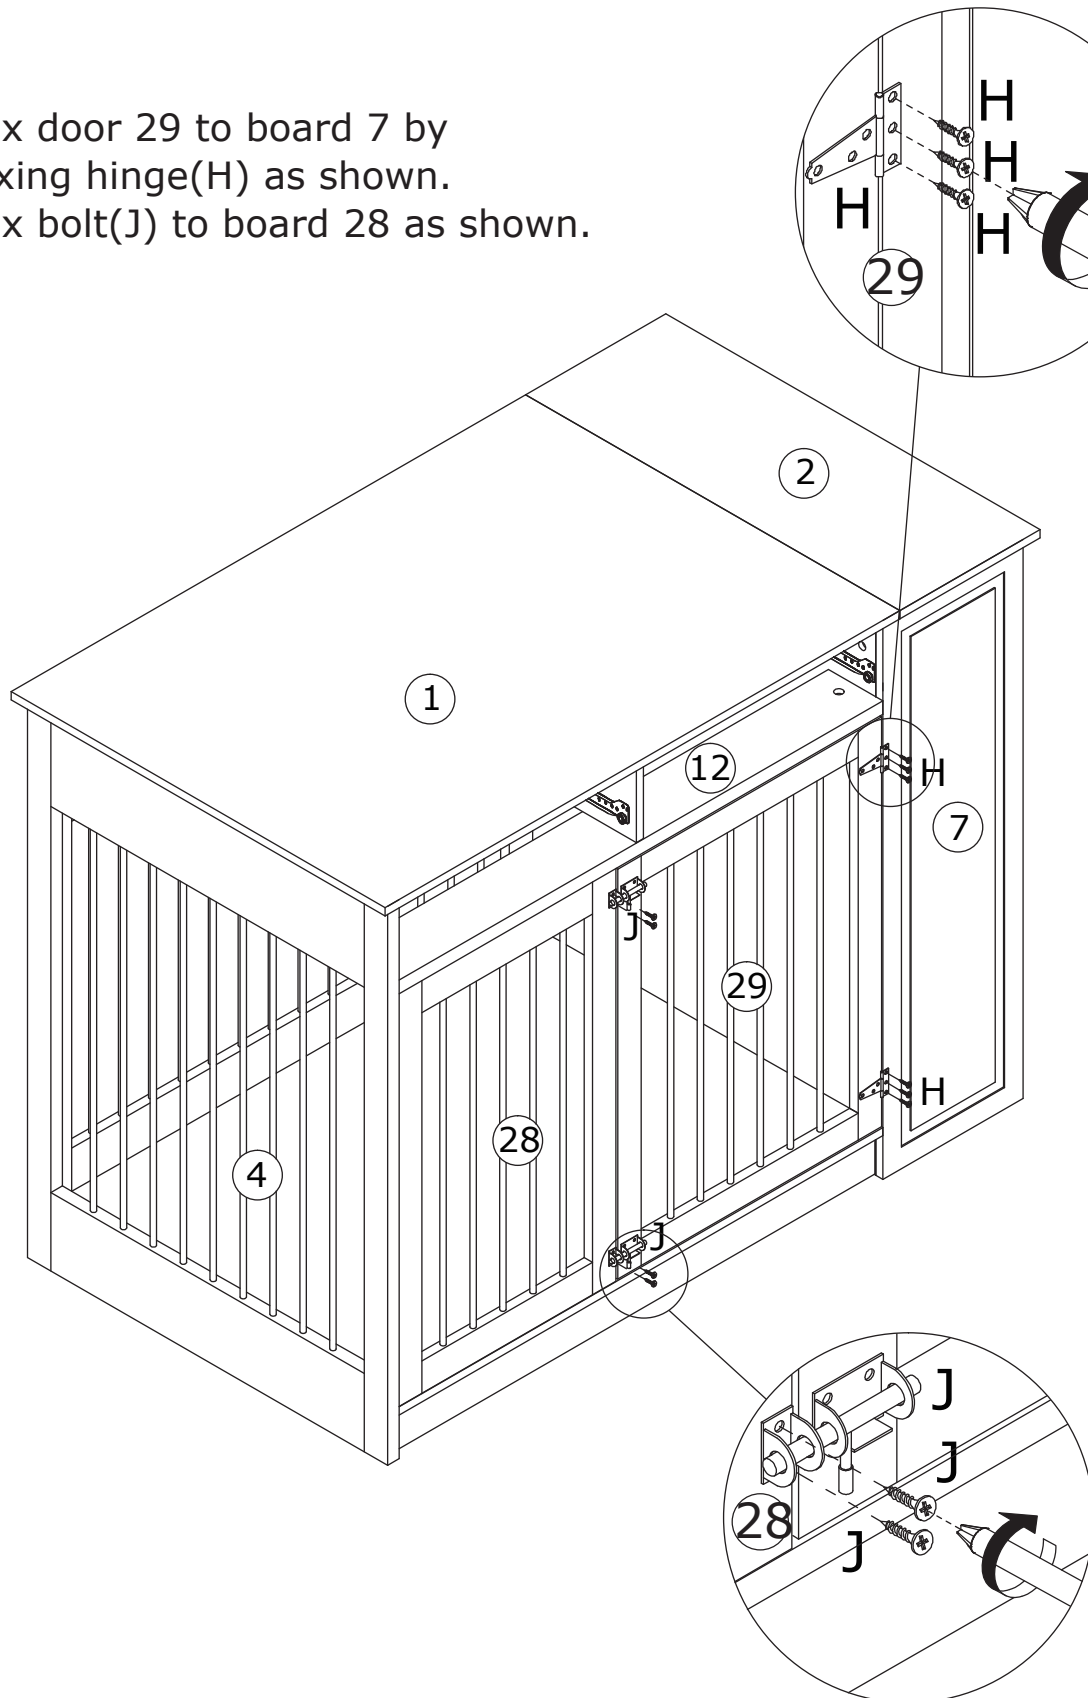

21

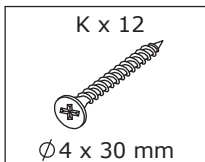  

 Fix board 19 and 20 to board 21 with screw(K) as shown.
Fix board 23 and 24 to board 25 with screw(K) as shown.


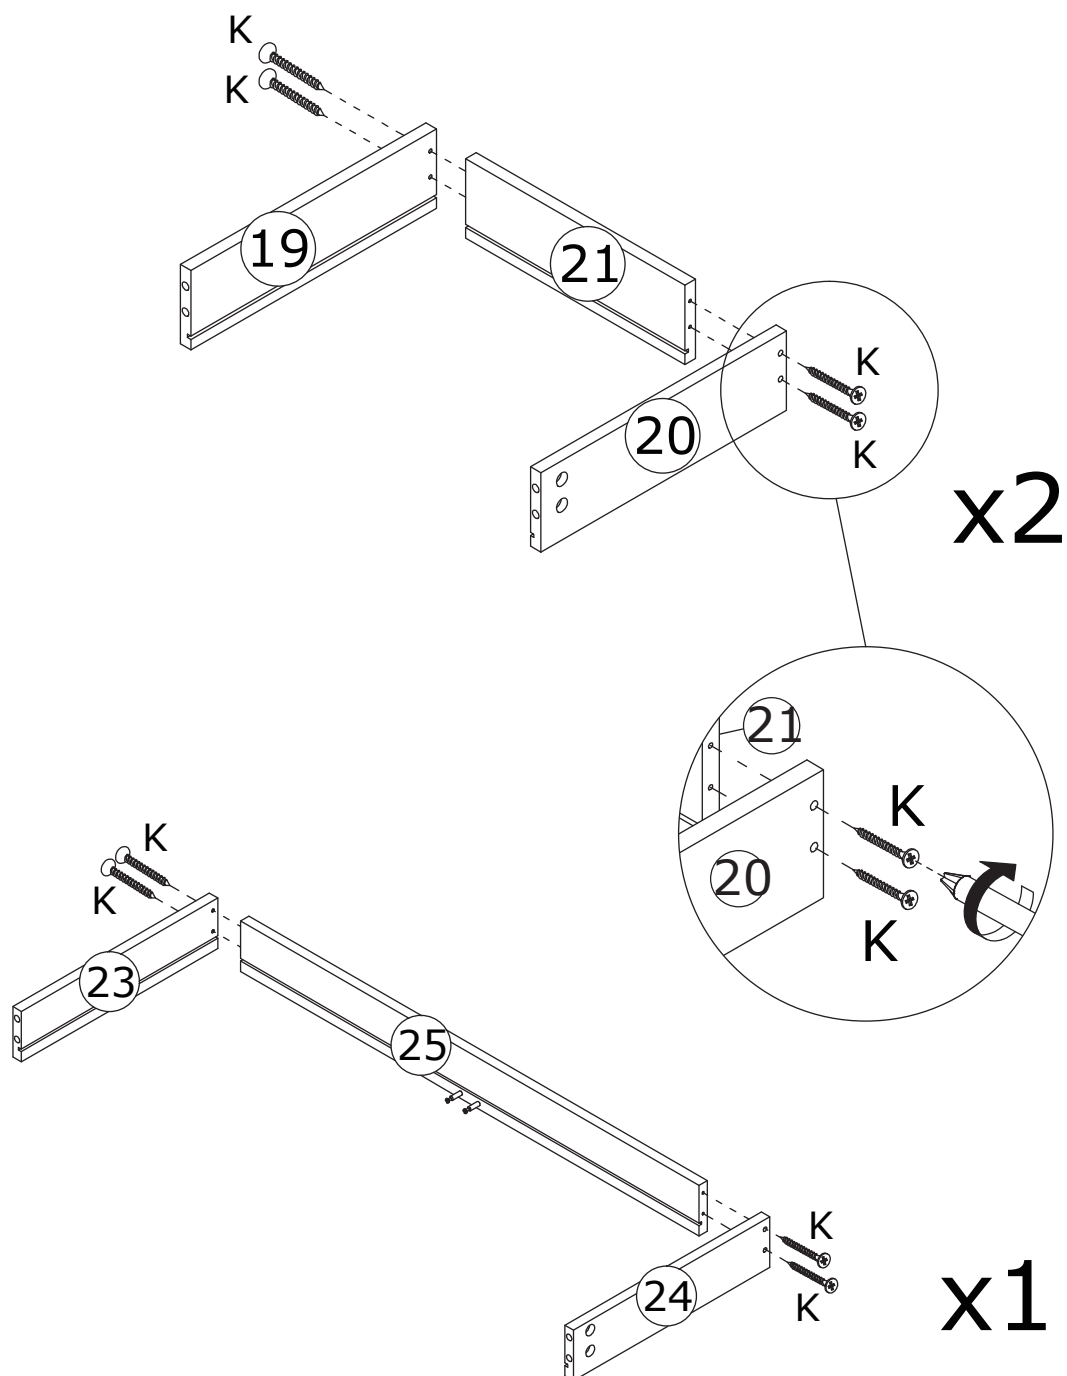


22


C x 2



 
Ø15 x 9.5 mm

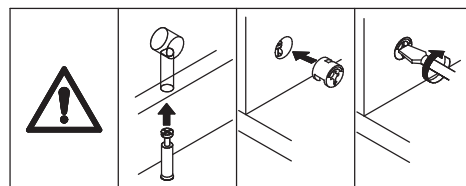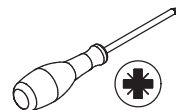

 Insert bottom board 22 along available grooves as shown. Attach board 26 to board 25, add cam lock(C) into and turn clockwise to tighten as shown.


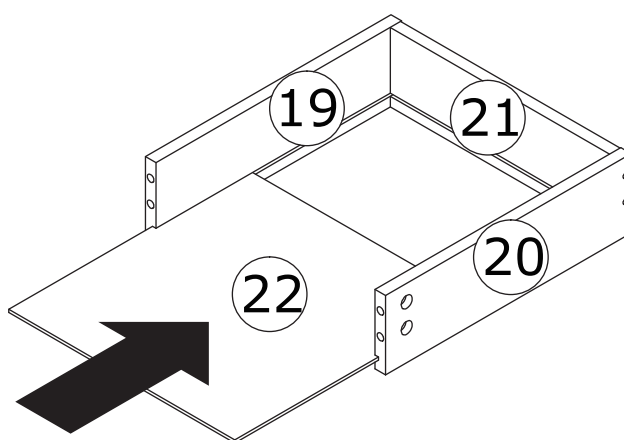


x2


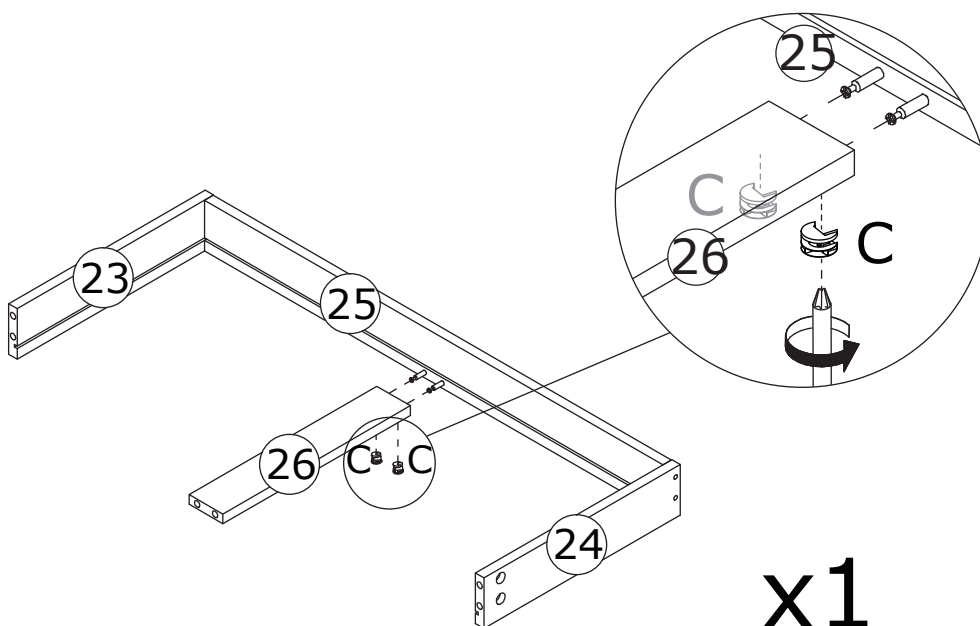 


x1


 
23

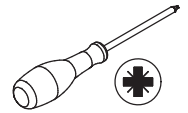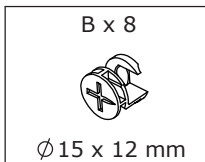

  Insert bottom board 27 along available grooves as shown.
Attach board 17 to board 19 and 20, add cam lock(B) into and turn clockwise to tighten as shown.

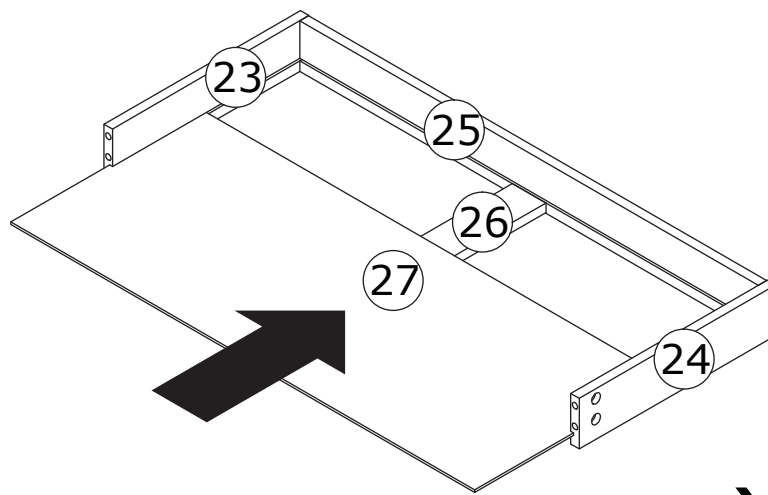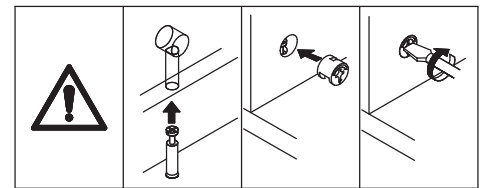


x1

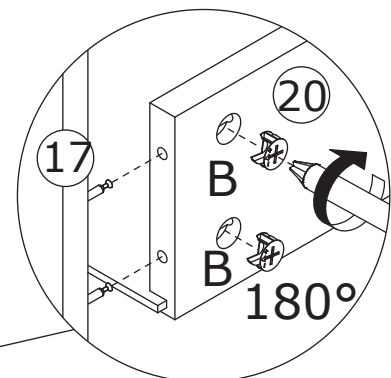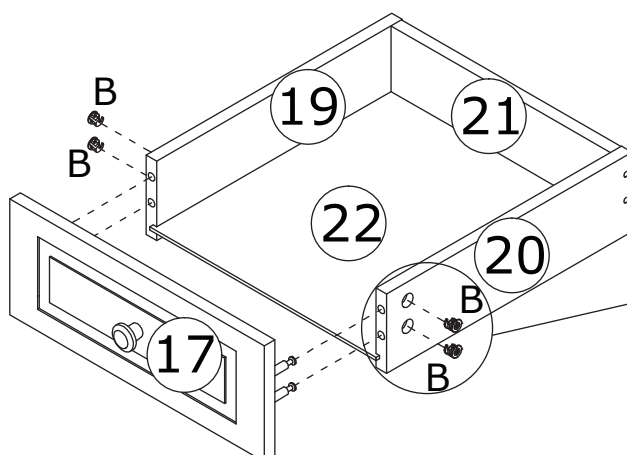  


x2

  24



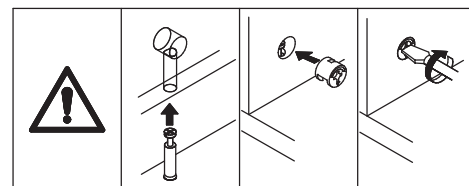


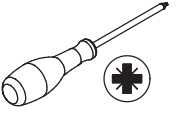
<p>B x 4</p>  <p>Ø 15 x 12 mm</p>	<p>C x 2</p>  <p>Ø 15 x 9.5 mm</p>	
--	---	---


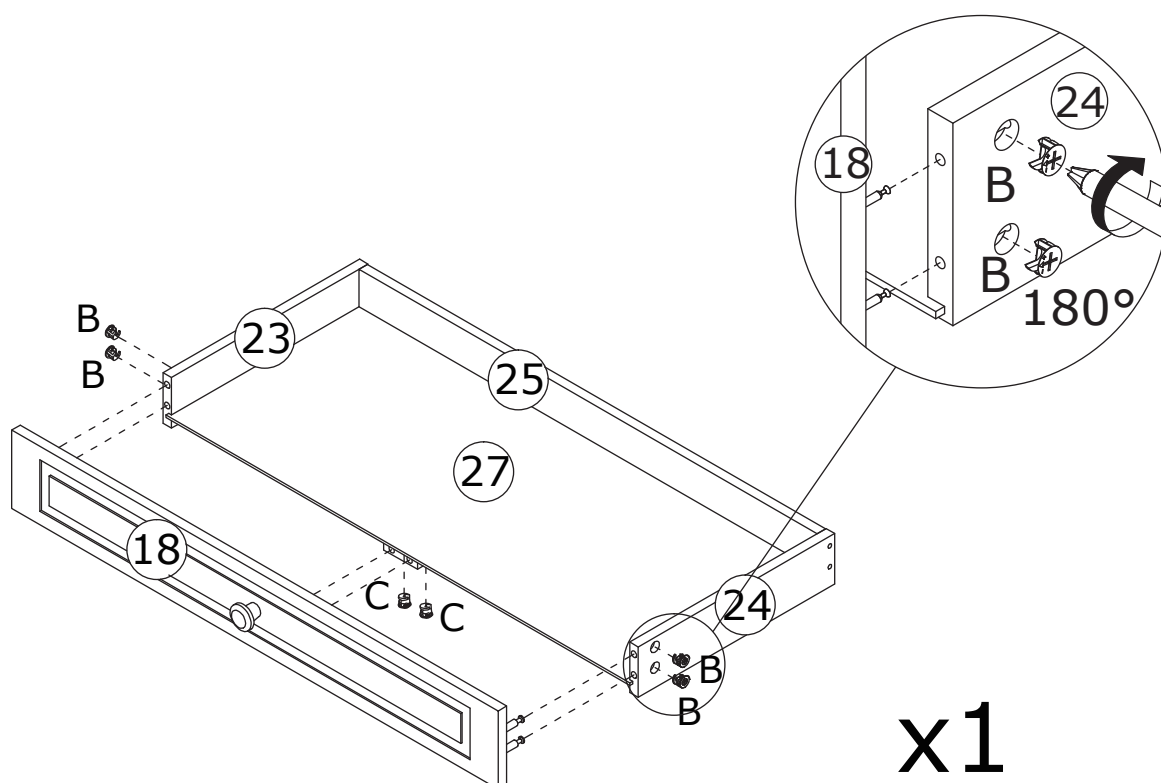


Attach board 18 to board 23, 26 and 24,
add cam lock(B) into board 23 and 24;
add cam lock(C) into board 26 and turn
clockwise to tighten as shown.









25


<p>E x 12</p>  <p>Ø 3 x 14 mm</p>	<p>L x 2</p>  <p>350 mm</p>		
<p>M x 2</p>  <p>350 mm</p>	<p>P x 1</p>  <p>250 mm</p>	<p>Q x 1</p>  <p>250 mm</p>	

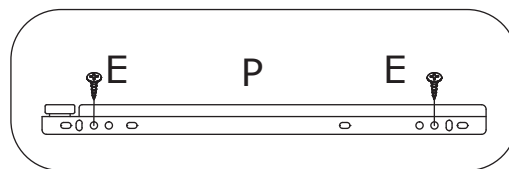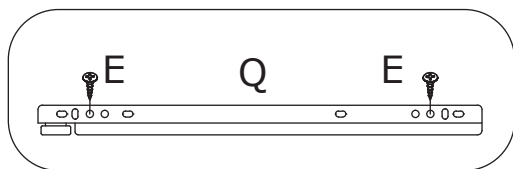  

    
 
 
Fix runner(P) and (Q) to board 23 and 24 with screw(E) as shown.
Fix runner(L) and (M) to board 19 and 20 with screw(E) as shown.

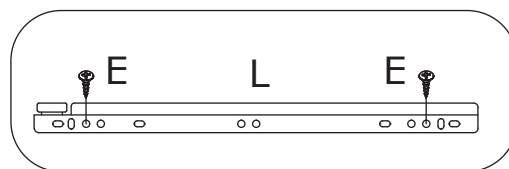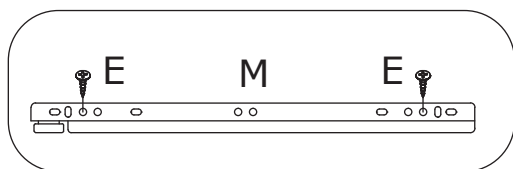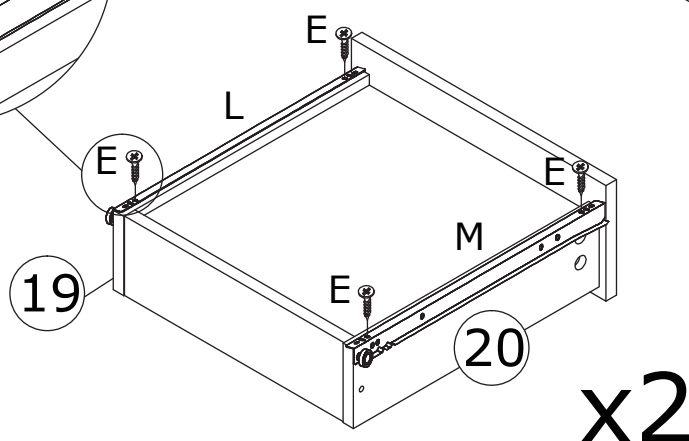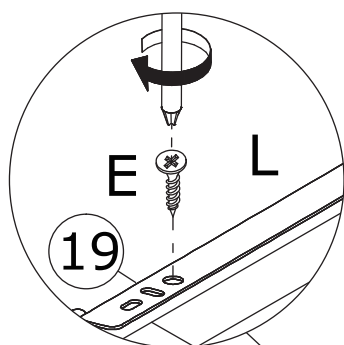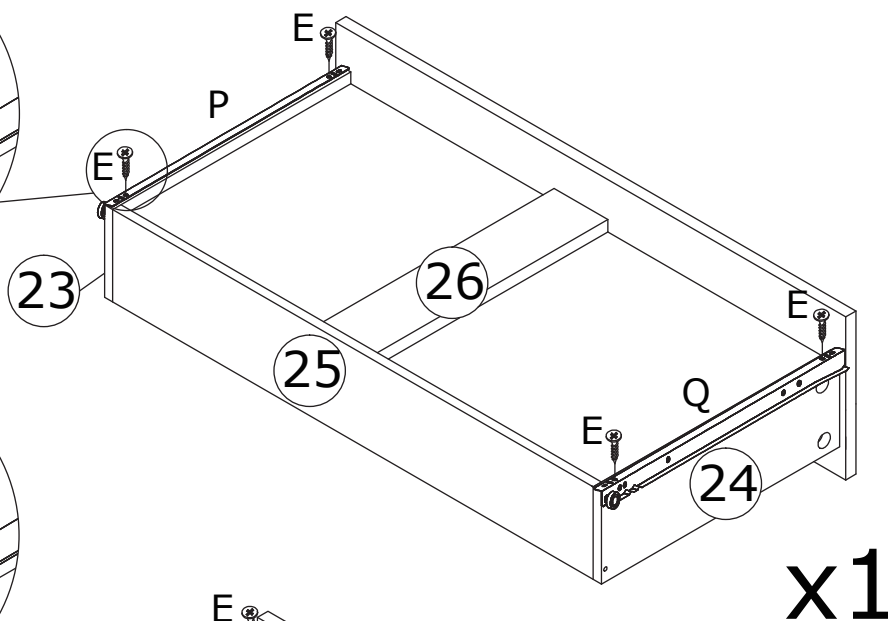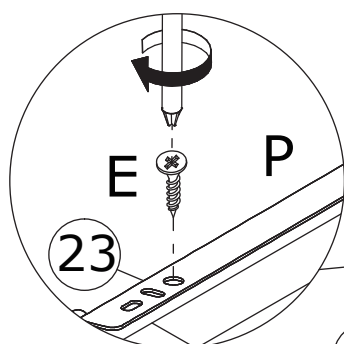


Align rails, insert drawers in.

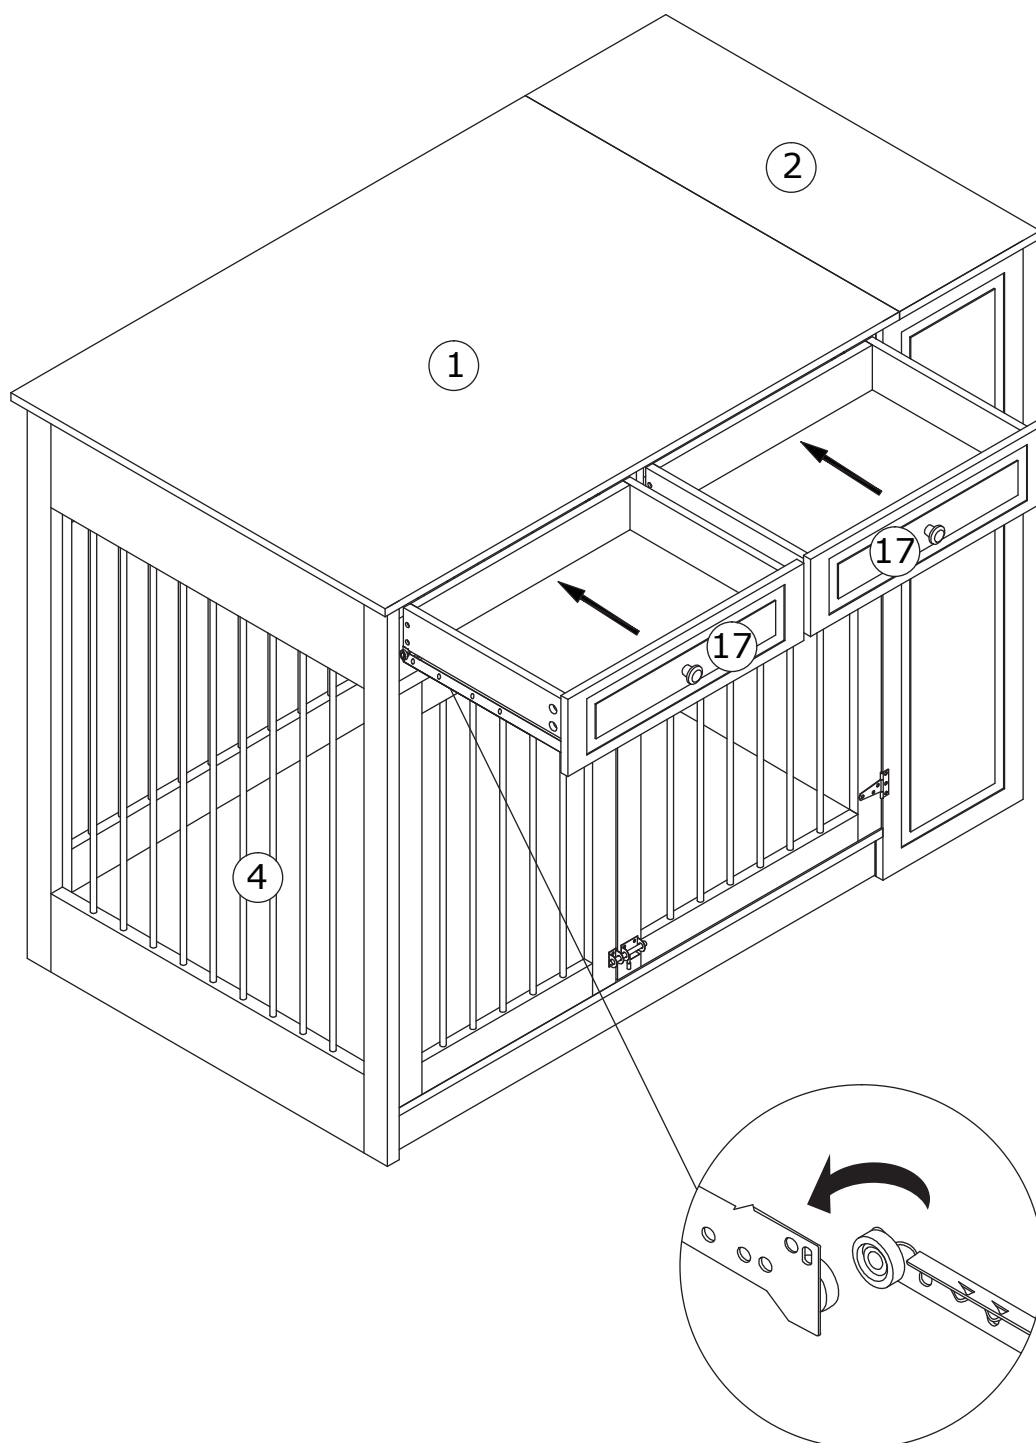 

27

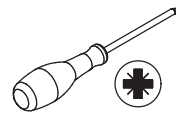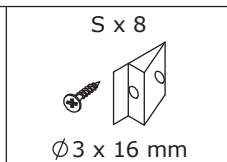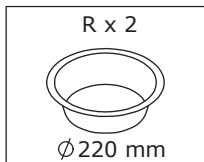   

 Align rails, insert drawer in.
Insert buckle(S) into board 16
and fix to tighten as shown.

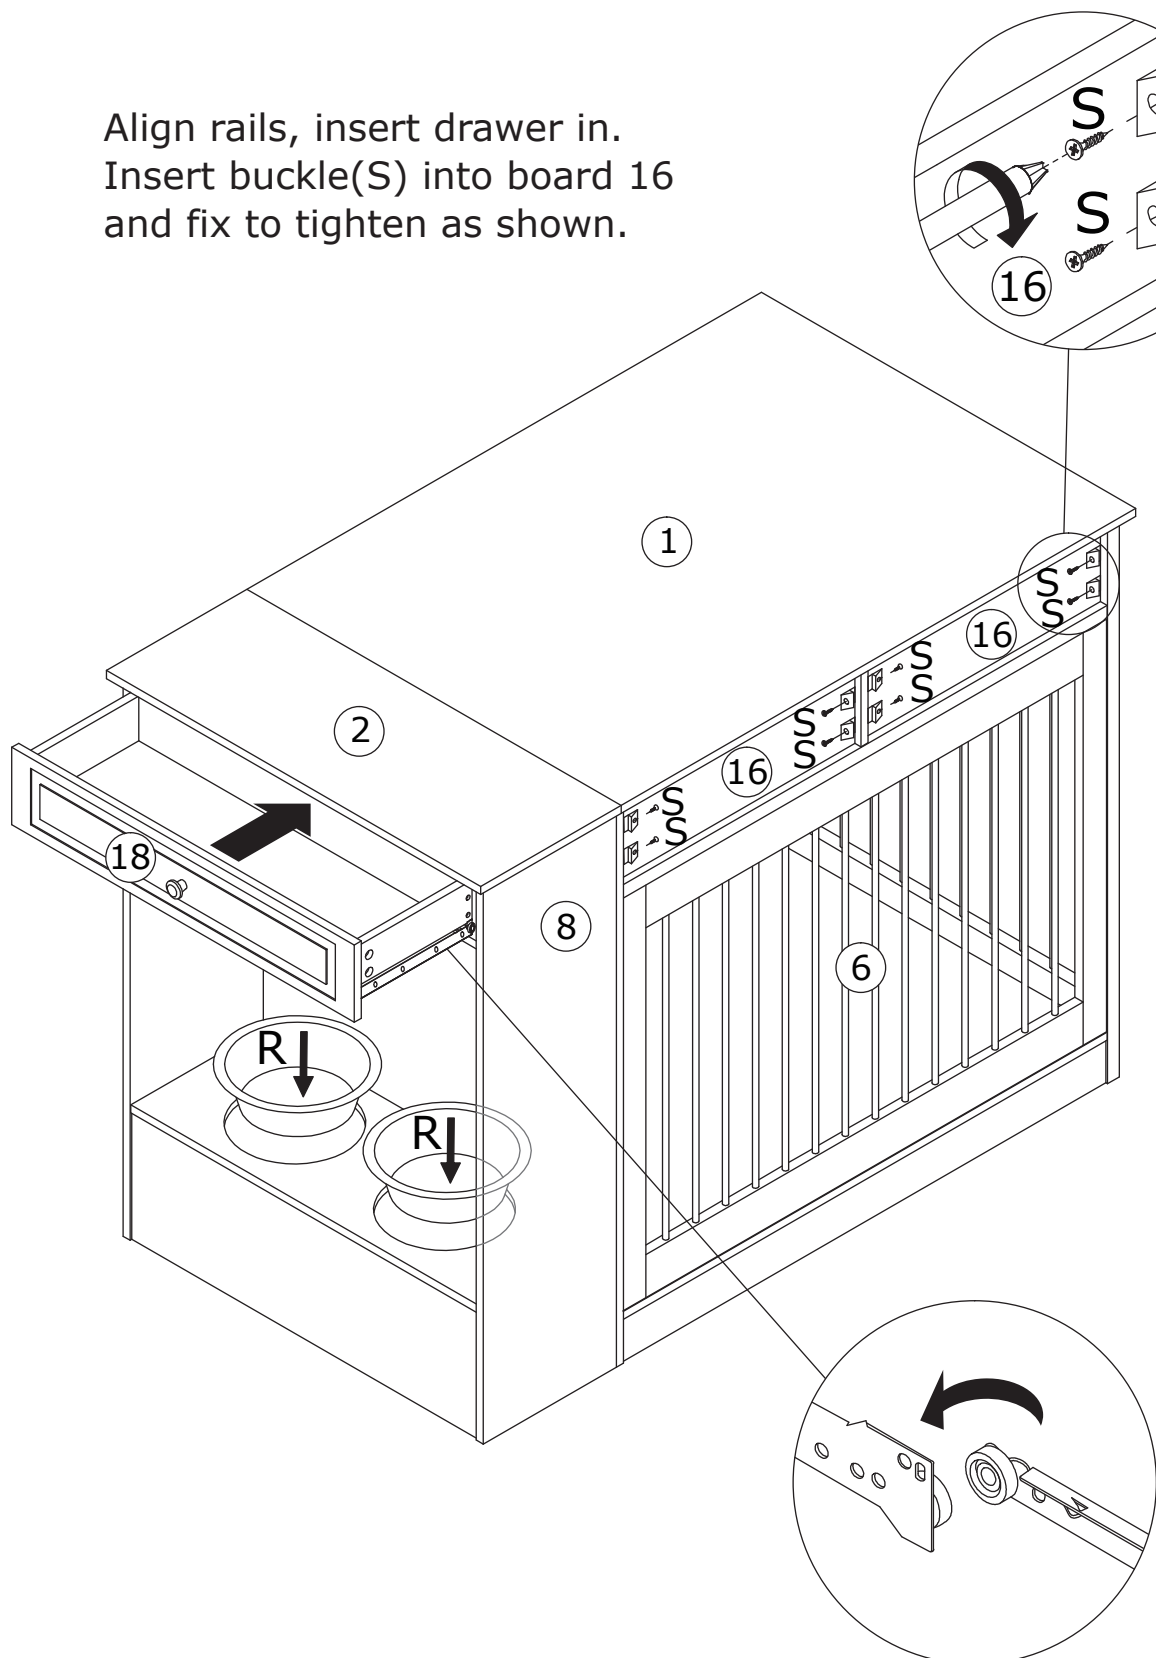




27

T x 84



Ø 20 mm

   Use sticker(T) to cover
cam lock holes.

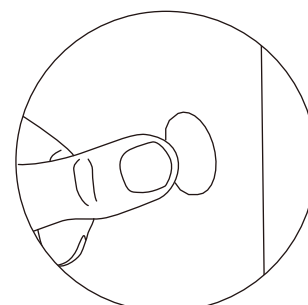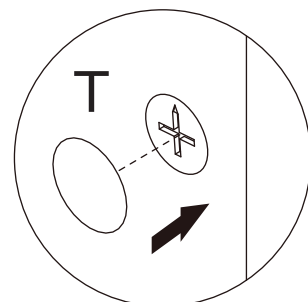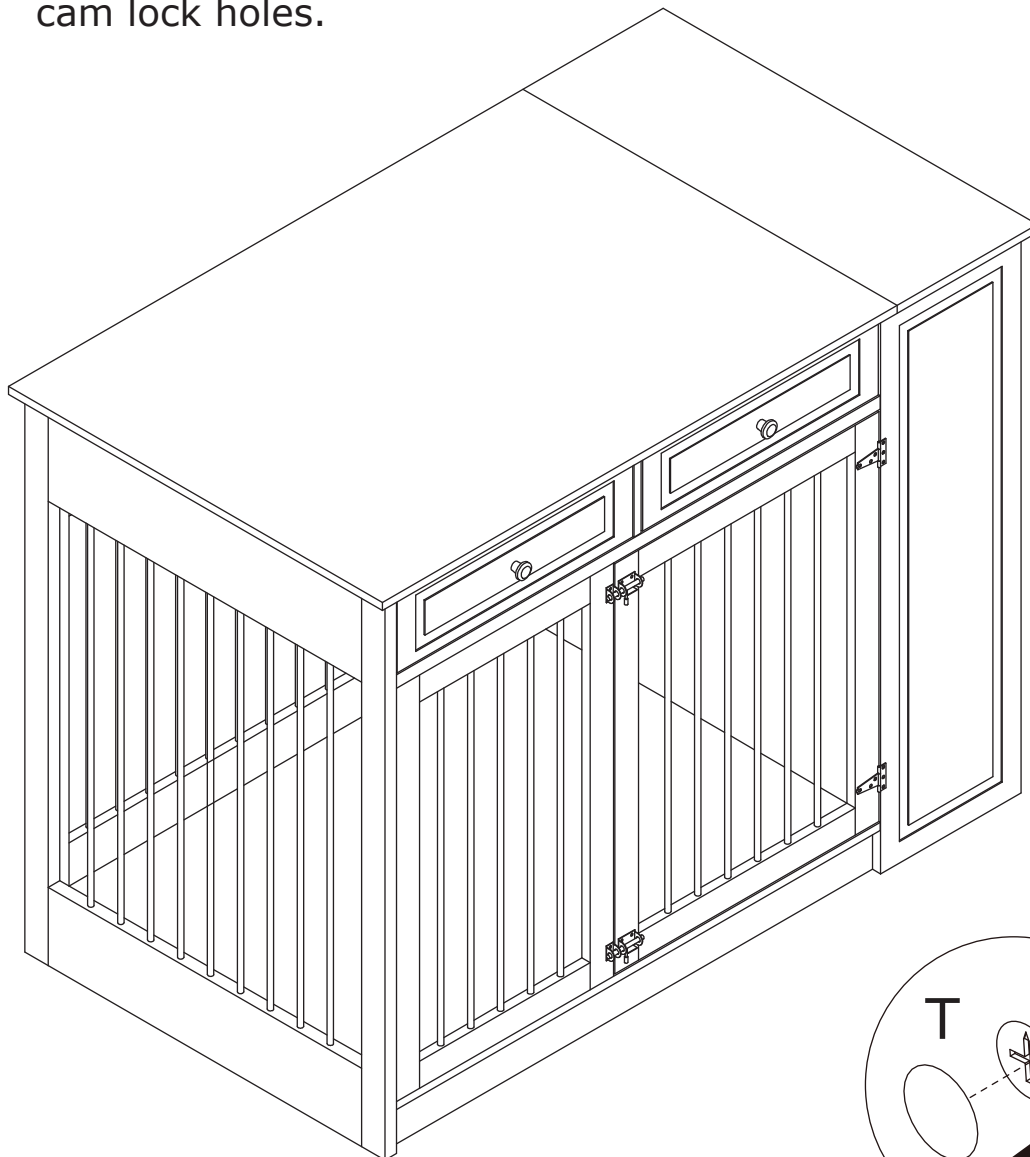

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387