

COASTER
FINE FURNITURE®

701498

LED COFFEE TABLE

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

⚠ Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION: Z HARDWARE PACKAGE:

A Metal Post



1 PC

B Metal Top Cover



1 PC

c Led Box



1 PC

D Glass Top



1 PC


E Metal Base




1 PC

NO	DESCRIPTION	FIGURE	Q'TY
1	Bolt 5/16" X 32mm		1 PC
2	Washer		1 PC
3	Bottom Cover		1 PC
4	Allen Wrench		1 PC

STEP 1
Screw the bolt through the washer, bottom cover, metal base and metal post, as shown.

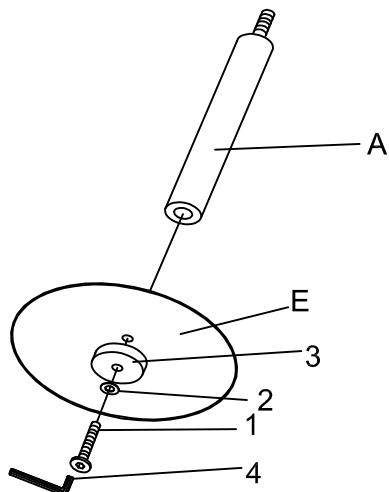

STEP 2
Place the LED box and glass top onto the metal post. Tighten the metal cover on the threading of the metal post, as shown.

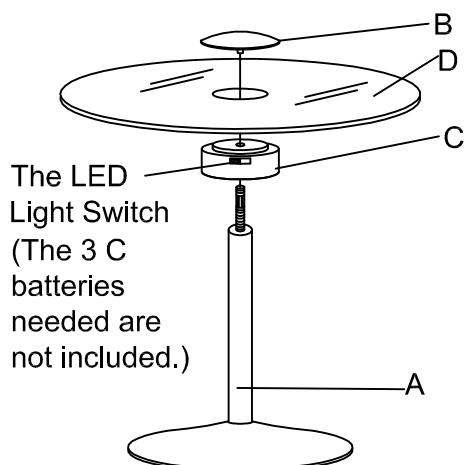

STEP 3
Set the table straight.

