
ASSEMBLY INSTRUCTION OUTDOOR SECTIONAL SOFA SET

N715P246019 N715P246020 N715P246021 N715P246022

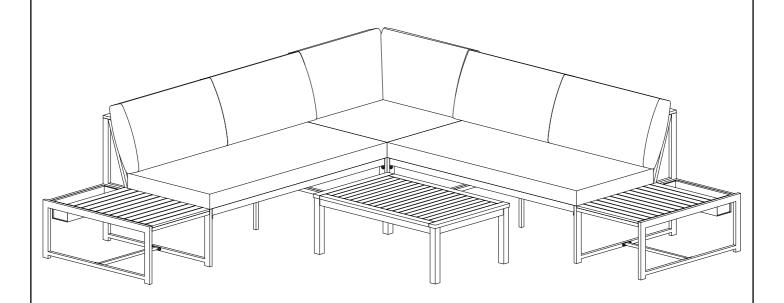

Notice:

- 1.80% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during asembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. **Note**: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


Assembly Instruction

Caution: You must read these Assembly Instructions before you proceed

Care & Maintenance

- Not for commercial use. For residential use only.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- Prolonged exposure to rain may cause rusting which can stain floors.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- Stains may be removed with mild soap solution and damp cloth.
- Keep away from sources of ignition.
 - Dust and pick-up spills using a clean, non-colored, lint- free cloth.


OUTDOOR SECTIONAL SOFA SET

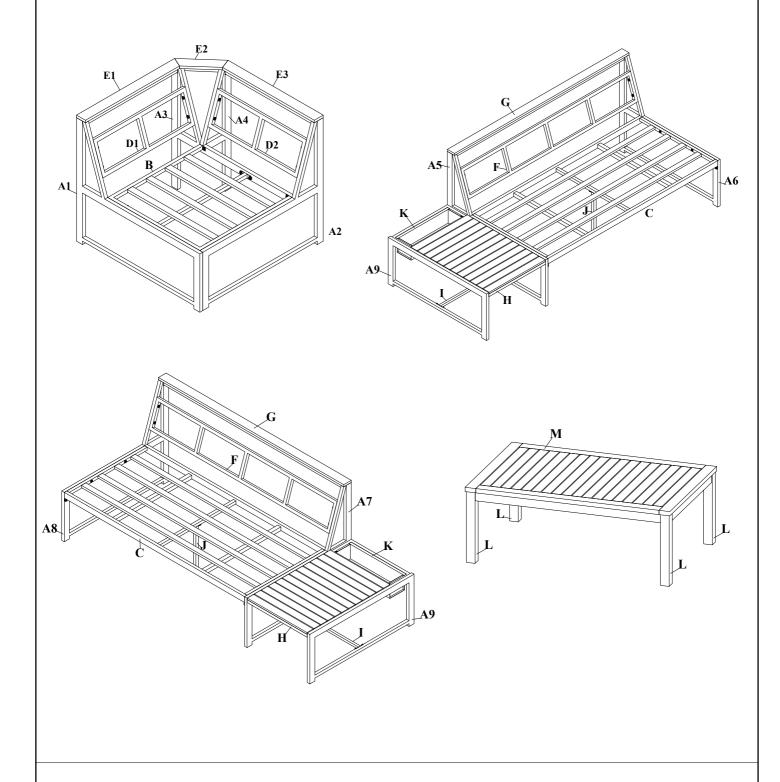


CAUTION: This Outdoor Sectional Sofa Set is NOT a TOY.


- Keep your child / children at bay in the process of assembly.
- For turning the outdoor sectional sofa set and to prevent damage to the outdoor sectional sofa set two adults may be needed to execute this action.

Part List:

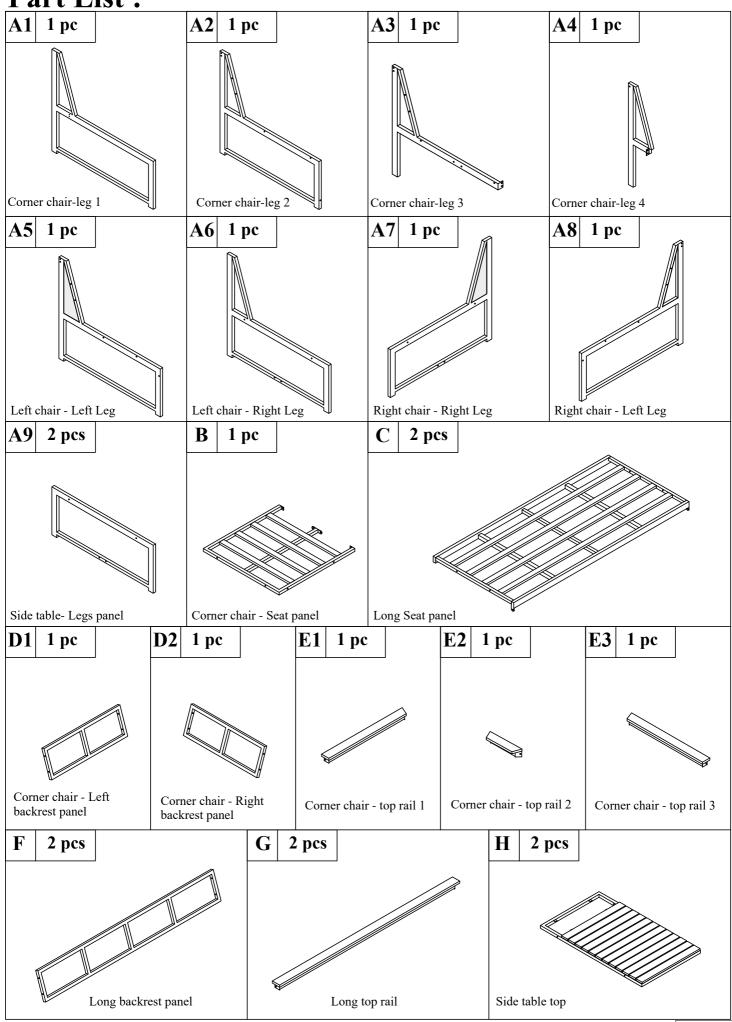


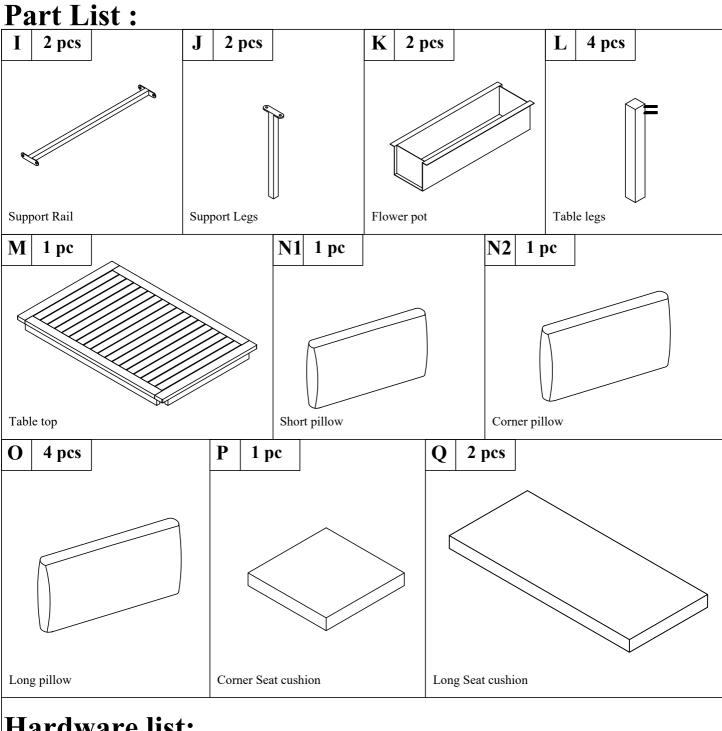


Hardware list:

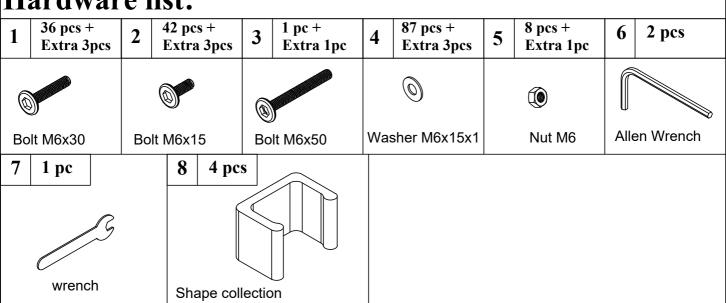


CARTON CONTENT:

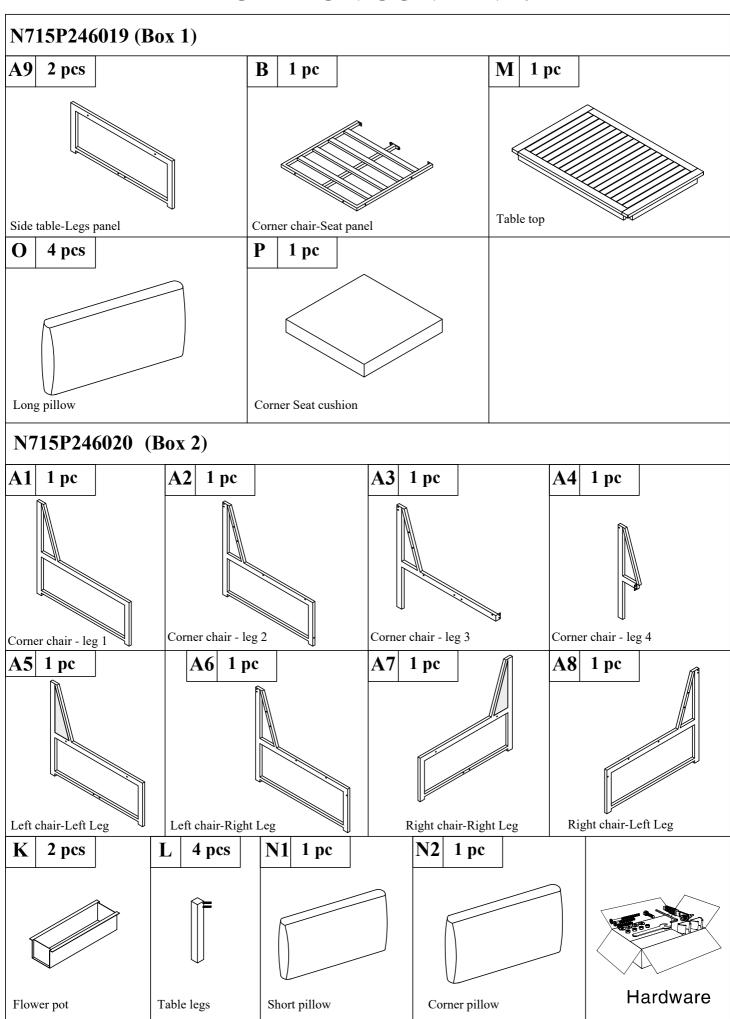



CARTON CONTENT:

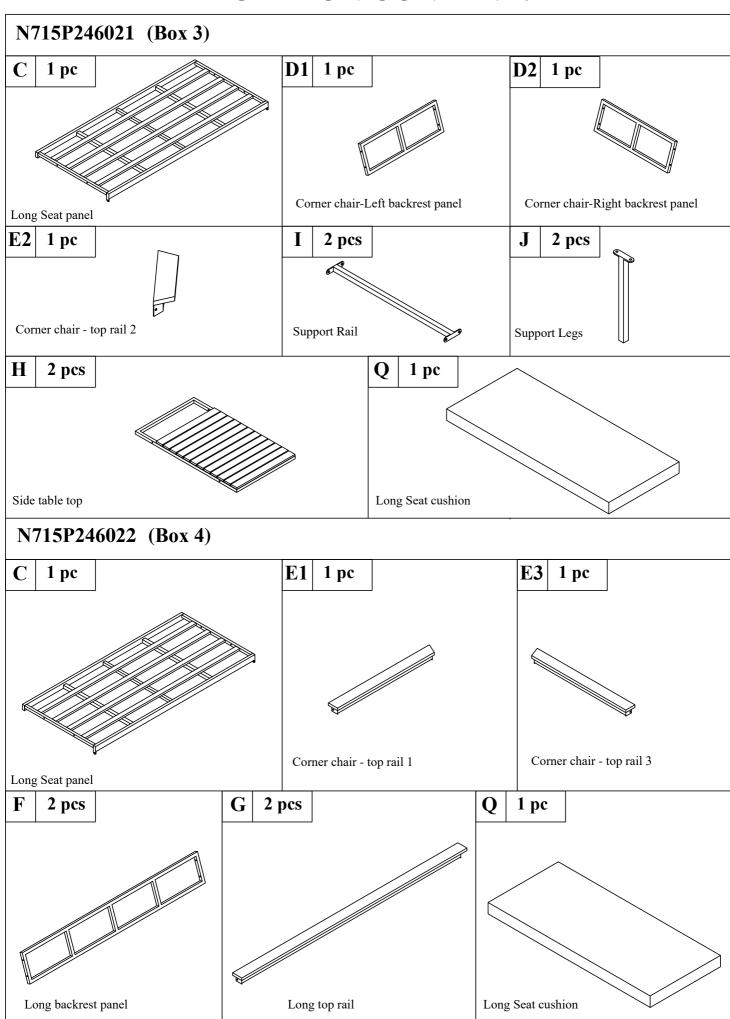


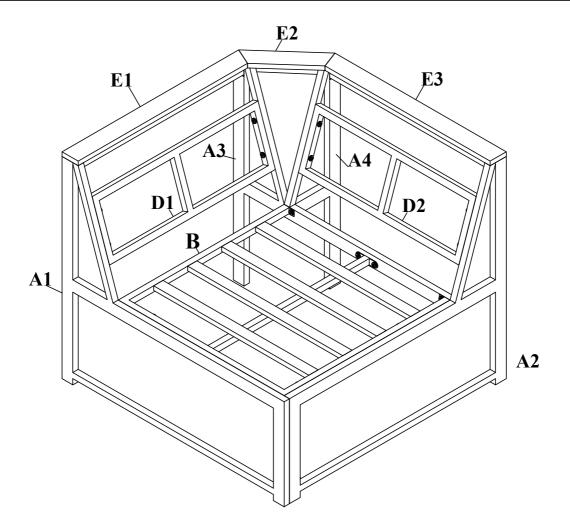



1

 


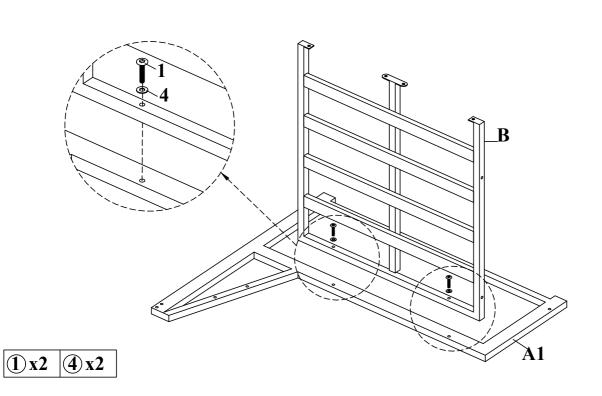


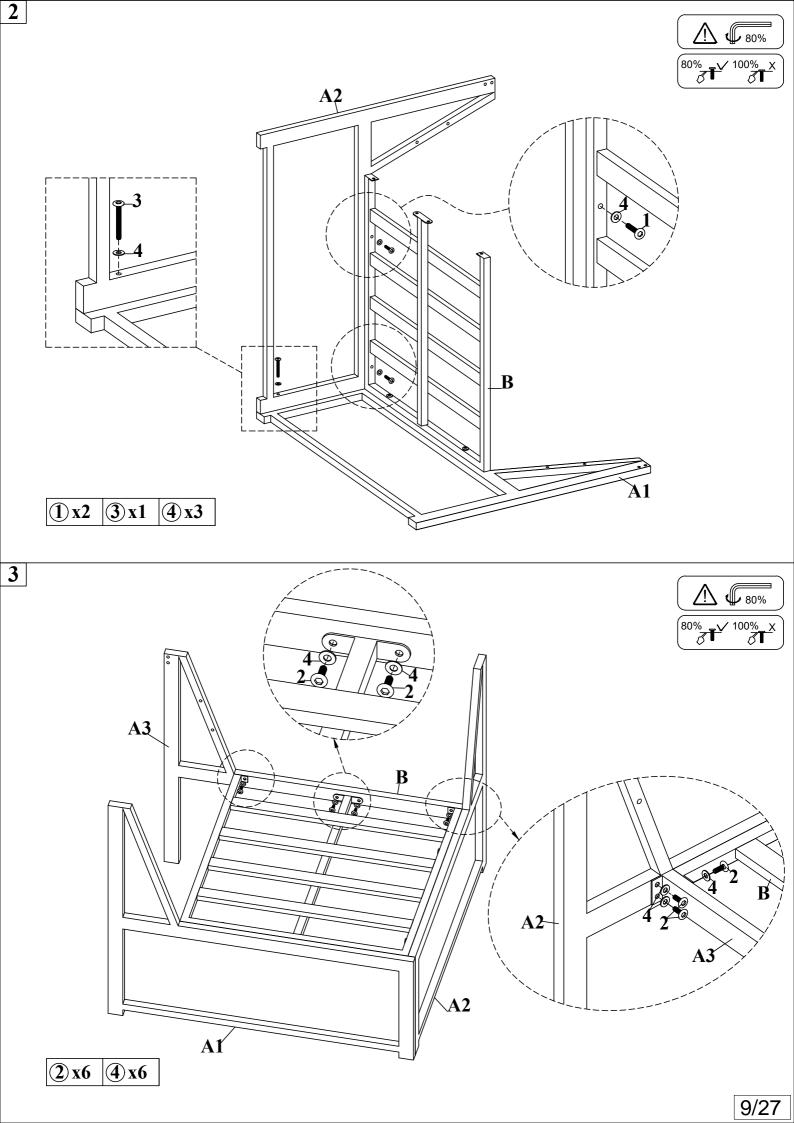


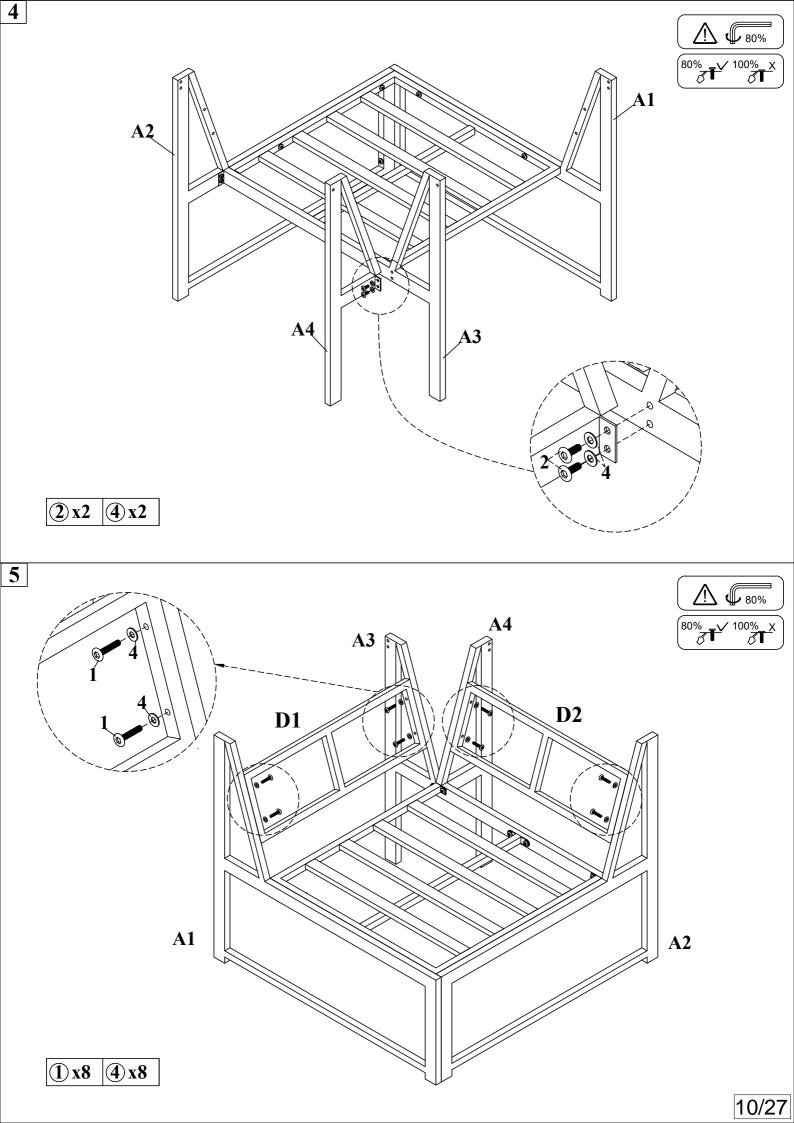


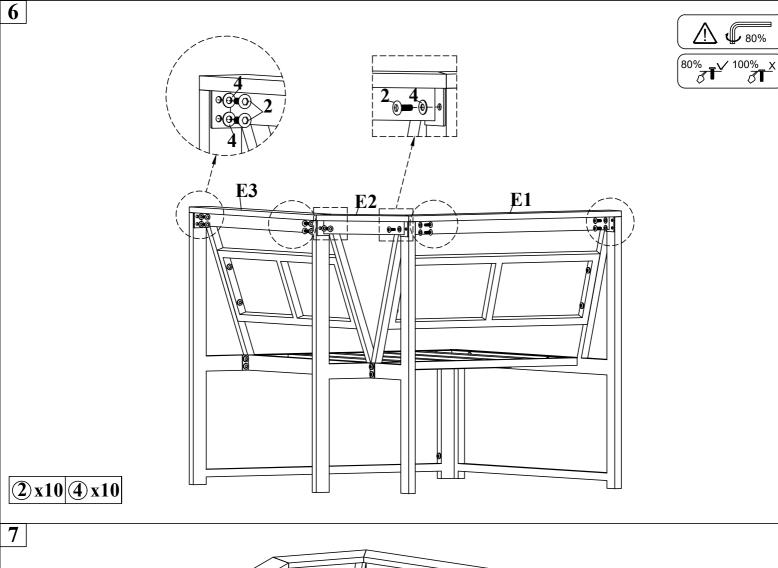

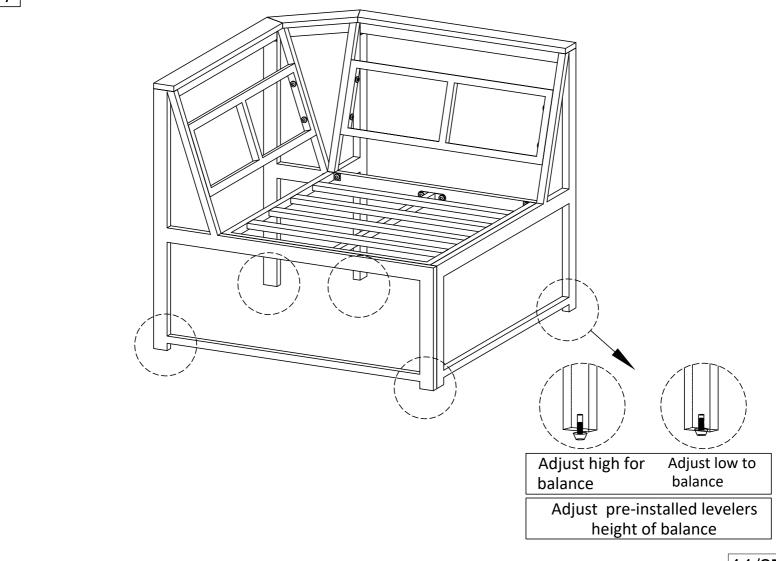

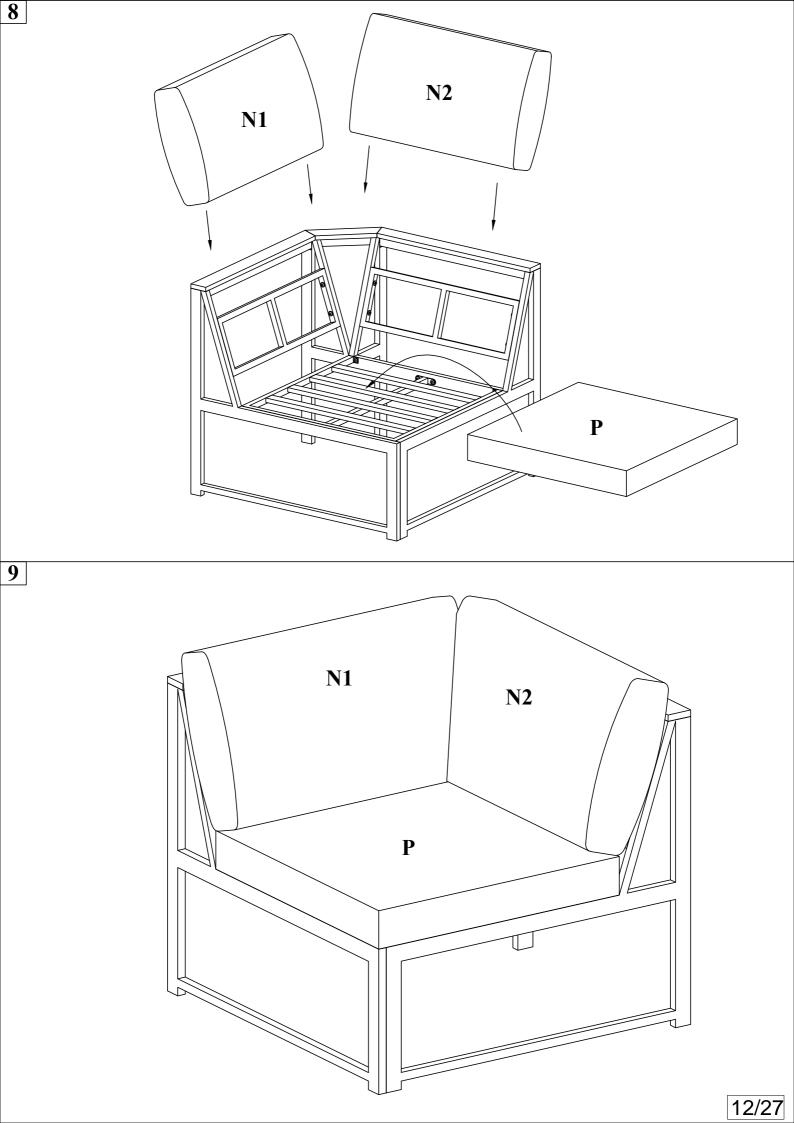

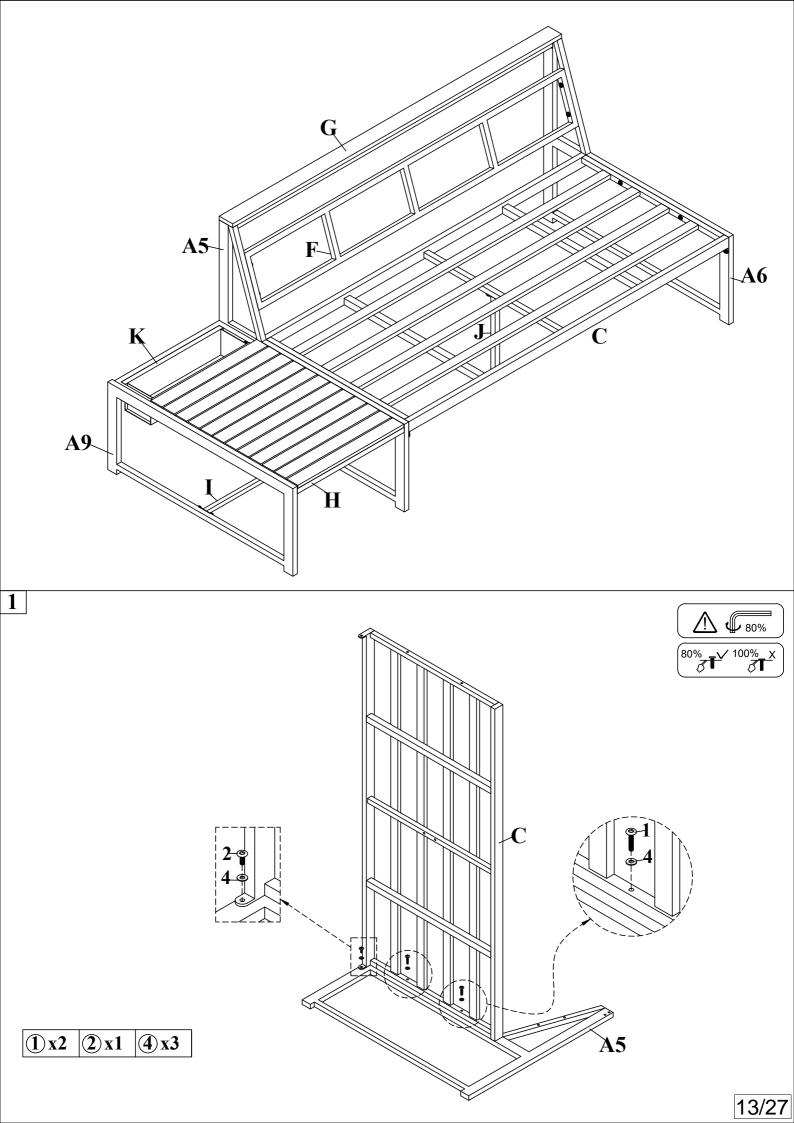


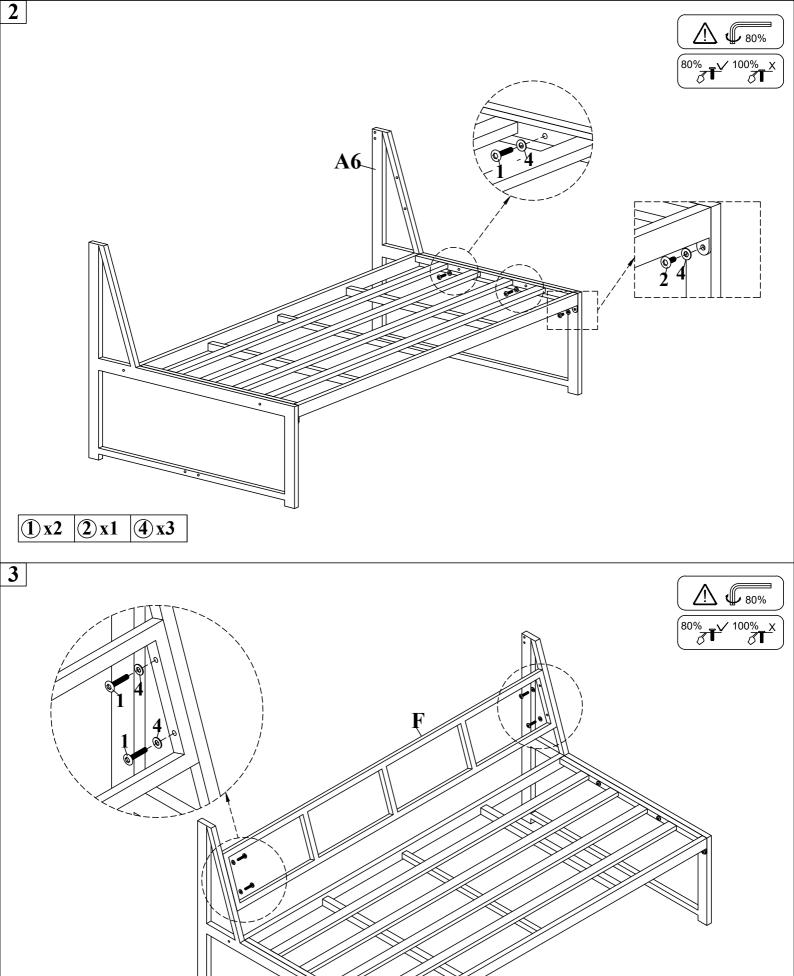

14/27

①x4

4 x4

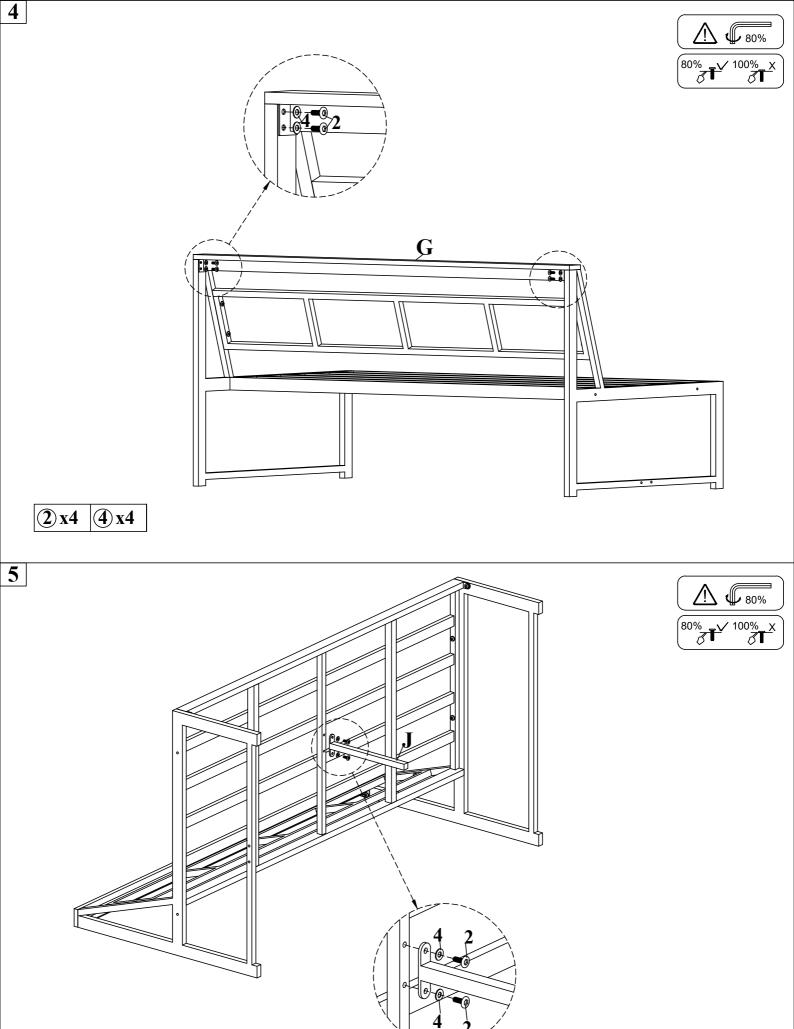

 $\boxed{2 \times 2 \quad \boxed{4 \times 2}}$

