


Harbor Breeze
60” Saratoga II Ceiling Fan

Item No. 1090752
Manufacturer Model No. 00581
(LED Version)

Replacement Parts

- Replacement Parts are obtained by calling Lowes customer service at 1-800-643-0067.
- Once on order, parts are shipped directly to your home.

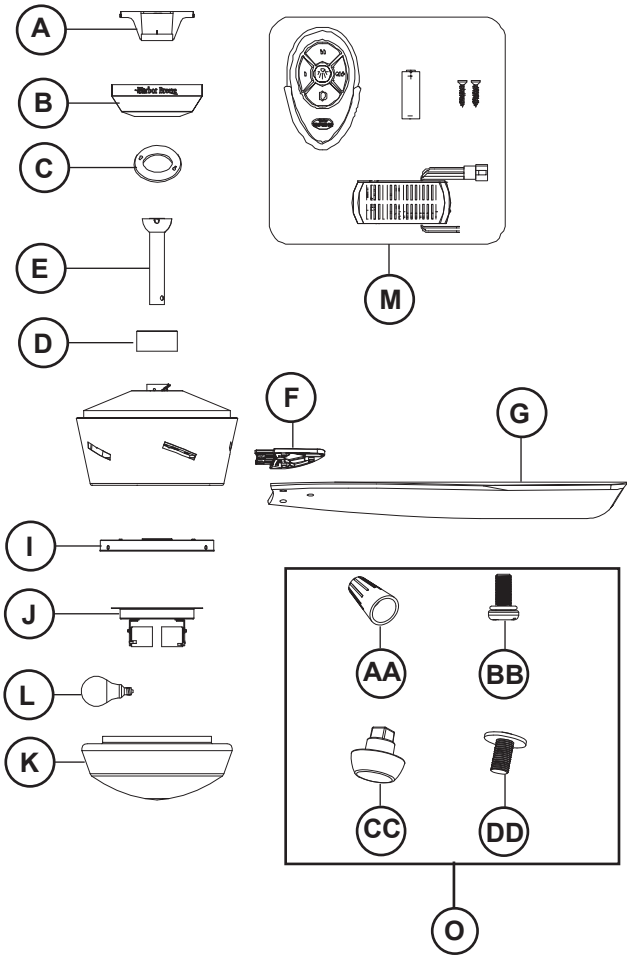

PART	PART NAME	PART NUMBER
A	Mounting Plate	102004-0031BK
B	Canopy	102001-0113LO
C	Canopy Cover	102900-0053LO
D	Yoke Cover	102500-0096LO
E	Downrod (6 inches)	102200-0247LO
F	Blade Arm (set of 5)	104000-0387LO
G	Blade (set of 5)	108004-005961
I	Fitter Plate	105100-0136LO
J	Light Fitter with medium (E-26) sockets (60 watt max. capacity per socket)	105000-0907WW
K	Glass	990704-0360WA
L	Bulb (6.5 watt LED A15 base)	990317-0064FD
M	Remote Pack: Remote Control Receiver	990319-015000 990319-221500
O	Hardware Pack: AA- Wire Connector BB- Blade Arm Screw CC- Decorative Nut DD- Blade Screw	109000-1018LO

NOTE: If more technical help is needed you can contact the manufacturer’s customer service department at 1-866-473-4537 for more help identifying parts and trouble shooting.

Troubleshooting Tip: If your remote control is not operating the fan properly, it could be due to the hand-held remote control has lost communication with the remote-control receiver. To fix this you need to follow the learning procedure found in the instruction manual. Before starting the learning process, make sure that power going to the fan is turned off by use of a wall mounted power switch, or circuit breaker. Once you restore power going to the fan you have 30 seconds to press and hold the “Learn” button on the remote control for 1 second. Once the remote-control receiver has detected the new set frequency, the light of the fan will blink twice. If you have multiple Mazon fans installed in your home make sure the power is also turned off on them prior to starting the learning process so they do not inadvertently get re-programmed to the new set frequency.