FREEDOM-WEB



Mixed Materials Gate

INSTALLATION INSTRUCTIONS



Read all instructions prior to installing product. Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit:

freedomproduct.com

A WARNING:

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.
- Check local building codes to determine pool-safe fencing options.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store. For assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Check your local zoning laws.

- Local zoning laws and Home Owners Associations may regulate the location, style and height of your fence or even require a permit signoff beforehand.
- Check local codes for frost line depth and regulations.
- Additional products and assembly may be required to meet wind code requirements. Notice of acceptance (NOA) can be found at www.miamidade.gov/building/pc-search_app.asp

Contact your local utilities companies.

 You must have the utility companies clearly mark your property for electrical, gas or water lines to avoid puncturing any unseen underground utilities.

TOOLS/MATERIALS NEEDED:

| Post Kits |
|--------------------------------|
| Concrete |
| Coarse Gravel (6" per hole) |
| Post Hole Digger/Shovel |
| String Line Stakes with String |
| Level |
| Tape Measure |
| Safety Glasses |
| 5/16" Drill or Socket Wrench |
| 2" Spacer Blocks |
| Rubber Mallet |

INSTALLATION TIPS:


- When installing gate hardware onto gate, it needs to be on level ground
- Review enclosed Boerboel[®] butterfly hinge instructions before installation
- For measuring, note that gates 6' or larger come with 2" U-frame construction

HOW TO MEASURE:

When measuring for your drive gate, make sure to leave enough space for all gate hardware, including hinges, gate latch and drop rod. When using Boerboel® hardware, leave 1" clearance for all hinges and 1" clearance for a drop rod. Refer to specific hardware instructions for space requirements.

Component list:

| Description |
|------------------|
| Boards |
| Rails |
| Uprights |
| Adaptor Strips |
| Upright Caps |
| Boerboel® Hinges |
| Hole Plugs |
| 5/16" Screws |
| |

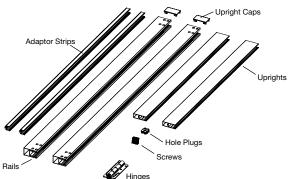

To obtain and review a copy of the warranty please go to: BarretteOutdoorLiving.com/warranty. You can also contact 1-800-336-2383 or write to Barrette Outdoor Living, 7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.

DETERMINE GATE OPENING:


Refer back to "How to Measure"


uprights (Fig. 1).


Gate opening is determined by width of gate plus clearance for hinge, latch, and drop rod (latch and drop rod sold separately); refer to latch and drop rod installation instructions for specific space requirements.


Place upright rails on side. Slide rails inside

Align the rails to be 90° to the upright (Fig. 2.)

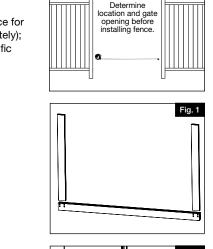

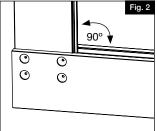


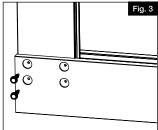

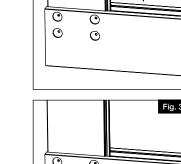



Install outside screws (Fig. 3).

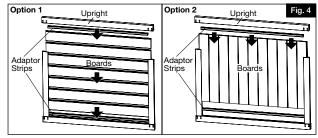

Repeat Steps 2 & 3 for opposite gate upright.

2

3


6


7

8


Install screw hole plugs in all four corners. Install upright caps (Fig. 6).

Using the hinge instructions, install the hinges $3\frac{1}{2}$ " to 4" away from the top and bottom of the upright (Fig. 7).

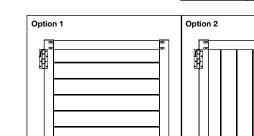

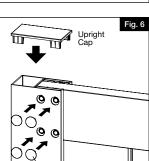

Fig

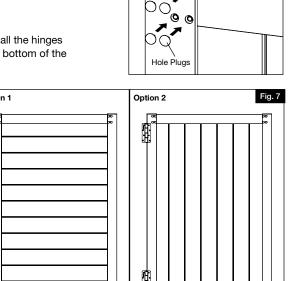

BARRETTE OUTDOOR LIVING

7830 FREEWAY CIRCLE MIDDLEBURG HEIGHTS, OHIO 44130

TEL: (888) 418-4400 WWW.FREEDOM.BARRETTEOUTDOORLIVING.COM



