 
 




Dresser

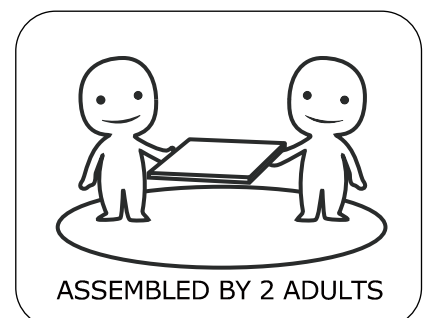

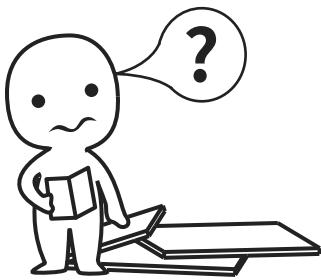


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

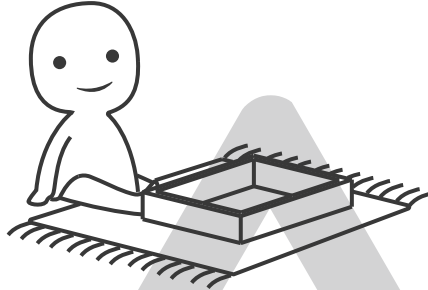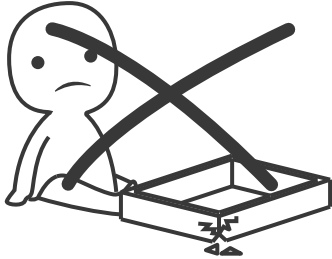



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

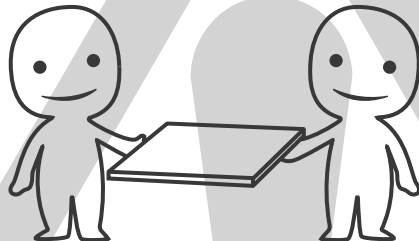

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

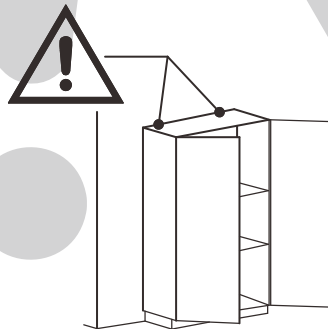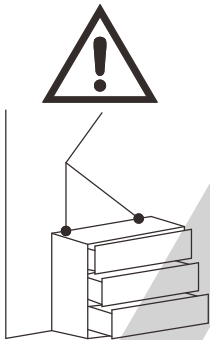

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

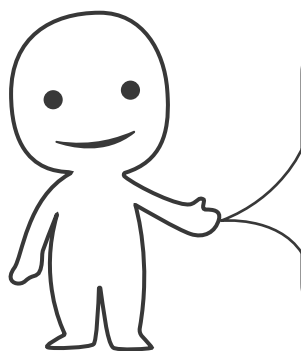


Please prepare the following tools

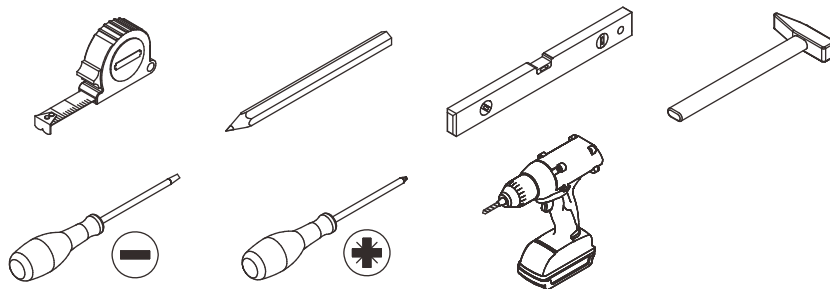 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 44 +1




Bx 87 +1

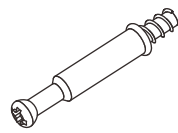 

Ø 6 x 35 mm

 Cx 87 +1




Ø 15 x 10 mm

Dx2



Ø 4 x 12 mm

 Ex 11

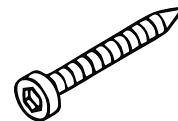

Ø 5 x 40 mm

F x 9



Ø 4 x 14 mm

G x 9

 


H x 72 +1




Ø 3 x 12 mm

J x 1



K x 2

 


Ø 4x 35 mm

L x 6




 M x6




Ø 3 x 14 mm

 N x 65 +1



Ø 4 x 25 mm

 
P x 2




Q x 2



 
CLX 9




CRX

 

DLX9

 


DRX 9

 

R x 1

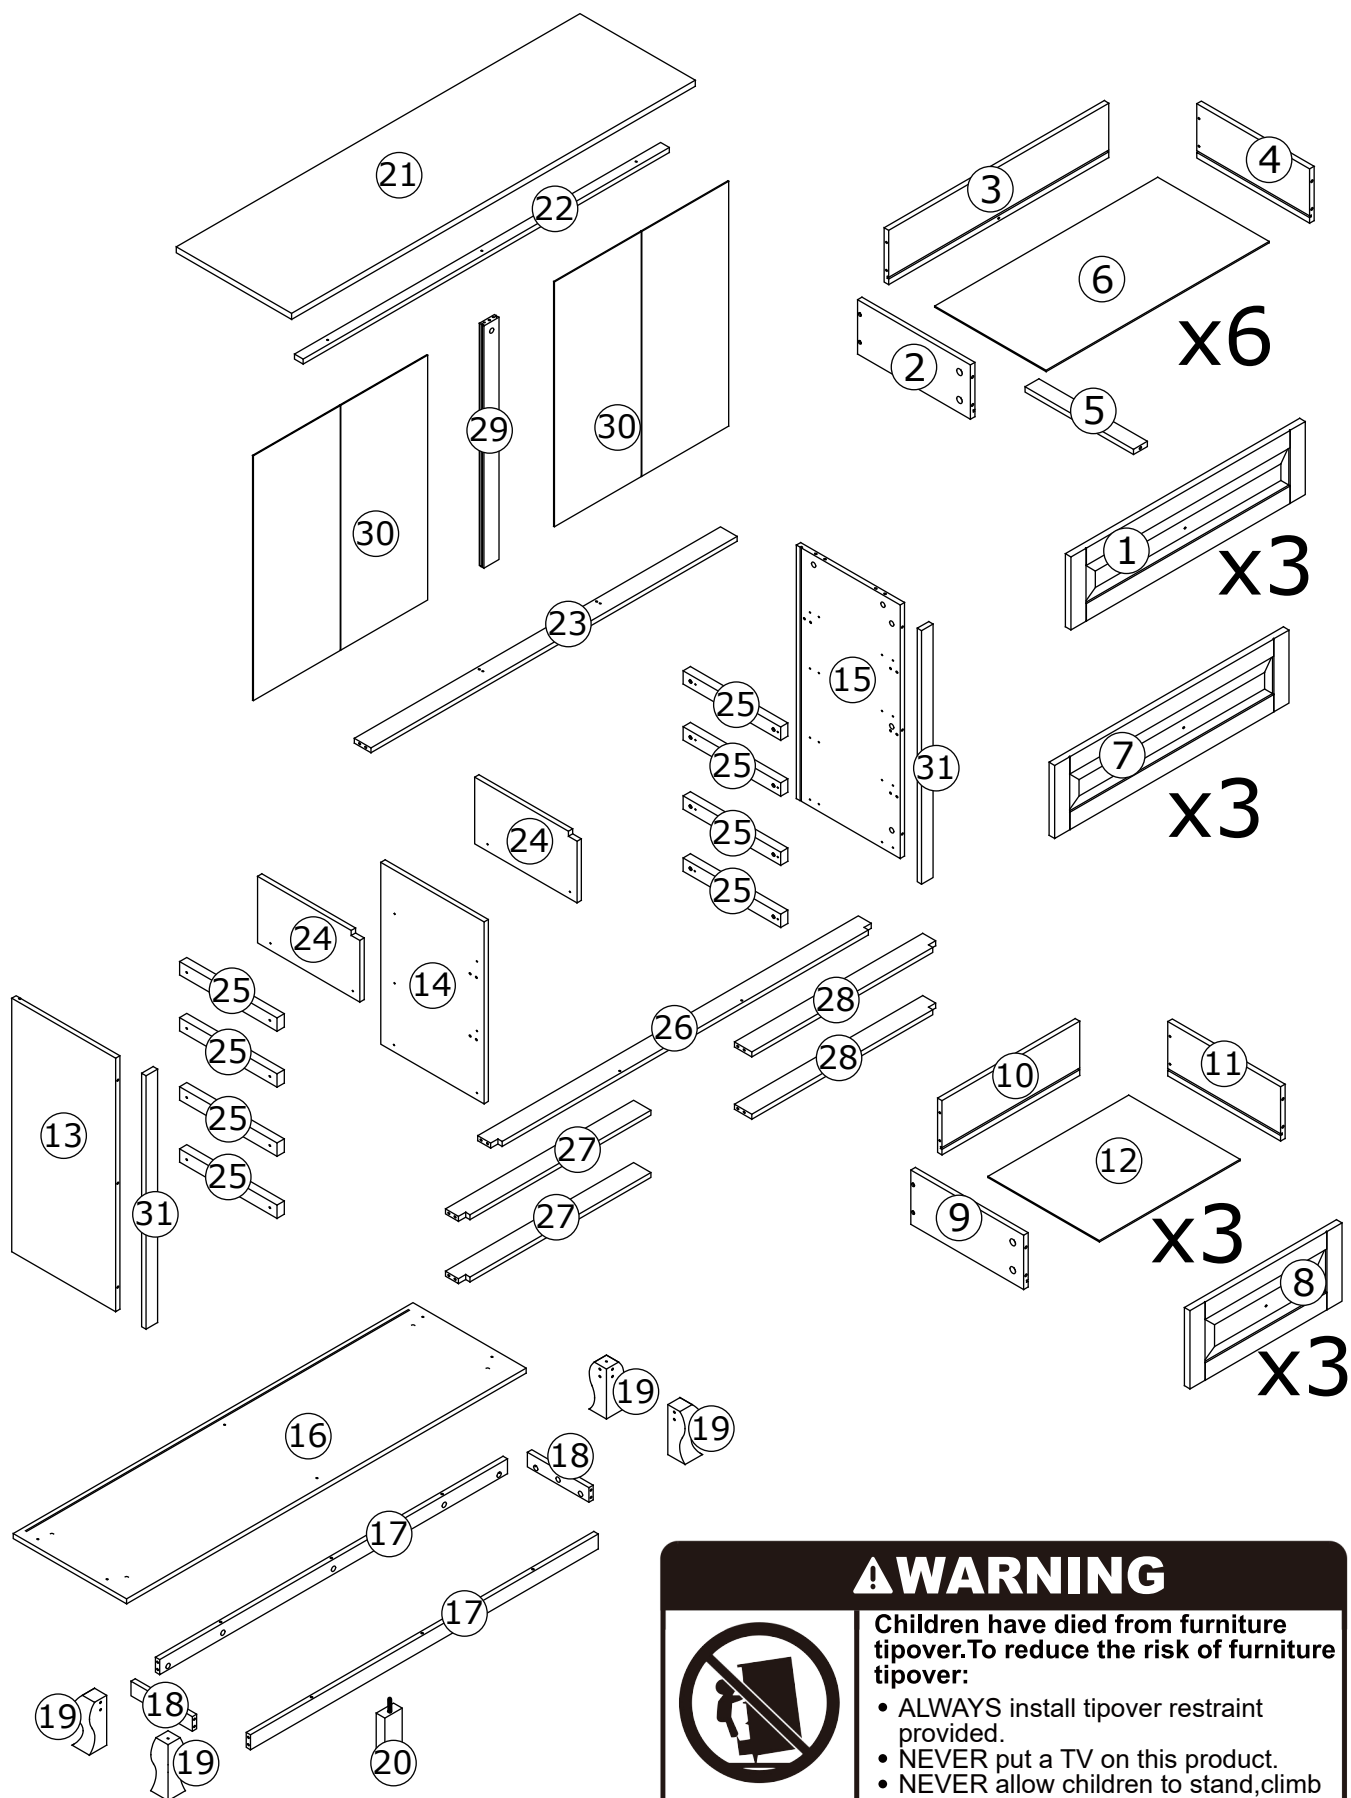 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

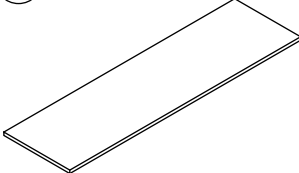 
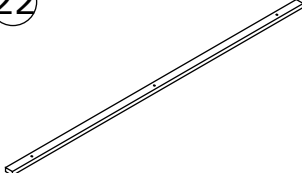 
 

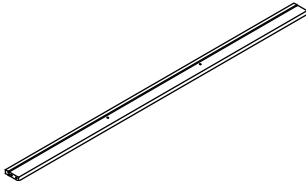 
 
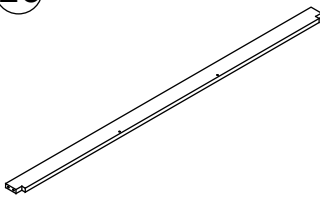 
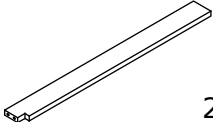 
 
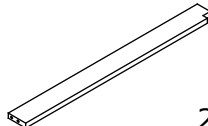 
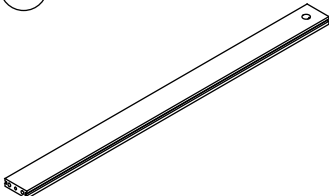 
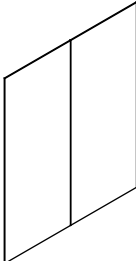 






⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

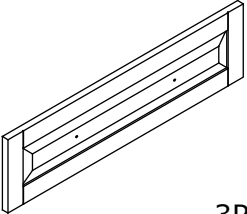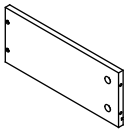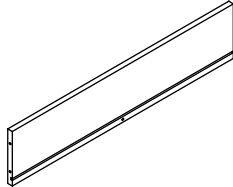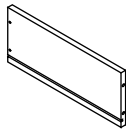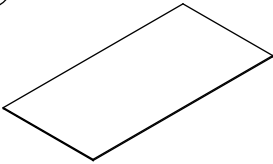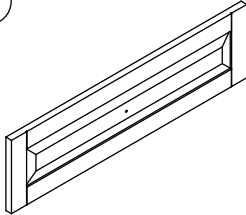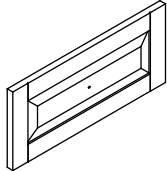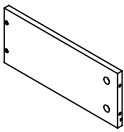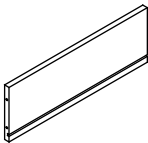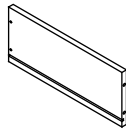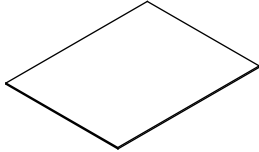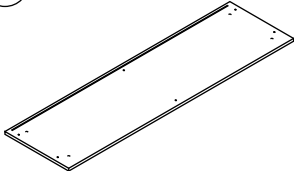
*This is a permanent label.
Do not remove!*

<p>①</p>  <p>3PC</p>	<p>②</p>  <p>6PC</p>	<p>③</p>  <p>6PC</p>	<p>④</p>  <p>6PC</p>
<p>⑤</p>  <p>6PC</p>	<p>⑥</p>  <p>6PC</p>	<p>⑦</p>  <p>3PC</p>	<p>⑧</p>  <p>3PC</p>
<p>⑨</p>  <p>3PC</p>	<p>⑩</p>  <p>3PC</p>	<p>⑪</p>  <p>3PC</p>	<p>⑫</p>  <p>3PC</p>
<p>⑬</p>  <p>1PC</p>	<p>⑭</p>  <p>1PC</p>	<p>⑮</p>  <p>1PC</p>	<p>⑯</p>  <p>1PC</p>
<p>⑰</p>  <p>2PC</p>	<p>⑲</p>  <p>1PC</p>	<p>⑳</p>  <p>1PC</p>	<p>㉒</p>  <p>1PC</p>
<p>⑱</p>  <p>2PC</p>	<p>㉒</p>  <p>4PC</p>		
<p>㉓</p>  <p>1PC</p>	<p>㉔</p>  <p>2PC</p>	<p>㉖</p>  <p>1PC</p>	<p>㉗</p>  <p>2PC</p>
	<p>㉕</p>  <p>8PC</p>		<p>㉘</p>  <p>2PC</p>
<p>㉙</p>  <p>1PC</p>	<p>㉚</p>  <p>2PC</p>	<p>㉛</p>  <p>2PC</p>	<p>㉜</p>  <p>1PC</p>

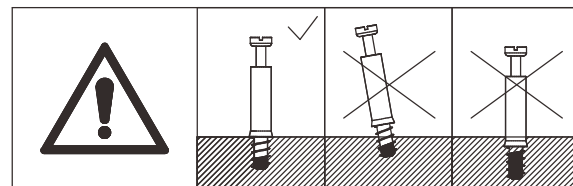 
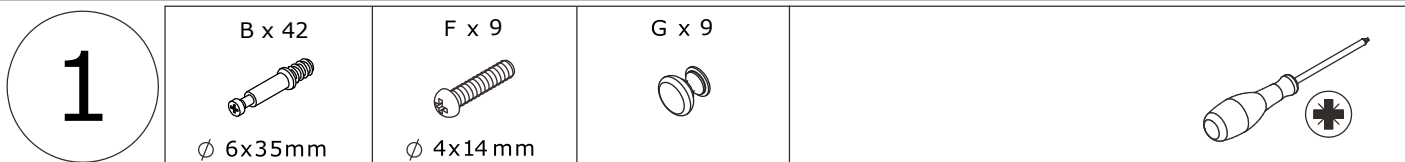 


Screw eccentric rod(B) into board 1, 7 and 8 with a screwdriver as shown.

 Fix knob(G) to board 1, 7 and 8 with screw(F).


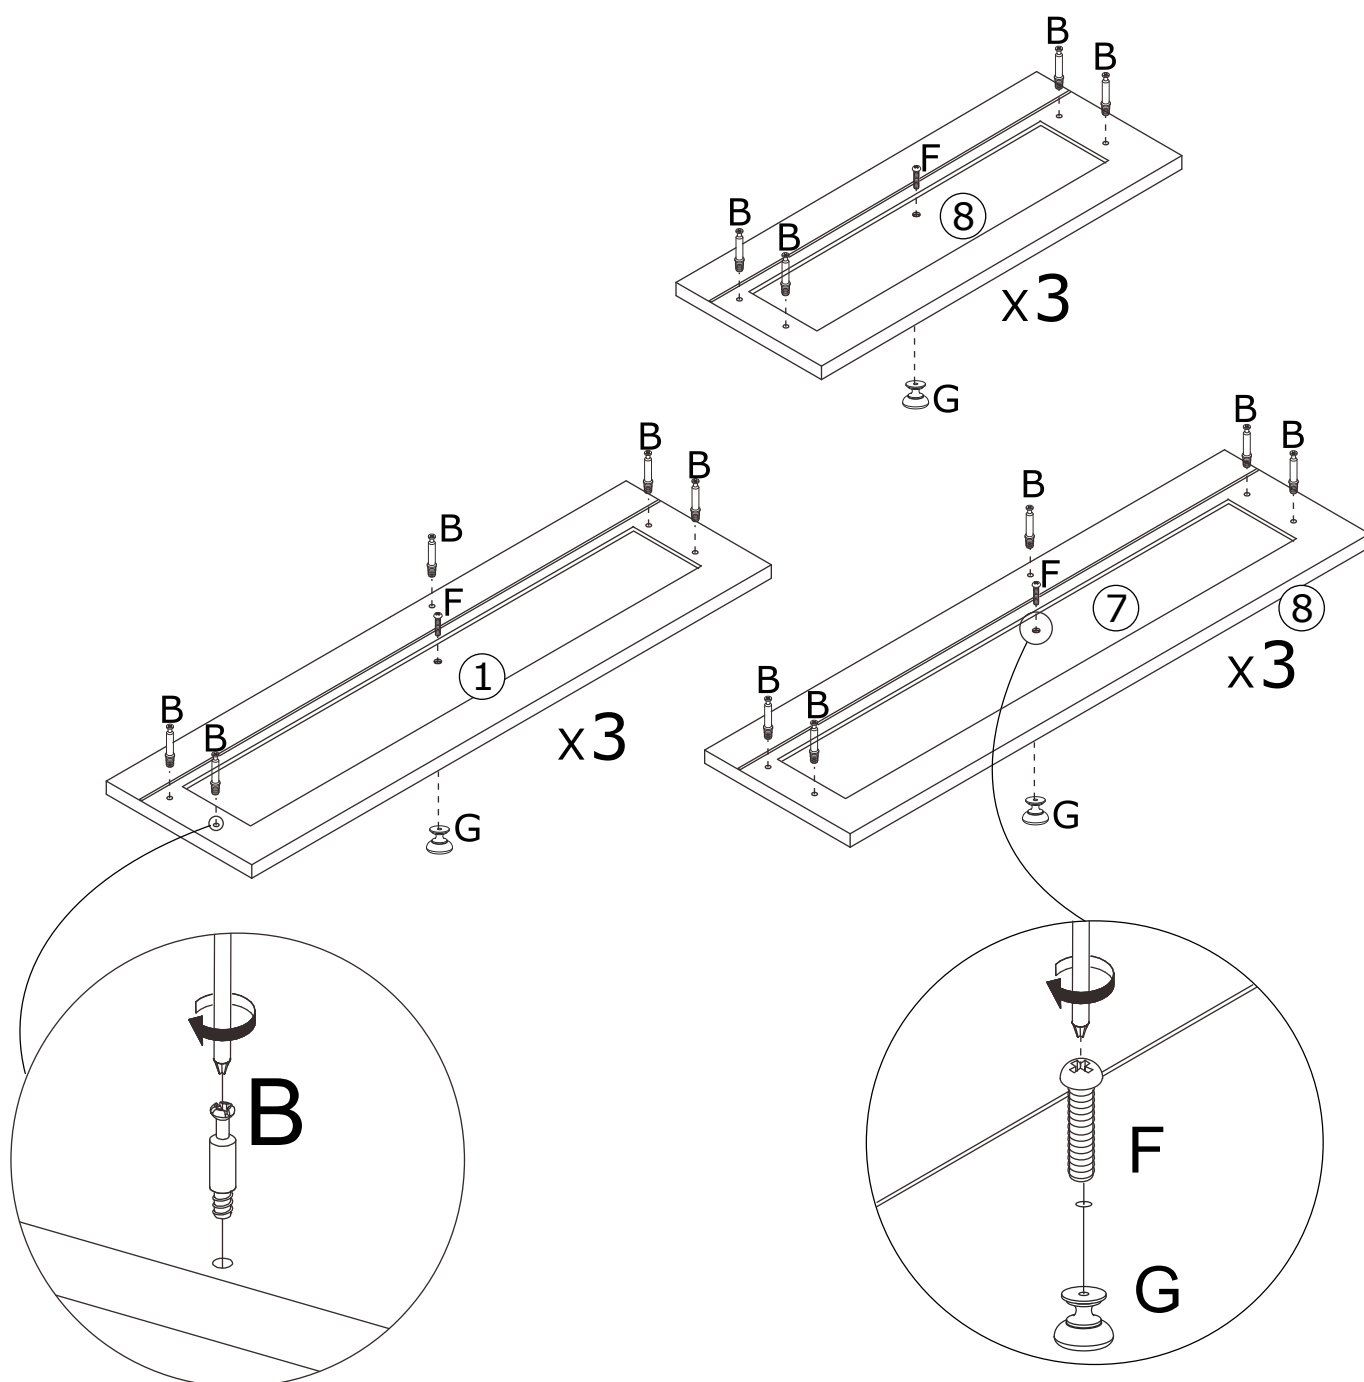


2

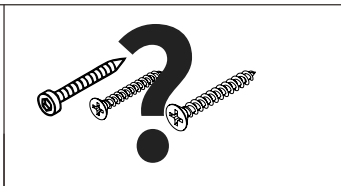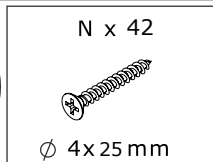  


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

  Fix board 9 and 11 to board 10 with screw(N) at first, insert board 12 along grooves as shown. Fix board 2 and 4 to board 3 with screw(N) at first, insert board 6 along grooves, fix board 5 to board 3 with screw(N) as shown.

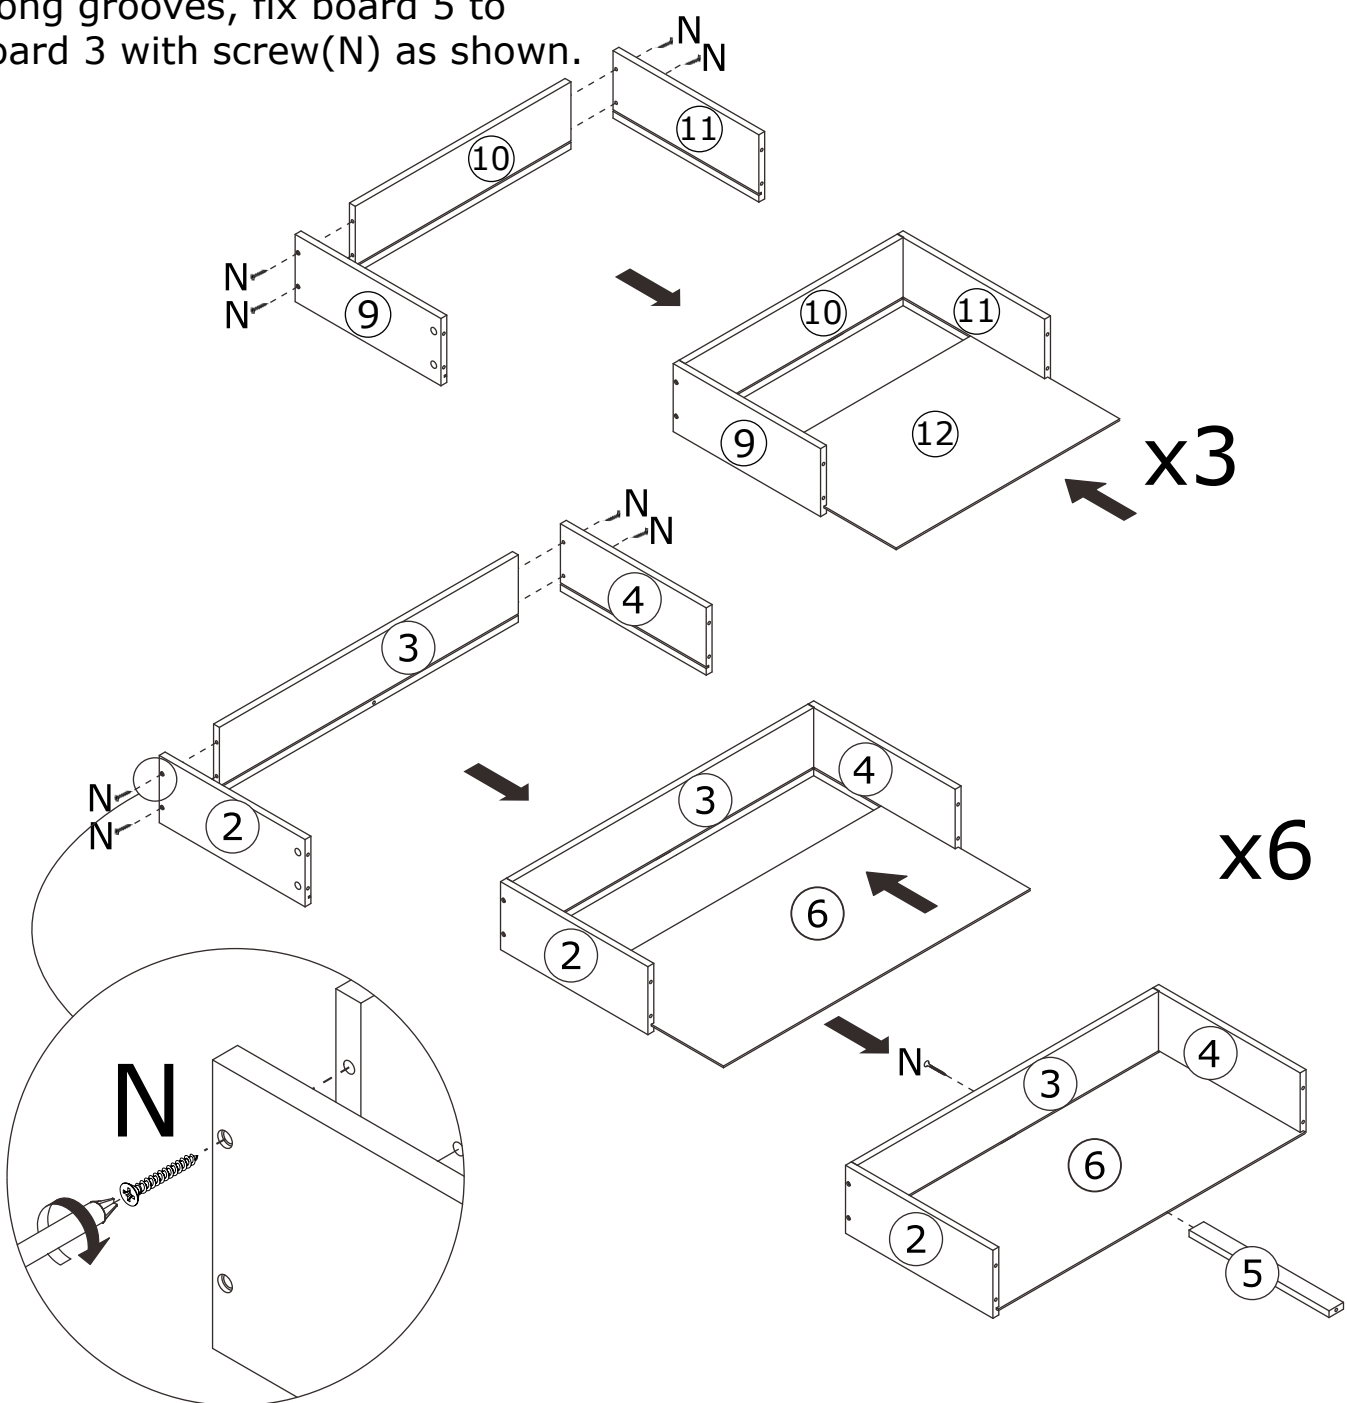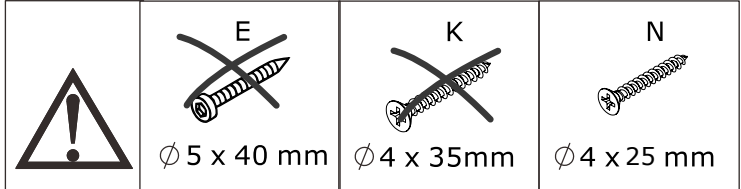


3

 C x 30








Ø 5x10mm

 



Attach board 1 to board 2, 5 and 4, turn cam lock(C) clockwise to tighten as shown.

     Attach board 7 to board 2, 5 and 4, turn cam lock(C) clockwise to tighten as shown.

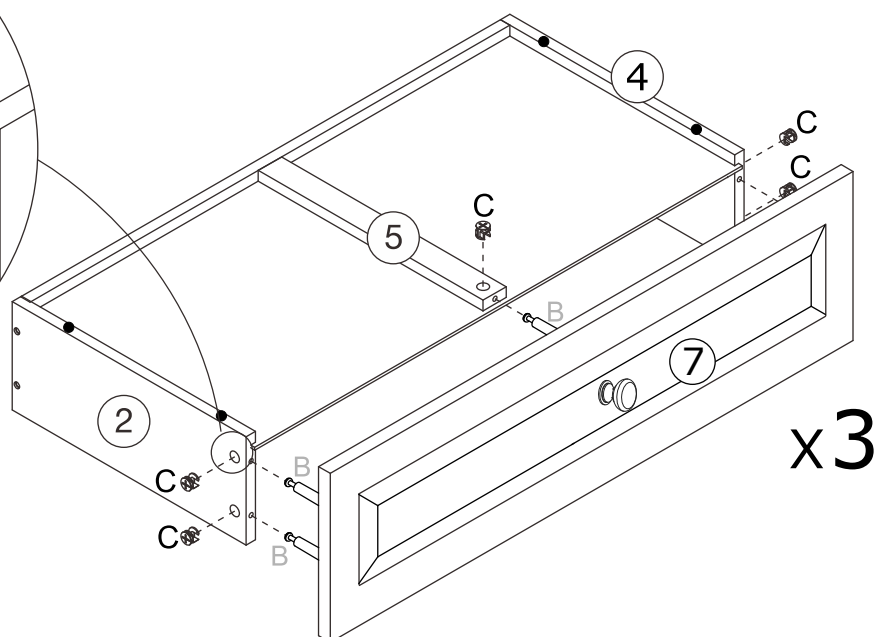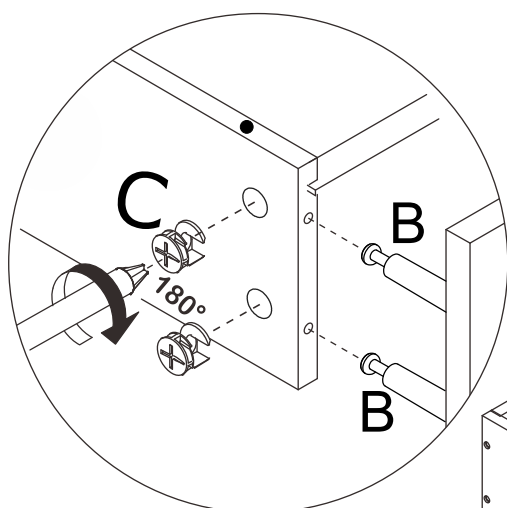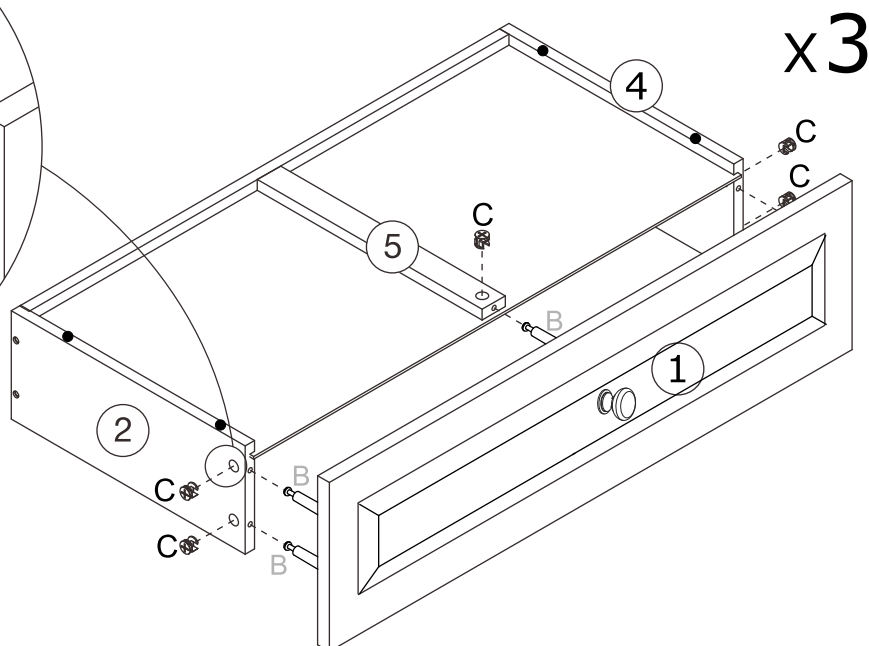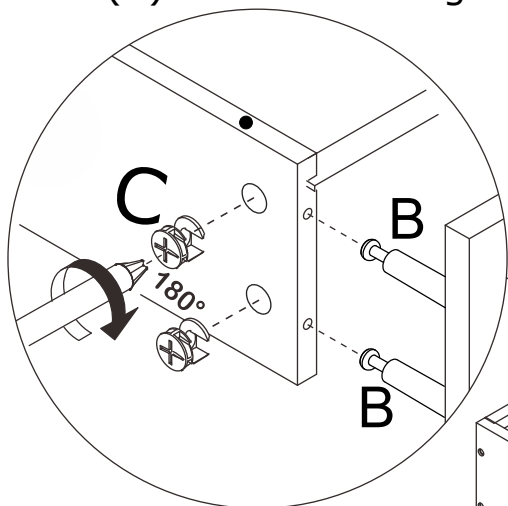
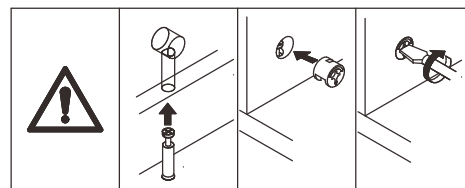


4

  C x 12



  Attach board 8 to board 9 and 11,
turn cam lock(C) clockwise to tighten
as shown.

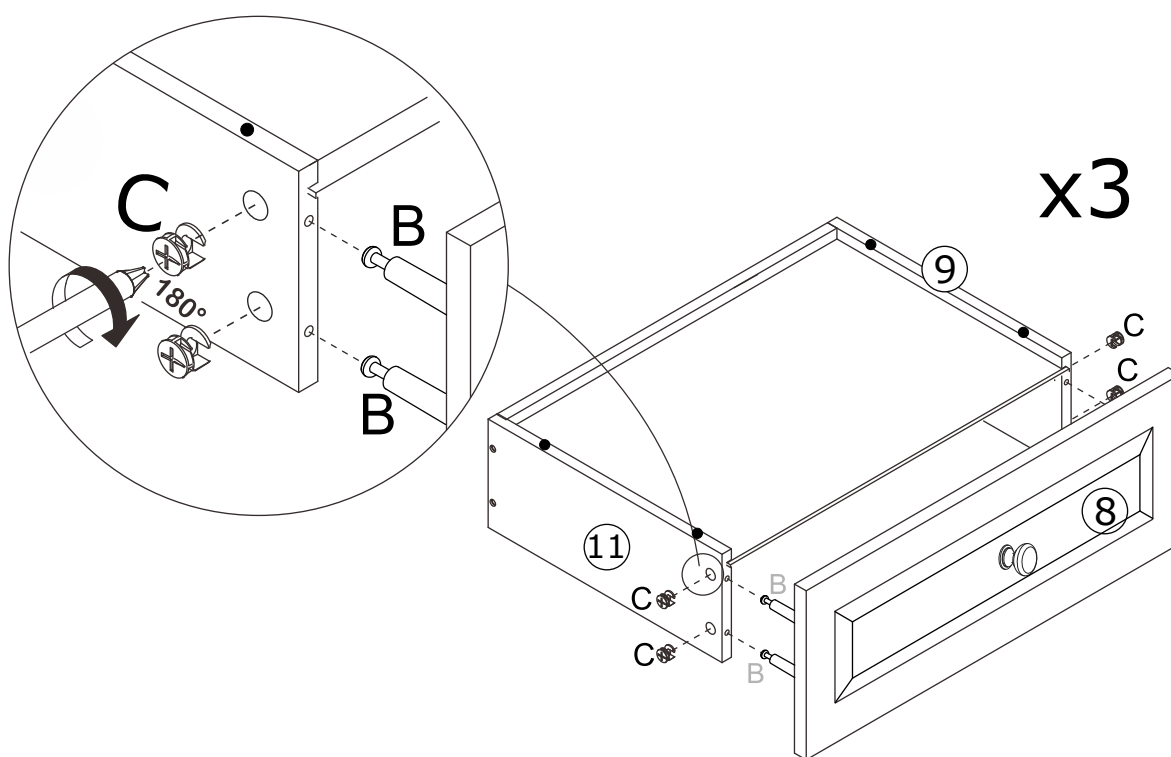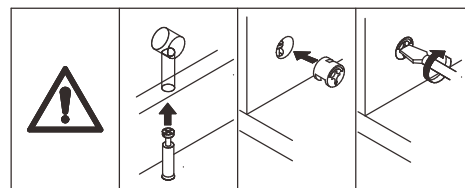


5



Hx 36



 DL x 9



DR x 9

  

Fix runner(DL) and (DR) to board 9 and 11 respectively with screw(H) as shown.

Fix runner(DL) and (DR) to board 4 and 2 respectively with screw(H) as shown.



H

 
 
 
 
 


Ø 3 x 12 mm


M




 
Ø 3 x 14mm

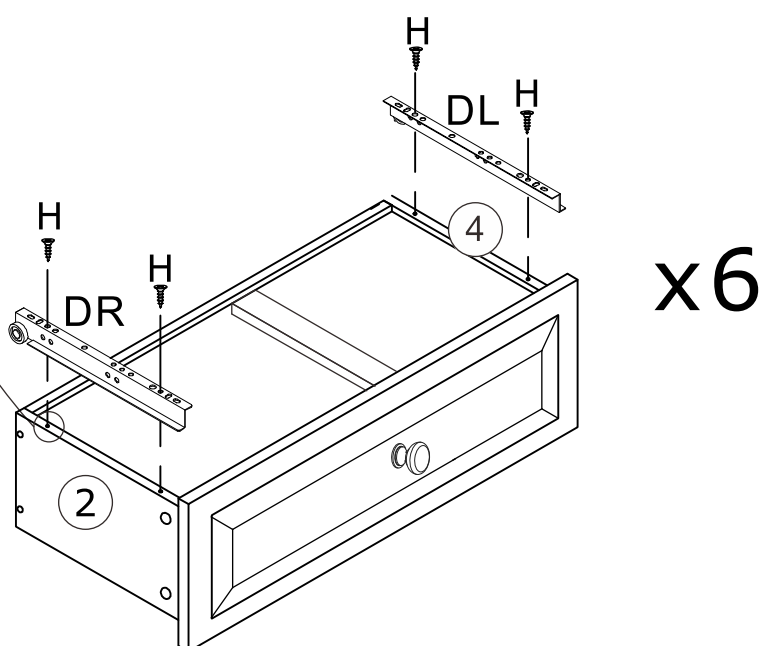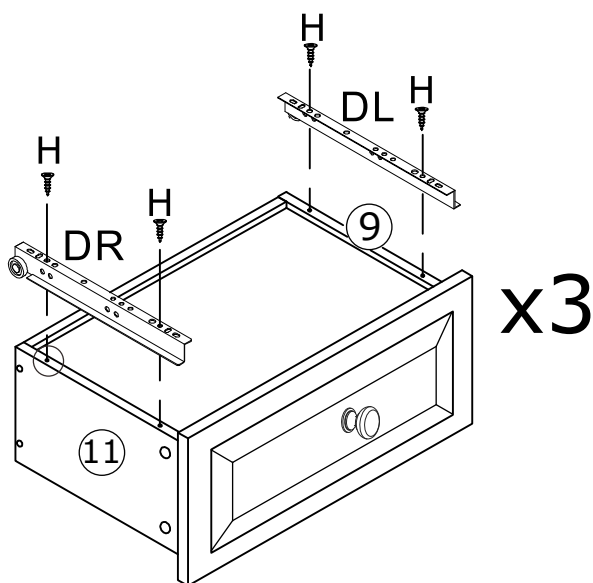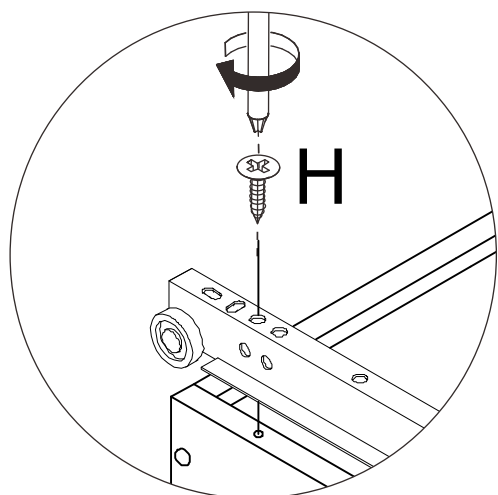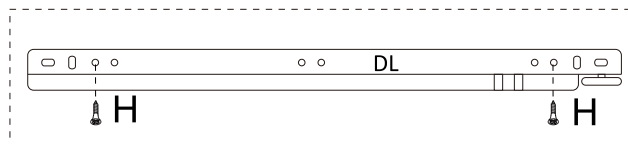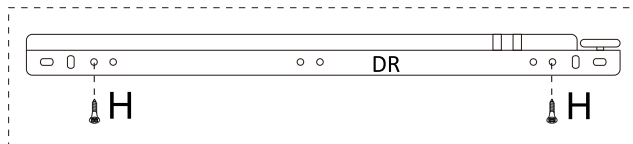

6

 
 
 
 
B x 8

 Ø 6x35mm

N x 12

 Ø 4x25mm


 
 
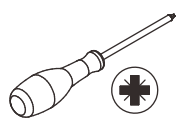 


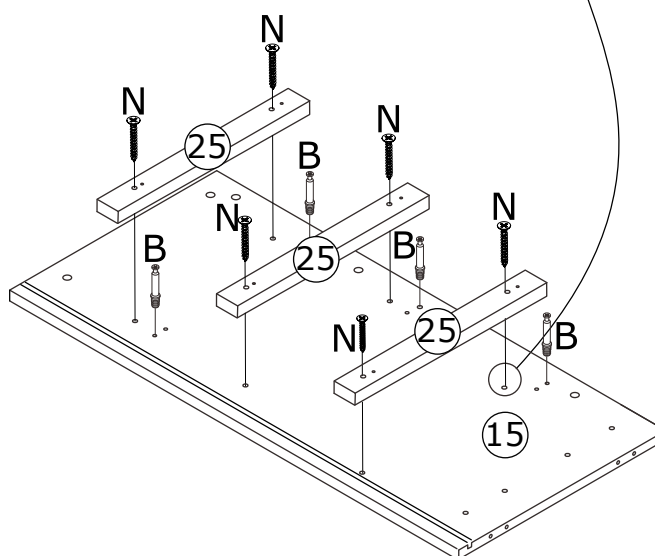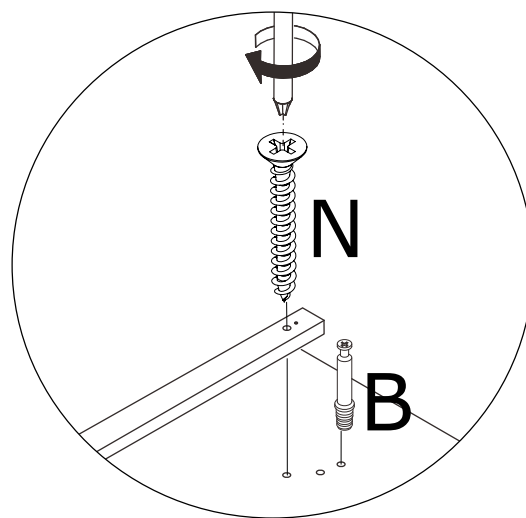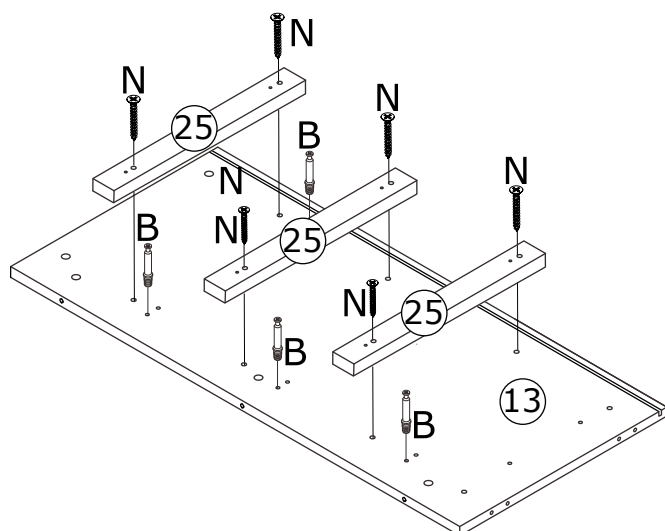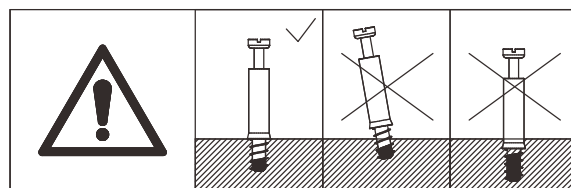Screw eccentric rod(B) into board 13 and 15 as shown.

Fix board 25 to board 13 and 15 respectively with screw(N) as shown.






7










<p>H x 20</p>  <p>Ø 3x12mm</p>	<p>CL x 5</p> 	<p>CR x 5</p> 	
---	---	---	---

Fix slide rail(CL) to board 25(in board 13) with screw(H) as shown.

Fix slide rail(CR) to board 25(in board 15) with screw(H) as shown.



Fix slide rail(CL) to board 24, and flip it, fix slide rail(CR) as shown.

	<p>H</p>  <p>Ø 3 x 12 mm</p>	<p>M</p>  <p>Ø 3 x 14mm</p>
--	---	--

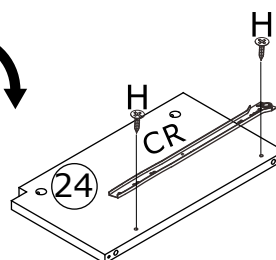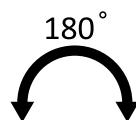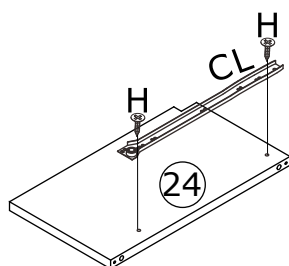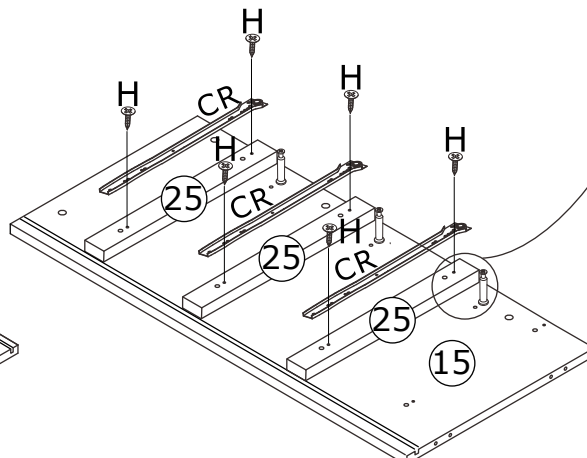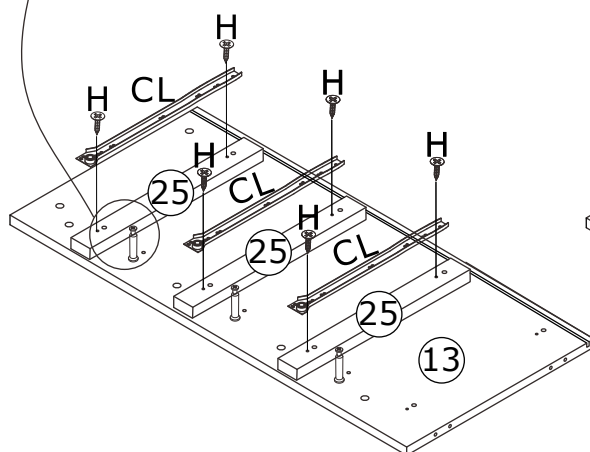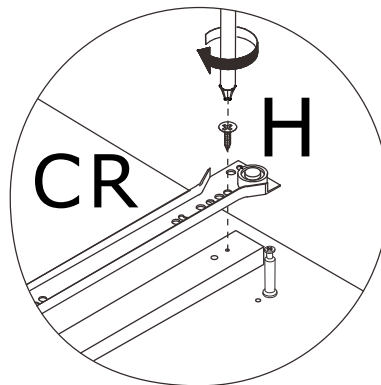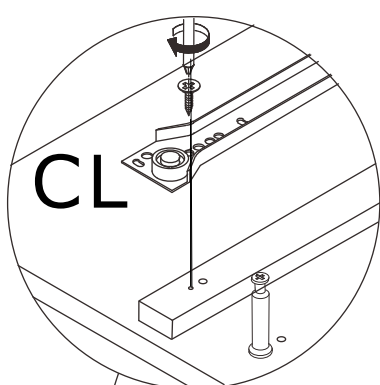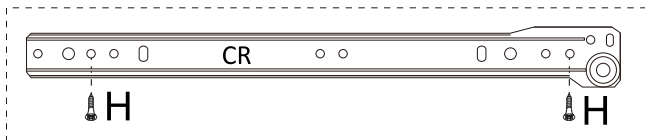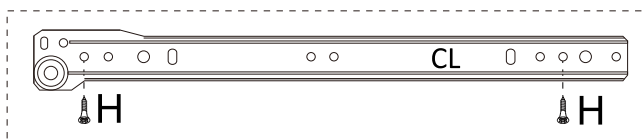         


x2

  
8

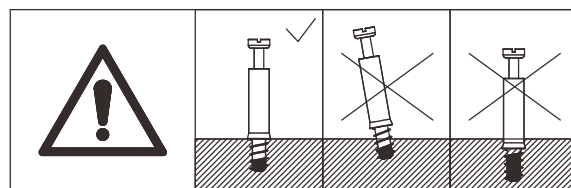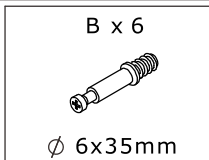


 Screw eccentric rod(B)
into board 31 as shown.


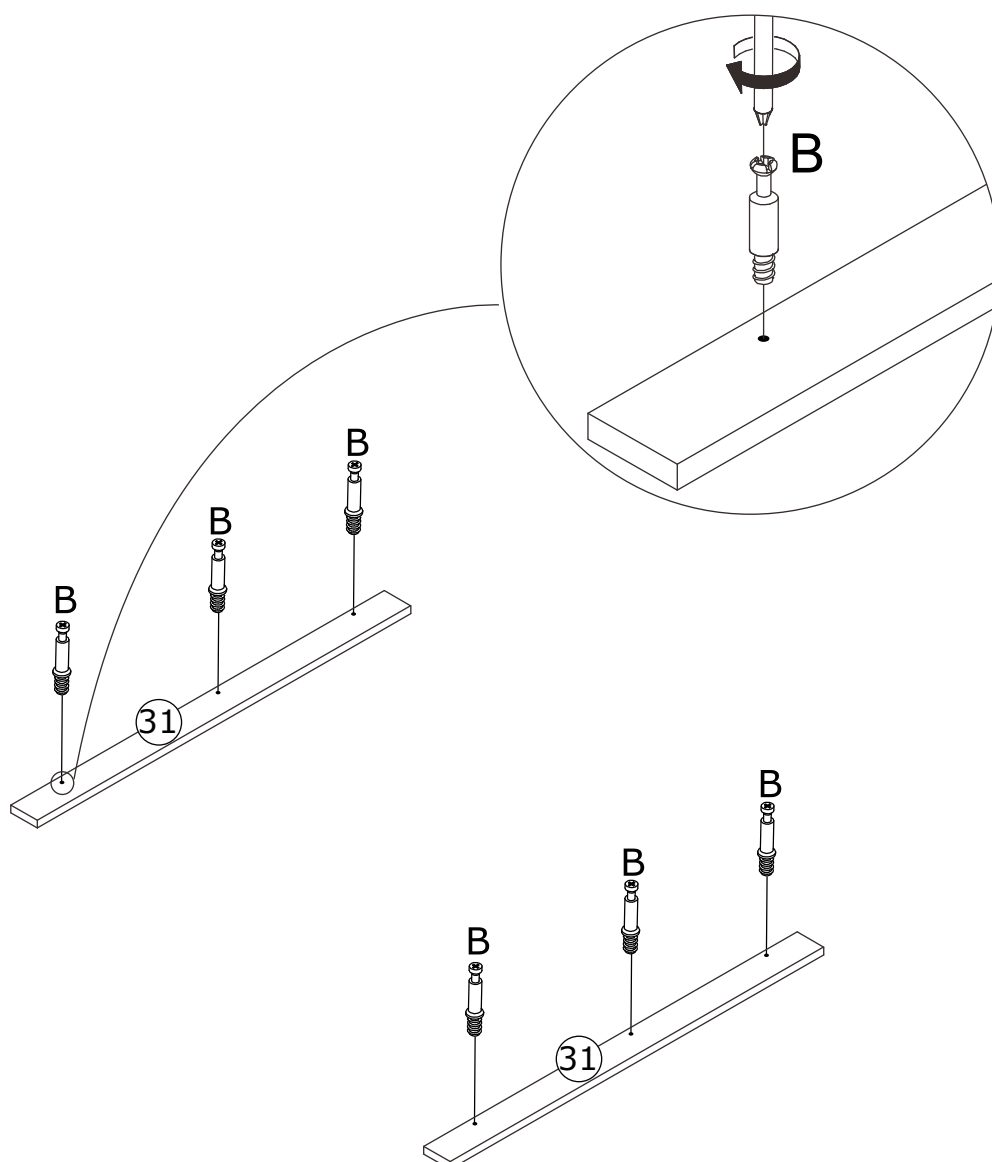


9

    

 
 
 
C x 6

 Ø 15 x 10 mm

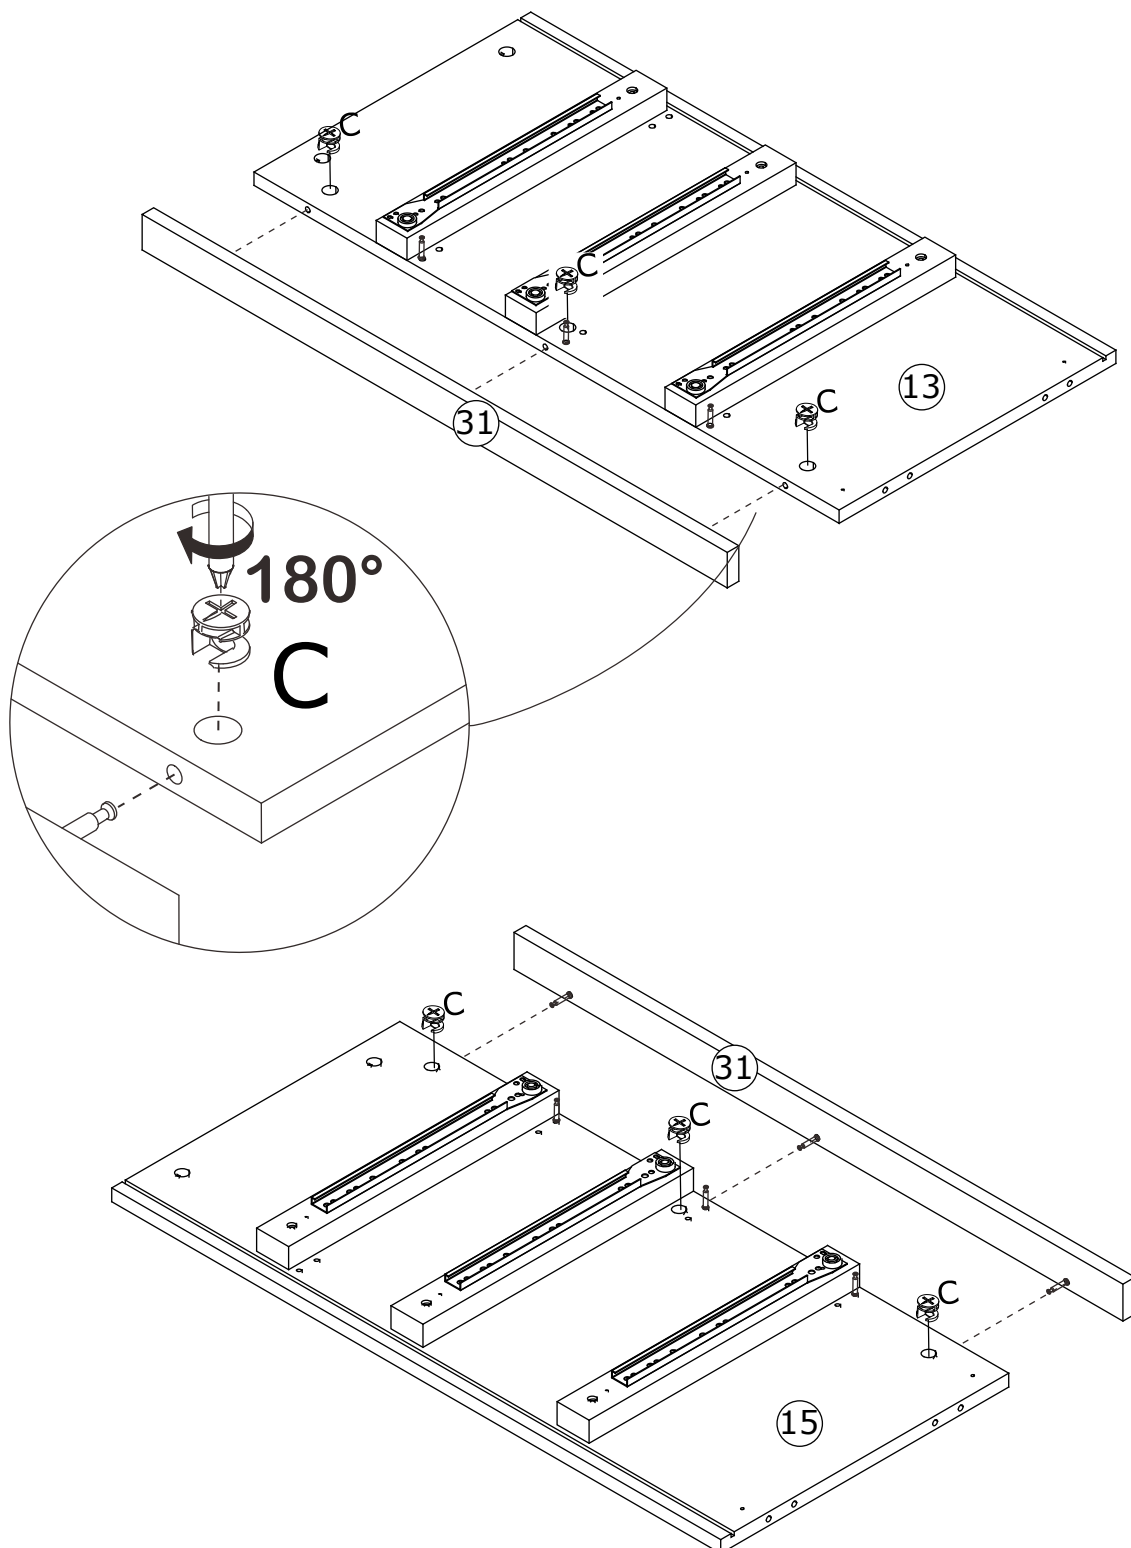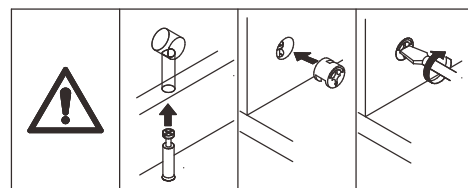

Attach board 31 to board 13 and 15, add cam lock(C) into board 13,15 and turn clockwise to tighten as shown.






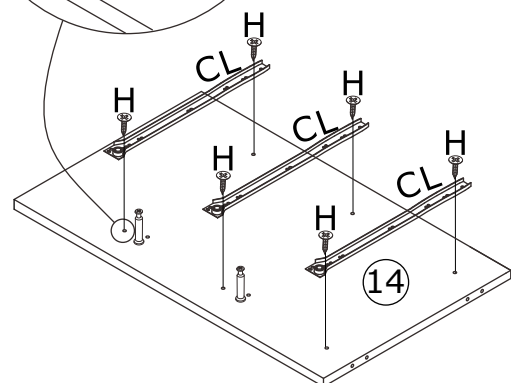 
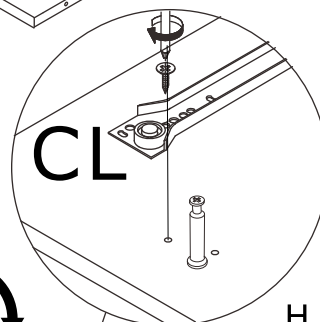 
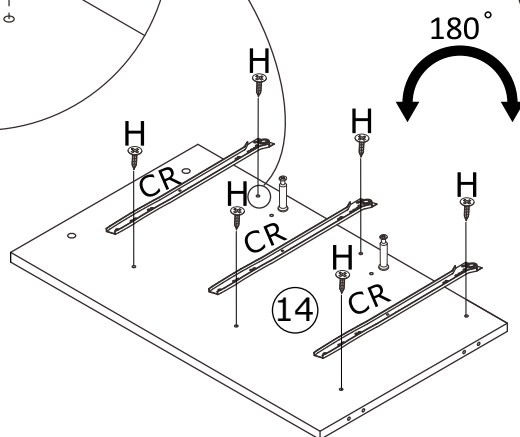 
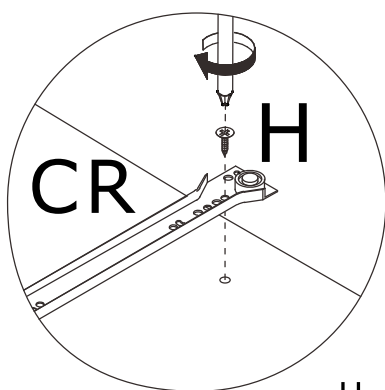 
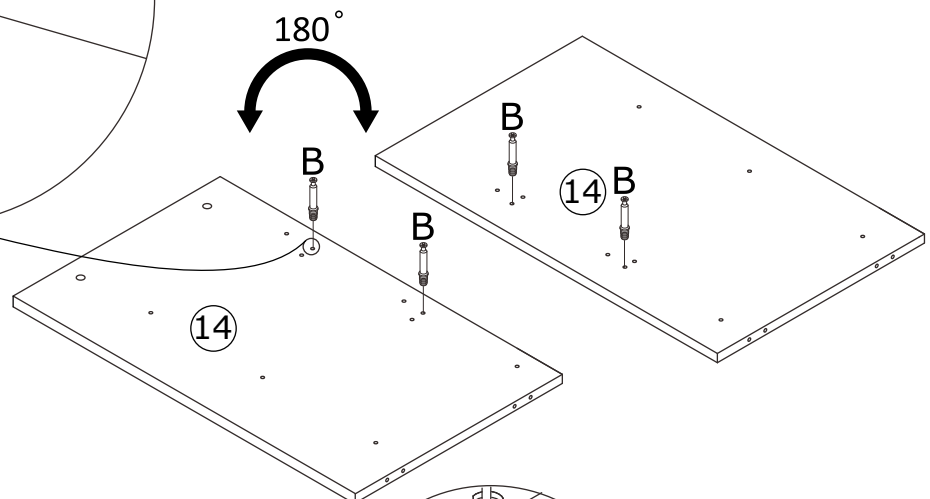 
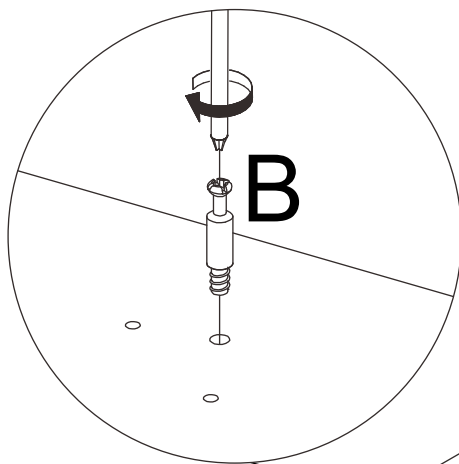 
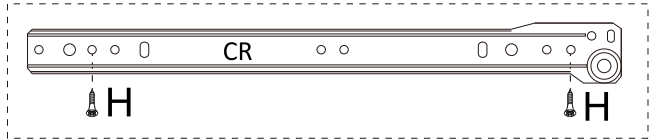 
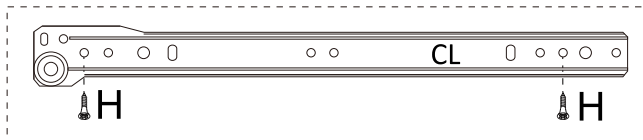 
10

<p>B x 4</p>  <p>Ø 6x35mm</p>	<p>H x 12</p>  <p>Ø 3x12mm</p>	<p>CL x 3</p> 	<p>CR x 3</p> 	
--	---	---	--	---




Screw eccentric rod(B) into board 14, and flip it, screw eccentric rod(B) as shown.

Fix slide rail(CL) to board 14, and flip it, fix slide rail(CR) as shown.



	<p>H</p>  <p>Ø 3 x 12 mm</p>	<p>M</p>  <p>Ø 3 x 14mm</p>
--	---	--



   
11

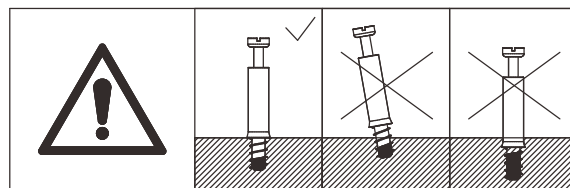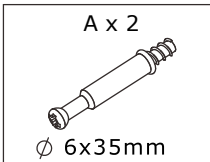

  Screw eccentric rod(B) into board 23 and 26 as shown.

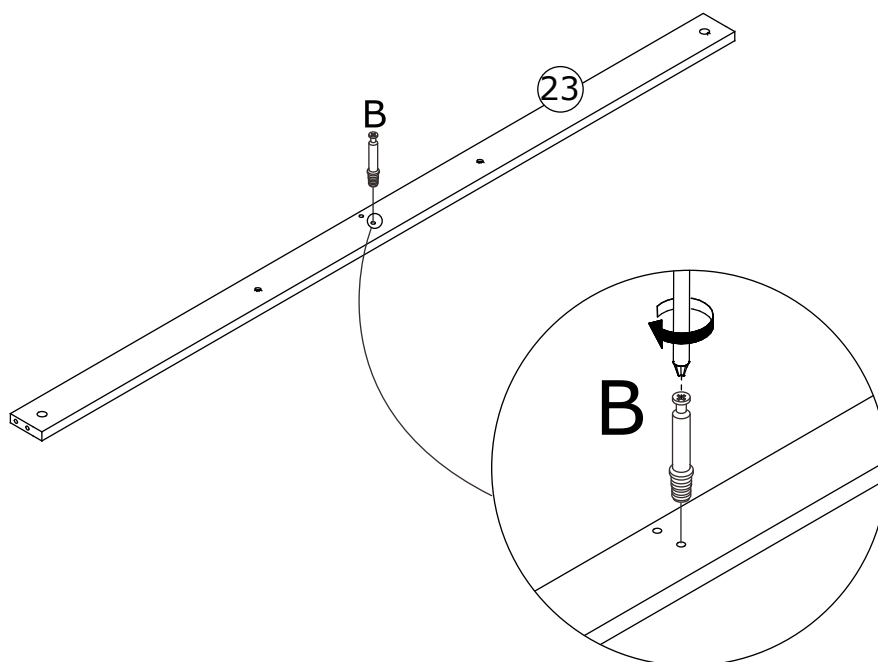
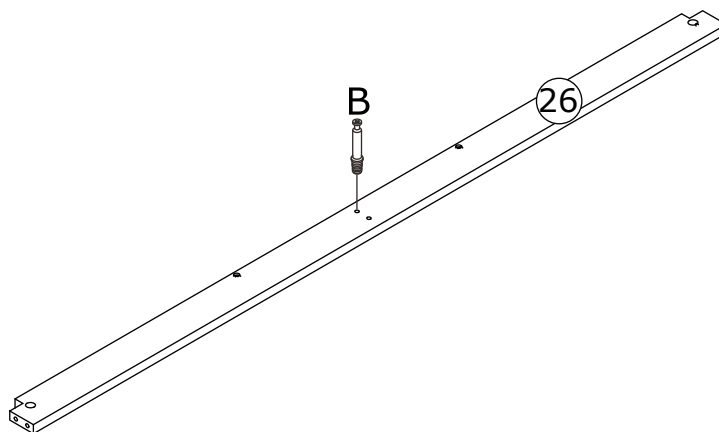


12

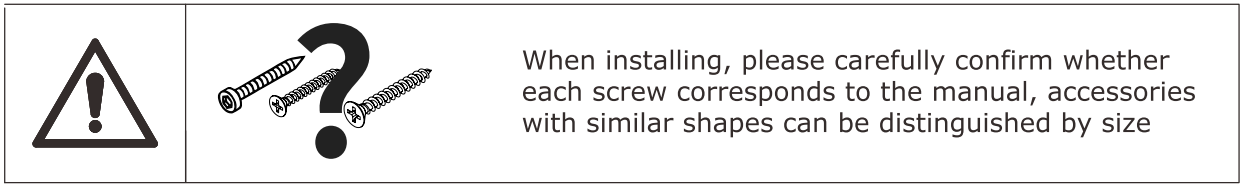 

Insert wooden dowel(A) into board 24 at first.

  Attach board 23 and 26 to board 24, fix using screw(N) as shown.

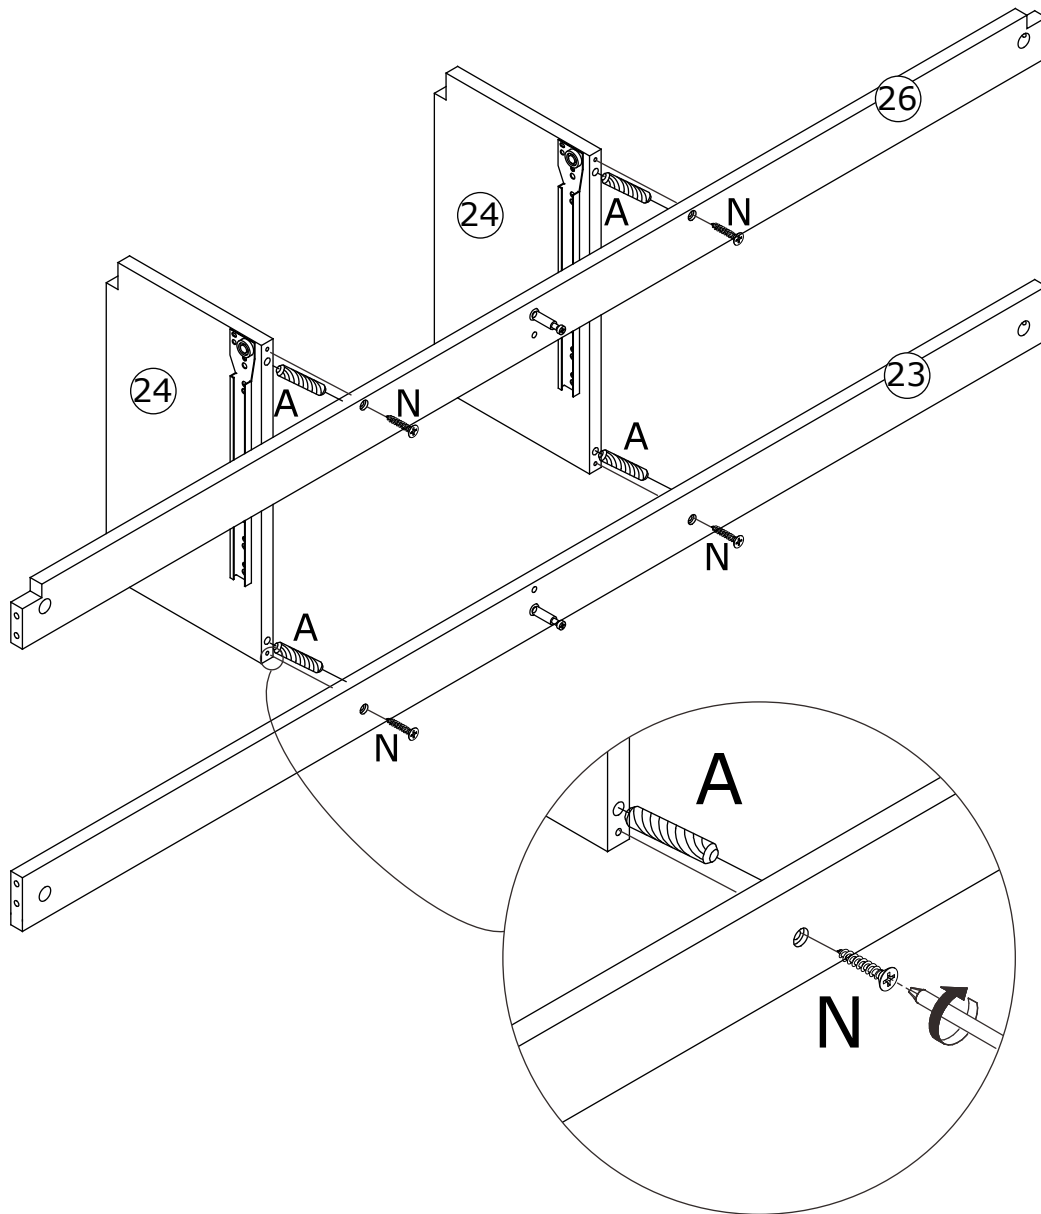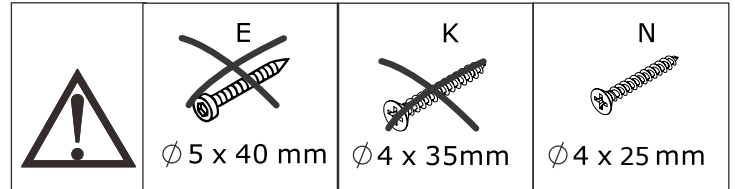

13

A x 2

 


Ø 3x12mm

C x 2





Ø 15x10mm

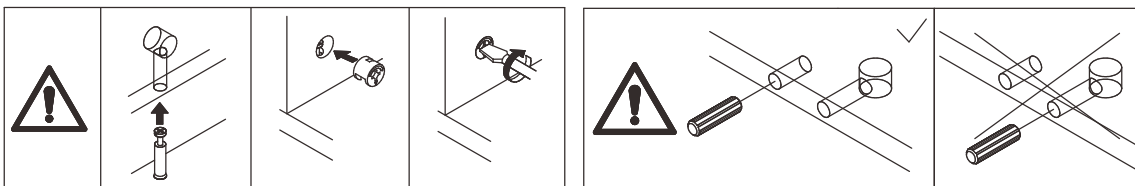


Insert wooden dowel(A) into board 14 at first.

  Attach board 14 to board 23 and 26, add cam lock(C) into board 14 and turn clockwise to tighten as shown.

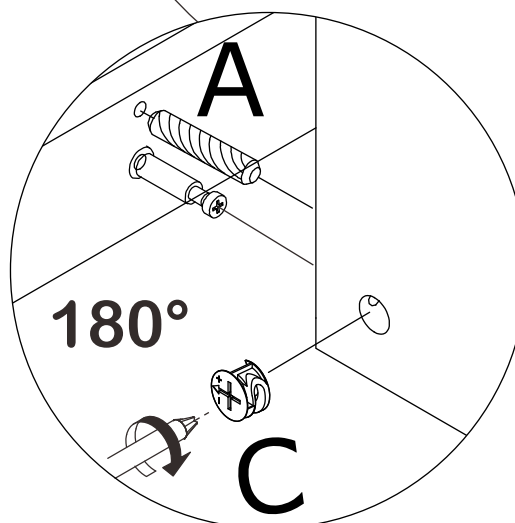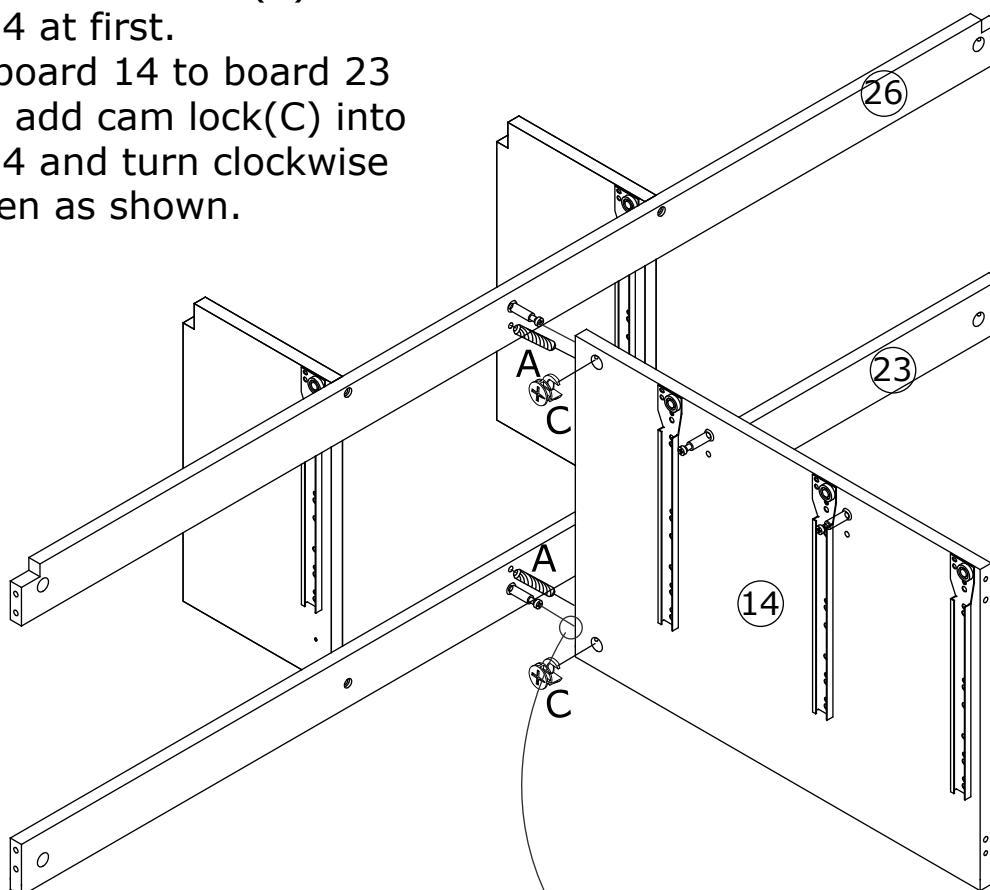

14





 
A x 2




C x 2



     Ø 15x10mm

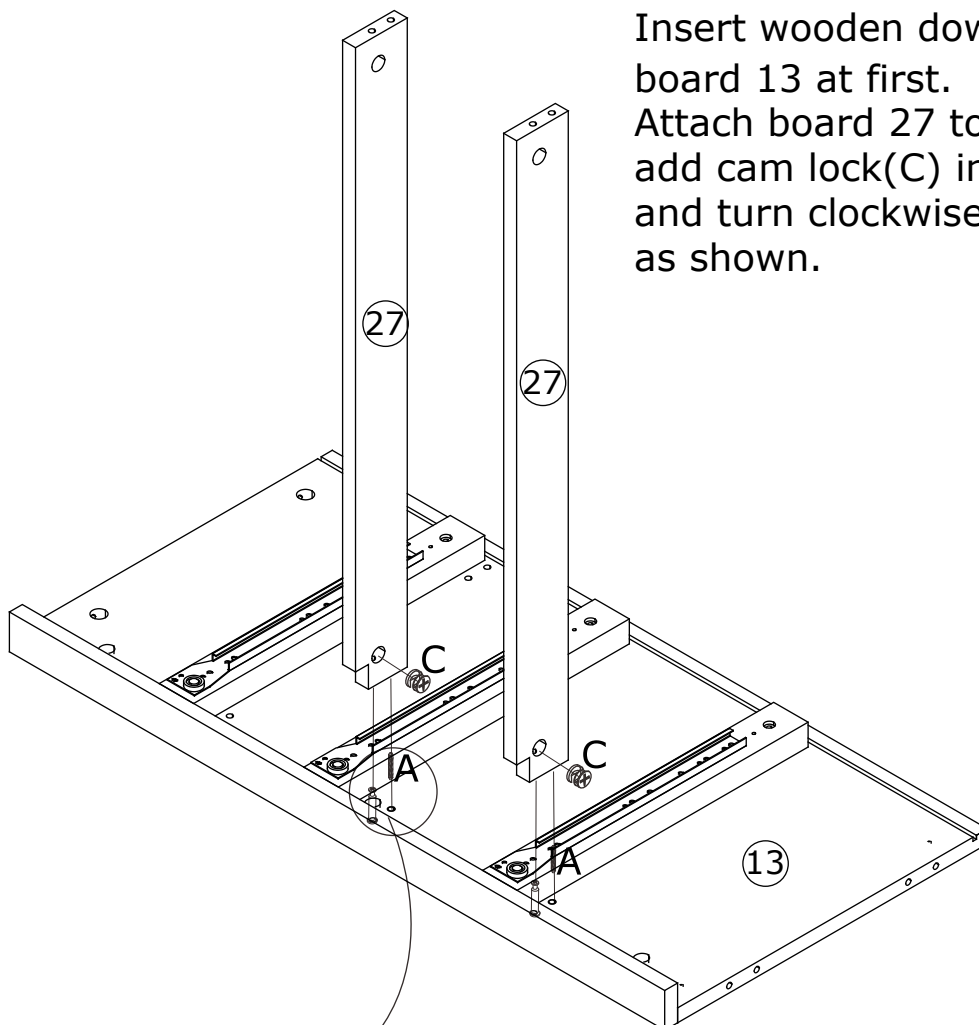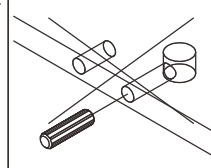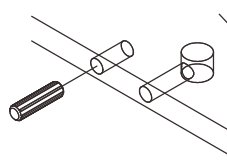


 Insert wooden dowel(A) into board 13 at first.
Attach board 27 to board 13, add cam lock(C) into board 27 and turn clockwise to tighten as shown.

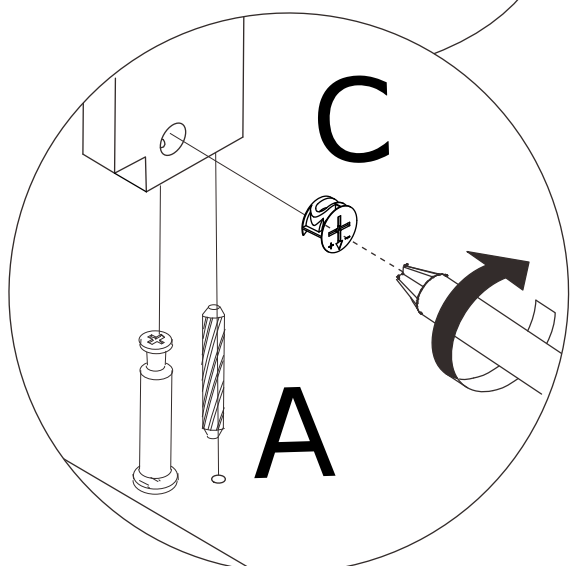

15






 
A x 4





C x 4



      Ø 15x10mm

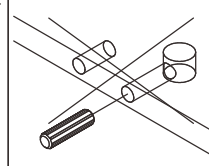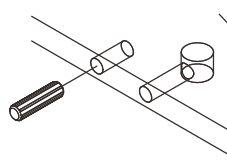

  Insert wooden dowel(A) into board 13 at first.
Attach board 27.23.26 .14to board 13,
add cam lock(C) into board 27
and turn clockwise to tighten
as shown.

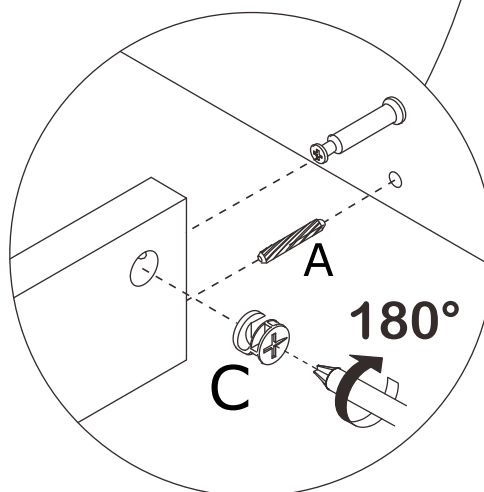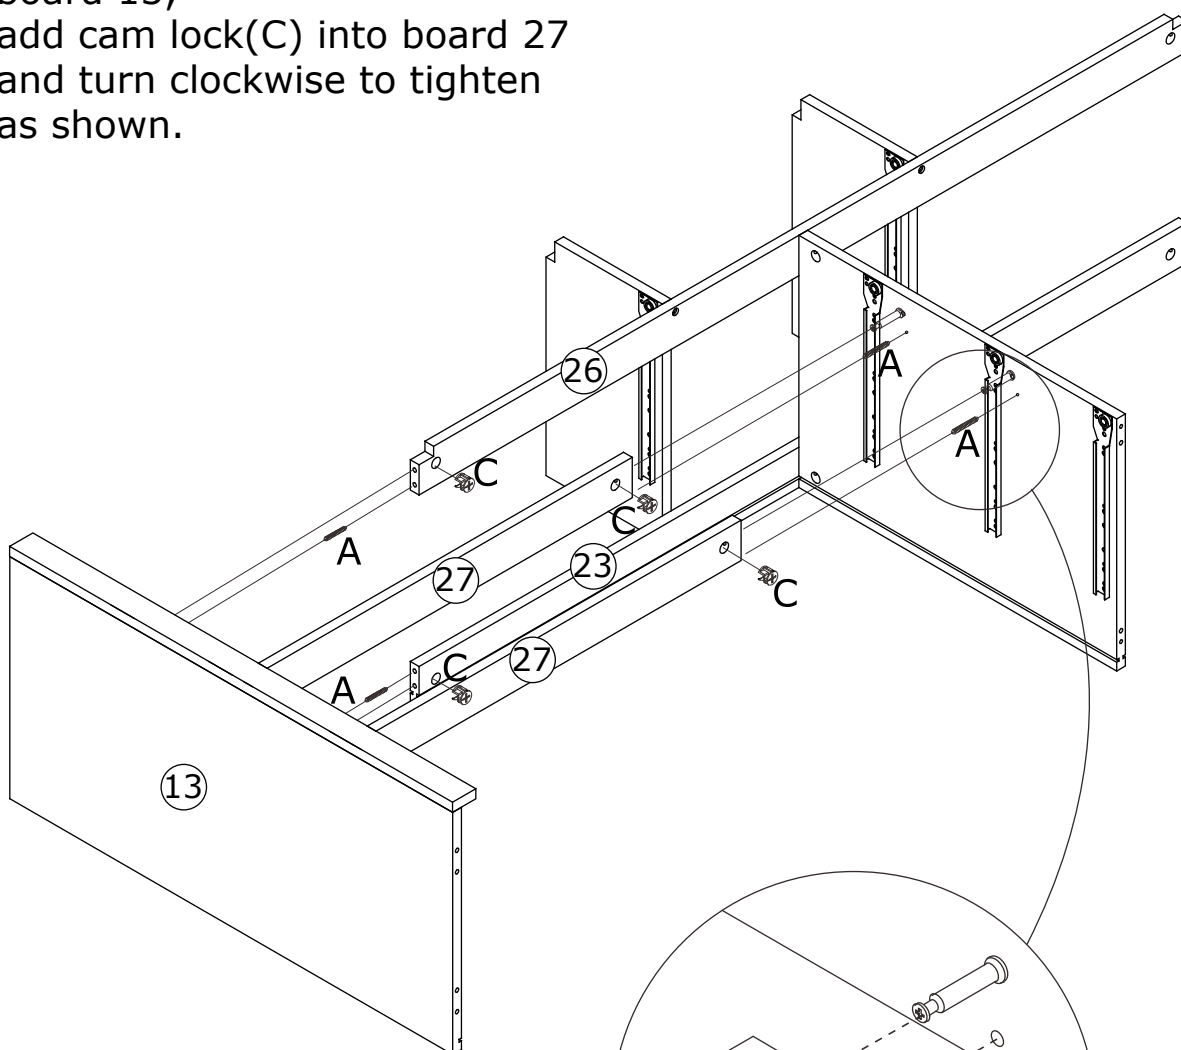

16

 
 
A x 2





C x 2



Ø 15x10mm

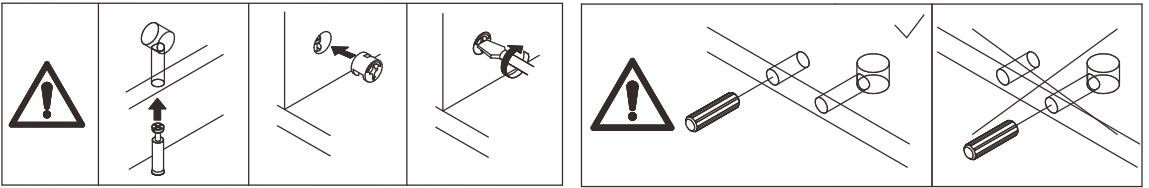

  Insert wooden dowel(A) into board 28 at first.
Attach board 28 to board 15,
add cam lock(C) into board 28
and turn clockwise to tighten
as shown.

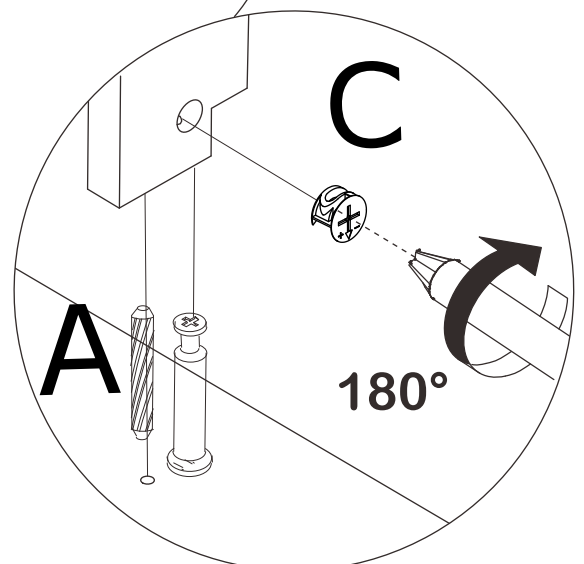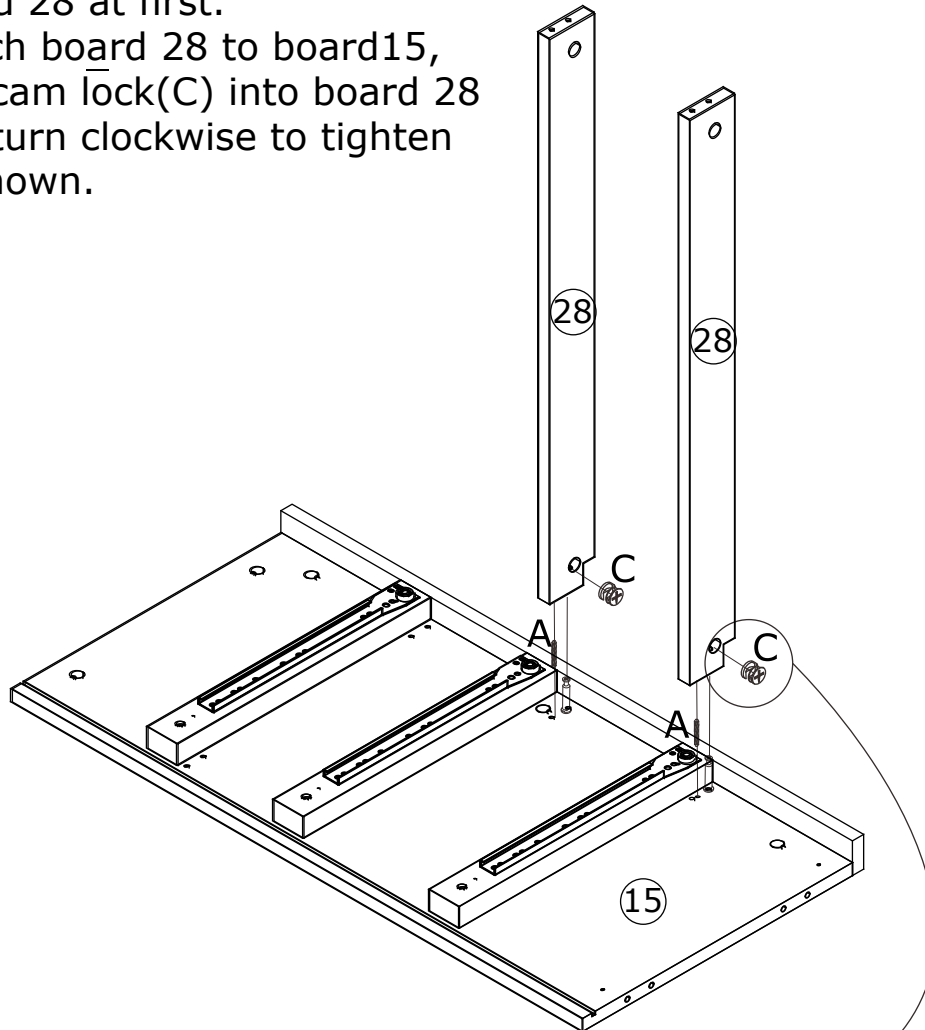

17

 
 
A x 4



C x 4





Ø 15x10mm


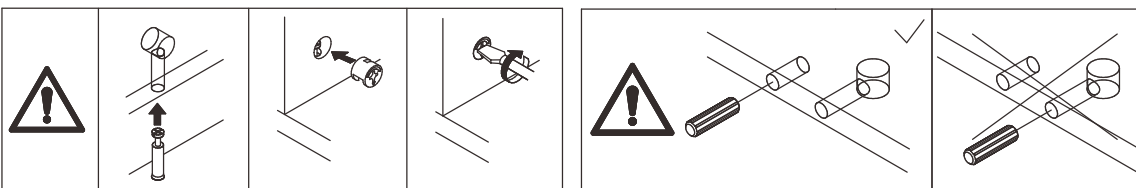



Insert wooden dowel(A) into board 23, 26 and 28 at first.

  
Connect the two components, add cam lock(C) into board 23,26,28 .14 and turn clockwise to tighten as shown.

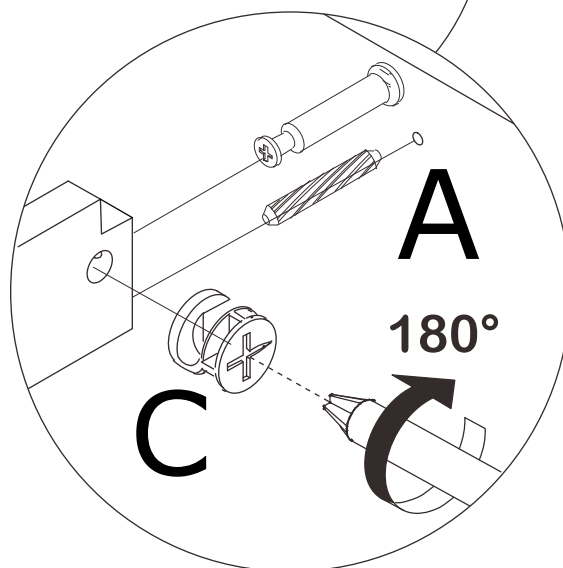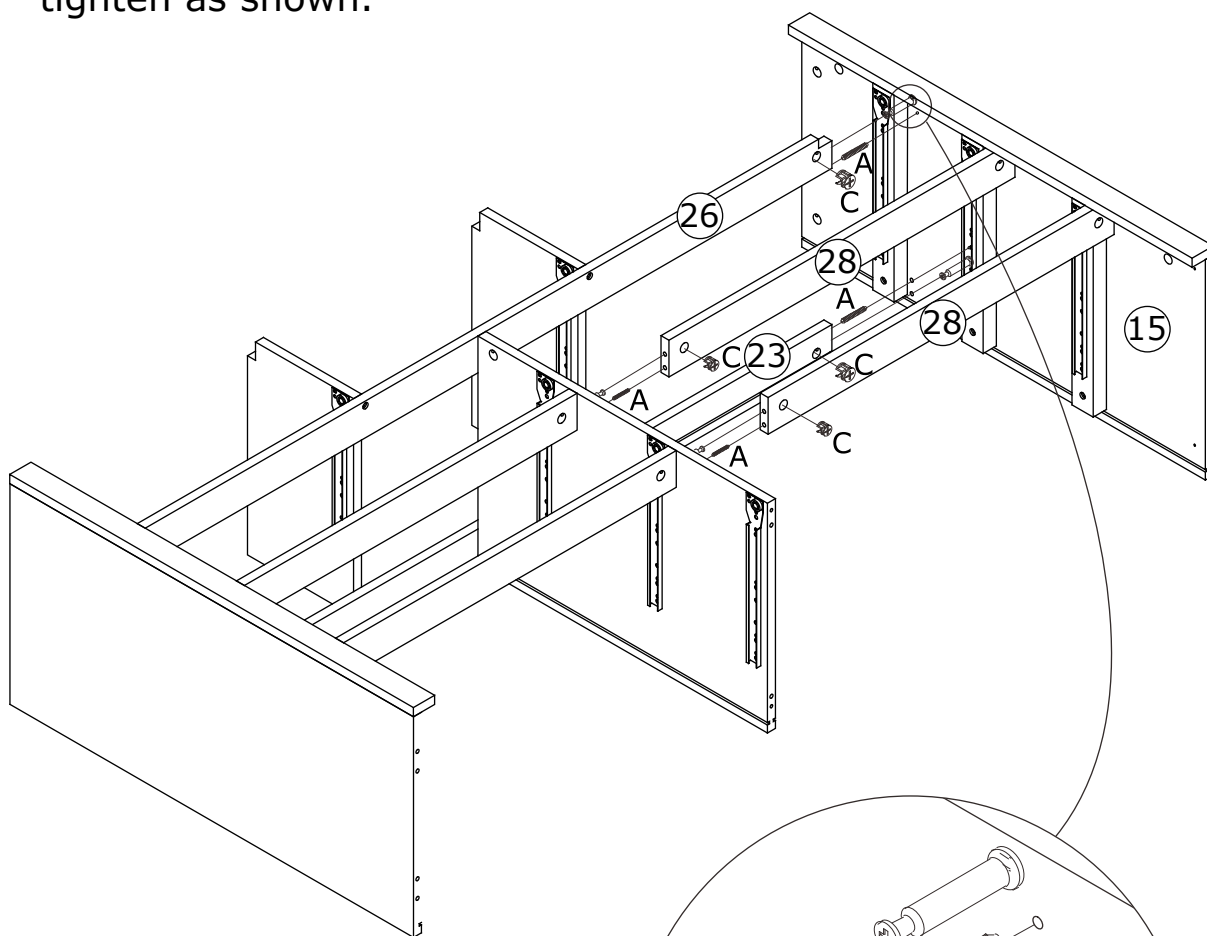

18

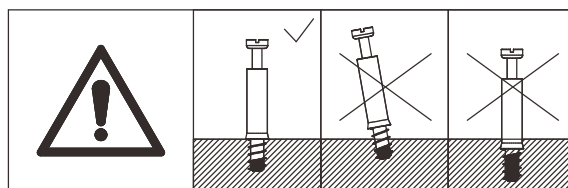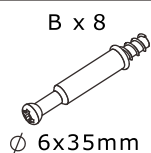   


 Screw eccentric rod(B) into board 16 as shown.

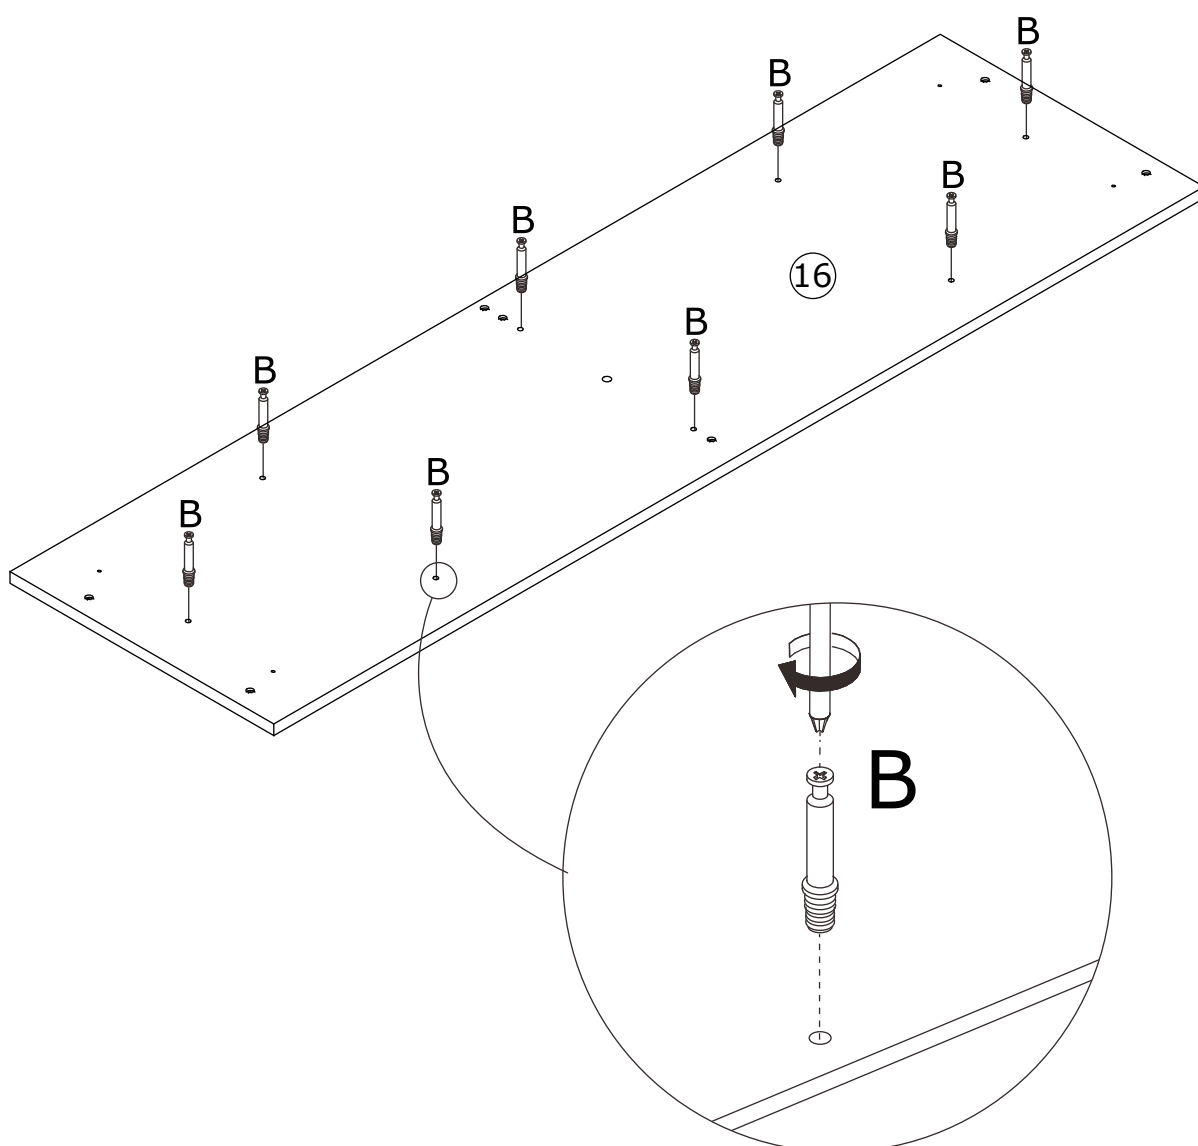

19

 A x 8



E x 7



Ø 5 x 40 mm

 
 
J x 1





R x 1





Insert wooden dowel(A) into board 13, 14, 15 and 29 at first. Attach board 16 to the bottom and fix with screw(E) as shown. Rotate leg support 20 into board 16, rotate part(R) into leg support 20 as shown.

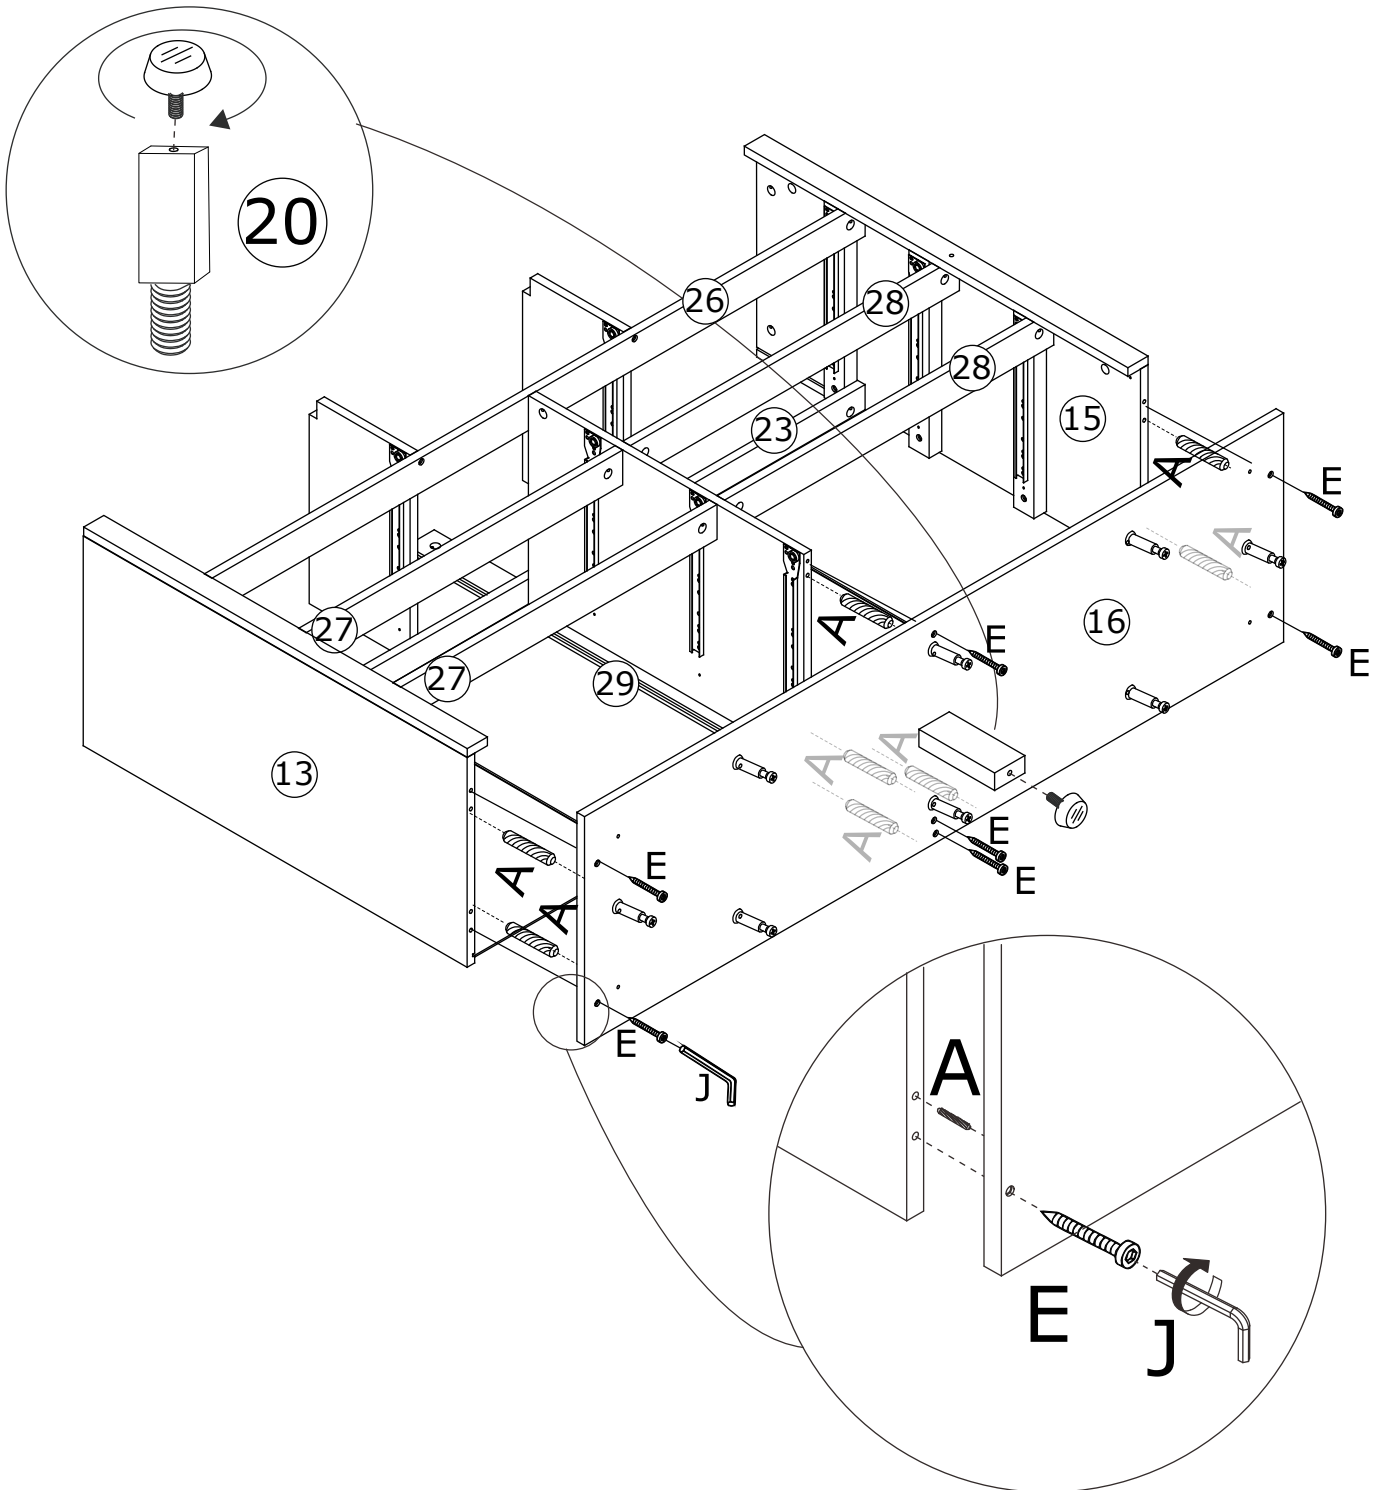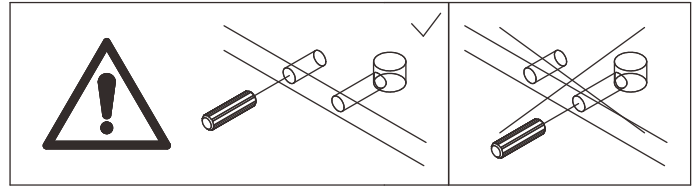

20

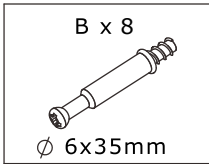  

  Screw eccentric rod(B) into leg 19 as shown.

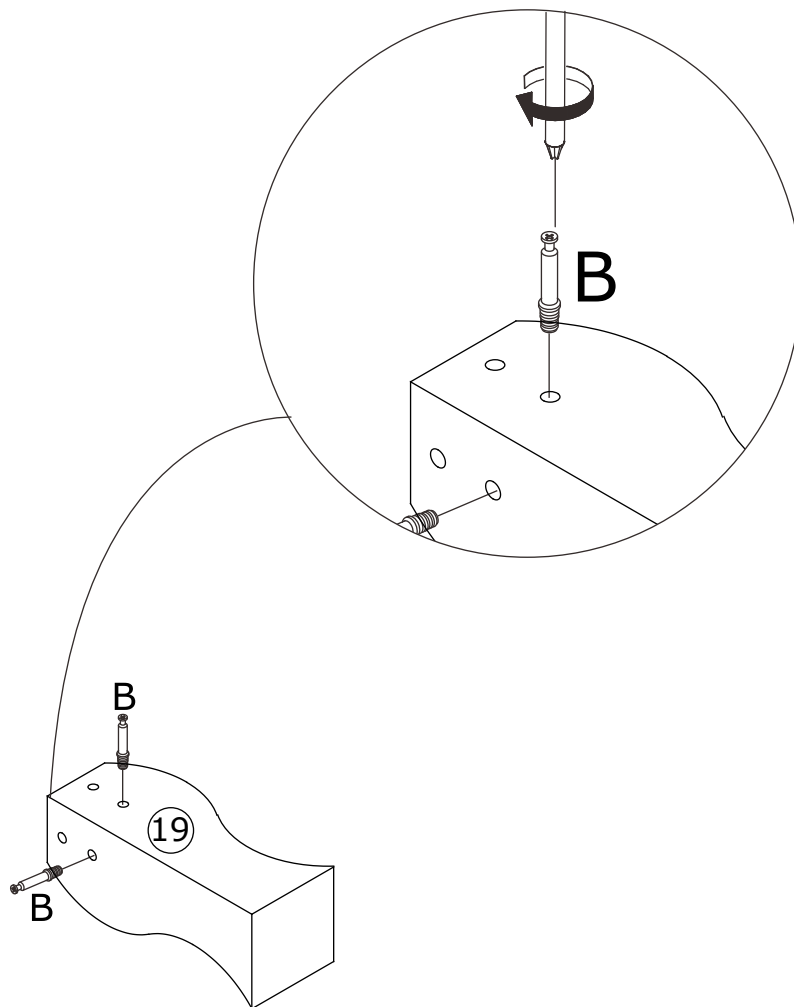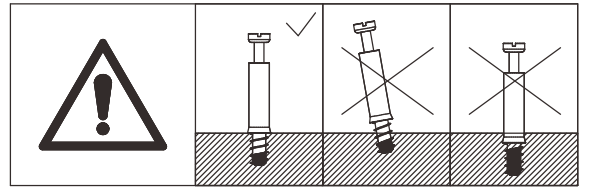

x4

 
 
21

C x 4





Ø 15x10mm

A x 4



  Connect leg 19 with board 18, add cam lock(C) into board 18 and turn clockwise to tighten as shown.

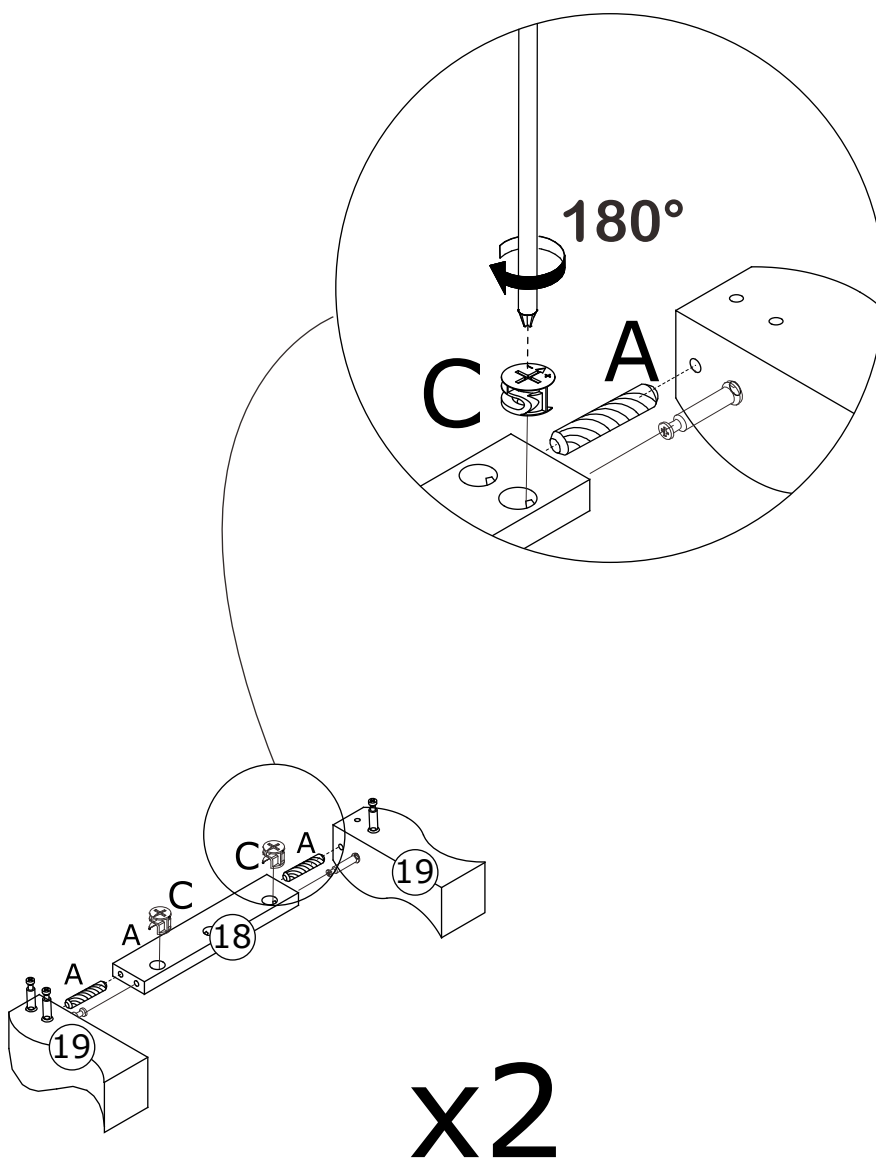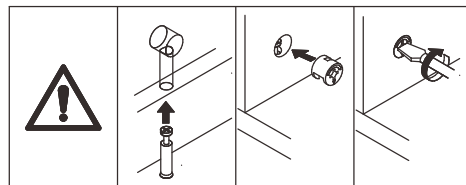



22

C x 4






Ø 15x10mm

  A x 4



   Connect leg 19 with board 17, add cam lock(C) into board 17 and turn clockwise to tighten as shown.

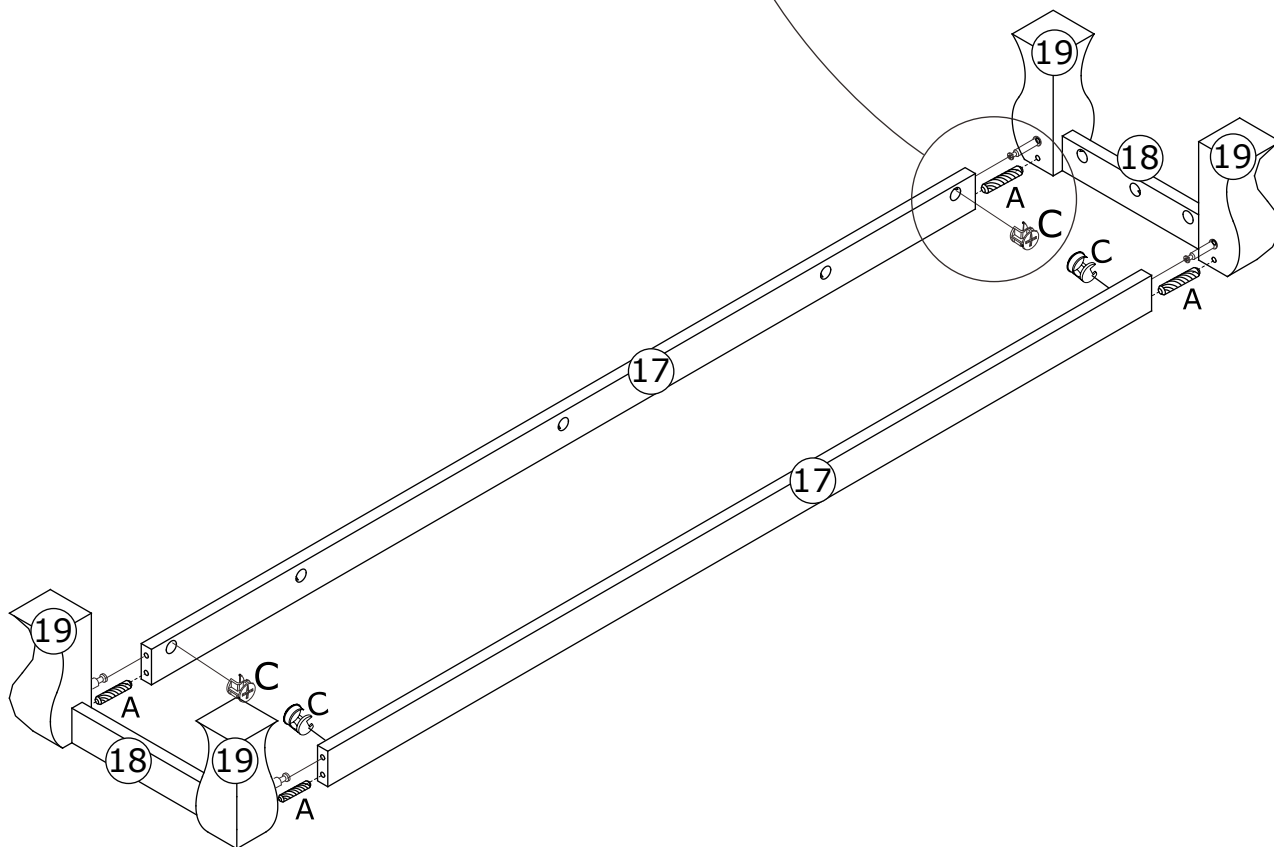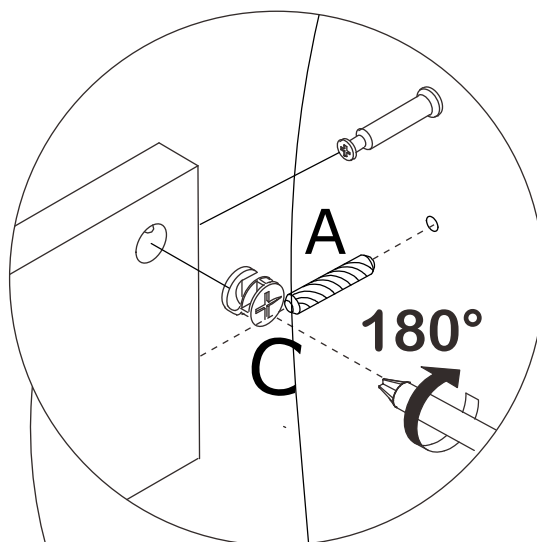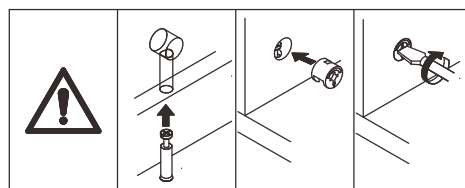

23

 
 
C x 8



Ø 15 x 10 mm




Attach the base component to board 16,
add cam lock(C) into board 18,19,17
and turn clockwise to tighten as shown.

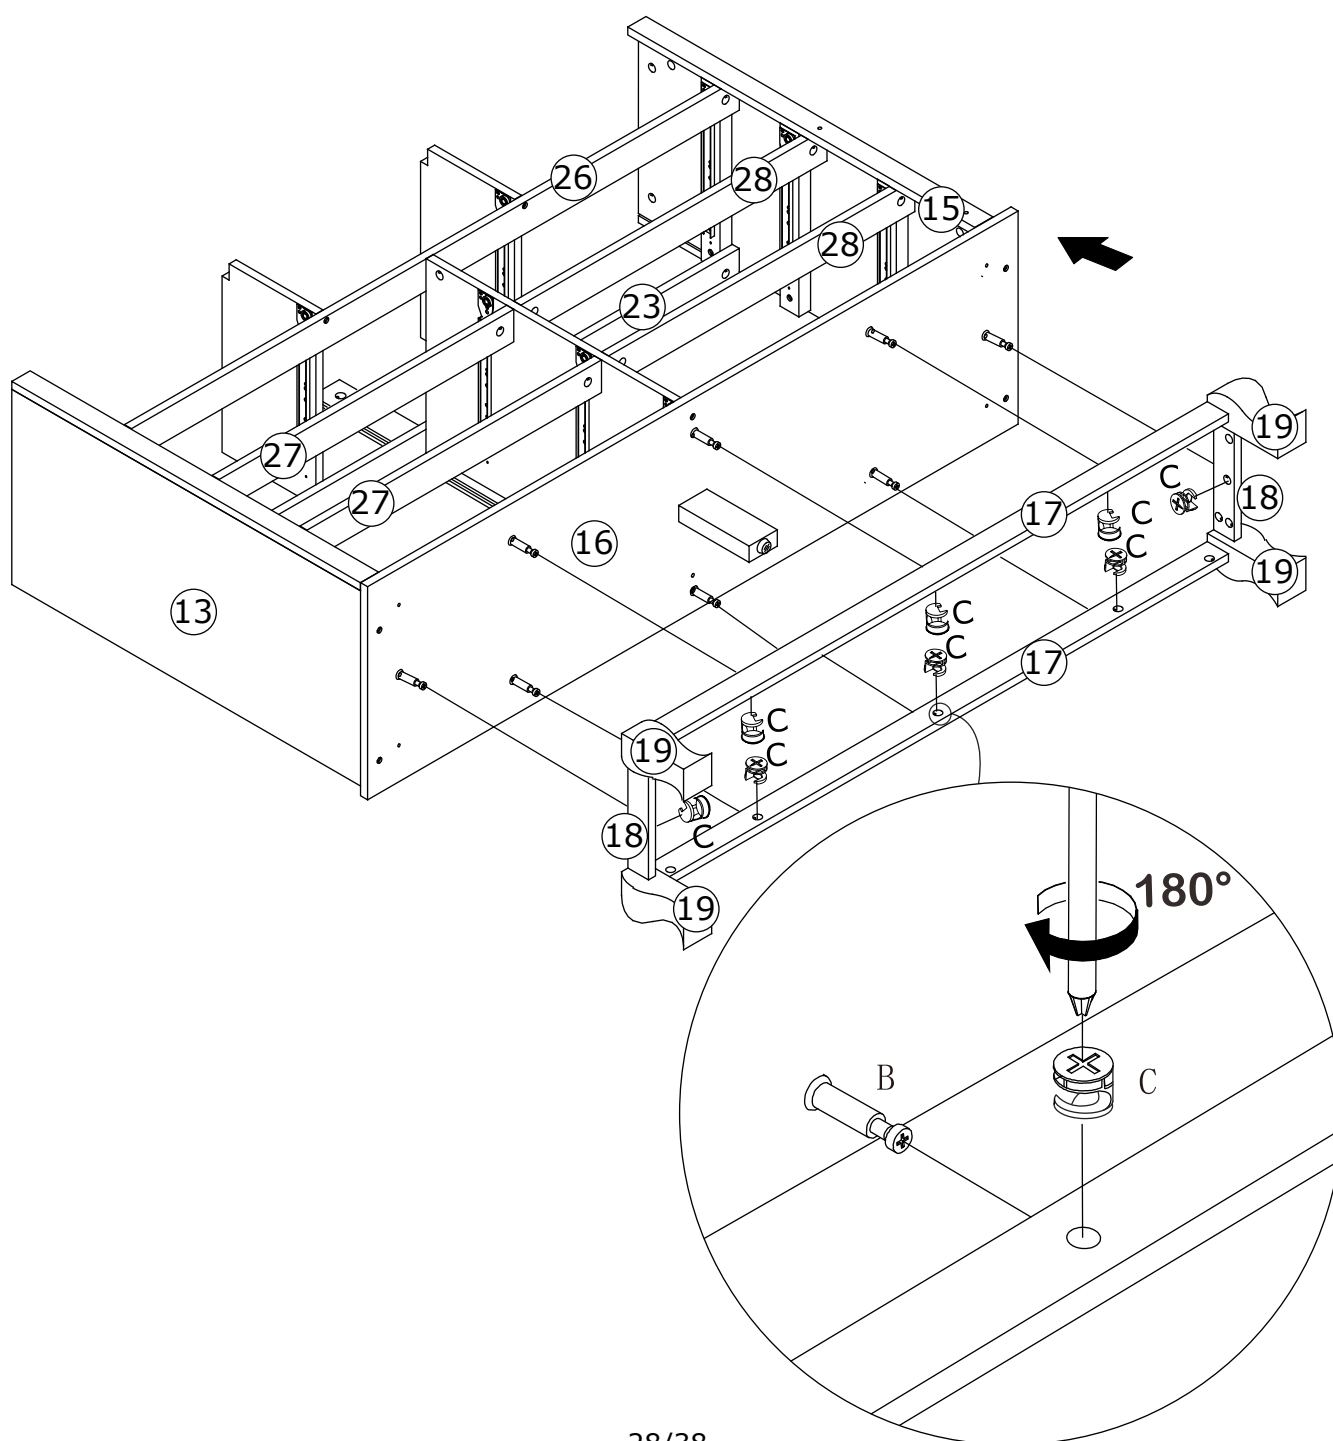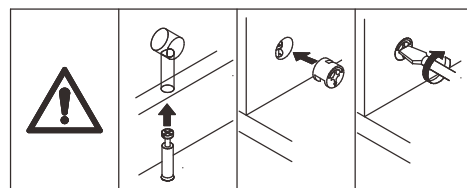


24

 E x 4



Ø 5 x 40 mm

 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Fix board 16 with board 19 using screw(N) as shown.



E

 
 


Ø 5 x 40 mm

K





Ø 4 x 35mm

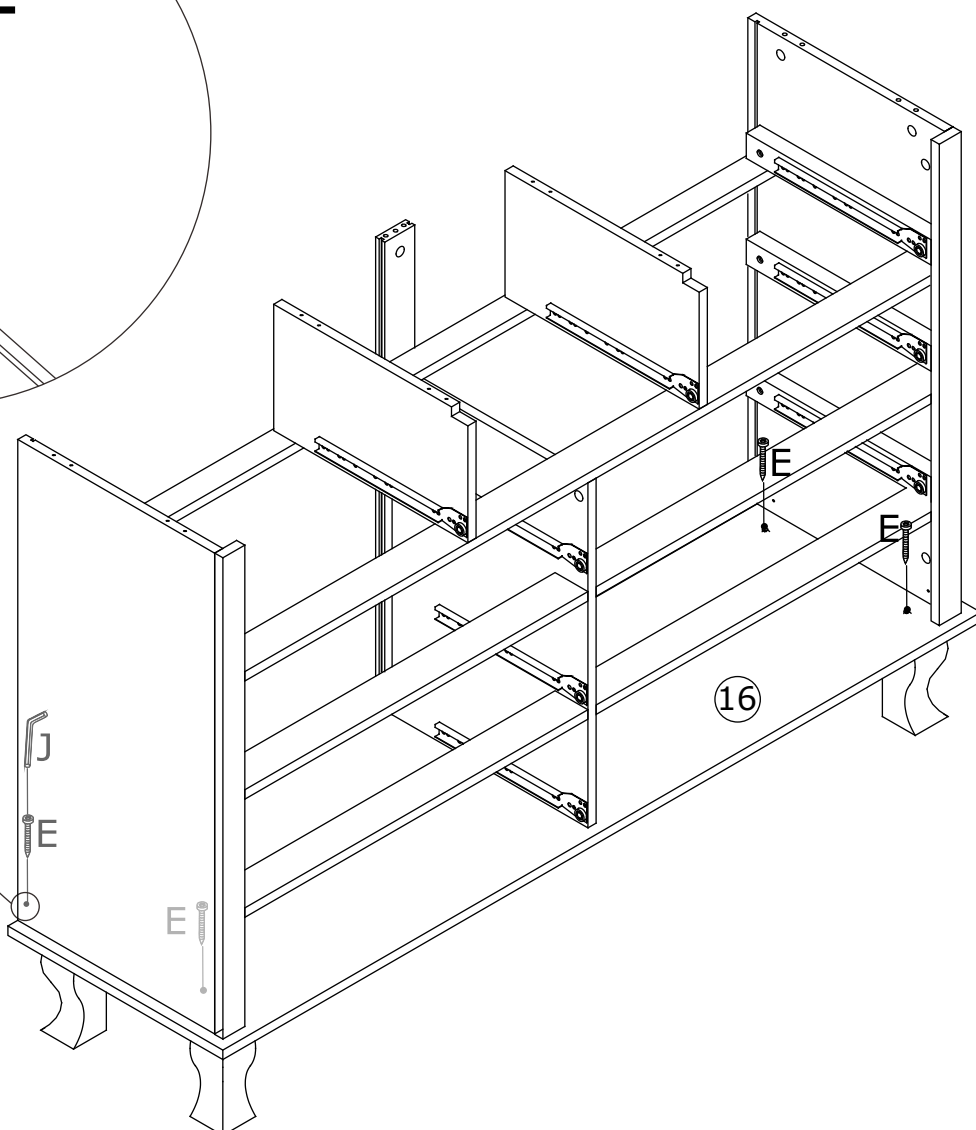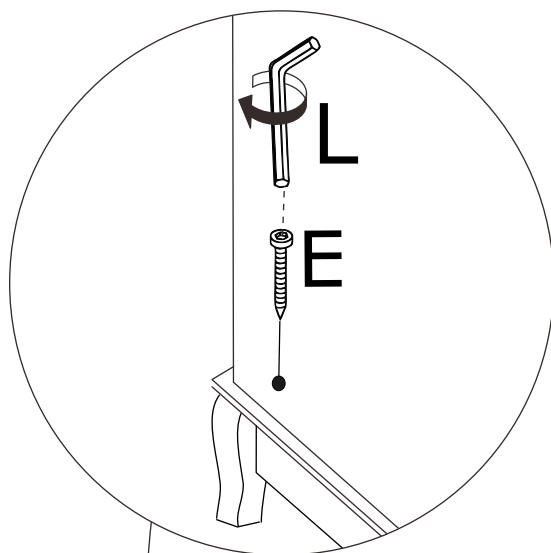


25

N x 4

   Ø 4x30mm

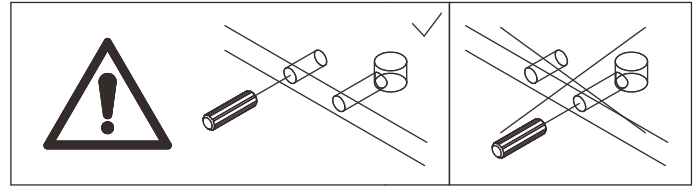

 Attach board 25 to the bottom of board 13 and 15 and fix with screw(N) as shown.

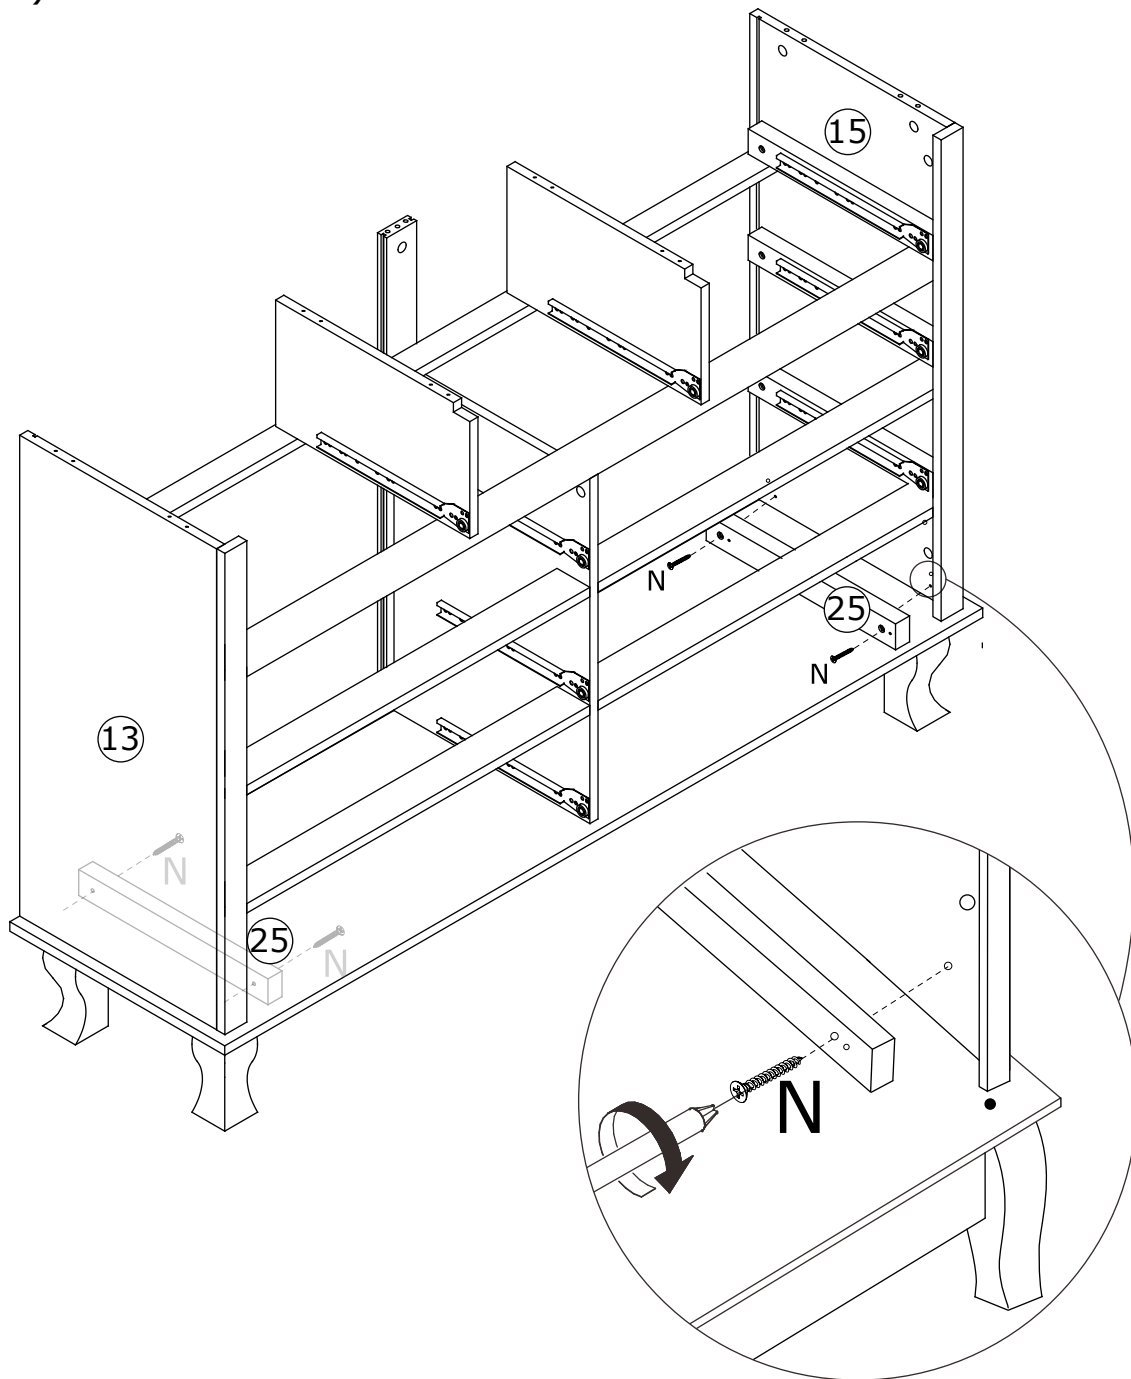


26

H x 4





Ø 3x12mm

 CL x 1



CR x 1

  

Fix slide rail(CL) to board 25(in board 13)
with screw(H) as shown.

Fix slide rail(CR) to board 25(in board 15)
with screw(H) as shown.



H

 
 
 
 


Ø 3 x 12 mm

M




Ø 3 x 14mm

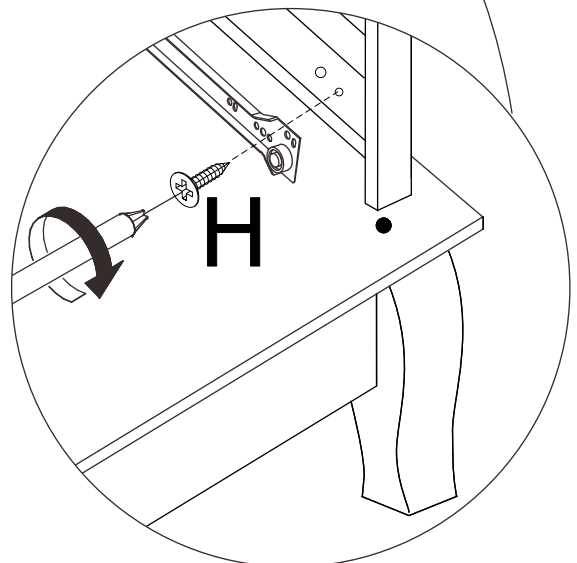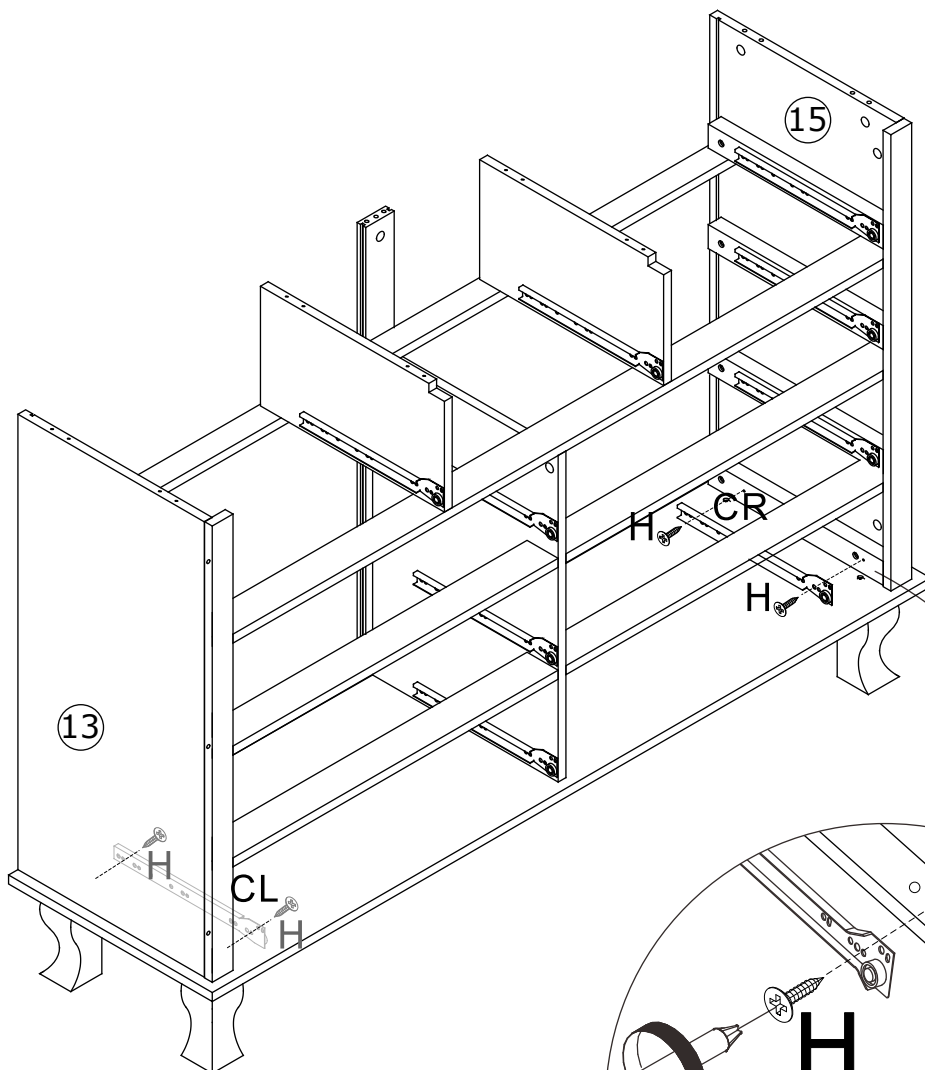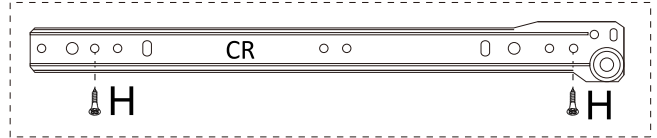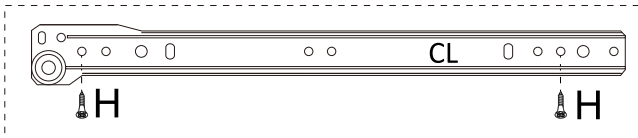

27

 Insert back board 30 along grooves as shown.



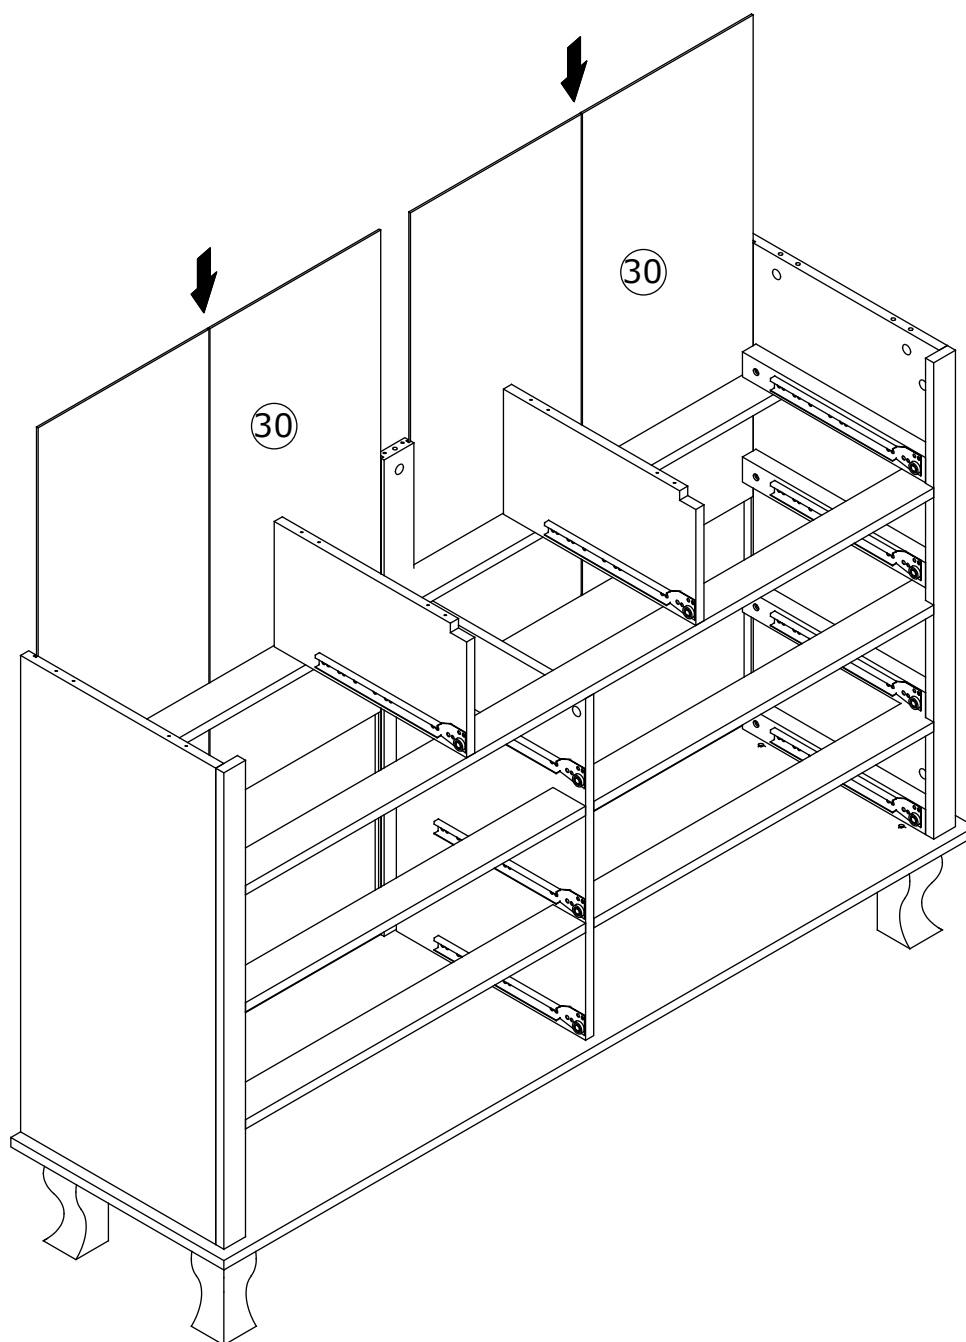


28




Screw eccentric rod(B) into leg 21 and 22 as shown.

   Fix board 21 with board 22 using screw(N) as shown.

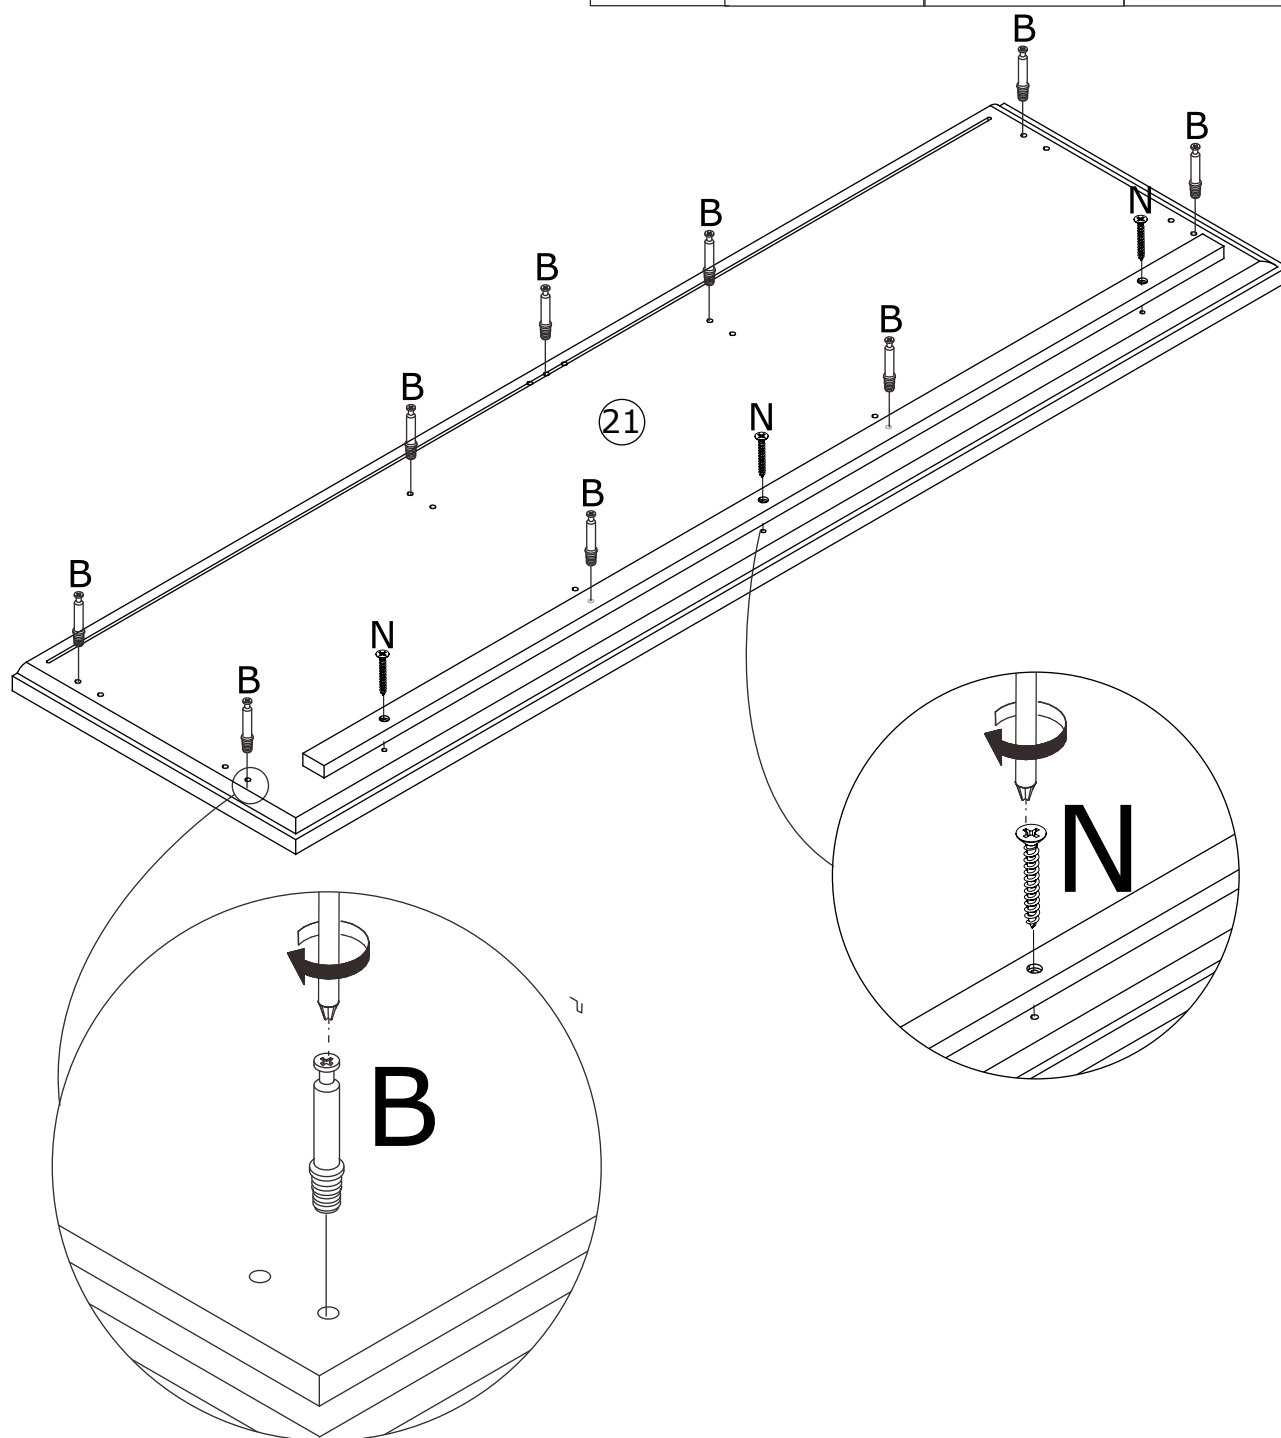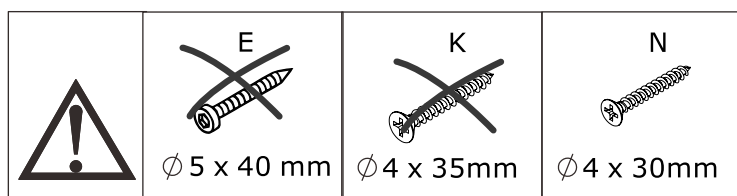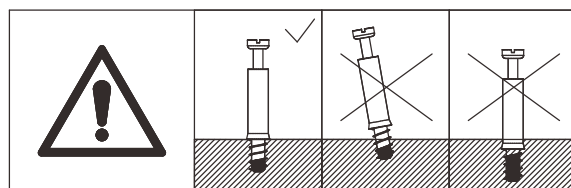

29






 
A x 10





C x 9





      Ø 15 x 10 mm

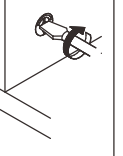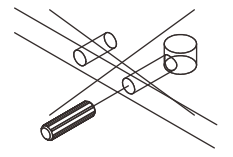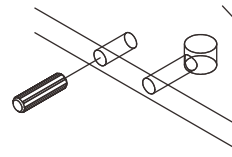

    Insert wooden dowel(A) into board 13, 15, 29 and 24 at first. Attach board 21 to the top, add cam lock(C) into board 13,29,24,15 and turn clockwise to tighten as shown.

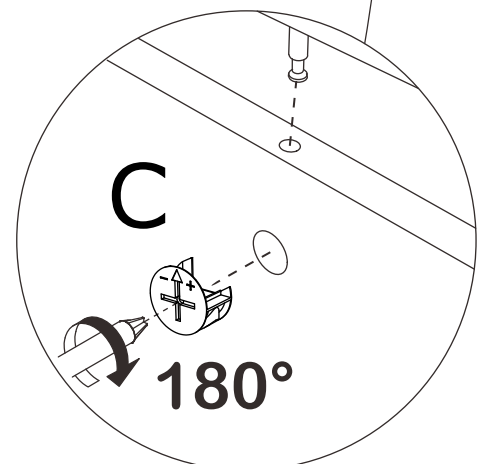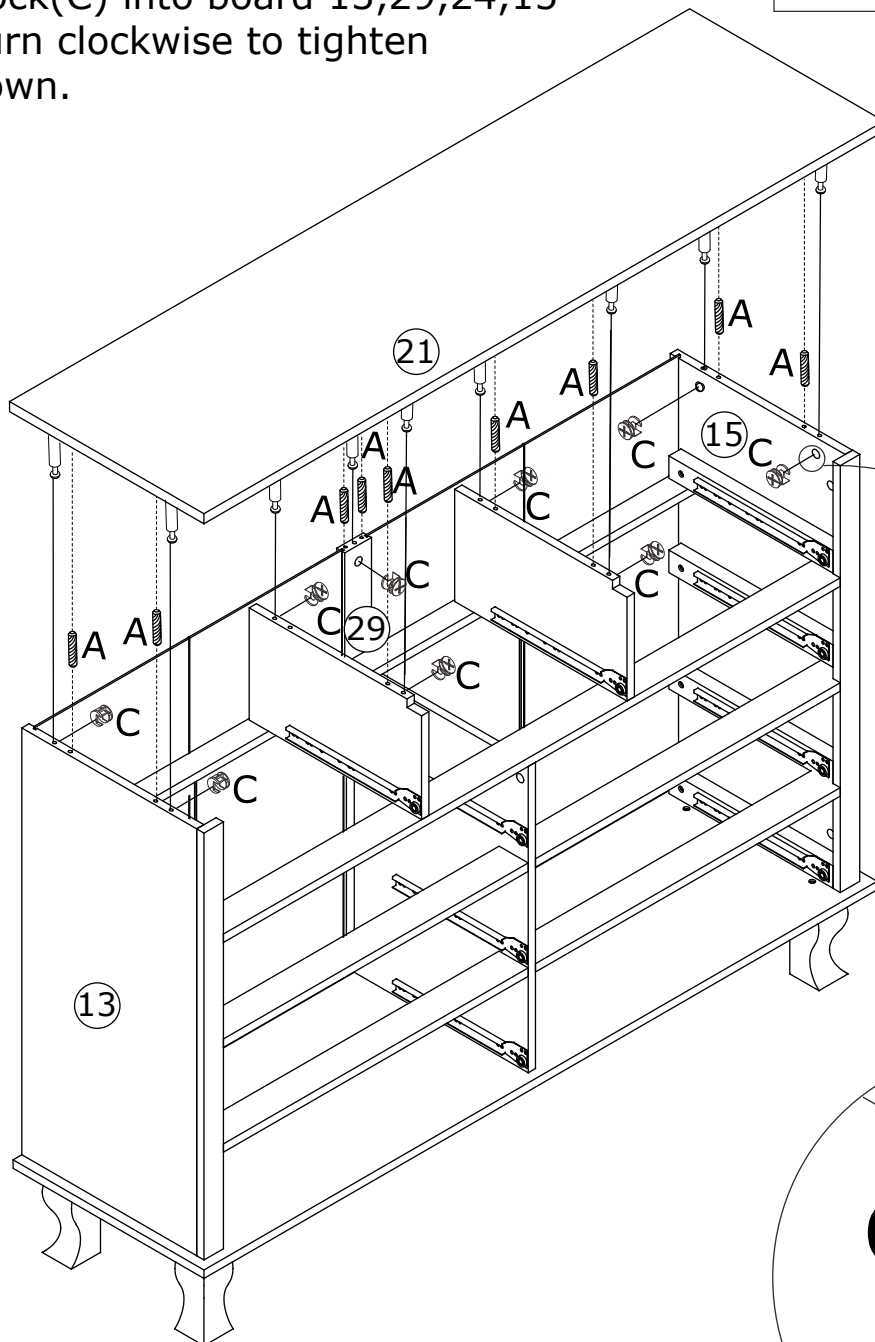

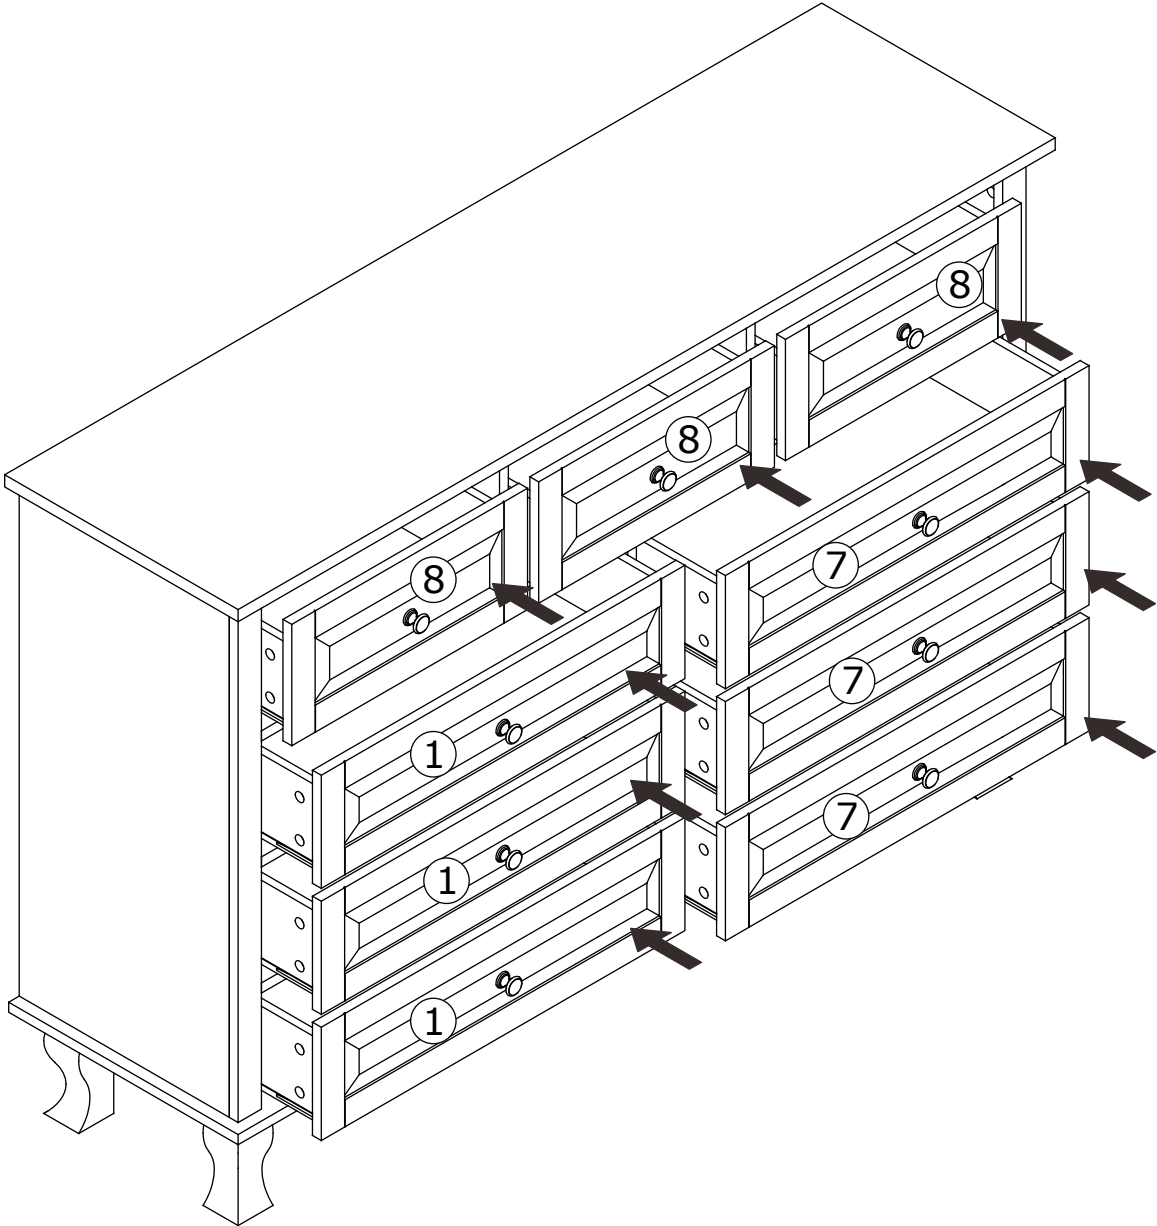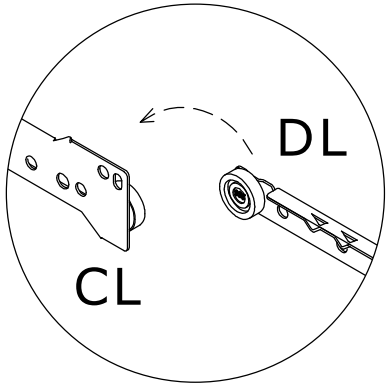

31

D x 2



Ø 4 x 12 mm

L x 6



M x 12



 
 
 
Ø 3 x 14 mm

Q x 2



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Insert buckle(L) into back slots and fix with screw(M) as shown.

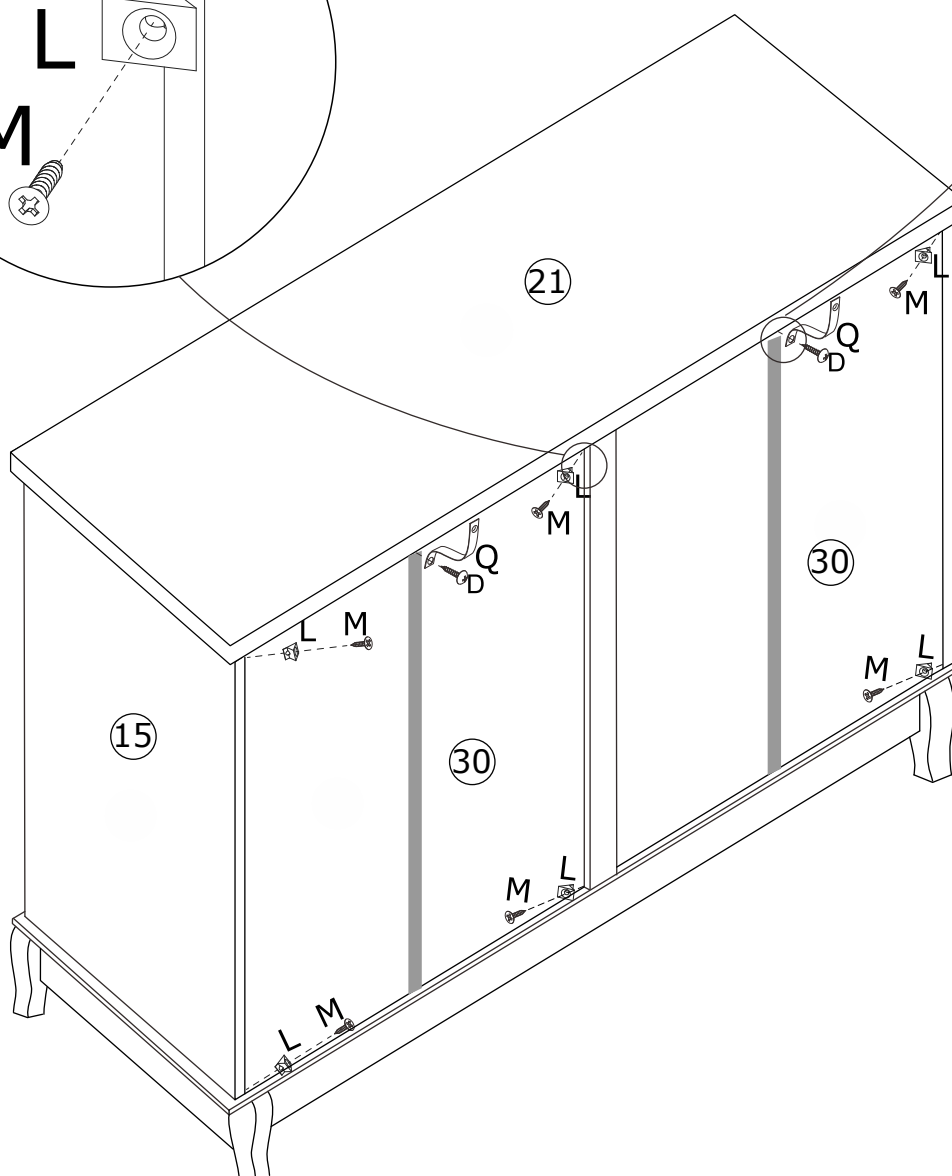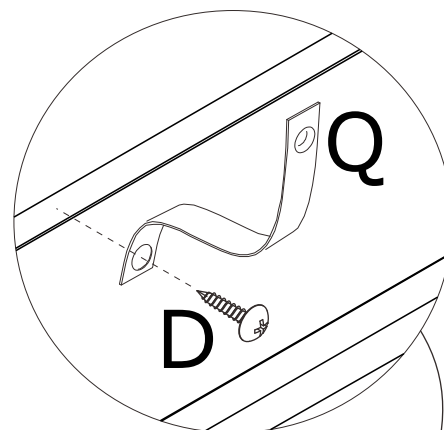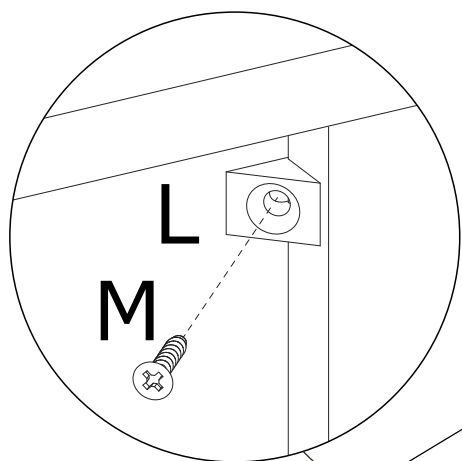

32

 
 
 
P x 2



K x 2













Ø 4 x 35 mm



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

          Install anti-tipping device as shown.

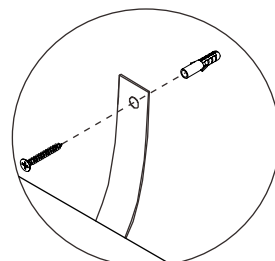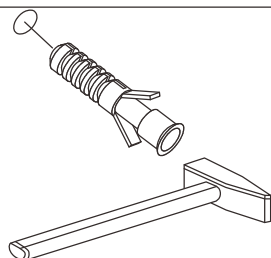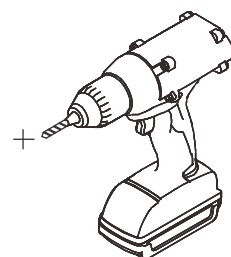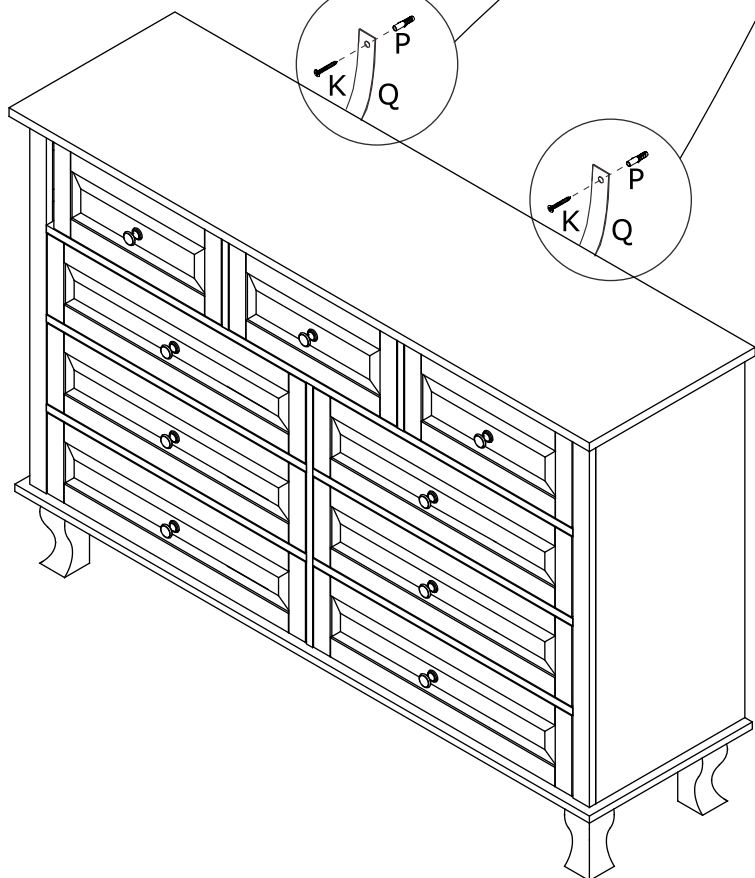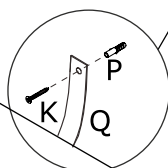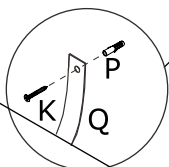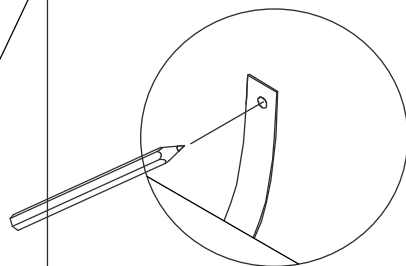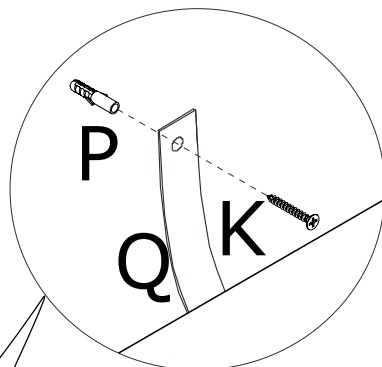

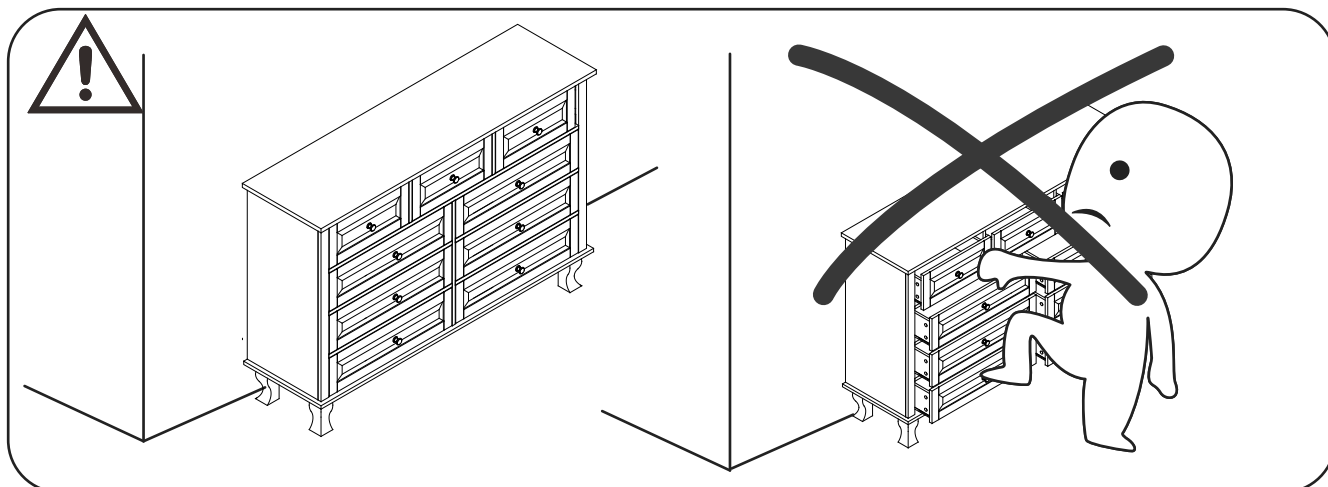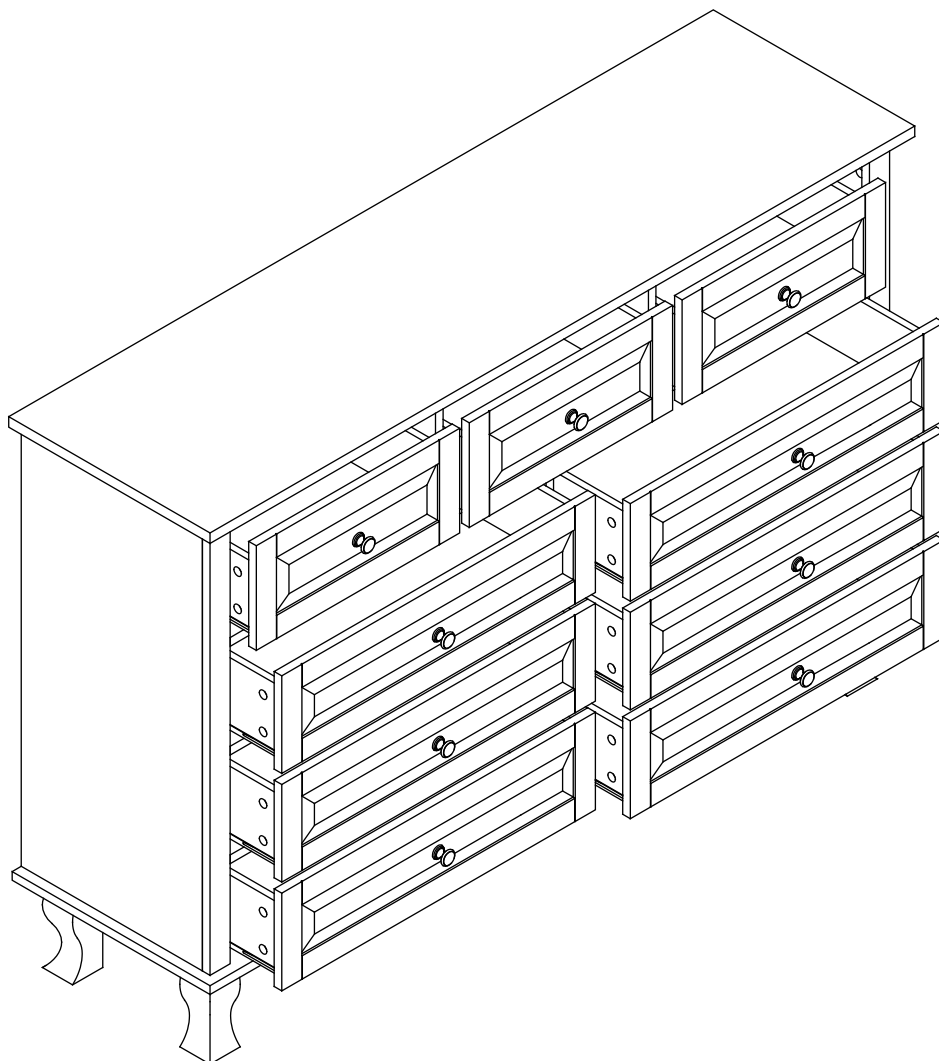

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.