



MOSSET

ANZZI™



- Please check your product packaging to make sure the included accessories are in the “list of standard accessories”. If any parts are missing, please contact your local dealer immediately.
- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Do not put any hot appliances directly on or near the cabinet.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surfaces should only be cleaned with wood care products such as soapy water or furniture polish.

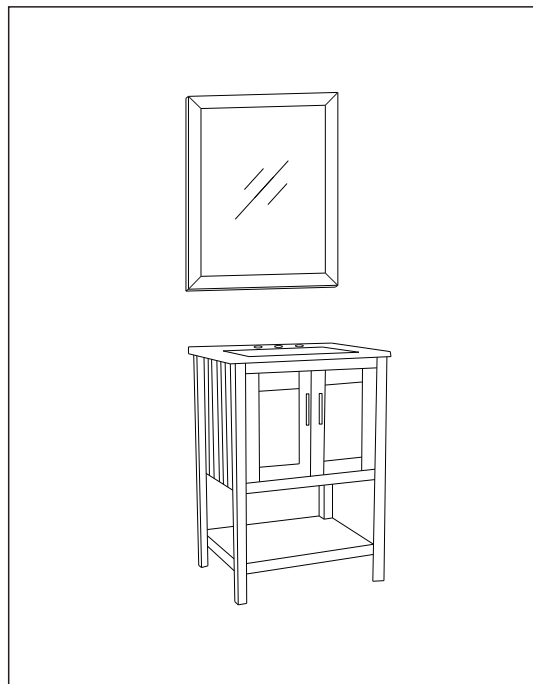

INSTALLATION

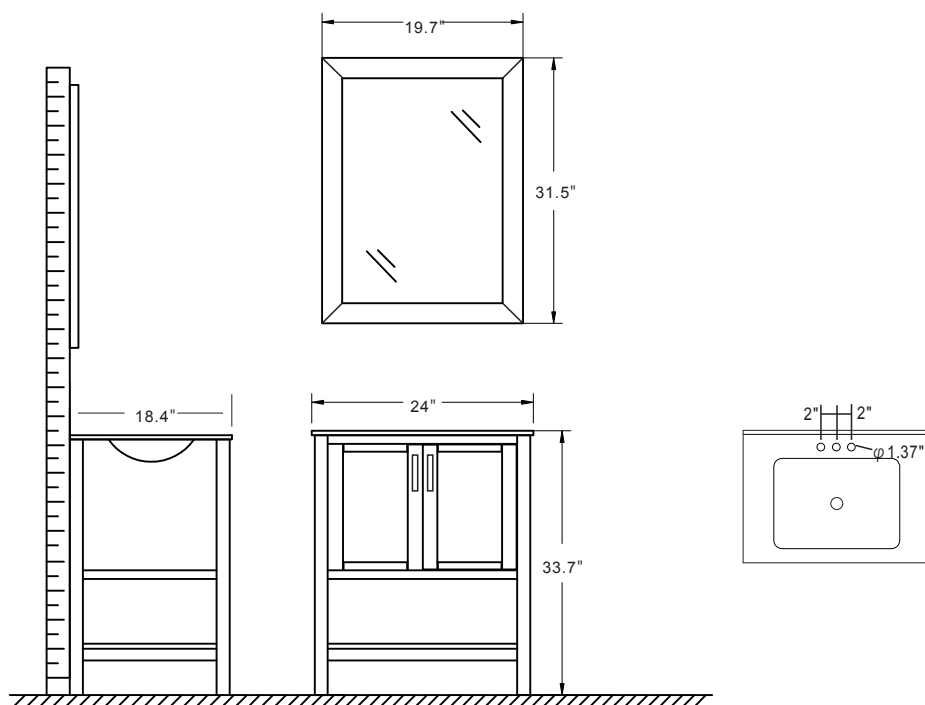

MAIN BODY PARTS

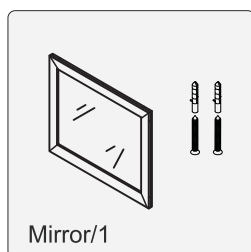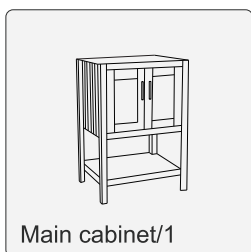

INSTALLATION PARTS






Tape



Pencil

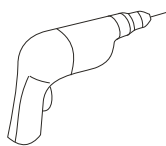


Impact Drill



Levelling Instrument




 Screw driver




Glass Glue Gun


INSTALL,REMOVE,ADJUST OF TOP FAST LOADING HINGE

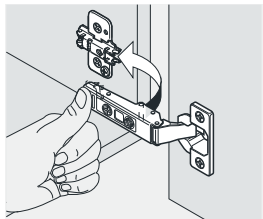


install

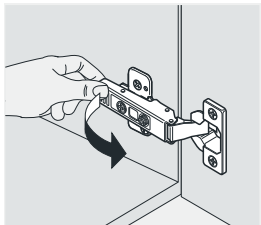


remove

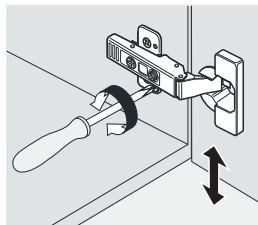

adjust the height

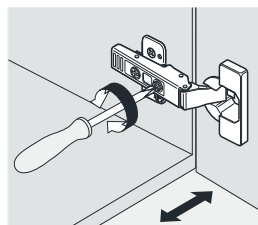

adjust the lateral

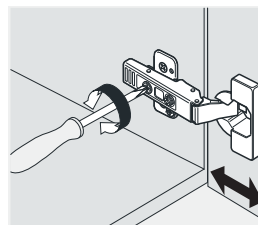

adjust the deep

INSTALLATION INSTRUCTIONS

