 


4 Piece Patio Rattan Woven Furniture Set

Assembly Instructions

A116-003-001

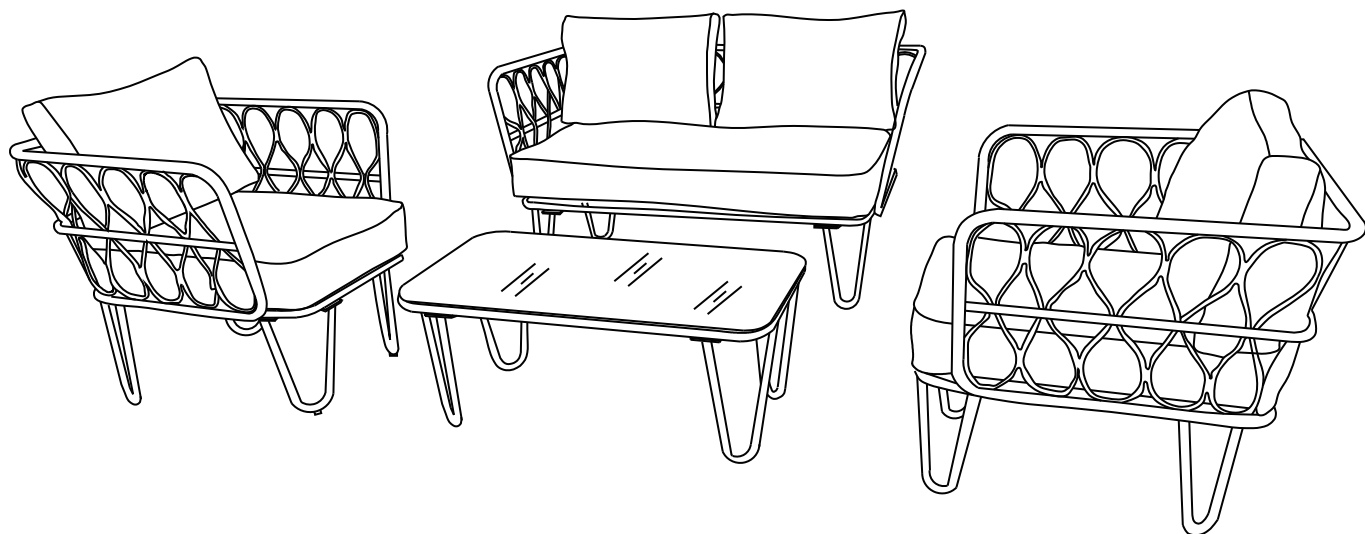

KINDLY NOTICE- Please read these instructions carefully before starting assembly

HASSEL-FREE WARRANTY

We proudly provide 1-YEAR warranty, if there are any questions with the products, please feel free to contact with us.

✉ Email: support@patio-outdoor.com



The assembly will be easier with 2 people while 1 person could also do the job.

 


 
 
 
 
 
 
 
 
 







 

 
Around 50 MINS ASSEMBLY

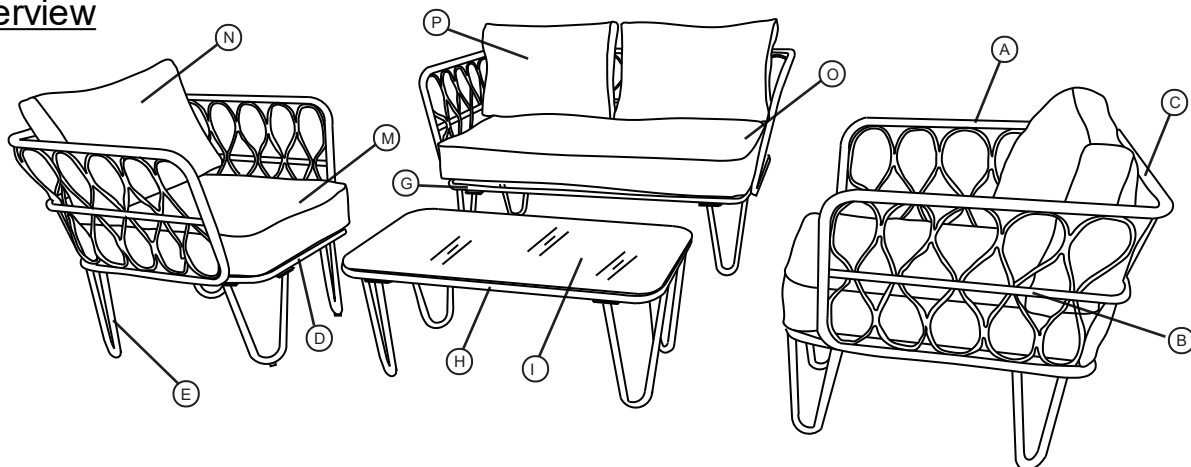Parts List

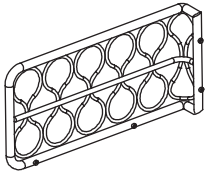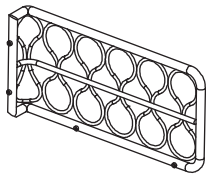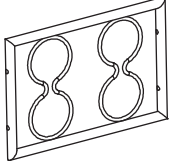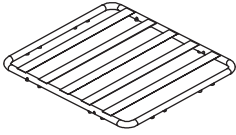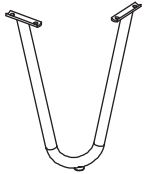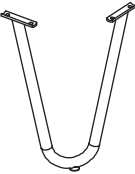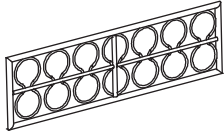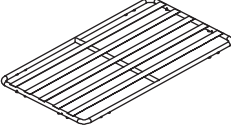Note: All parts of the screws should not be completely tightened the first time please tighten all screws after all parts are installed.

Overview




				
A 3PCS	B 3PCS	C 2PCS	D 2PCS	E 12PCS
				
E1 4PCS	F 1PCS	G 1PCS	H 1PCS	I 1PCS
				
M6*15	M6*35			
J 64PCS	K 26PCS	R 90PCS	Q 16PCS	L 1PCS
				
M 2PCS	N 2PCS	O 1PCS	P 2PCS	

Assembly-Sibgle Chair

Note: All parts of the screws should not be completely tightened the first time please tighten all screws after all parts are installed.


Step1

 Connecting C and A/B by using Kx4pcs/Rx4pcs.

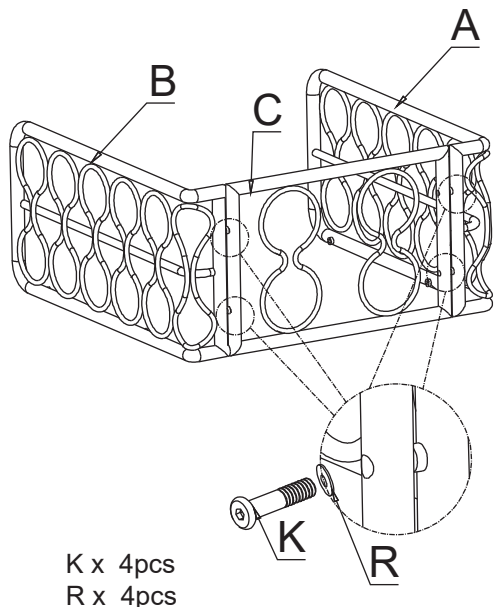


Step3

 Insert Q clockwise into E and fix it to D by means of J and R.

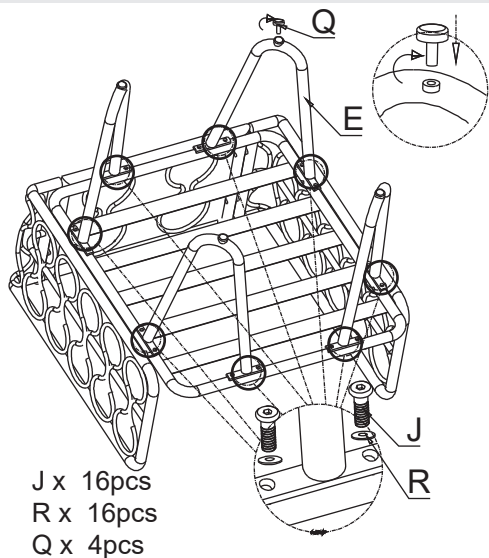


Step2

 Fix D and installed ABC through Kx4pcs/Rx4pcs.

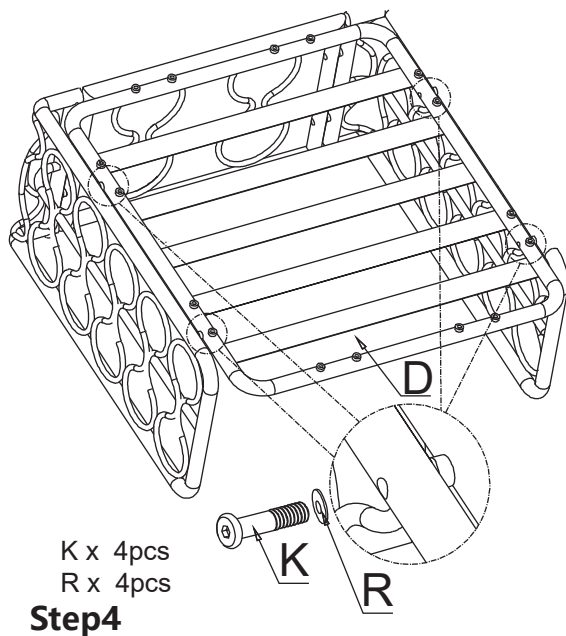

Step4

 Place N and M on the installed ABCD.

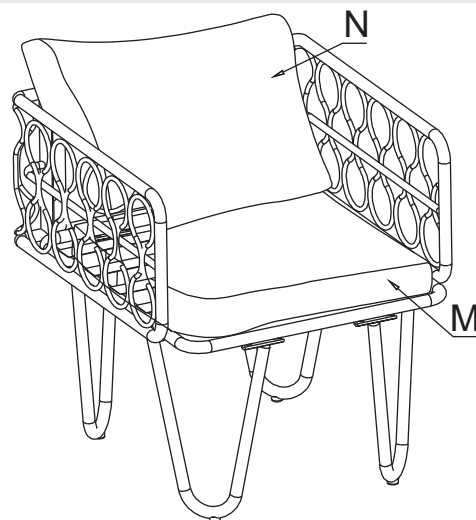


Please repeat the assembly of another chair according to the previous steps

Assembly-Loveseeat

Note: All parts of the screws should not be completely tightened the first time please tighten all screws after all parts are installed.


Step1

 On one side, use Kx2pcs/Rx2pcs to connect F to B.
On the other side, still use Kx2pcs/Rx2pcs to connect F to A.

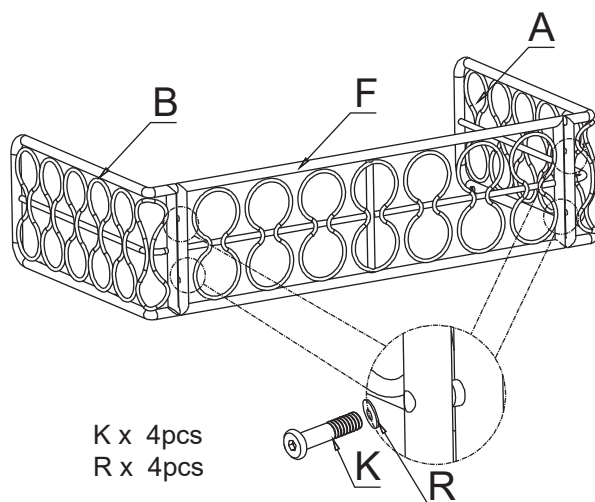


Step2

 Connect G to the installed ABF using Kx6pcs/Rx6pcs.

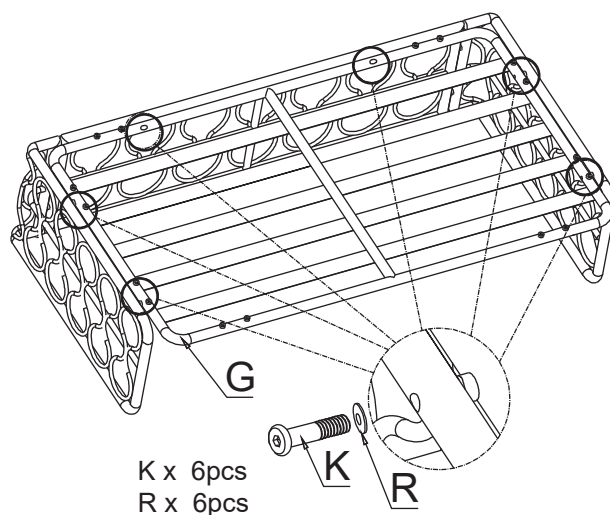


Step3

 Insert Q clockwise into E and fix it to G by means of J and R.

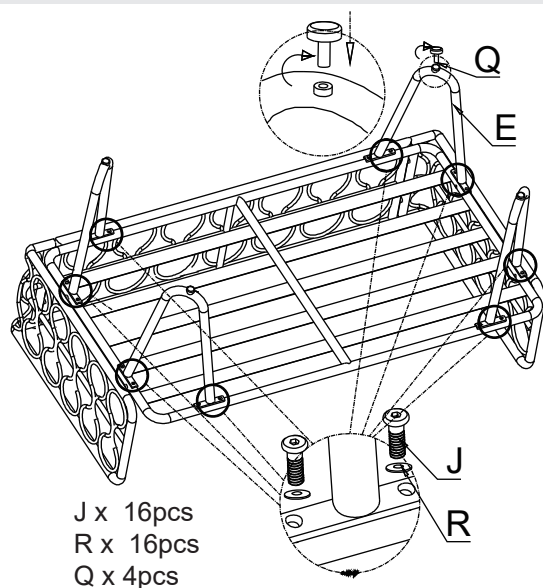

Step4

 Place P and O on the installed ABFG.

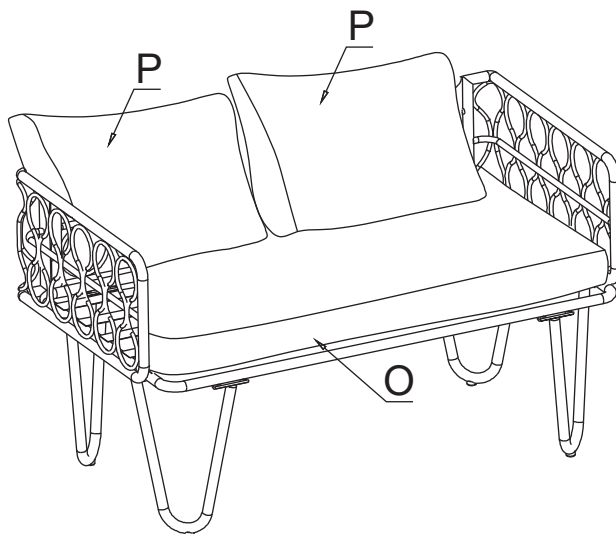


Assembly-Table

Note: All parts of the screws should not be completely tightened the first time
please tighten all screws after all parts are installed.


Step1

 Insert Q clockwise into E and fix it to H by means of J and R.

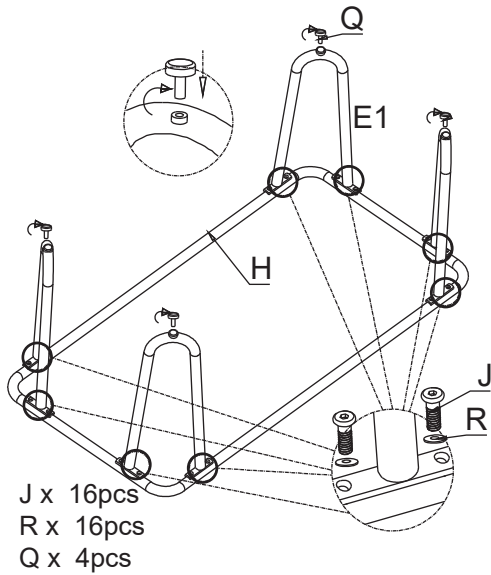

Step2

 Place I at the top.

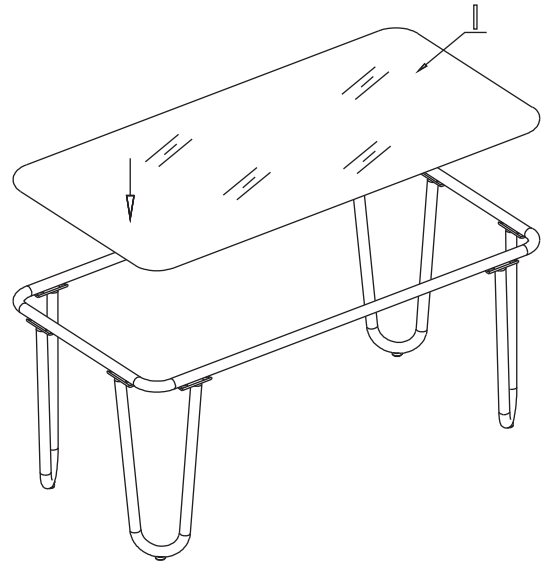



WARRANTY

**Outdoor furniture
1-year Warranty Program**

For a period of one (1) years after date of purchase, the Manufacturer will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between the Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase

The manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only and is not intended for commercial use. The Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by the Manufacturer). Warranty return is limited to only the single affected component.

This limited warranty covers only manufacturing defects and does not cover normal wear and tear, damage due to acts of nature (such as, but not limited to freezing or high winds), abuse or misuse, including chemical damage from suntan oil or other chemicals, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is void if the product is not used for its intended purpose. The Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure
2. Damages caused by retailer, shipper or installation error (such as scratches, dents, tears, chips, etc.)
3. Any part that only shows normal wear and tear on the surface, including debris, scratches, or material stretching and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.

General care & maintenance

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

**** If you need after-sales service, please provide the original purchase record and a brief description of the problem. Please also provide your email address or mobile number***