 


USER MANUAL

 
CEILING FAN LIGHT

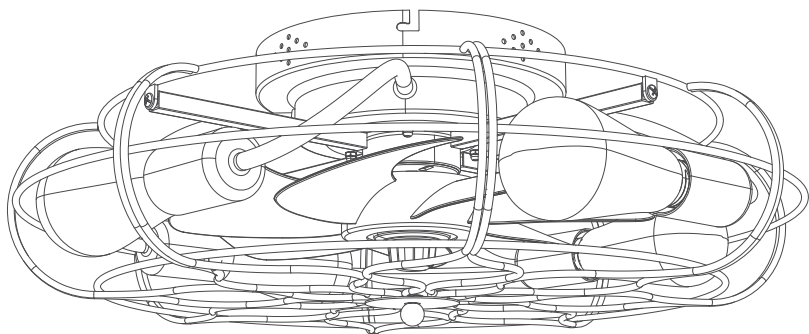

Important: Please read and understand this manual before any assembly. Before assembling this product, please ensure that all parts are in place. Compare the details with the product display presentation. If you have any questions, don't hesitate to contact us.

Remote control instructions:

1. Install AAA batteries (Battery not included) . If the remote control is not used for a long time, please take out the battery to prevent battery damage .
2. The remote control function is shown below .

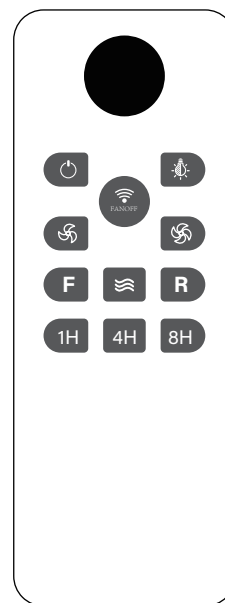

- | | | |
|------------------------------|------------------------------|-------------------------|
| Main switch | Lights witch | Fan off+Pair code |
| wind speed- | wind speed+ | Natural flow |
| F Fan rotates forward | R Fan rotates reverse | |
| 1H Timing 1 hour | 4H Timing 4 hour | 8H Timing 8 hour |

Battery type: AAA(not include)

Warm Tips:

If your remote control does not control the fan and lights, please follow the steps below to undo the fault.

 
 
 
 
 
 
 
Step 1: Replace the battery of the the remote control.

Step 2: Try to program the remote control.

- > turn off the main switch that controls the ceiling fan light and turn it on again
- > press and hold the Fan off button of the remote control panel simultaneously within 5 seconds
- > if you hear a beeping sound, the code is matched successfully.

Attention:

1. To avoid potential slectric shock, the home main power supply must be shut off before installation.
2. Please pay attention to check whether the wires were in good condition before installation.
3. All wiring must be carried out under national and specifications, please hire or consult a licensed electrician to ensure that the live, neutral, and ground wires are connected correctly.
4. Please don' t refit this ceiling fan light fixture, which may damage it.
5. All screws must be checked and re-tightended if necessary before operating the ceiling fan light fixture.

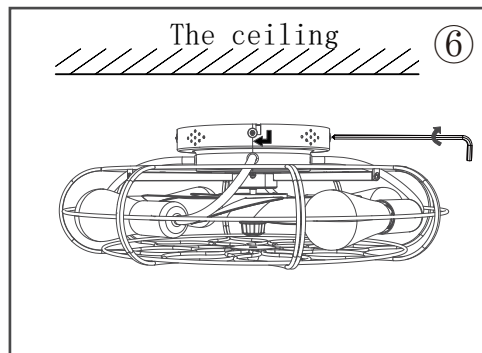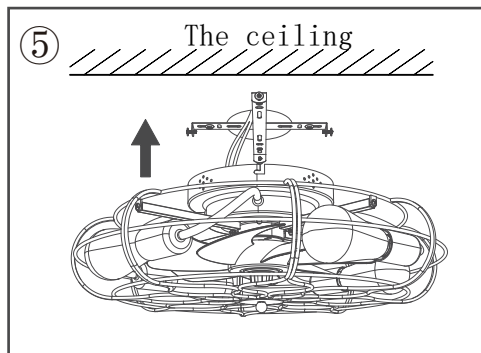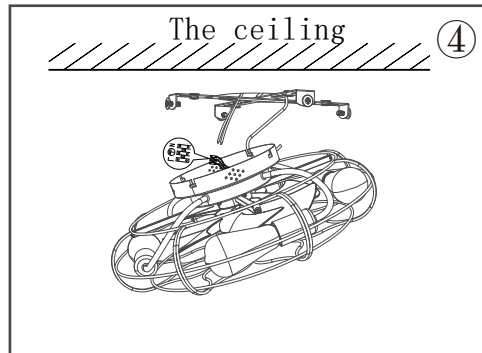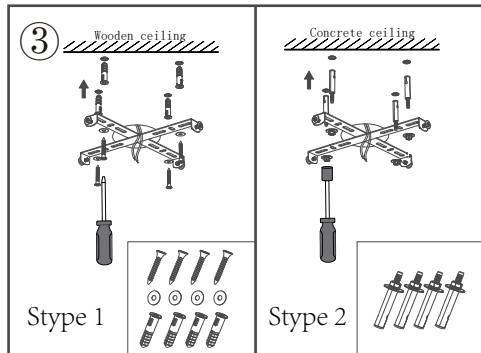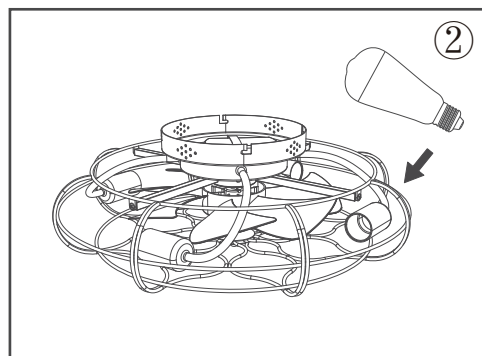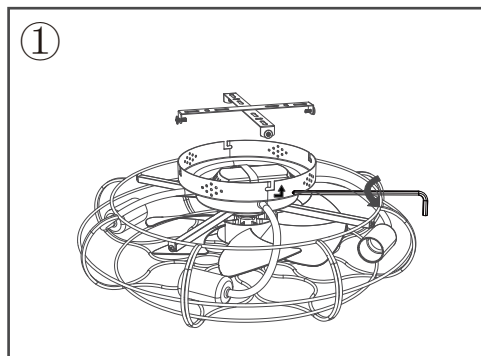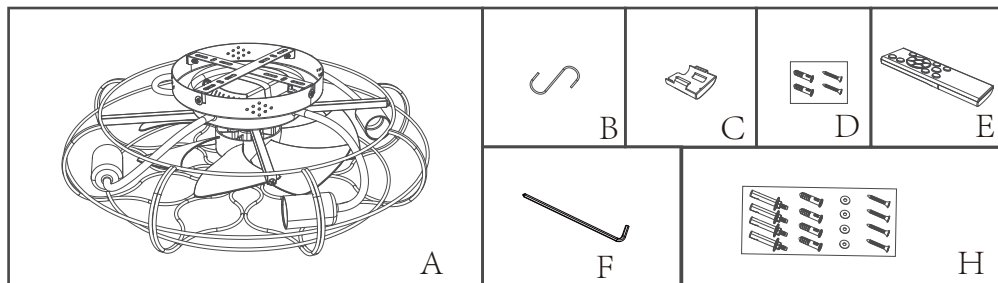

Preparations:

1.Prepare the required tools.

2.Turn off the switch.

3.Put all the parts in order.

Star-head Screwdriver	
Wire-stripping Pliers	
Step ladder	
Electrical Tape	

Installation procedure:

Step1. Loosen the screws which connected the hanging plate and light fixture, but don't take them off, then take the hanging plate from the ceiling fan light fixture.

Step2. Install bulbs.(Five bulbs include,one of them is a spare.)

Step3. Marking/locating the hole position on the ceiling by borrowing the hole position of the hanging plate.

Step4. If you have a wooden ciling, use type 1 screws; if you have a concrete ceiling, use type 2 screws, then according to the size of the screws type, punch suitable size holes at the hole marks, then install the hanging plate.

Step5. Connect wires:Connect the black live wire marked "L" on the receiver to the live wire (typically black) on the socket box.Connect the white neutral wire marked "N" on the receiver to the neutral wire (typically white) on the socket box. Connect the ground wire (bare wire) from the base of the ceiling fan base with the ground wire (bare wire) of the socket box.(Hang the lamp on the hanging plate with S-hook then connect wires. Take off the S-hook after connect wires and proceed to the next step.)

Step6. Assemble the ceiling fan light fixture to the hanging plate, tighten the screws, and complete the installation.

Specifications

Product Name	Ceiling Fan Light	Item Size	19.7in*6.5in
Input Voltage	90V-260V	LED	max32W
Dimensions	10*10ft-13*13ft	Valid Remote Distance	10M
Battery Type	AAA*2	Rotating Speed(rpm)	503-853r/min
Reversible	Yes	Fan Timing	1H/4H/8H