 
 
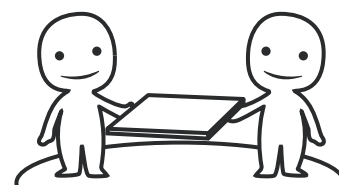 


Wardrobe

 
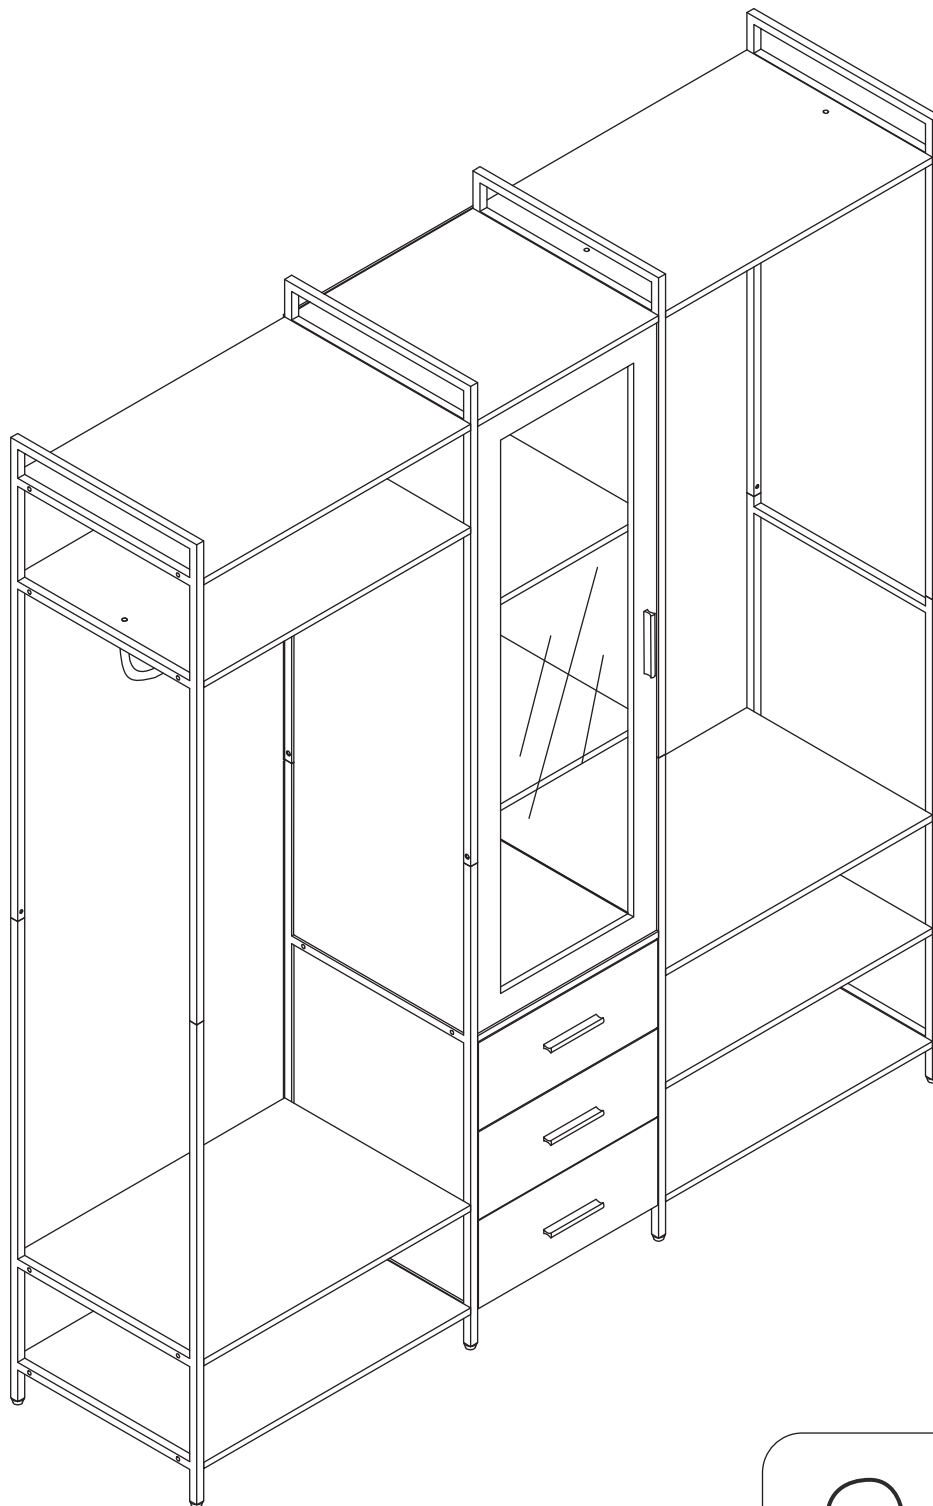 


ASSEMBLED BY 2 ADULTS

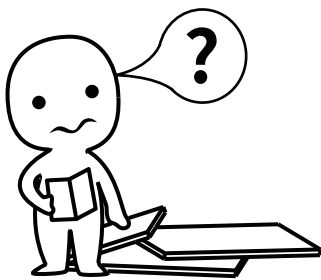


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

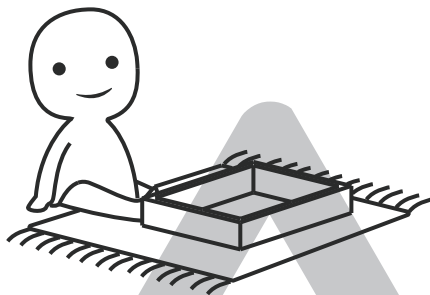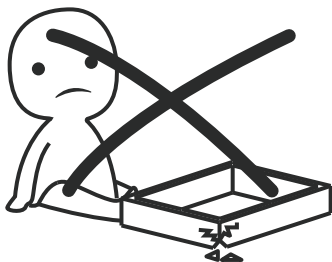



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

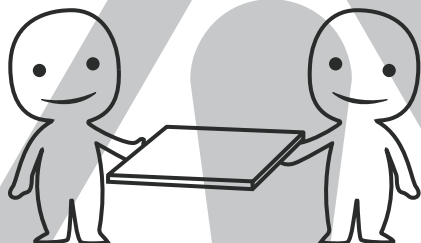

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

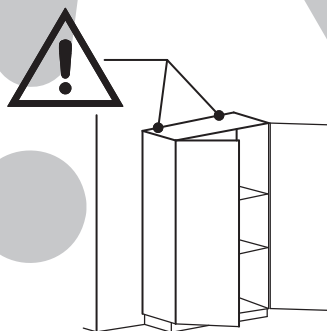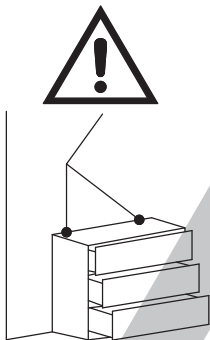

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

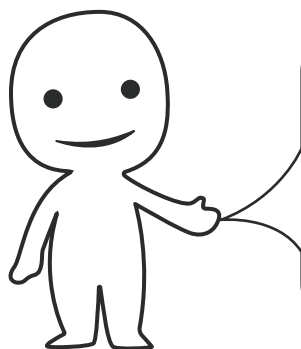


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 20




M6 x 40 mm

B x 20



Ø15 x 10 mm

 C x 32



Ø5 x 38 mm

D x 72



Ø3.5 x 10 mm

E x 22



M6 x 10 mm

F x 4



M6 x 30 mm

G x 8



M6

H x 8



I x 1

 


J x 2



M4 x 18 mm

K x 4




L x 12




M 3.5 x 35 mm

 M x 3

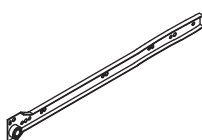


14"

 N x 3

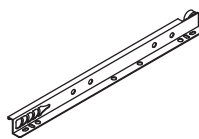


14"

 O x 3

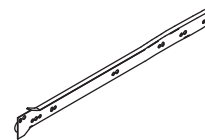


14"

 P x 3

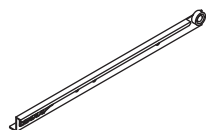

14"

 Q x 2

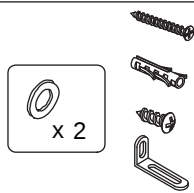


R x 6



M4 x 15 mm

 S x 3



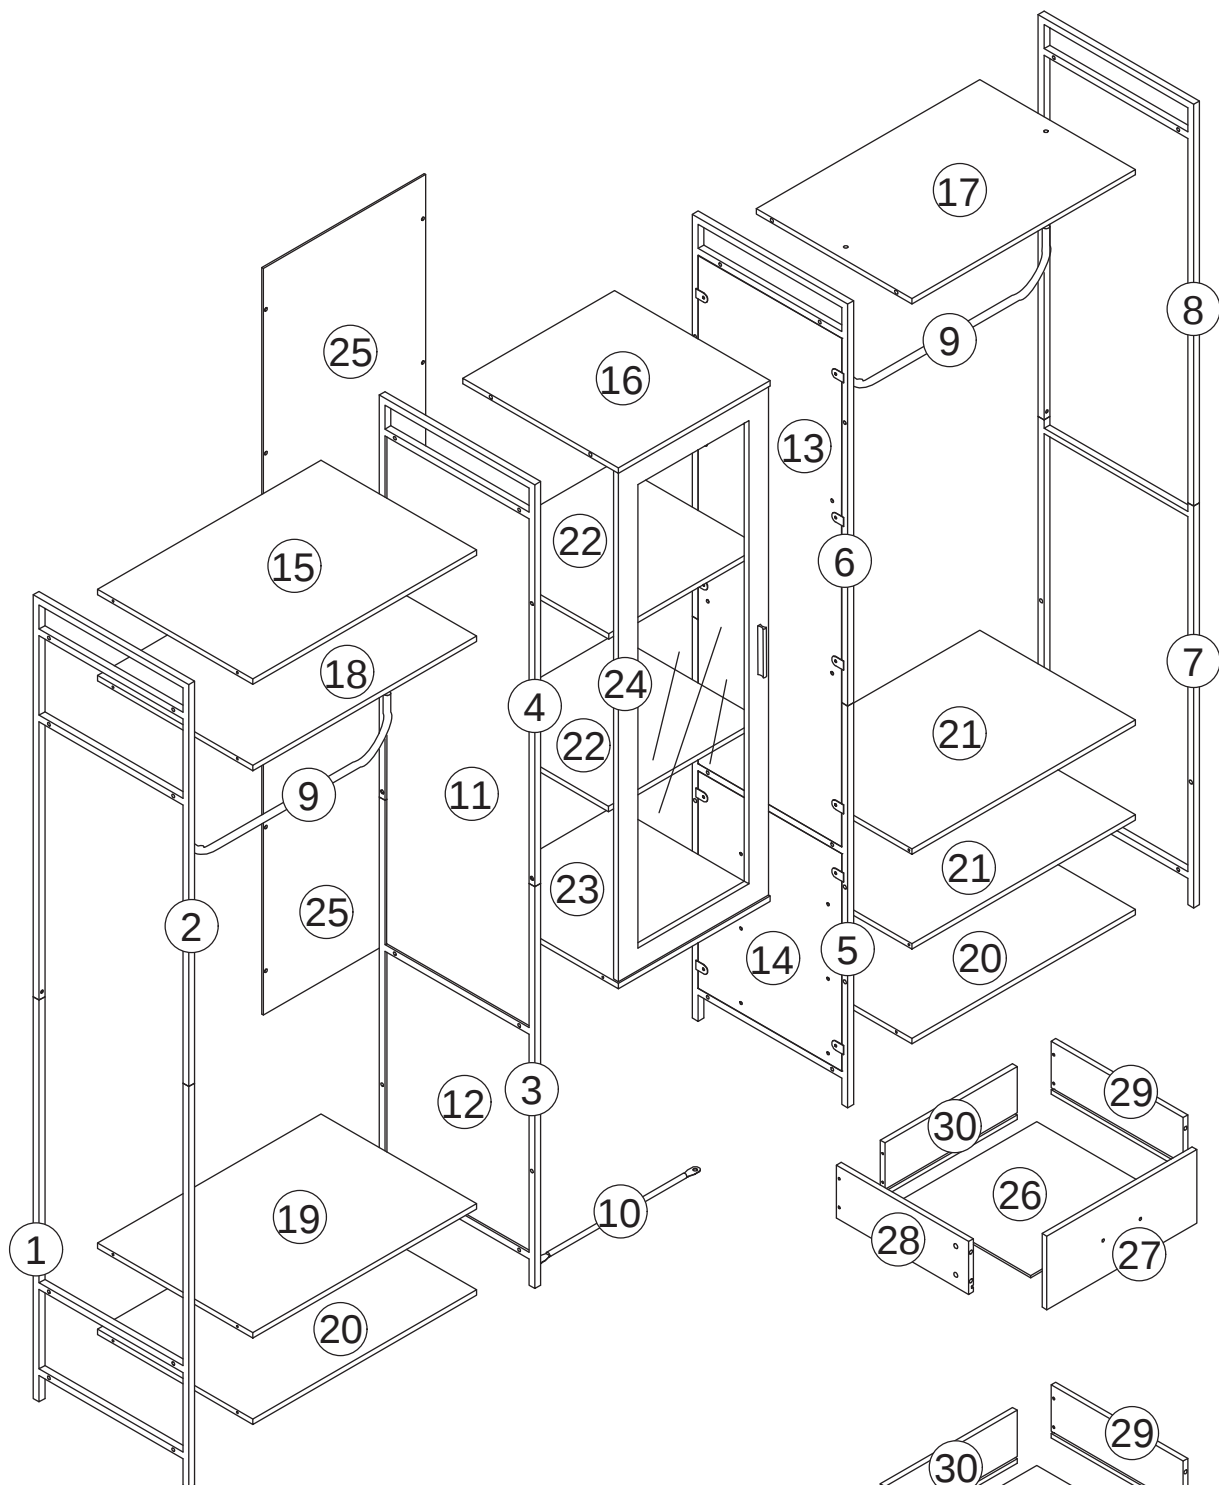




⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

   *This is a permanent label.
Do not remove!*

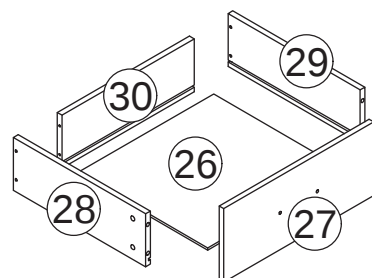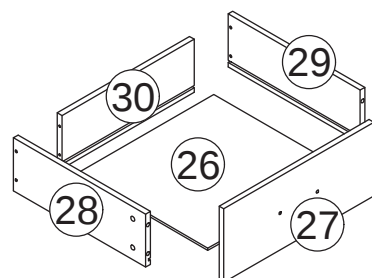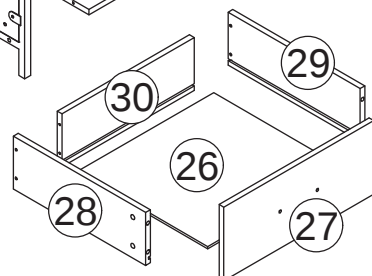


1


E x 4





 
M6 x 10 mm



 Fix part 3 to part 4 with screw(E) as shown.
Fix part 5 to part 6 with screw(E) as shown.



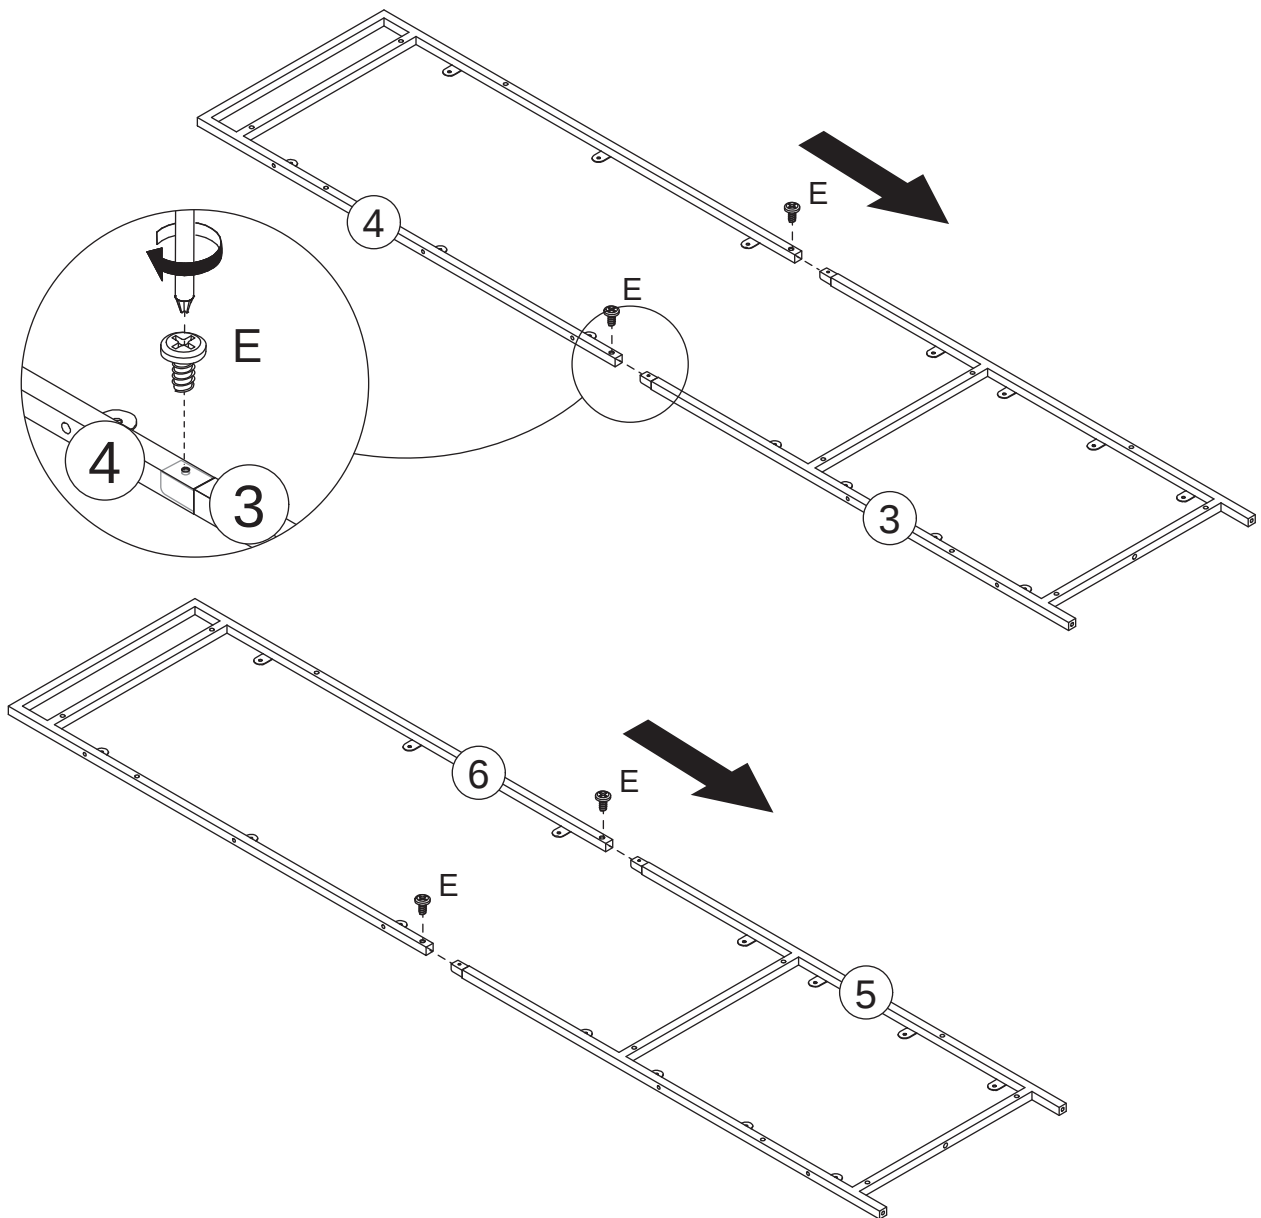


2

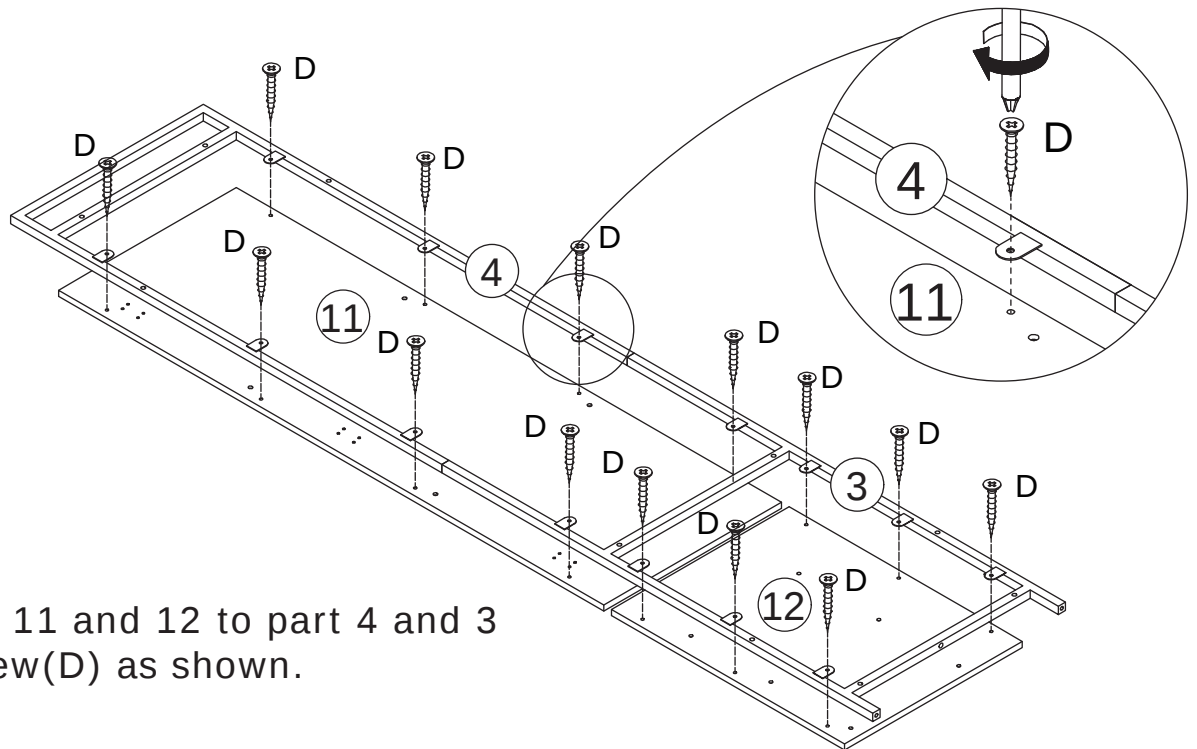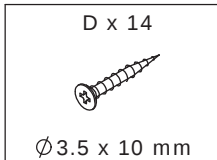   




Fix plate 11 and 12 to part 4 and 3 with screw(D) as shown.

   3

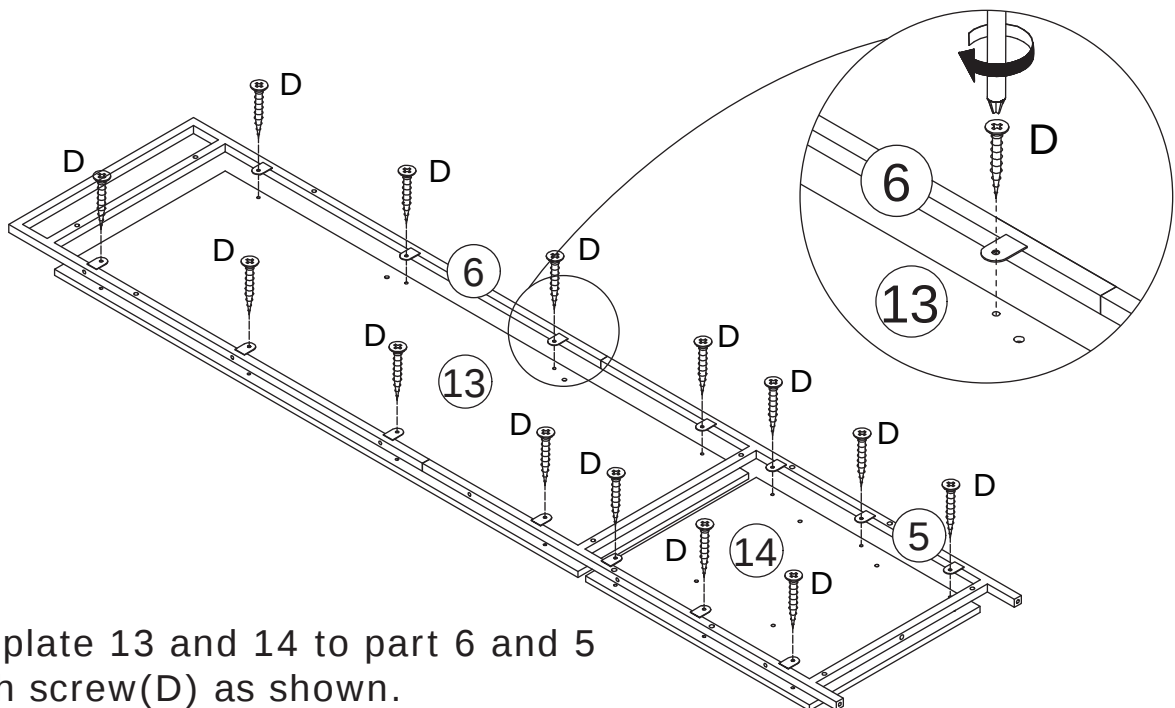
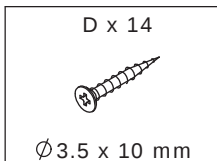


Fix plate 13 and 14 to part 6 and 5 with screw(D) as shown.

 
 
 
4

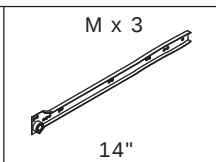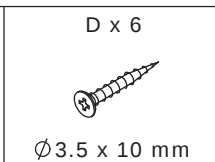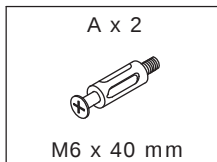

 
 
Insert quickfit screw(A) into part 4 with a screwdriver as shown.

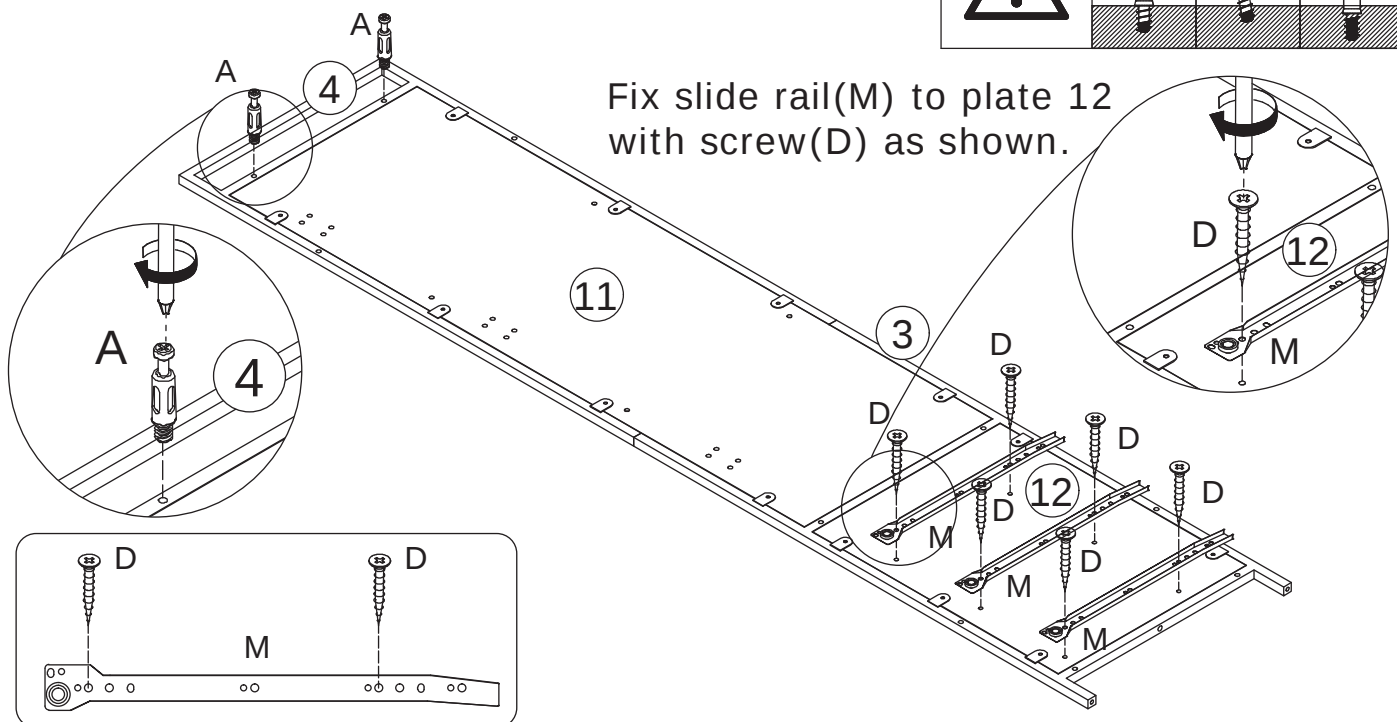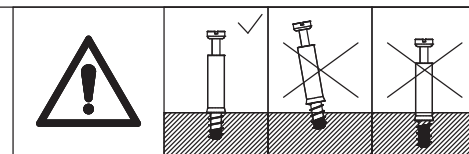

5

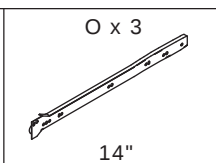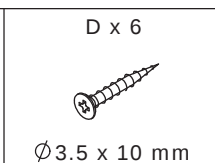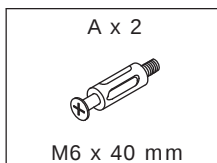   

  Insert quickfit screw(A) into part 6 with a screwdriver as shown.

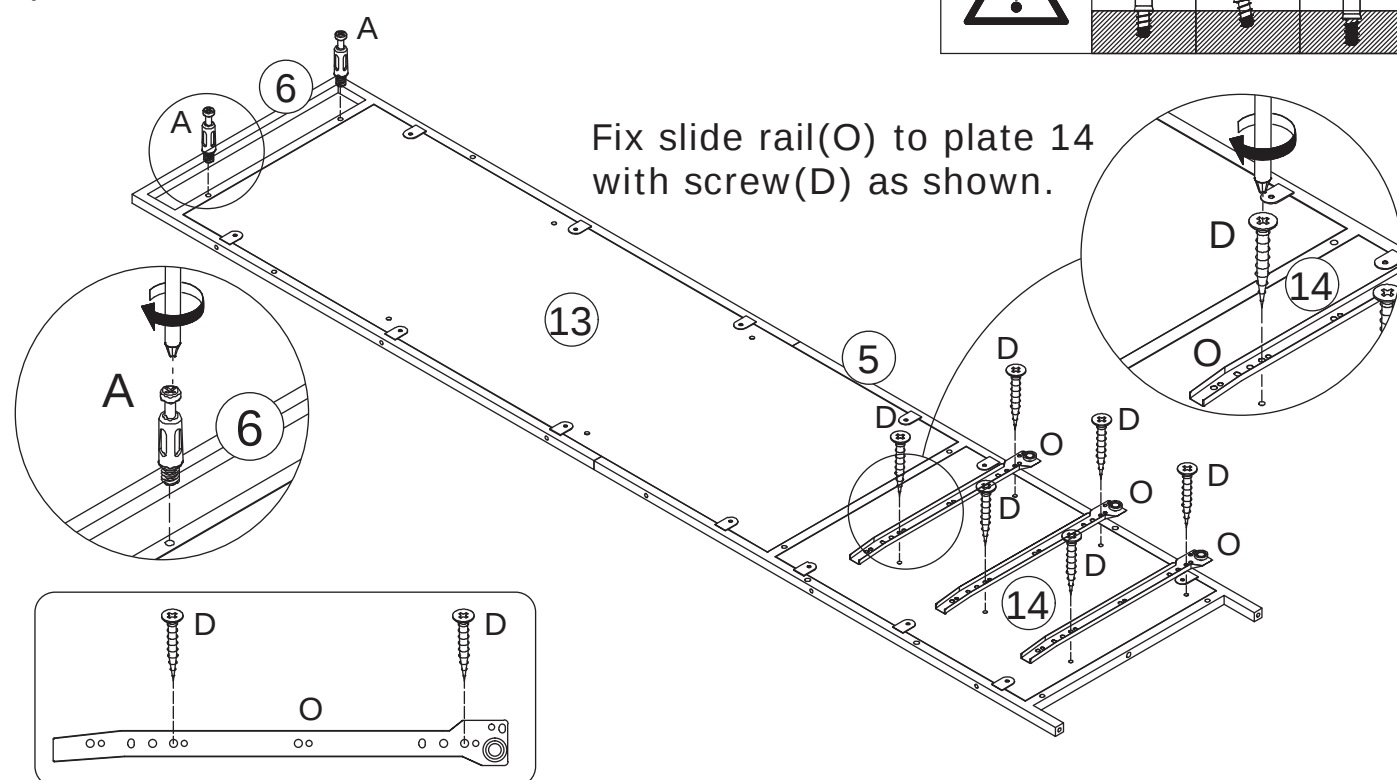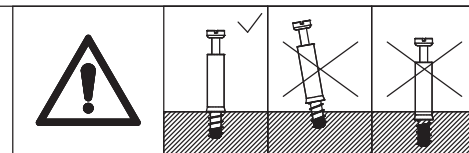

6

B x 4



Ø15 x 10 mm

C x 4



 
 
 
 
 
Ø5 x 38 mm

D x 2





Ø3.5 x 10 mm


I x 1

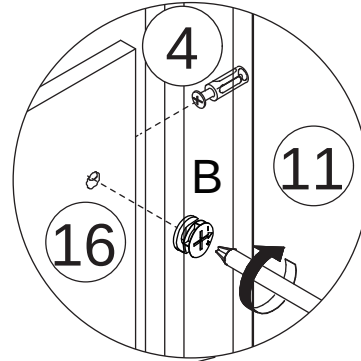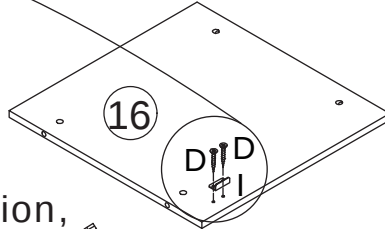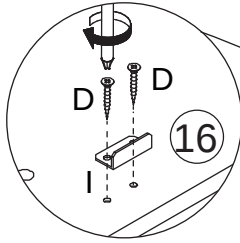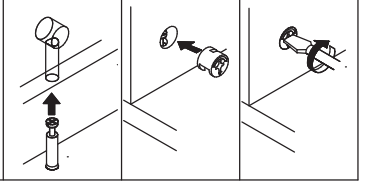

  Please pay attention,
the holes should
be facing to you.

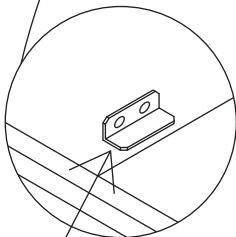
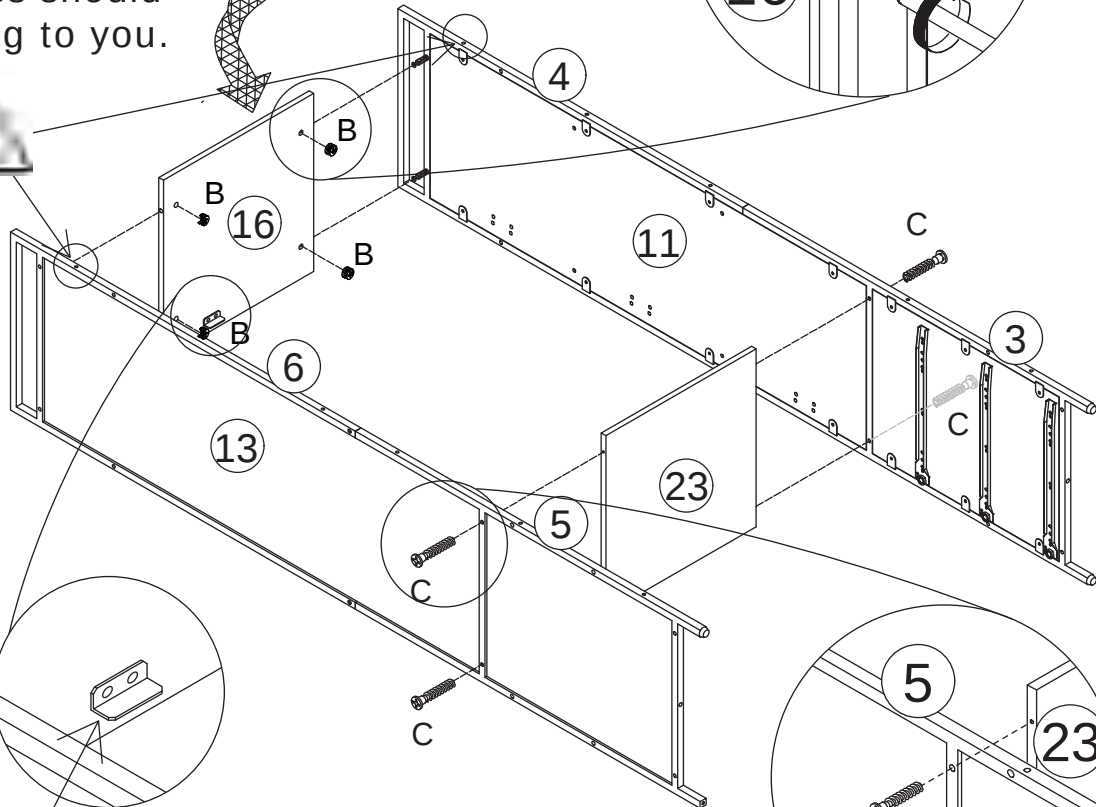


Iron sheet facing down

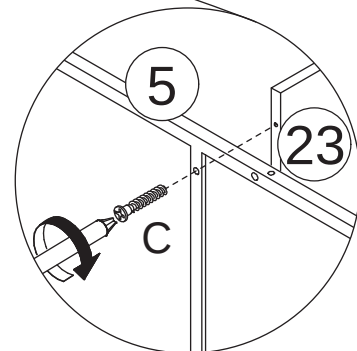 


Fix Iron sheet(I) to plate 16 with screw(D) as shown.
Connect the two components with plate 16,
add cam lock(B) into plate 16 and turn clockwise
to tighten as shown.
Connect the two components with plate 23
and fix using screw(C) as shown.


 
 
7

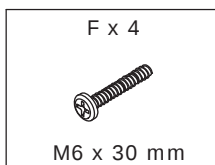

 Fix part 9 to plate 17 and 18 respectively with screw(F) as shown.



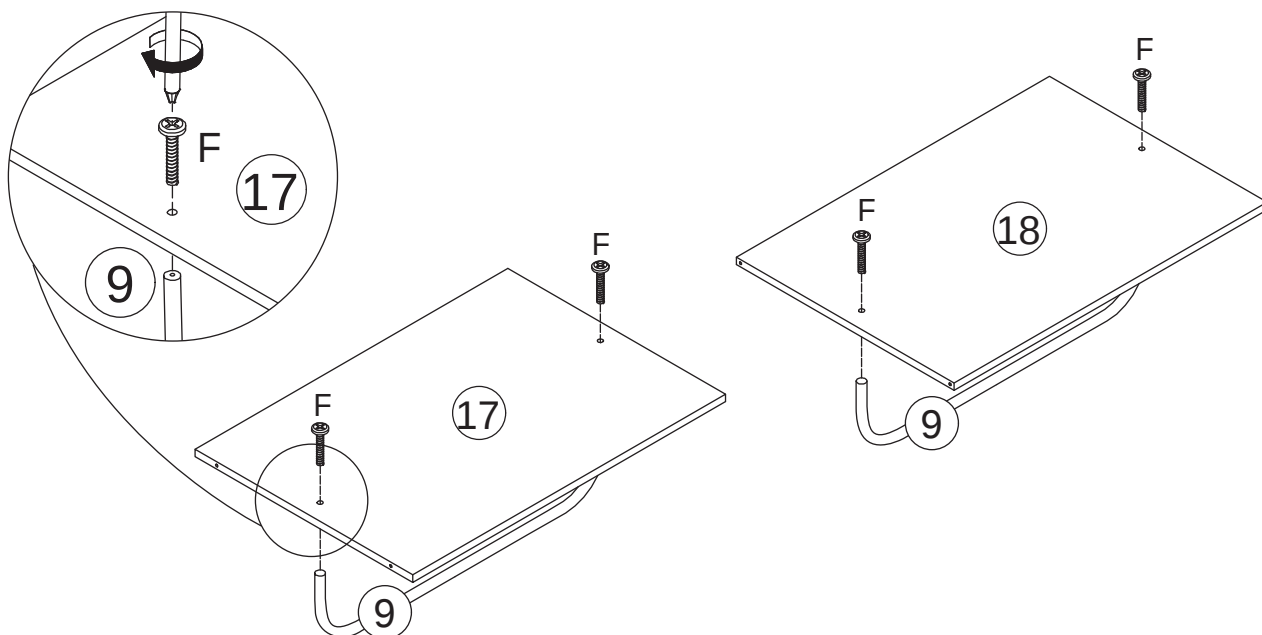


8

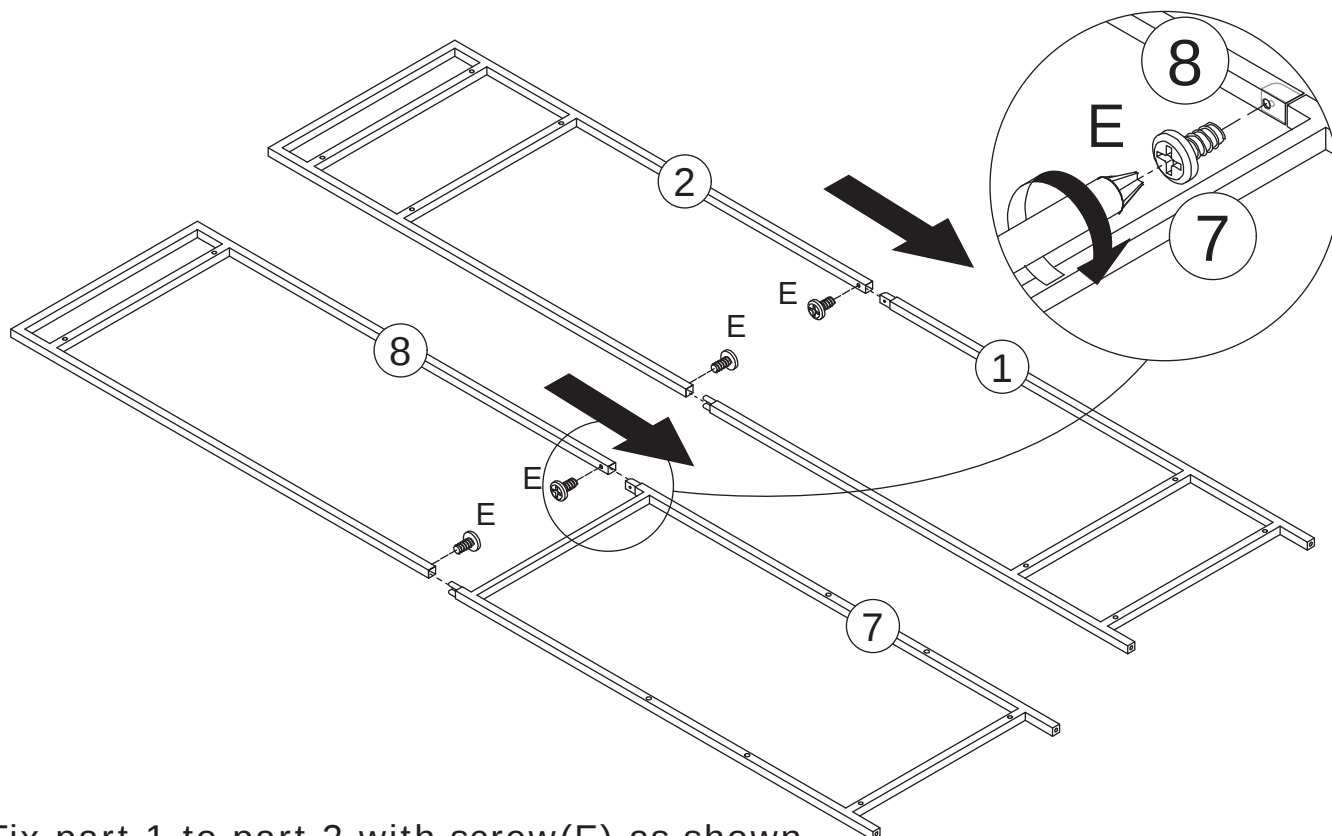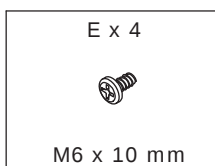   


Fix part 1 to part 2 with screw(E) as shown.
Fix part 7 to part 8 with screw(E) as shown.

   9

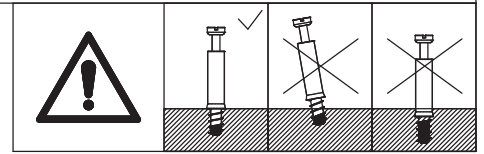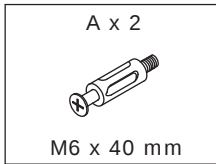

 Insert quickfit screw(A) into part 6 with a screwdriver as shown.

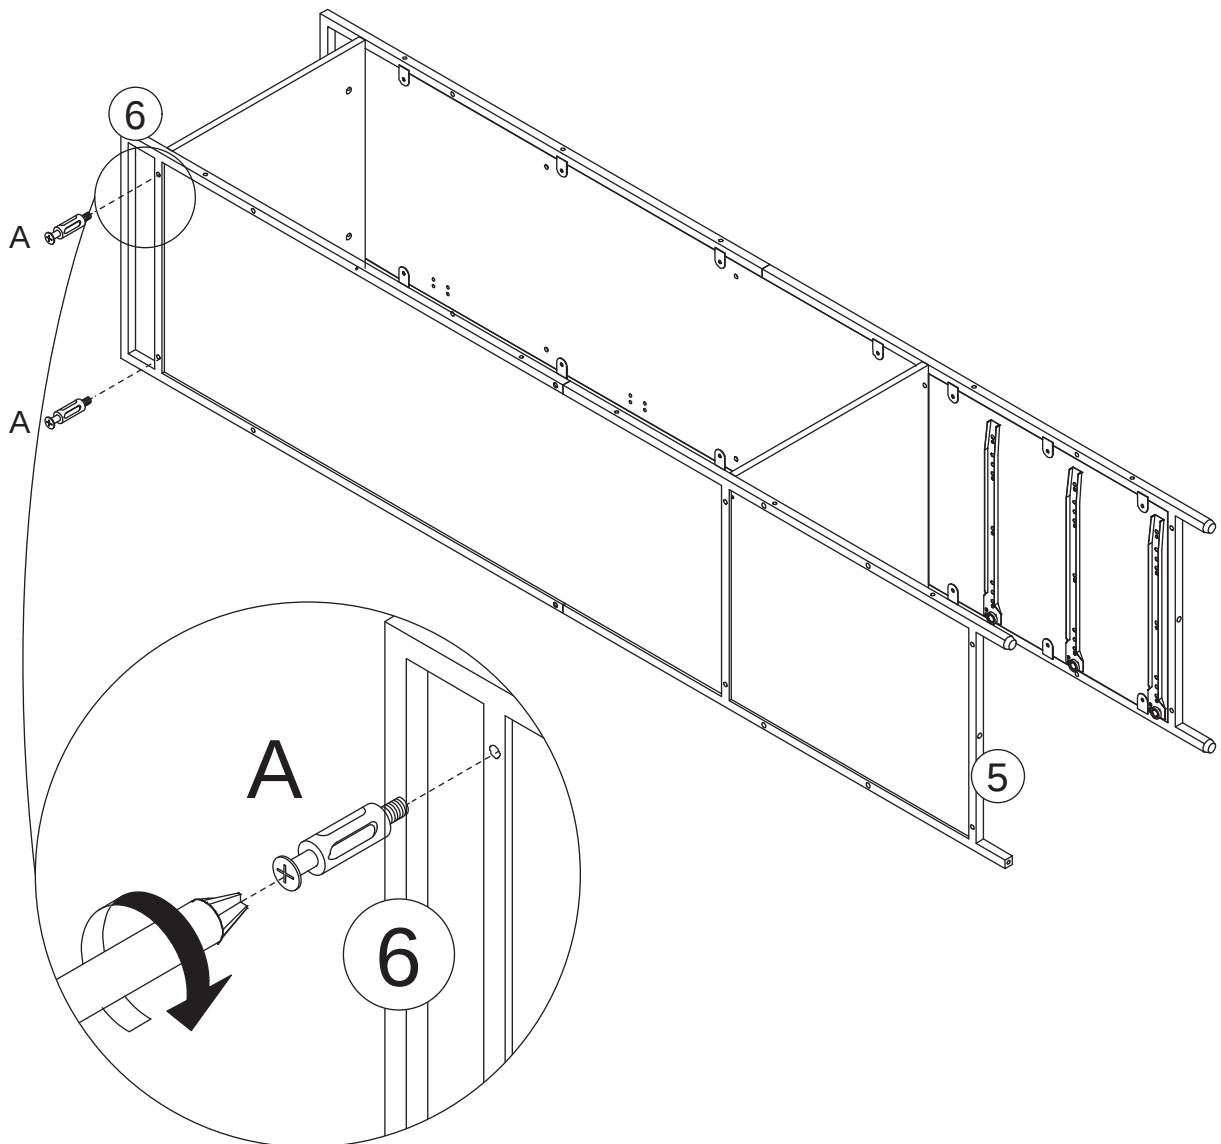

10

B x 2

 
 
 
 


Ø15 x 10 mm


C x 14




Ø5 x 38 mm



 Attach plate 17 to part 6, turn cam lock(B) clockwise to tighten at first. Fix plate 20 and 21 to part 5 with screw(C) as shown.

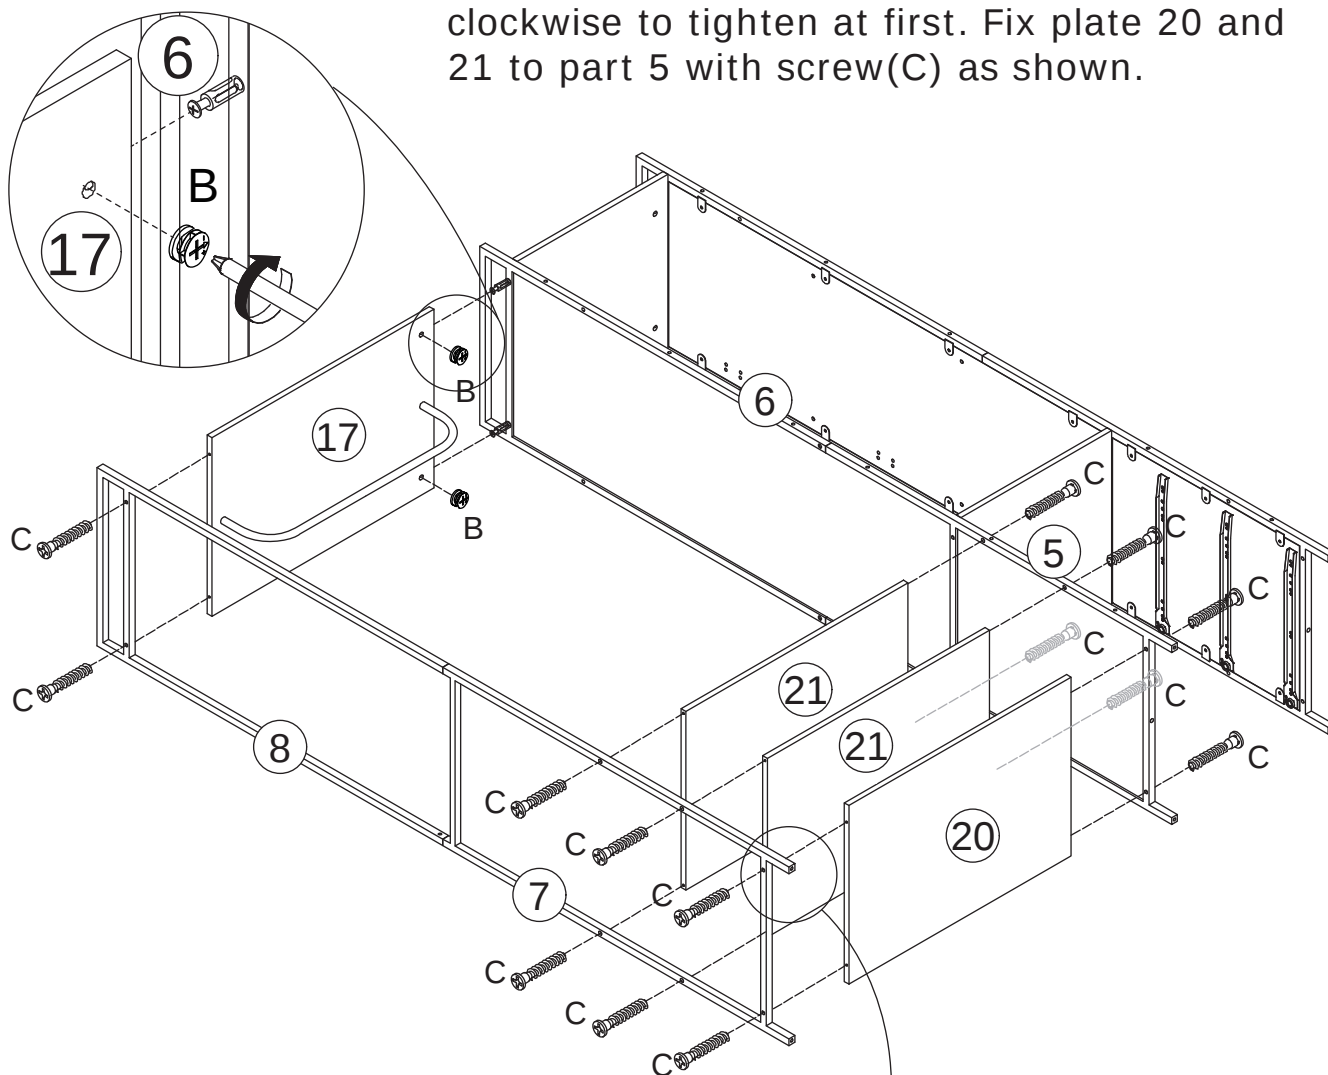

 Fix part 8 and 7 to plate 17, 20 and 21 with screw(C) as shown.


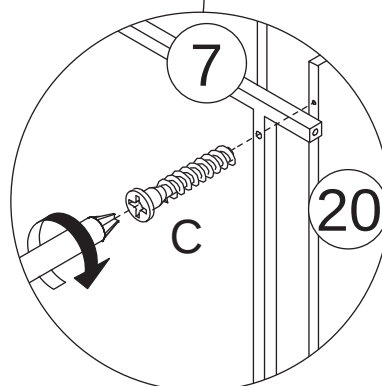


11


A x 2



  M6 x 40 mm

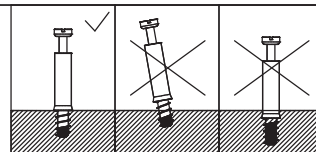

 Insert quickfit screw(A) into part 4 with a screwdriver as shown.

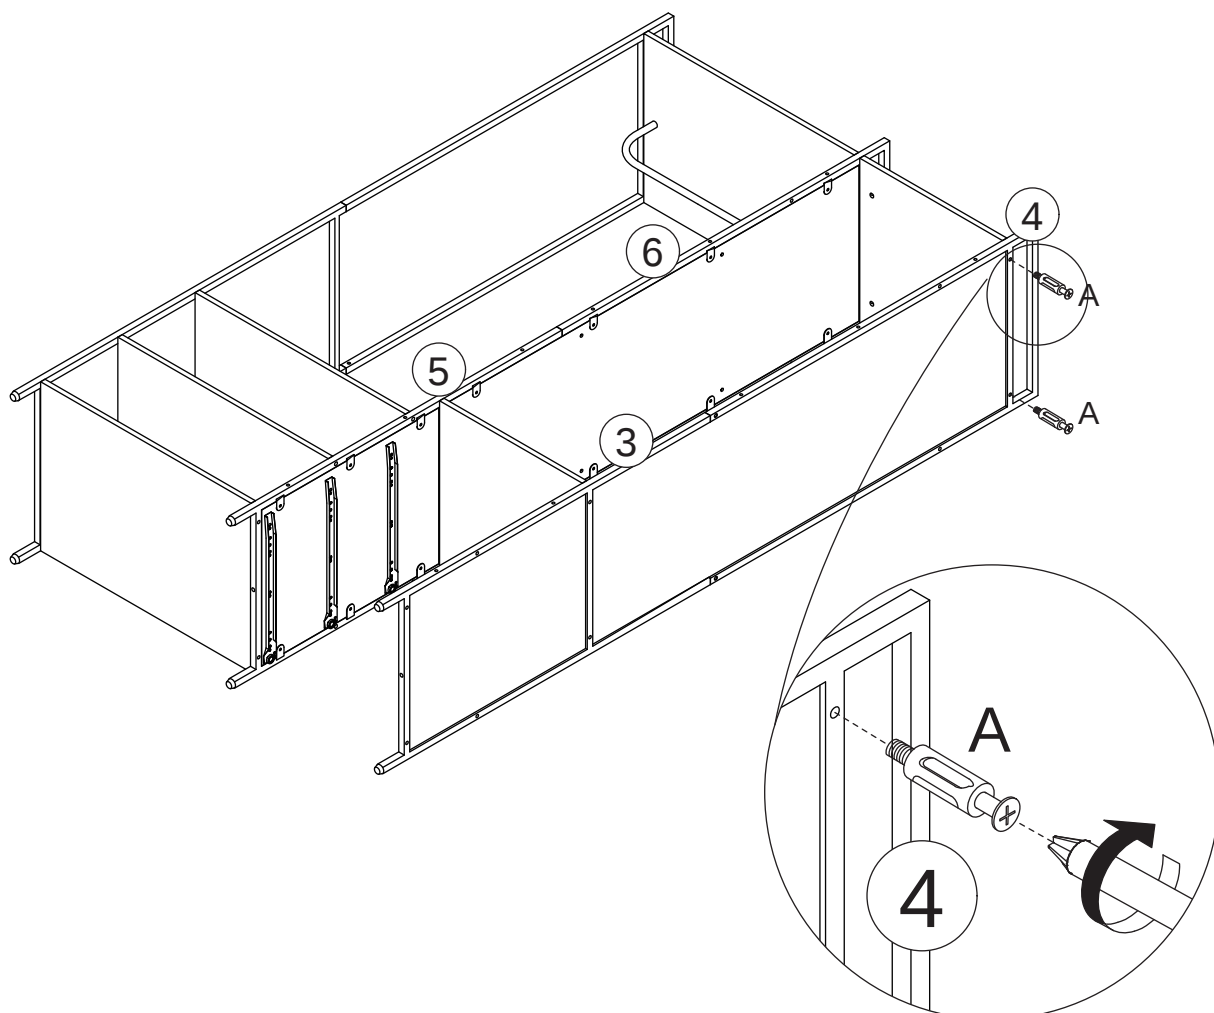

12

B x 2

 
 
 
 


Ø15 x 10 mm




C x 14



Ø5 x 38 mm



   Attach plate 15 to part 4, turn cam lock(B) clockwise to tighten at first. Fix plate 18, 19 and 20 to part 4 and 3 with screw(C) as shown. Fix part 1 and 2 to plate 15, 18, 19 and 20 with screw(C) as shown.

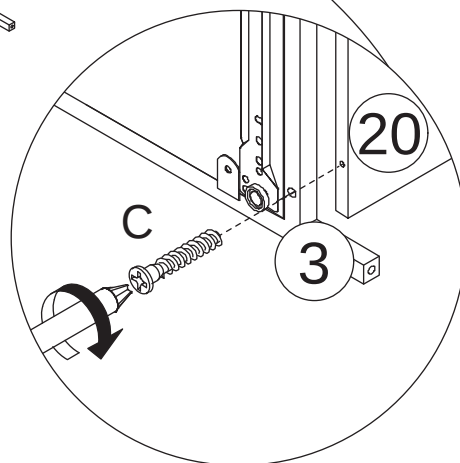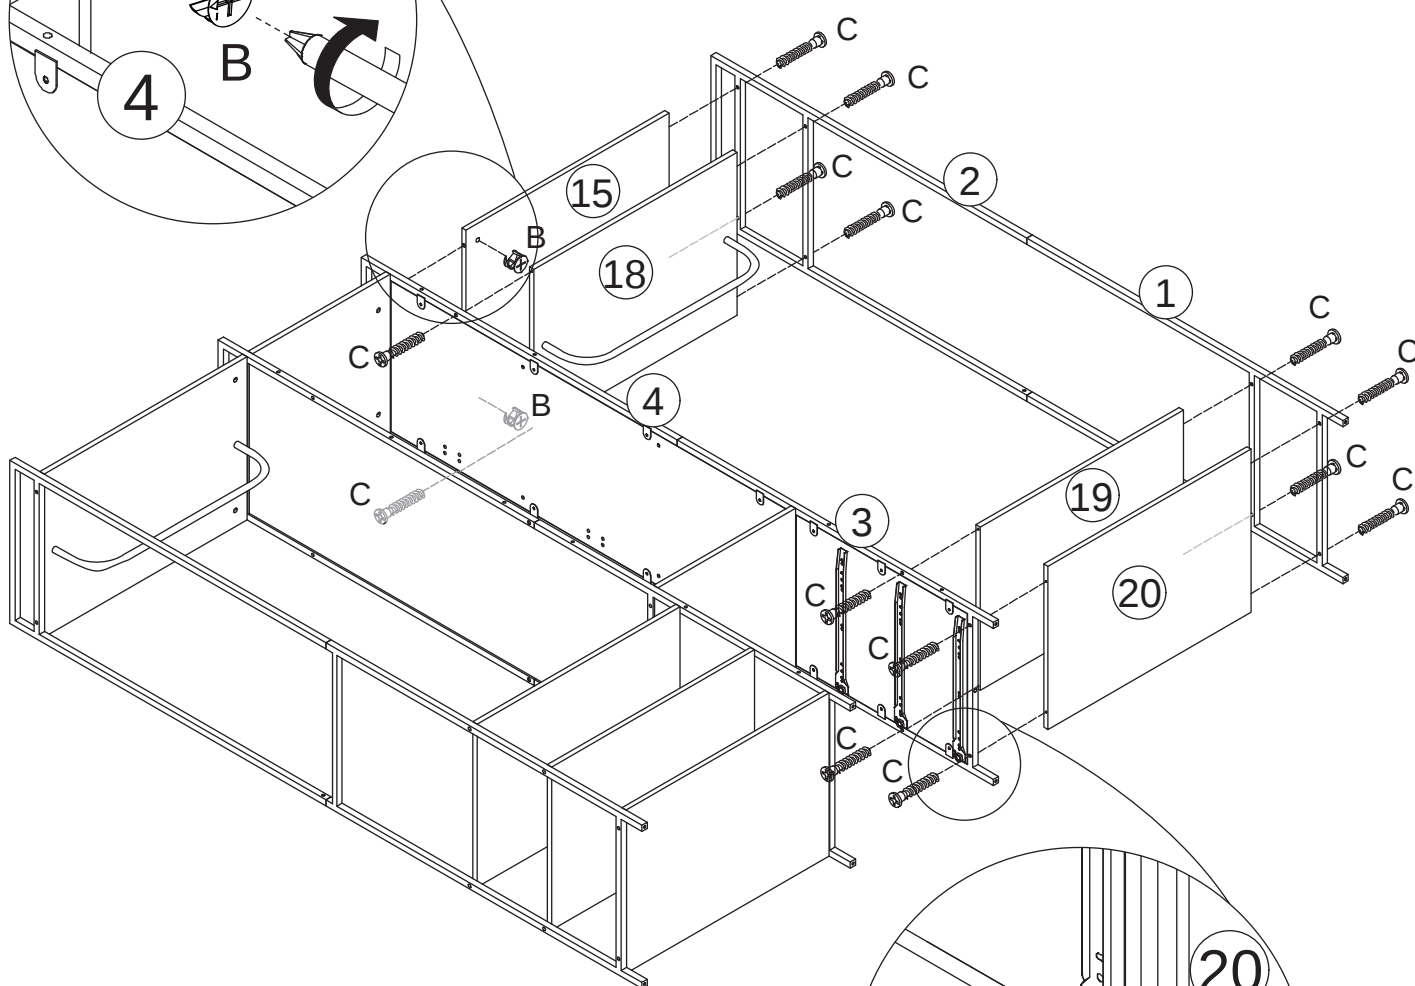
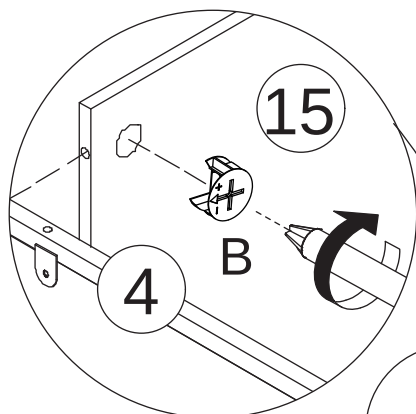


13



E x 14



  M6 x 10 mm

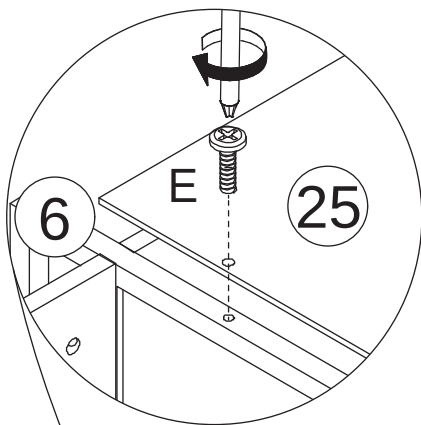

  Fix back plate 25(x2) to part 3, 4, 5 and 6 with screw(E) as shown.
Fix part 10 to part 3 and 5 with screw(E) as shown.

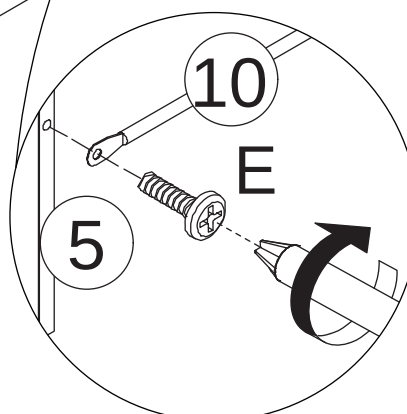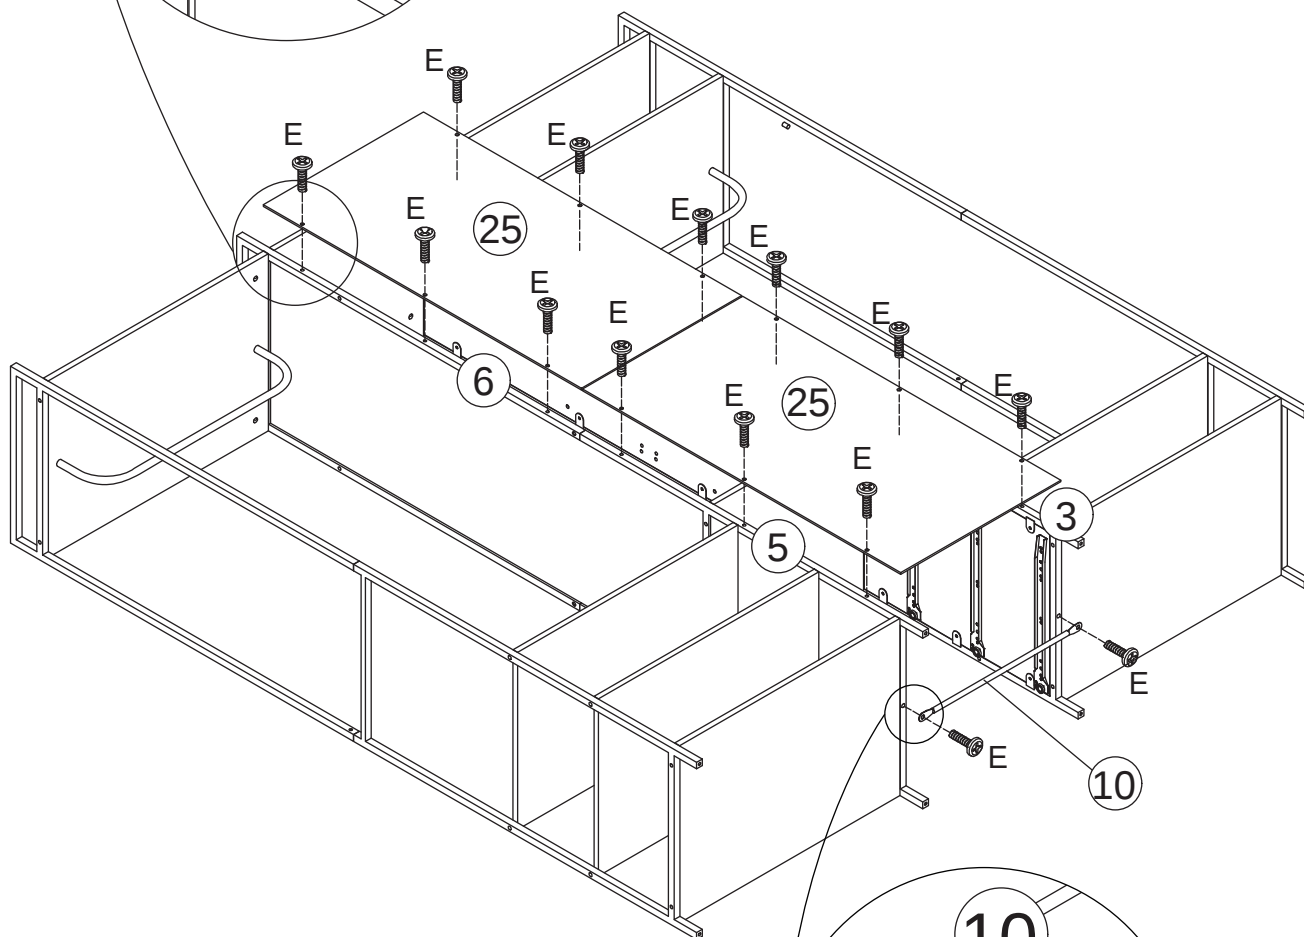


14

G x 8




M6

 Rotate foot peg(G) into bottom.

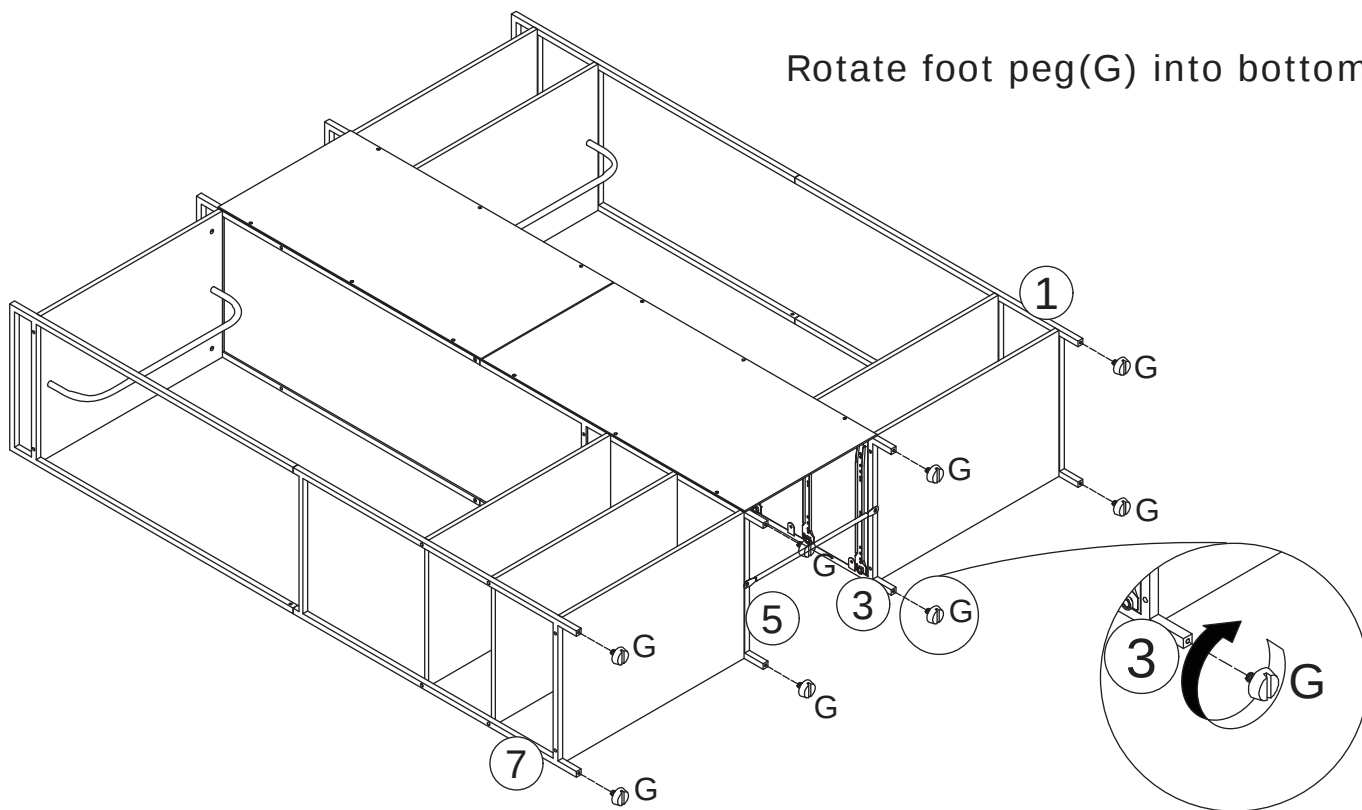



15

 H x 8

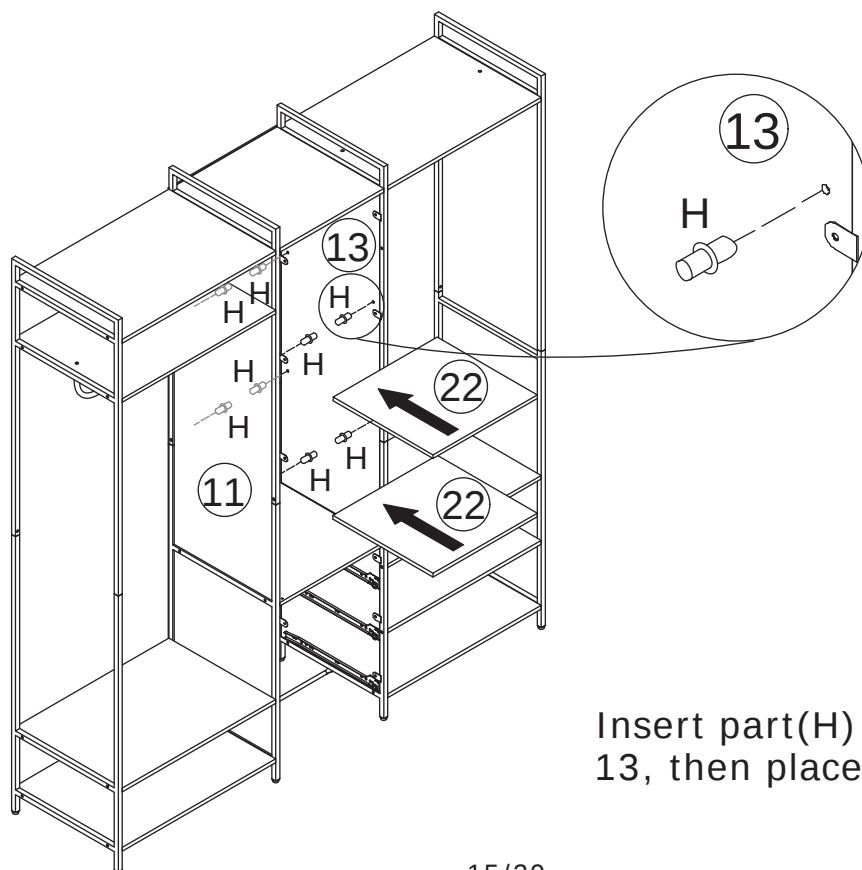


Insert part(H) into part 11 and 13, then place shelf 22 in.

  16


D x 6  Ø 3.5 x 10 mm	S x 3 	J x 2  M4 x 18 mm	K x 1 	
---	--	--	---	---

Fix handle(K) to plate 24 with screw(J) as shown.

 
Fix hinge(S) to plate 24 with screw(D) as shown.

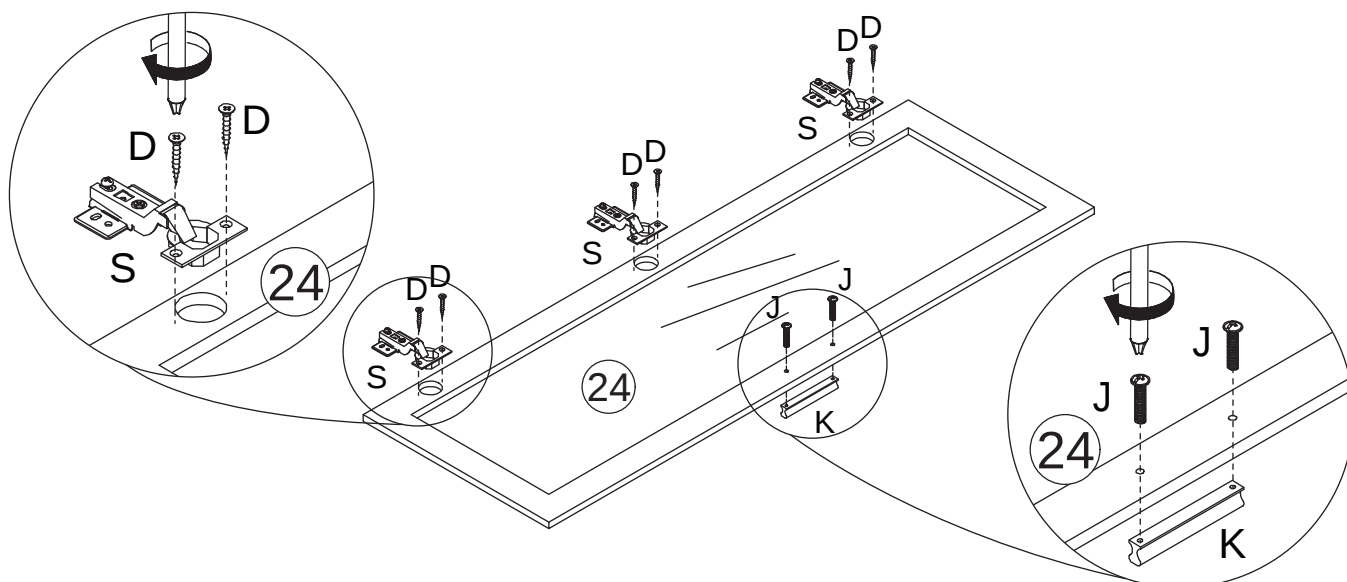

17

 D x 12  Ø 3.5 x 10 mm	
--	---

 Connect door plate 24 with plate 11 by fixing hinge with screw(D) as shown.

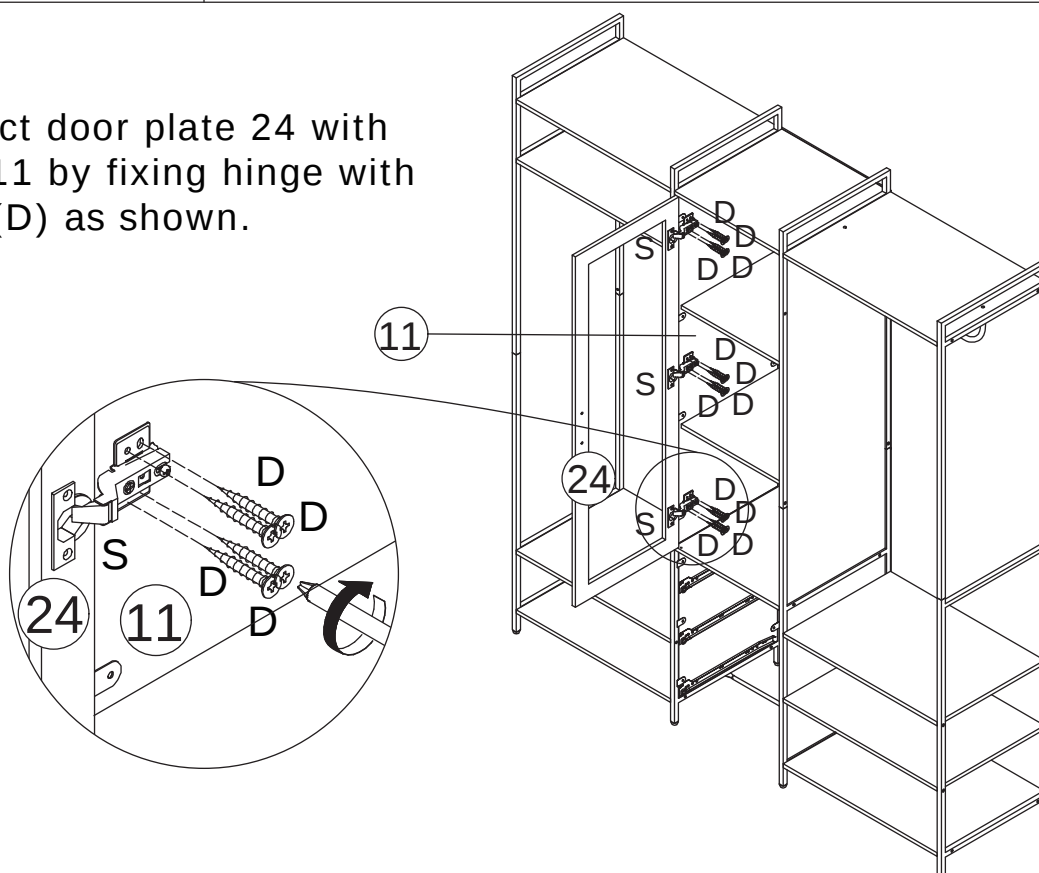

18

A x 12



M6 x 40 mm

B x 12



Ø 15 x 10 mm

L x 12



 
 
 
M3.5 x 35 mm

R x 6






M4 x 15 mm




K x 3

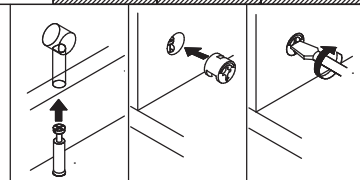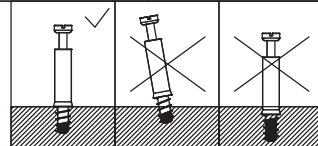

   Insert quickfit screw(A) into plate 27, fix handle(K) with screw(R) as shown.

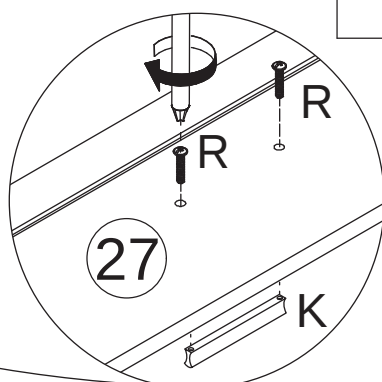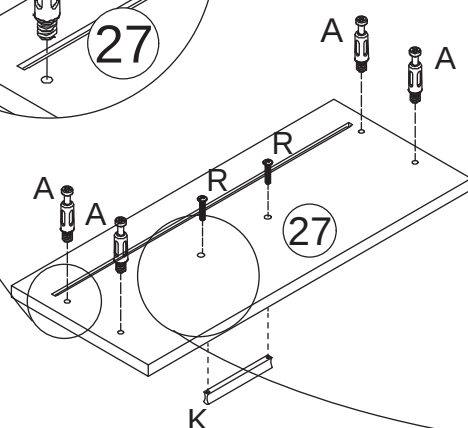
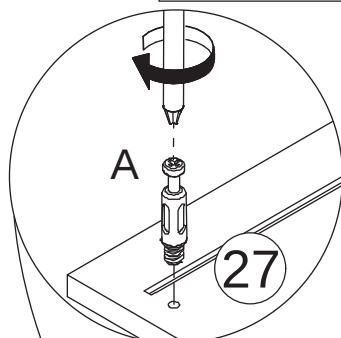


   Fix plate 28 and 29 to plate 30 with screw(L) as shown.

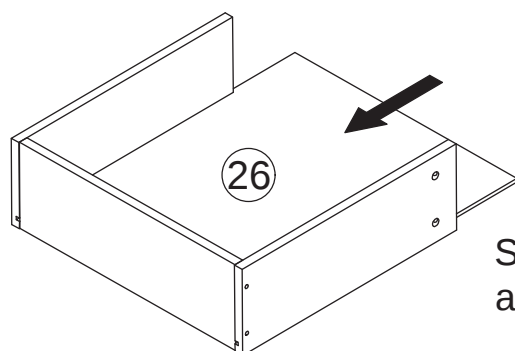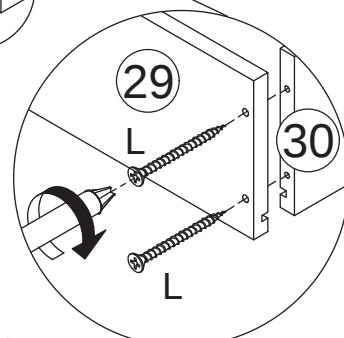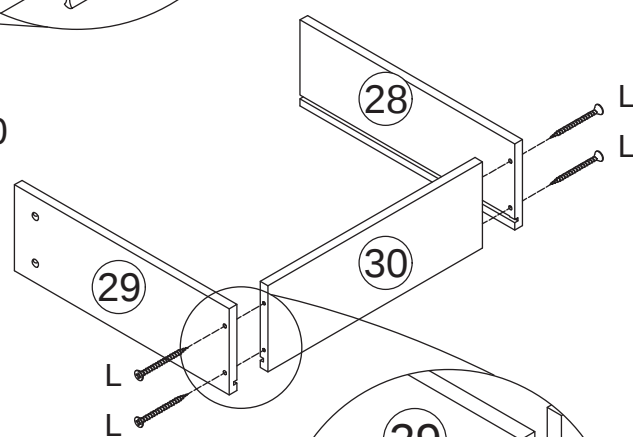

Slide bottom plate 26 along grooves as shown.

  Attach plate 27 to plate 28 and 29, turn cam lock(B) clockwise to tighten as shown.

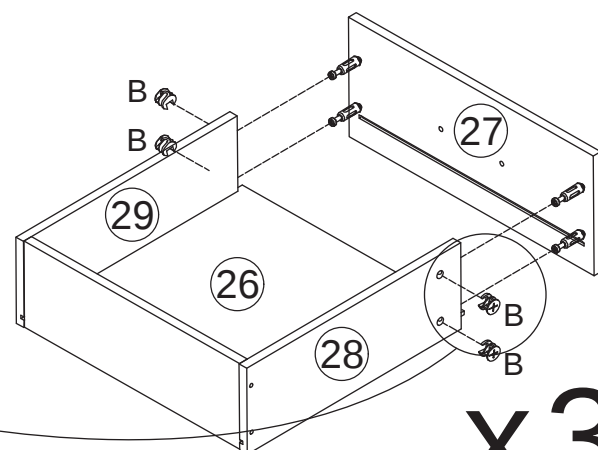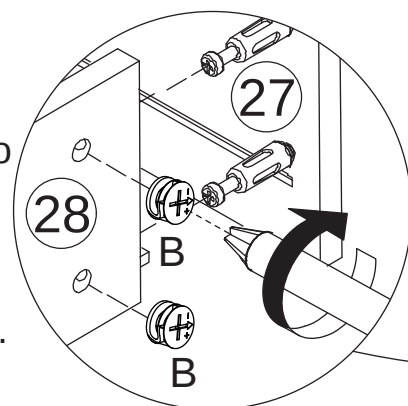


x3

19






D x 12



 N x 3

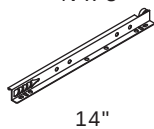

P x 3

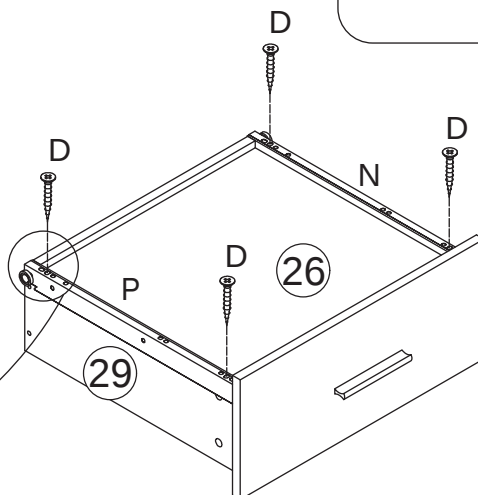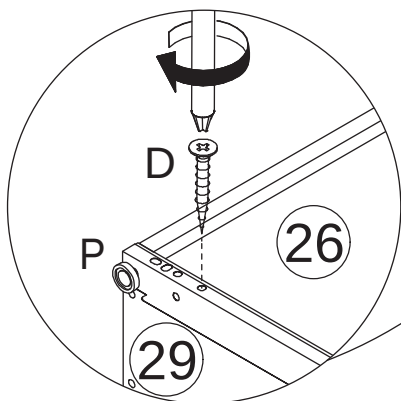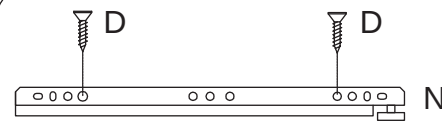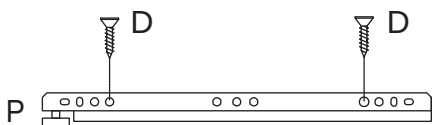    
 


x3



Fix runner(P) and (N) to plate 29 and 28 with screw(D) as shown.

20

 
 
Align rails, slide all drawers in.

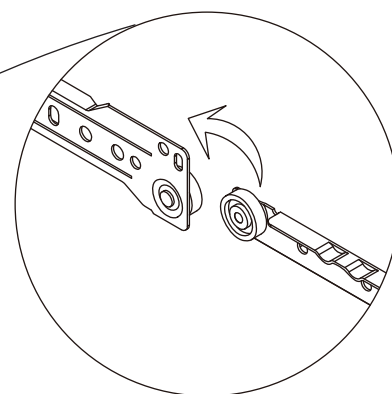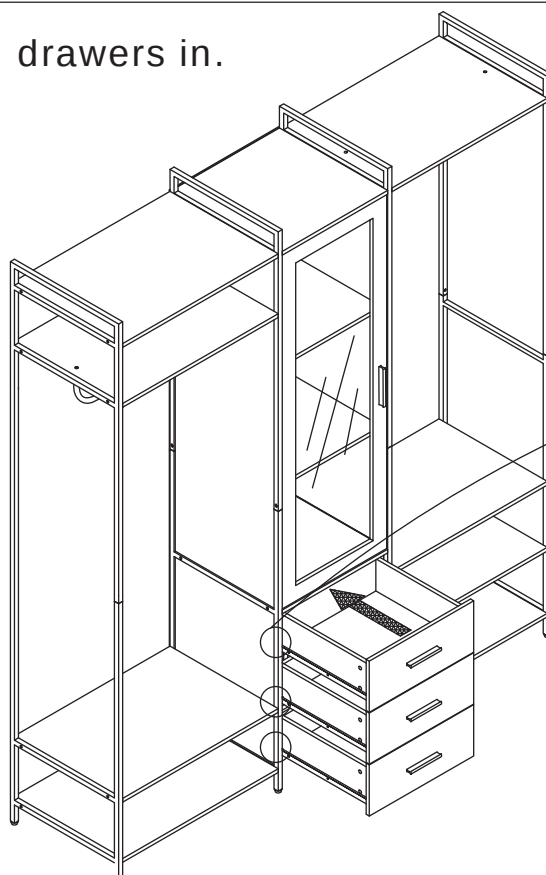


21

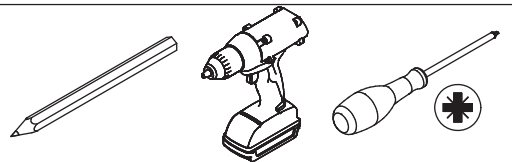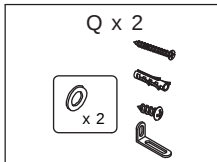  














Install anti-tipping device as shown.

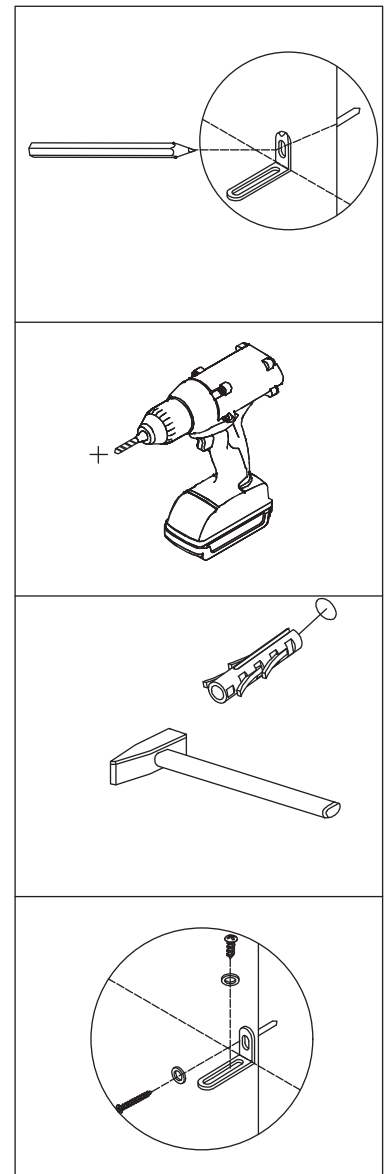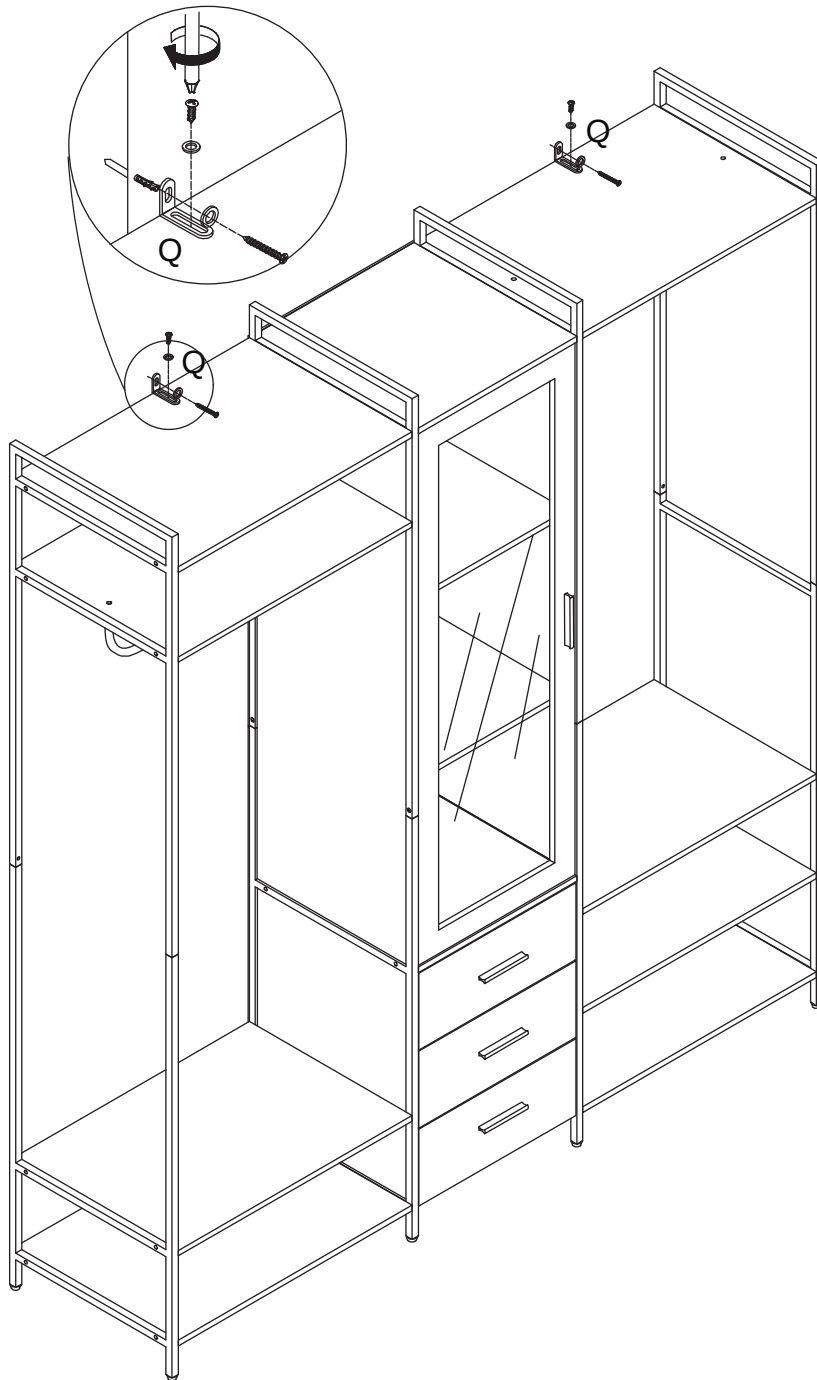  

 

If doors are still not aligned if the hinges are properly correctly, please watch the video.
             
<https://youtu.be/n0Lb36SoODM>

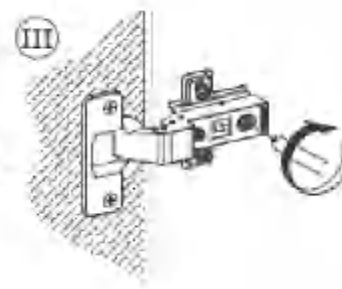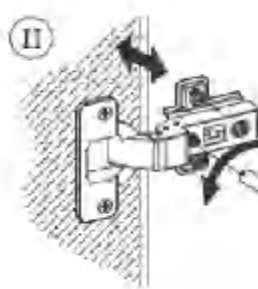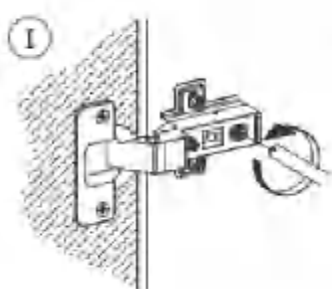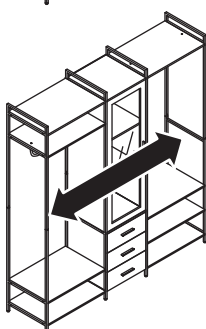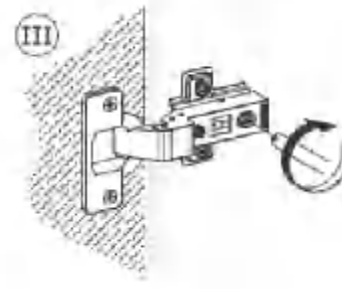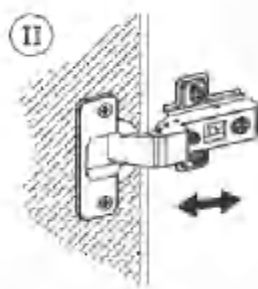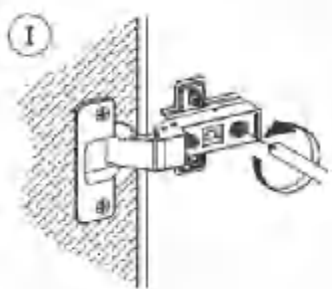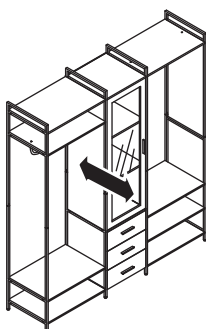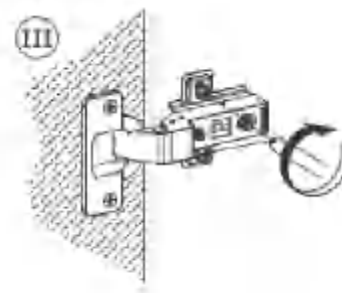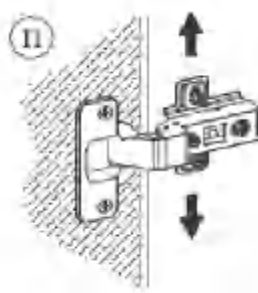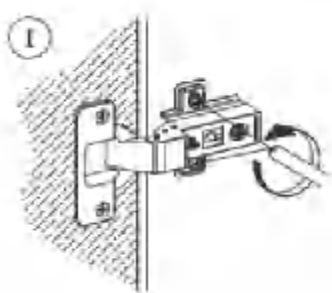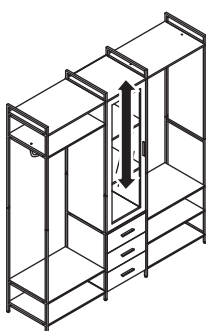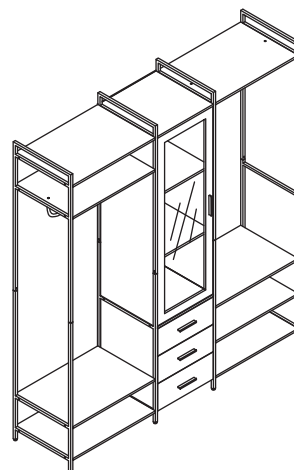

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



0000 0000000000 0 0 00000 0



00000000000000