
CRAFTSMAN®

BLADE CHANGE INSTRUCTIONS

1

EXTEND THE SLIDER

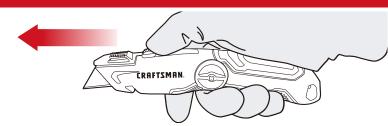


2

UNSCREW THUMBWHEEL. WHEN CHANGING FOR THE FIRST TIME, USE A PHILLIPS HEAD SCREWDRIVER.




3

KNIFE WILL SWIVEL OPEN.

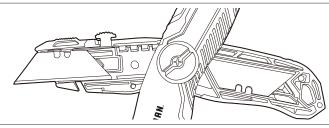


4

 REMOVE BLADE




5

RETREIVE NEW BLADE FROM BLADE STORAGE

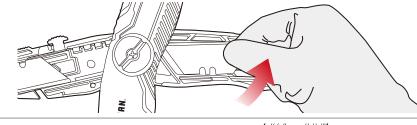

6

 INSERT NEW BLADE



7

CLOSE KNIFE AND TIGHTEN THUMBSCREW.





RETRACT SLIDER

