



INSTRUCTION MANUAL



PRODUCT CODE: HC03001-US

DRIP COFFEE MACHINE



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us

California: +1 562 942 0492

Outside California: +1 866 942 0492

Available Monday - Friday

8am - 4:30pm P.T



Email us

haden@studiodesigns.com



Write to us


**Team Haden, Studio Designs,
6027 Bandini Blvd, Commerce, CA
90040**



Visit us

www.hadenusa.com

COMPONENTS

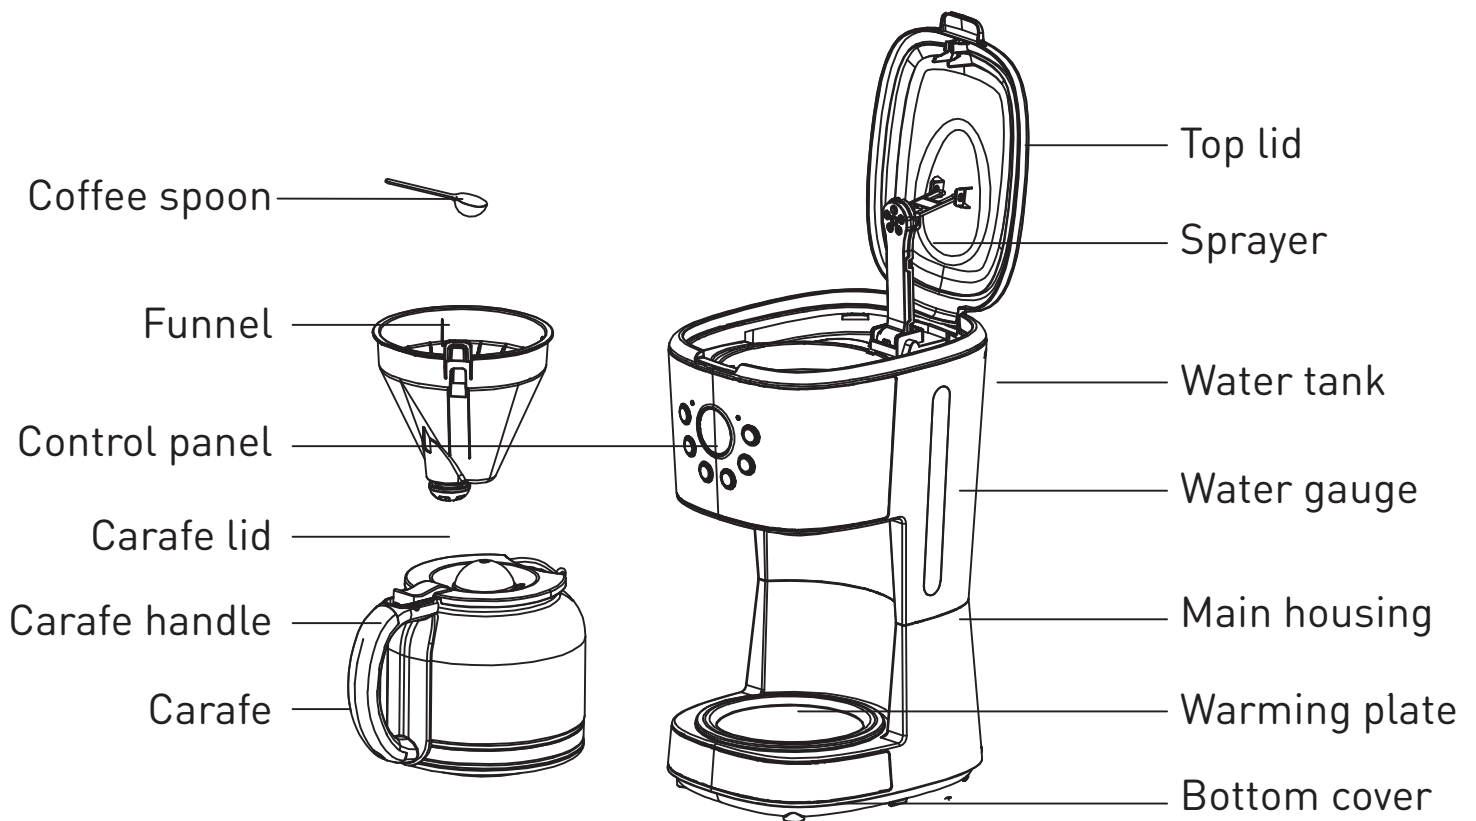

IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

- 1.** Read all instructions.
- 2.** Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
- 3.** To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
- 4.** Close supervision is necessary when any appliance is used by or near children.
- 5.** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- 7.** The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8.** Do not use outdoors.
- 9.** Do not let cord hang over edge of table or counter, or touch hot surface.
- 10.** Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11.** Do not use appliance for other than intended use.
- 12.** Do not clean container with cleansers, steel wool pads, or other abrasive material.
- 13.** To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
- 14.** Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.

- 15.** Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
- 16.** Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
- 17.** Do not let the coffee maker operate without water.
- 18.** Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
- 19.** To reduce the risk of fire or electrical shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- 20.** The container is designed for use with this appliance. It must never be used on a range top.
- 21.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 22.** Children should be supervised to ensure that they do not play with the appliance.
- 23.** This appliance is intended to be used in household and similar applications.
- 24.** Save these instructions.

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Fill water into water tank to the **MAX** level and brew water for several times without coffee powder, then discard the water. Clean and dry all detachable parts thoroughly according to the section "**CLEANING AND MAINTENANCE**".

USING YOUR COFFEE MACHINE

1. Open the top lid and fill the water tank with drinking water. The water level should not exceed **MAX** level as indicated on the water gauge.
2. Place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top lid cannot be closed. Place permanent filter in the funnel.
3. Add coffee powder into permanent filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top lid completely.
4. Insert the carafe with handle closed onto warming plate horizontally.
5. Plug the power cord into the outlet. If you want to adjust the coffee strength, you can press "**STRENGTH**" button once, and then its corresponding indicator will illuminate in orange and the appliance will brew thick coffee. If you do not want to adjust the coffee strength, just follow the following operation to brew normal coffee.
6. Press **ON/OFF** button, its indicator illuminates in red, the LCD display indicates " 12:00", and then the appliance begins to work.
Note: The brewing process can be interrupted by pressing the ON/OFF button at any time, and the indicator of **ON/OFF** button will extinguish, indicating your coffee maker is power off.
Note: During brewing process, the buttons of "**PROGRAM**", "**DELAY BREW**", "**HOUR**" and "**MINUTE**" are invalid.

7. The brewing process can be interrupted by pressing the **ON/OFF** button at any time, the indicator will extinguish. The appliance will continue brewing once the **ON/OFF** button is pressed again. Note: You can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds or dripping may recommence.

8. Remove the carafe to serve when the brewing is finished (about one minute later after the coffee stops dripping out.)

Note: The coffee you get will be less than the water you have added, as some water is absorbed by ground coffee.

9. When the process is finished, if you do not want to serve immediately, keep the coffee maker switched on and the coffee will be kept warm in the warming plate. The appliance will shut off automatically after 2 hours from the **ON/OFF** button being activated if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.

NOTE: Take care when pouring as the temperature of coffee when just finished is high.

SETTING THE CLOCK

To set the clock:

1. Make sure the coffee maker is plugged in. The clock will flash on the display to indicate that the time has not been set yet.

2. Continually press the **HOUR** and then the **MINUTE** buttons until you reach the current time. The **AM/PM** indicator light will appear for **PM** and disappear for **AM**.

NOTE: The time cycle is 12 hours. You must set the clock if you want to use the delay brew feature.

DELAY FUNCTION

1. First follow steps 1 through 5 above (Using your coffee machine).
2. Press **PROGRAM** one time, the **ON/OFF** indicator light will illuminate to **GREEN** and will flash until you have set delay time.
3. Set the delayed start time by pressing **HOUR** and **MINUTE** buttons until you reach delayed time desired. The **AM/PM** indicator light will appear for **PM** and disappear for **AM**.
4. Next, press the **DELAY BREW** button, the **ON/OFF** indicator light will still be **GREEN** but will stop flashing.
5. After a few seconds, the **LED** will display the current time.
6. When the delayed brew time begins, the **ON/OFF** indicator light will illuminate to **RED**.
7. You may see the delay brew time by pressing **DELAY BREW**.
8. Cancel **DELAY BREW** by pressing **ON/OFF**.
9. If you want to change the delay brew time, follow steps 2 through 4 above.
10. The brewing process may be interrupted 2 ways;
 - a. Pressing the **ON/OFF** button (must press again to continue brew)
 - b. Pulling out the coffee pot (must return to warming plate within 30 seconds)
11. All other functions (**PROGRAM, DELAY BREW, HOUR/MINUTES**) are not available during the brewing process.
12. Remove coffee pot to serve when finished brewing (about 1 minutes after coffee stops dripping).
13. If all coffee will not be served immediately, the coffee can be kept warm on the warming plate. The coffee maker will automatically shut off after 2 hours from when the **ON/OFF** button was pressed, if it hasn't been manually turned off.
14. Use caution while pouring coffee out of pot, as contents will be very hot!
15. Always turn off the coffee maker and disconnect the power supply when not in use

CLEANING & MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot soapy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may build up in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the frequency of use. We recommend removing mineral deposits as follows:

1. Fill the tank with water and descaler to the max level as indicated on water gauge (the mix of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. place the serving cup under the brew basket.
3. Ensure the funnel is assembled in place.
4. Switch on the appliance and allow it to "brew" the de-scaling solution.
5. After "brew" one-cup solution, switch off the appliance.
6. Leave the solution for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.

HINTS FOR GREAT TASTING COFFEE

- 1.** A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
- 2.** Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
- 3.** For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing. The Haden coffee grinder is available for this operation.
- 4.** Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- 5.** Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
- 6.** Oiliness may occur more frequently if heavily roasted coffees are used.

TECHNICAL DETAILS

AC: 120V

60Hz

Power: 900W

LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse.

This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

