 


Indoor Space Heater
Instruction Manual

AH-NFJ1F01

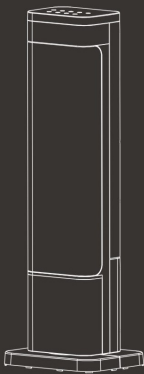

HJ-Customer-Service@outlook.com
(909)637-7665 | (909)637-7593
EST 9:00AM--17:00PM

PRECAUTIONS

- To ensure safe use and avoid injury and property loss to you or others, please be sure to follow the safety precautions below. Improper use or failure to observe these warnings may result in serious accidents.
- This product is not intended for use by unattended young children or individuals with disabilities, nor should it be used as a toy. Such misuse may lead to accidents.

- [WARNING] Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
- [NOTICE] Indicates other important safety information.
- [CAUTION] Indicates a hazardous situation that may result in minor injury or property damage.

[WARNING]

- The power supply for this unit is 120V~. Please ensure that the power socket has a rated current of at least 15A. If it does not meet this requirement, the socket must be replaced before use.
- Before use, check the power cord and plug for damage. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid potential hazards.
- Do not use the heater near flammable or explosive materials, heat-sensitive items (such as those that may deform, discolor, or deteriorate), or in areas with heavy dust.
- Do not use the heater in areas where there are hanging objects that may fall. During use, place the unit on a stable, level surface, and do not tip or tilt it.
- Do not insert metal wires or any foreign objects into the openings of the unit to avoid the risk of electric shock.
- Do not place the power cord near the air outlet.
- The product must not be used as insulation or heating equipment for animals or plants.
- Do not use plugging or unplugging the power cord as a substitute for the power switch to turn the unit on or off.
- To avoid overheating, do not cover the heater.
- Do not immerse the product in water. Do not use the heater near bathtubs, showers, or swimming pools.
- Do not rinse the unit directly with water. Use a soft cloth lightly dampened with neutral detergent to gently clean the surface, then wipe it dry. Do not use solvents such as gasoline.
- If the product malfunctions, turn it off immediately and unplug the power cord. Please contact our after-sales service for assistance. Unauthorized personnel are strictly prohibited from repairing or modifying the unit.

- Do not plug the heater into the same outlet as other high-power electrical appliances. Never move the unit by pulling the power cord.
- Do not direct the heater toward a power outlet, and do not place it directly beneath one.
- To prevent hazards caused by false resetting of the thermal cut-out, the appliance must not be powered through an external switching device, such as a timer, nor connected to a circuit that is regularly switched on and off by a common control device.

[CAUTION]

- Before use, please check whether the voltage used is the same as the voltage marked on the product.
- To prevent fire hazards caused by covering or improper placement, the heater must not be used with a timer, programmable timer, or any other device that automatically switches the power on.
- Before cleaning this unit, make sure to turn off the power switch and unplug it, and wait until it is completely cooled before cleaning.
- Children, the elderly who are unable to care for themselves, and patients should use the product only under adult supervision to prevent accidents.
- Whether in use or not, keep the product at least 60 inches away from open flames and avoid direct sunlight.
- When the product is in use, the power cord should be routed behind the unit. Placing it in front may cause it to overheat, become damaged, or even result in a safety hazard.
- To avoid burns, do not allow bare skin to come into direct contact with the air outlet during use.

 
[NOTICE]

- This product is only suitable for indoor use and not for outdoor use.
- After cleaning or maintenance, make sure the unit is completely dry before powering it on or storing it.
- Please unplug the power cord when not in use for a long time. It is recommended to pack it in the original packaging and store it in a dry place.
- Avoid impacts or scratches to prevent damage to the surface coating and potential rusting.

Installation Safety Tips



Installation Clearance from Bathtub

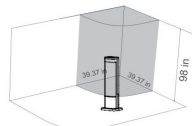

Installation Clearance from Shower

 
Other Precautions During Use

- If the product suddenly powers off and becomes unusable, unplug the power cord and allow the unit to stand and cool down before plugging it in again to resume normal operation. If the unit still does not operate properly, immediately turn it off, unplug the power cord, and contact our after-sales service for assistance. Unauthorized personnel are strictly prohibited from repairing or modifying the unit.
- The cold air setting is used solely to cool the heating element.


PLEASE SAVE THESE INSTRUCTIONS AND READ THIS MANUAL CAREFULLY BEFORE USE.

Product Introduction

Product Diagram

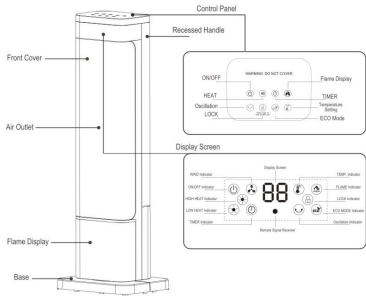

Parts List

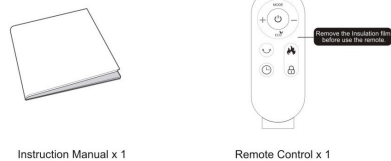 

How to use

Function Instructions

This unit requires no assembly. Remove the packaging and place the unit upright on a flat, stable floor surface.

- Pre-startup inspection
 - Check if the power cord is intact.
 - The product operates on a 120V~ power supply. Before use, confirm that the power socket's rated current meets requirements and that it has proper grounding; otherwise, replace the socket.
 - ON/OFF
 - Plug in the power cord. Press the power button to turn on the heater. The default setting is LO. Press the power button again to turn off the heater. The fan will continue running for 30 seconds before stopping.
 - HEAT
 - Press the HEAT button to cycle through three settings: Low heat (L0), High heat (H1), and Cold air (H6).
 - Oscillation
 - Press 1/2 to turn on oscillation; the heater oscillates on horizontal direction. Press again to turn the oscillation off.
 - LOCK
 - Hold the child lock key for 3 seconds to lock the control panel. Hold it for 3 seconds again to unlock the control panel.
 - TIMER
 - Press the timer button to set the heater to operate for 1, 2, 3, ..., up to 12 hours. The display will flash three times to confirm the setting. Press the button again to cancel the timer.
 - FLAME Display
 - Press the FLAME button to turn on/off the flame display.
 - Temperature Setting
 - Press this button to adjust the temperature. Each press increases the setting by 1°F, cycling from 60°F to 99°F and back to 60°F. The display will flash for 5 seconds to confirm the setting. The default temperature is 68°F when the heater is turned on.
 - ECO Mode
 - When ECO mode is turned on, heating starts when the ambient temperature falls below 72°F and stops when it rises above 72°F. The cycle repeats automatically.
 - Security Protection
 - Overheat protection: If the internal temperature becomes too high due to abnormal conditions or improper use, the temperature control system will automatically cut off power to stop the heater. Please unplug the unit. After the unit has cooled down and the abnormal condition has been resolved, reconnect the power to resume normal operation.
- Auto-off Screen:** The display screen will turn off automatically after 3 minutes of inactivity. Press any button to wake the screen.
- Remote Control:** The remote control functions are the same as those on the control panel. Press the corresponding buttons to operate the heater.
- NOTE:** When the OFF button is pressed, the fan continues to run for 30 seconds to cool down the internal heating element. The ambient temperature displayed on the screen may not be completely accurate.

Replace Battery in the Remote Control

- Unscrew the battery cover from the remote control.
 - Load the CR2025 coin cell battery as indicated.
 - Install the battery cover back and tighten the screw.
- WARNING**
- INGESTION HAZARD: This product contains a button cell or coin battery.
 - DEATH or serious injury can occur if ingested.
 - A swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.
 - KEEP away and out of reach of children.
 - Seek immediate medical attention if a battery is suspected to be swallowed or inserted into any part of the body.
 - Battery type: CR2025; DC 3V (included)
- Attention**
- Do not charge this battery.
 - Please keep the remote control out of reach of children; if swallowed, please seek medical attention immediately.
 - When using the remote control to operate the fan, you need to point the remote control at the fan display screen. Because the remote control frequency will overlap. To avoid misoperation, please stay away from other electrical appliances when using the remote control.
 - Shutting down the unit using the power button or the remote control does not fully disconnect the fan from the power supply.
 - If not used for a long time, please unplug the power plug; if the remote control is not used for a long time, please remove the battery.

Product Cleaning

- Before cleaning this product, you must disconnect the power supply and wait until the product cools down.
- After cleaning or maintenance, make sure the unit is completely dry before powering it on or storing it.
- Please unplug the power cord when not in use for a long time. It is recommended to pack it in the original packaging and store it in a dry place.
- Do not rinse the unit directly with water. Use a soft cloth lightly dampened with neutral detergent to gently clean the surface, then wipe it dry. Do not use solvents such as gasoline.
- Avoid impacts or scratches to prevent damage to the surface coating and potential rusting.


Service Guide

Product Parameters

Product Name	Model NO.	Selectable power (W) and working mode			Rated Voltage	Max. Load Current
		OFF	LOW HEAT	HIGH HEAT		
Indoor Space Heater	AH-NFJ1F01	0	750W	1500W	120V~	15A

Note: The power supply is 120V~60Hz AC.

 The performance parameters listed in the table are measured under factory conditions and are for reference only.

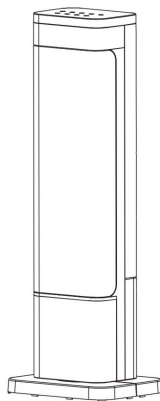

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.