

⚠ WARNING

ALWAYS turn off the pressure washer, release the pressure in the spray gun, and unplug the pressure washer before performing maintenance.

⚠ WARNING

Replace damaged or worn items with recommended or equivalent replacement parts. Using an incorrect or incompatible part might create a hazard that could result in serious personal injury.

⚠ NOTICE

Inspect the physical condition of the product prior to each use. Look for loose bolts, fluid leaks, and other signs of wear. Replace all damaged items. For replacement parts or assistance, contact our customer service.

To prolong the life of this product, follow the care and maintenance instructions in this section. Contact customer service before servicing any recall or warranty parts.

CLEANING THE PRESSURE WASHER

Do not store or operate the pressure washer in dirty, dusty, or corrosive environments. Do not allow foreign materials and debris to clog the vents on the unit.

Never clean the pressure washer with a garden hose. Water can damage electrical components. If the unit needs to be cleaned, use a soft brush and damp cloth to clean the exterior and use low-pressure (no greater than 25 PSI) to clean the vents.

Never use gasoline as a cleaning agent.

CLEANING THE NOZZLES


See Figure 13.

- Stop the pressure washer and turn off the water faucet.
- Release the pressure in the spray gun and unplug the pressure washer.
- Remove the nozzle from the spray gun.
- Use a nozzle cleaning tool or fine needle to clean debris from the inside of the nozzle.
- Using a garden hose, back flush water through the nozzle.
- When the nozzle is clean, place it back on the lance or in the nozzle storage area.

CLEANING THE WATER INLET SCREENS

The screens inside the water inlet should be cleaned periodically. Remove the screens, rinse them with clean water, and place them back in the inlet.

13

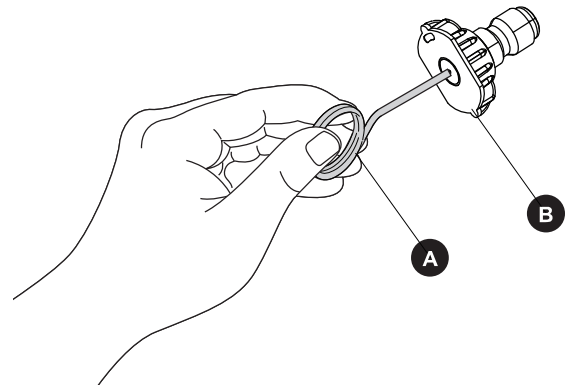

A - Nozzle Cleaning Tool
B - Nozzle

STORAGE

NOTE: Use commercially available pump protectors to extend the life of the pump. Follow the manufacturer's instructions for use.

- Release the pressure in the spray gun and unplug the pressure washer. Wrap the cord around the cord retainer.
- Disconnect the garden hose and the high pressure hose.
- Tilt the pressure washer to allow excess water to drain from the threaded outlet.
- Remove all nozzles and place them in the nozzle storage area.
- Disassemble the spray gun and lance.
- Store the pressure washer and accessories in a dry, covered location away from extreme heat which could dry out the pump seals and extreme cold which could cause freeze damage.

⚠ WARNING

Do not use attachments or accessories that are not recommended for use with this product. Making unauthorized modifications and using incompatible accessories can damage the unit and void the warranty.