




WB5LTB

Installation guide

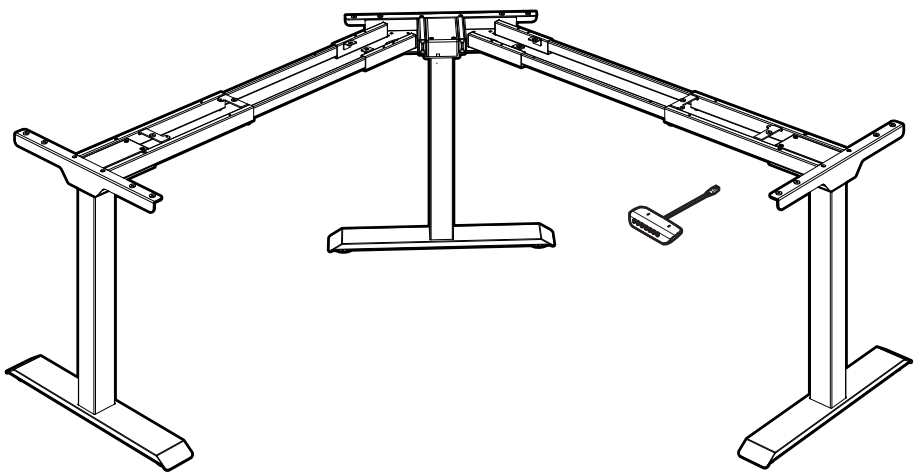

< The pictures below are for reference only, please refer to the actual product. >
Please read this product manual carefully before use, and keep it properly.


Technical Data

Column stage	3
Max. Load Capacity	397 lbs
Max. Speed	1.57"/s
Lowest Height	22.83"
Highest Height	48.43"

Product List

Accessory List

Note: The line drawings below are for reference only and may differ slightly from the physical product in some cases. Please refer to the actual product for accuracy. If any tools are missing or there are problems with installation, please contact customer service.

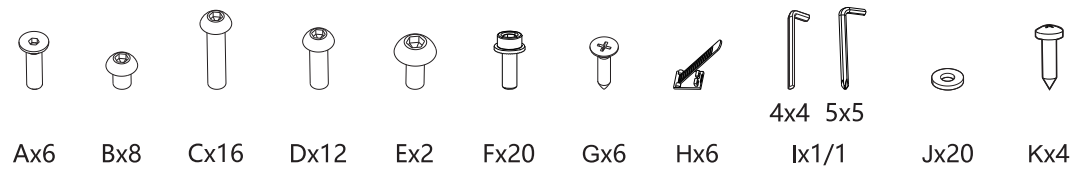


Preparation before installation



Part List

No.	Part	No.	Part
①	Pedestal x3	⑥	Right connecting plate x1
②	Column x3	⑦	Control box x1
③	Supporting beam x2	⑧	Handset x1
④	Side bracket x3	⑨	Adapter cable x1
⑤	Left connecting plate x1	⑩	AC power cable x1




Installation Instruction

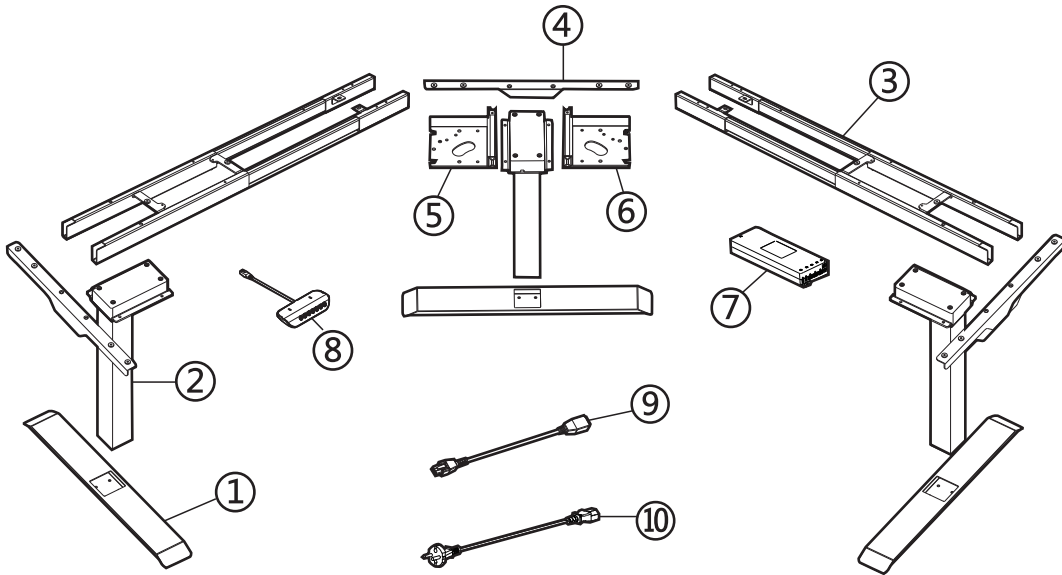

Installation Steps

STEP1

Install the left and right connecting plates

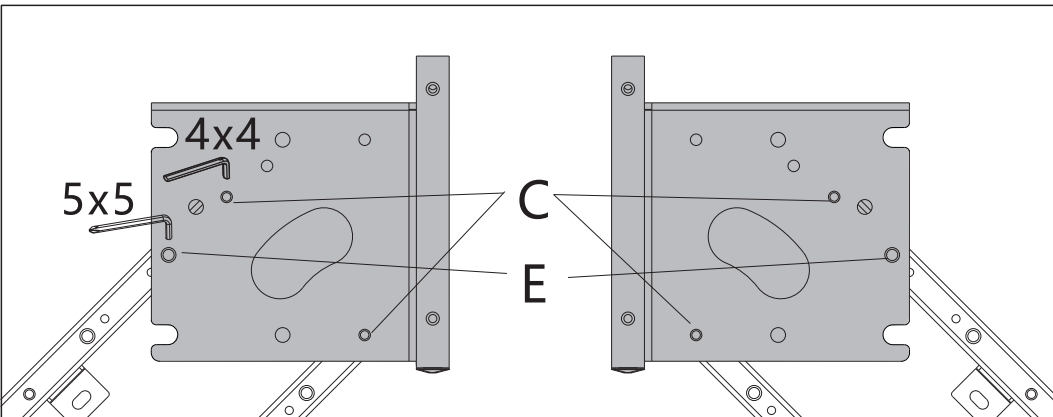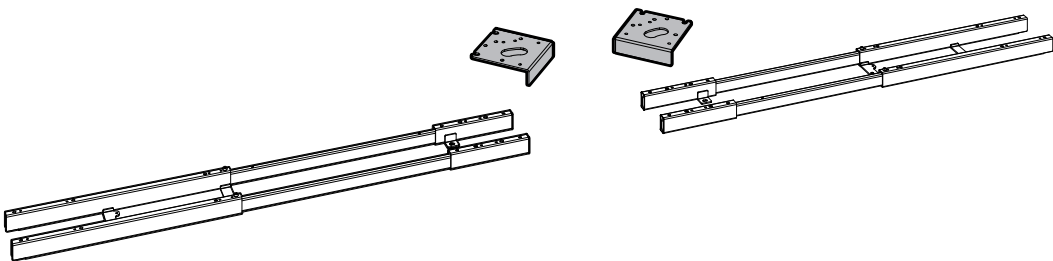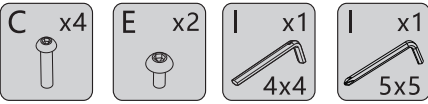


STEP2

Install the columns

D x12

I x1
4x4

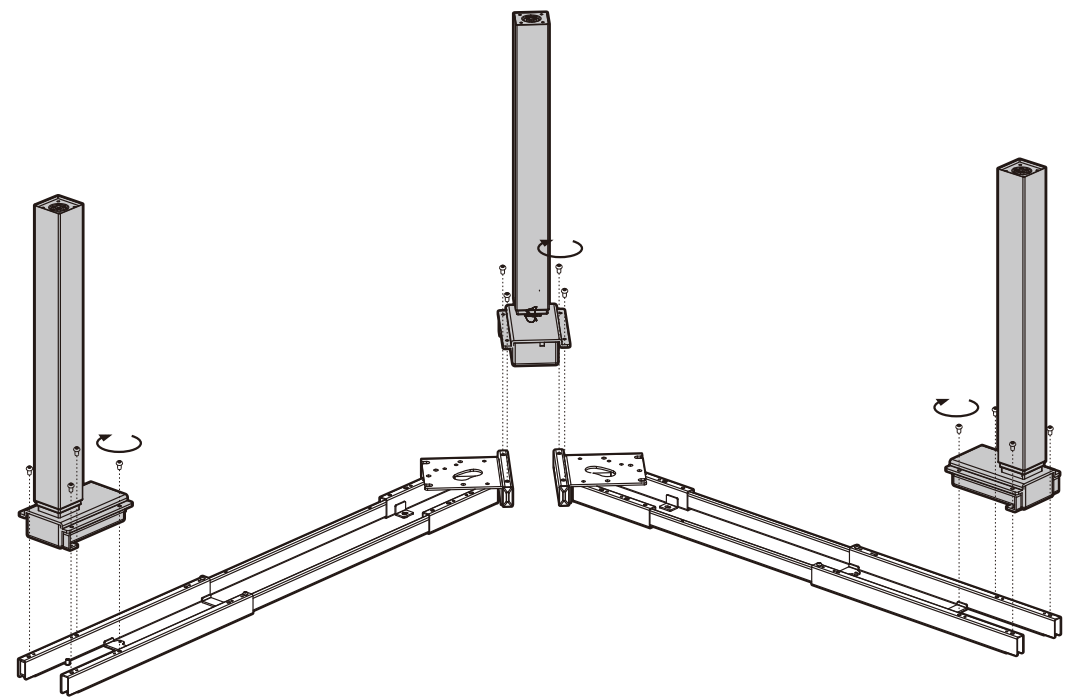


STEP3

Install the Pedestal

C x12

I x1
4x4

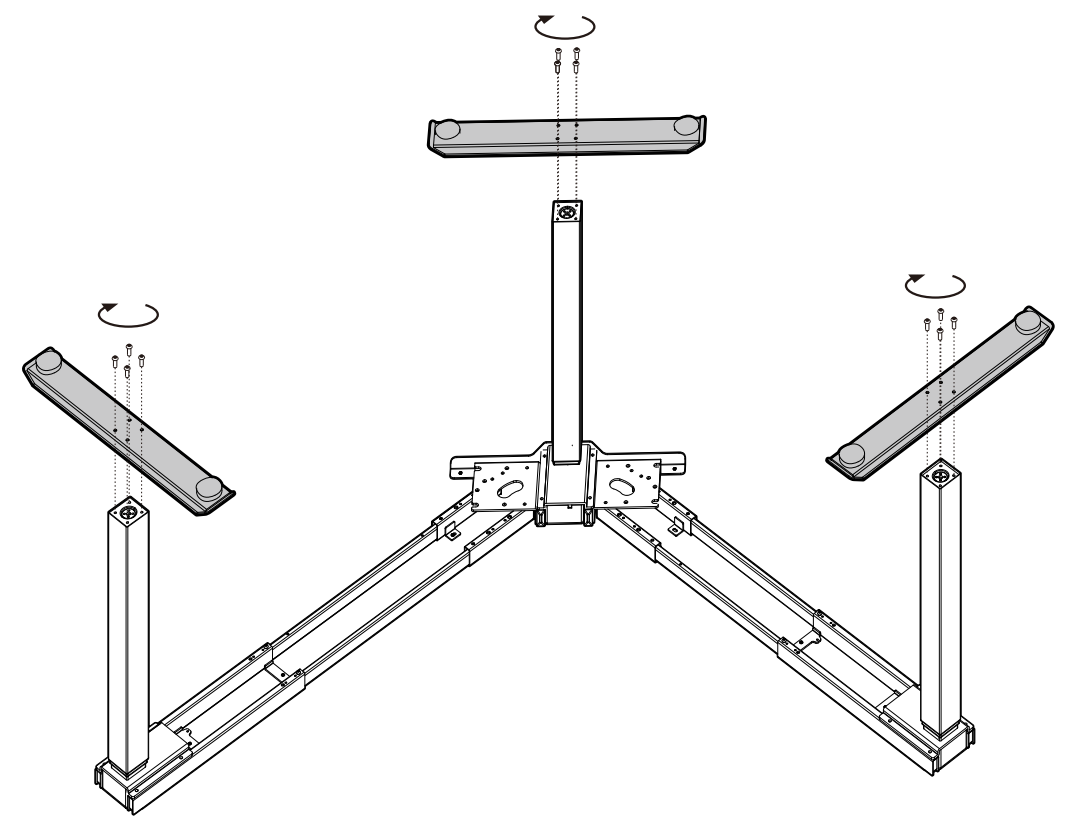


STEP4

Install the bracket

A x6


I x1
4x4

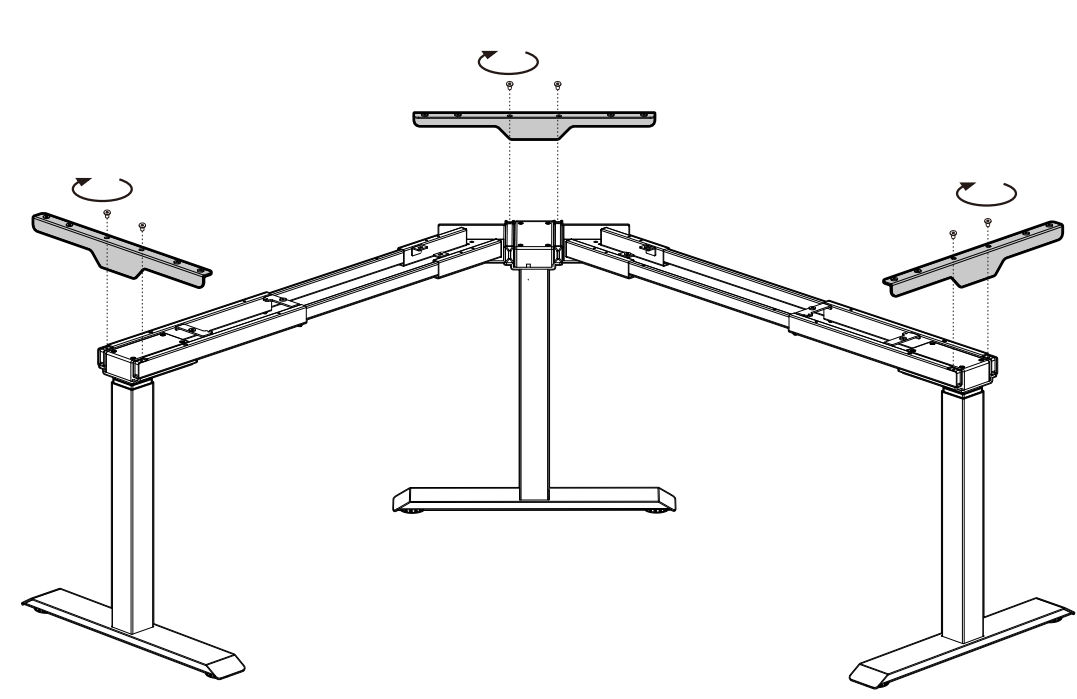

STEP5

Install the Damping pad

J x20

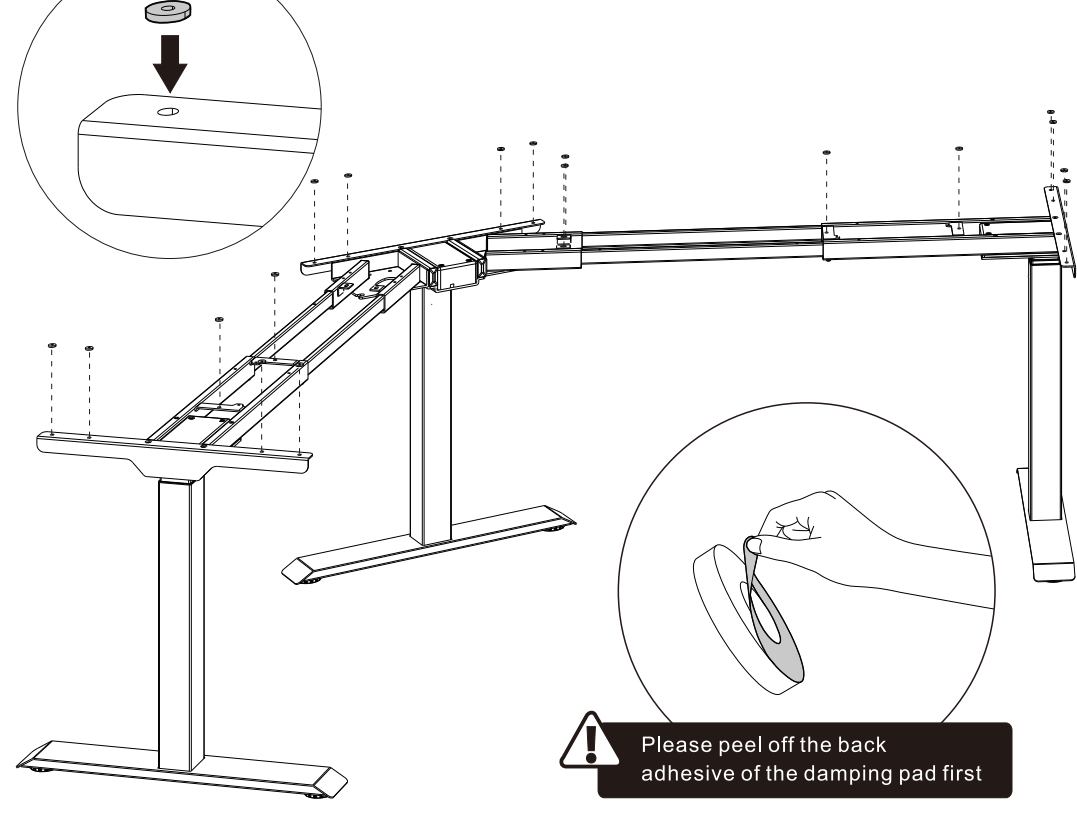


STEP6




Splicing Tabletop (optional splicing table)

I x1
4x4

! The accessories of the splicing tabletop are in the self-locking bag of the splicing tabletop


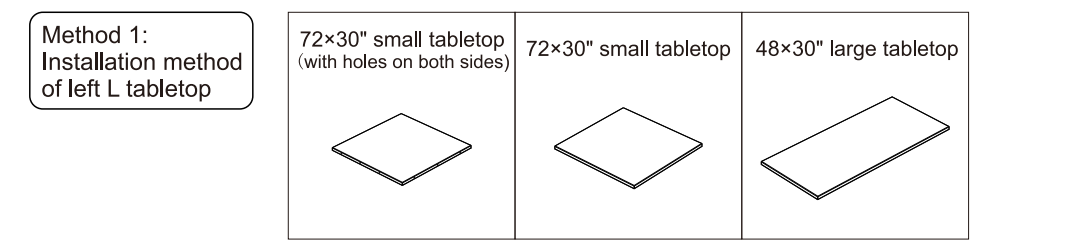


! The hole on the other side needs to be plugged with a hole plug

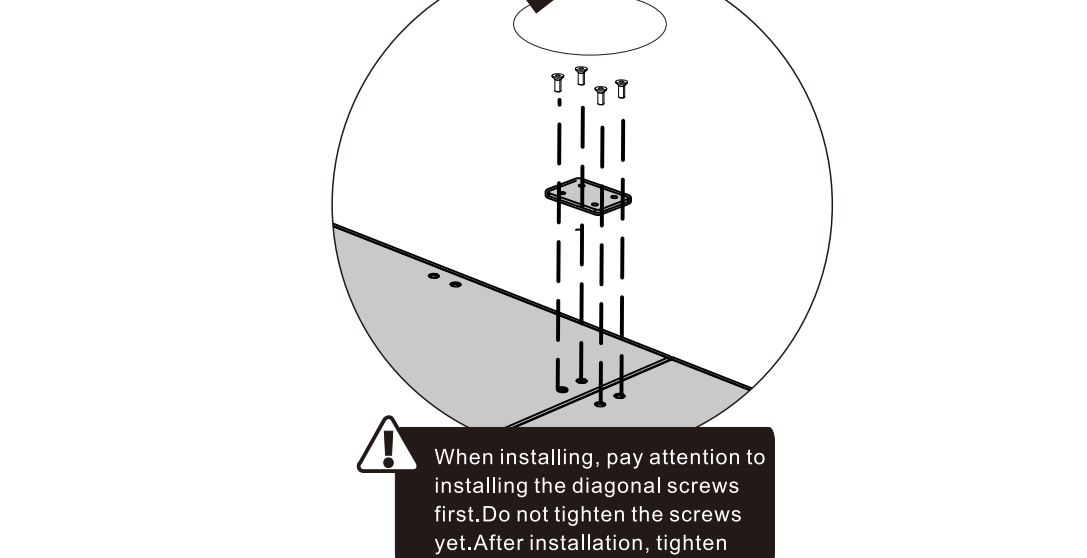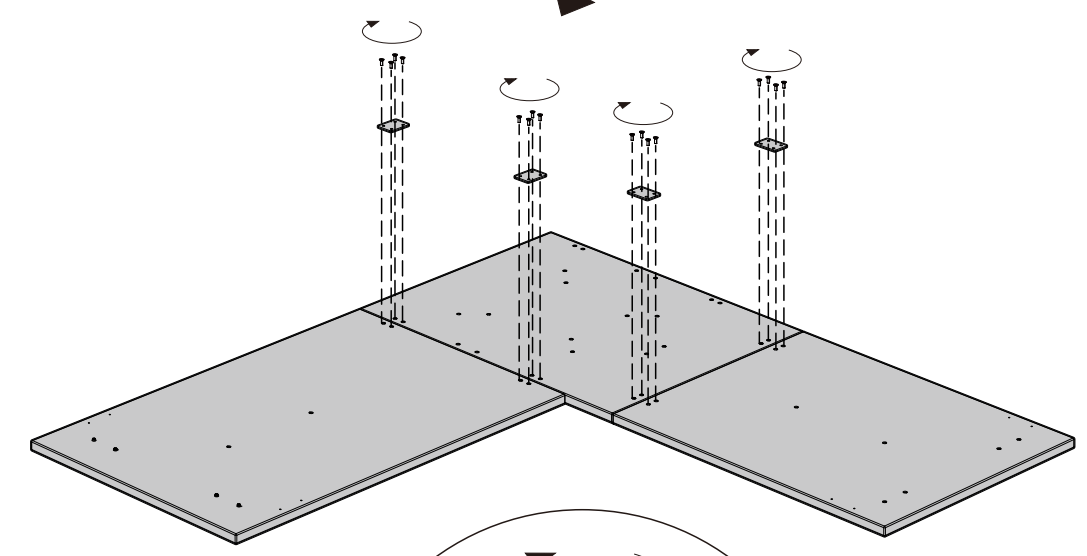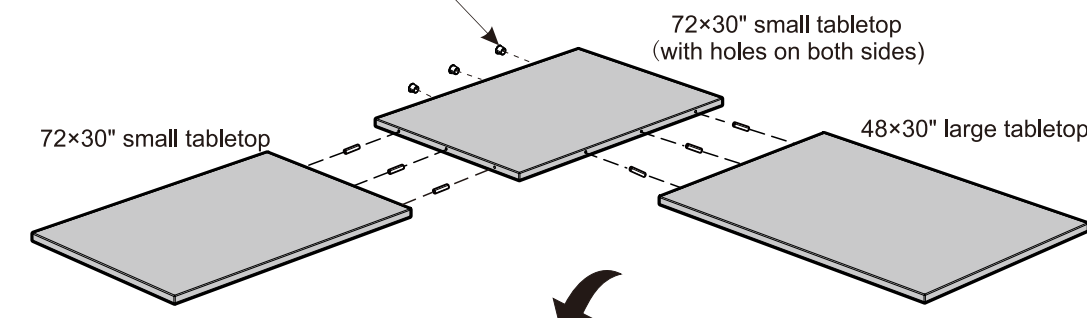




Method 2: Installation method of right L tabletop

! The hole on the other side needs to be plugged with a hole plug

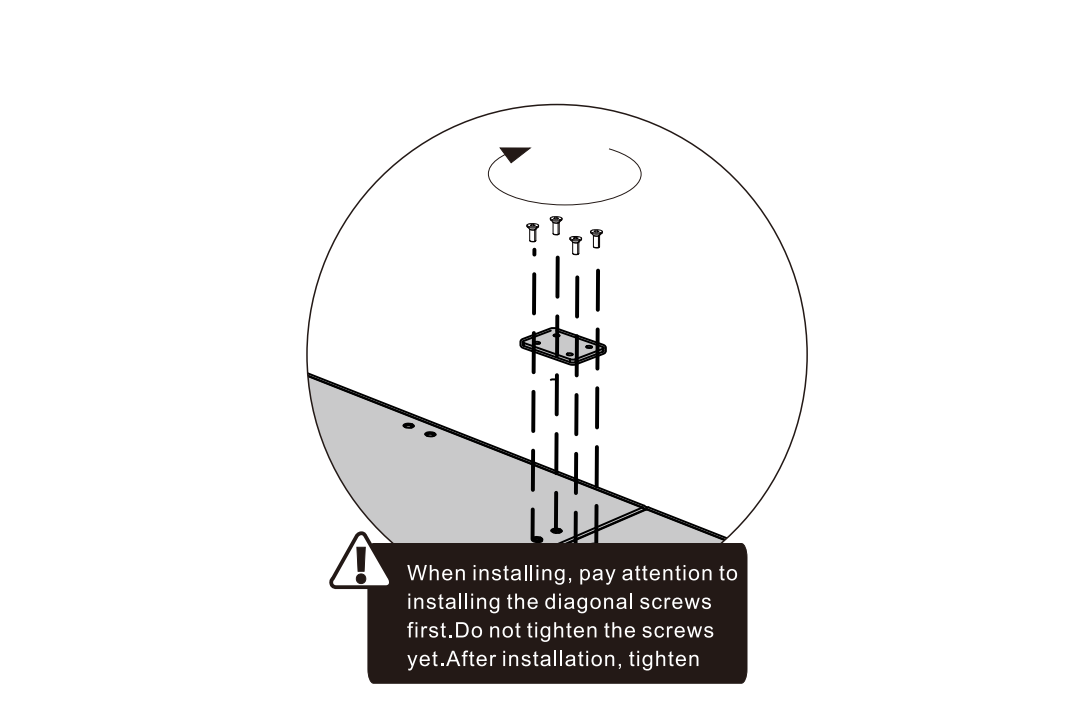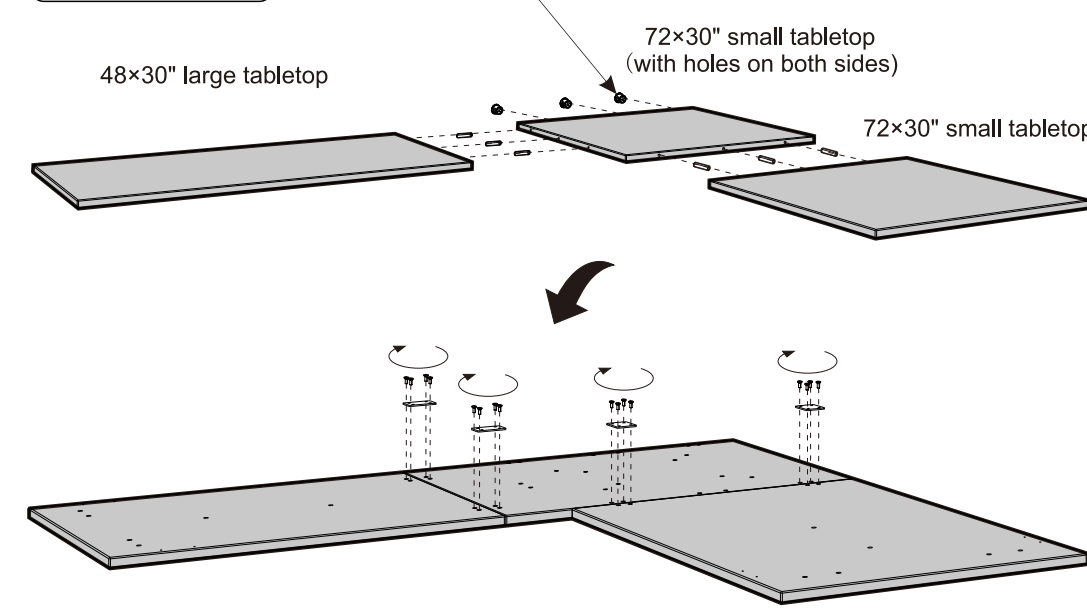

Method 3: 60×30" and 48×30" tabletop installation method

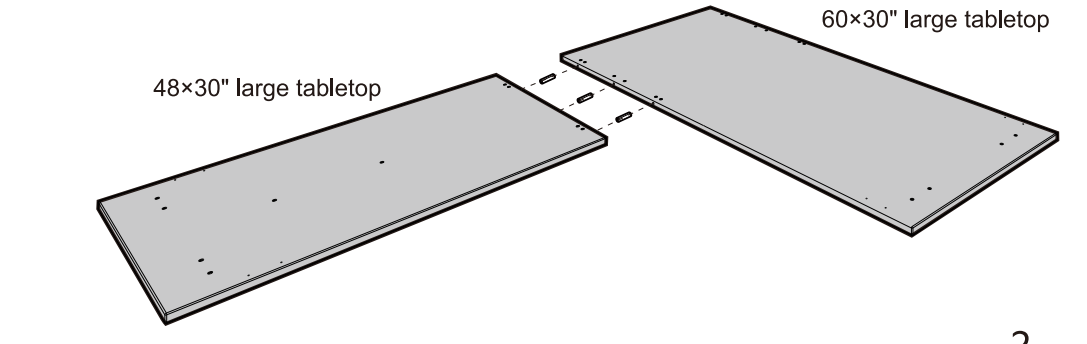


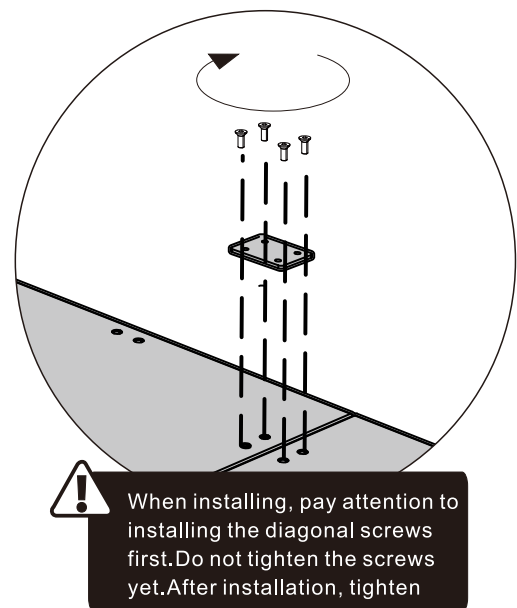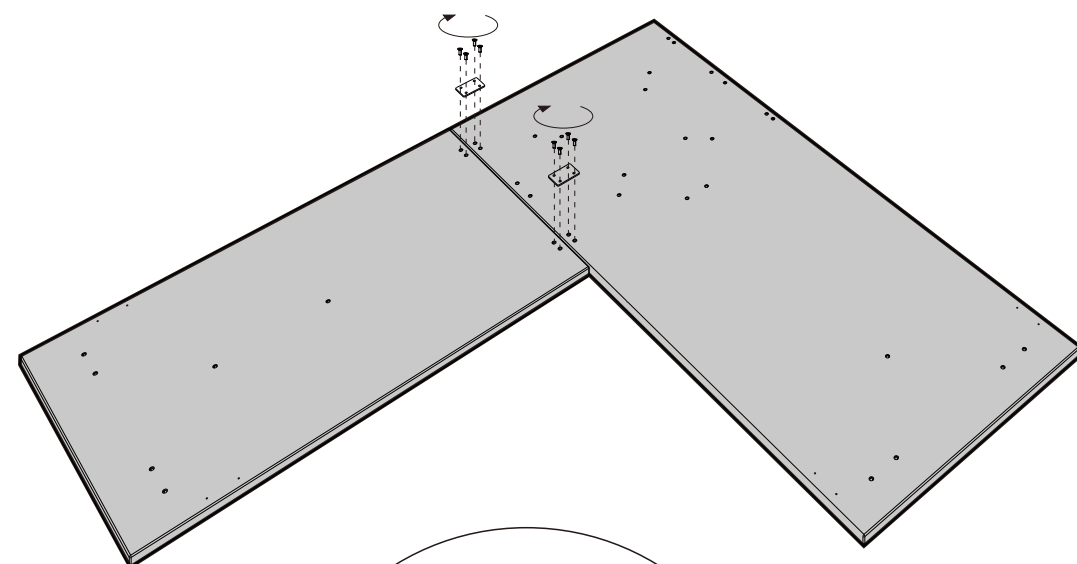

When installing, pay attention to installing the diagonal screws first. Do not tighten the screws yet. After installation, tighten


STEP7

Install the tabletop, control box and handset

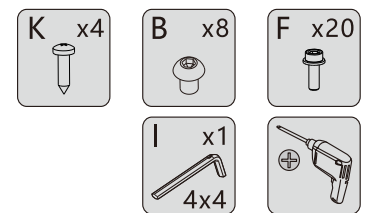


Self-prepared




When choosing the left L splicing tabletop

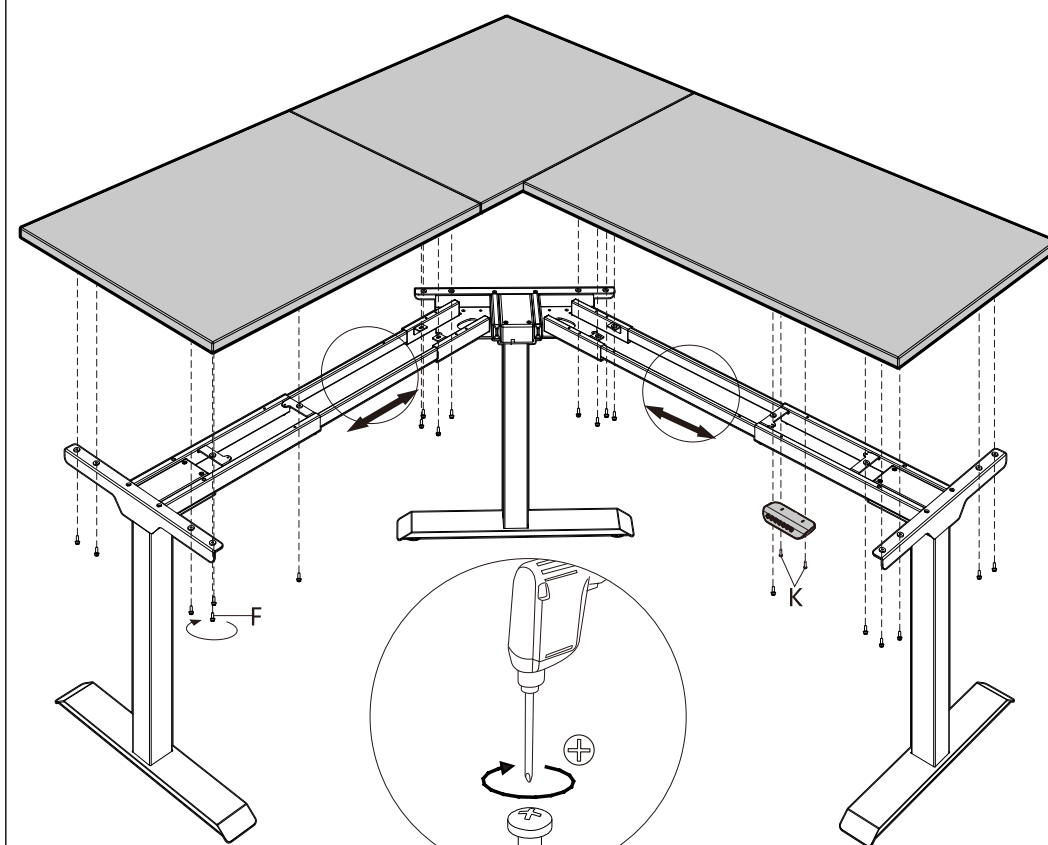


The control box is fixed on the table

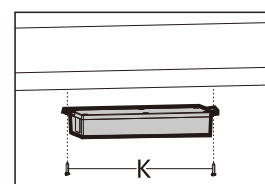


The distance of the telescoping of the supporting crossbeam can be adjusted according to the actual usage situation.

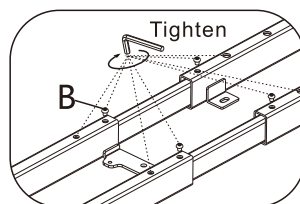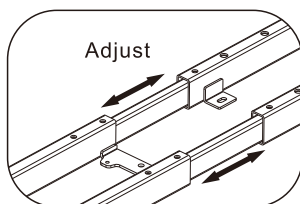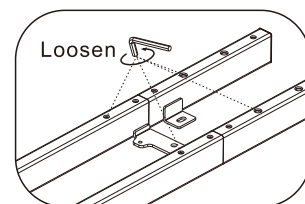




When choosing the right L splicing tabletop

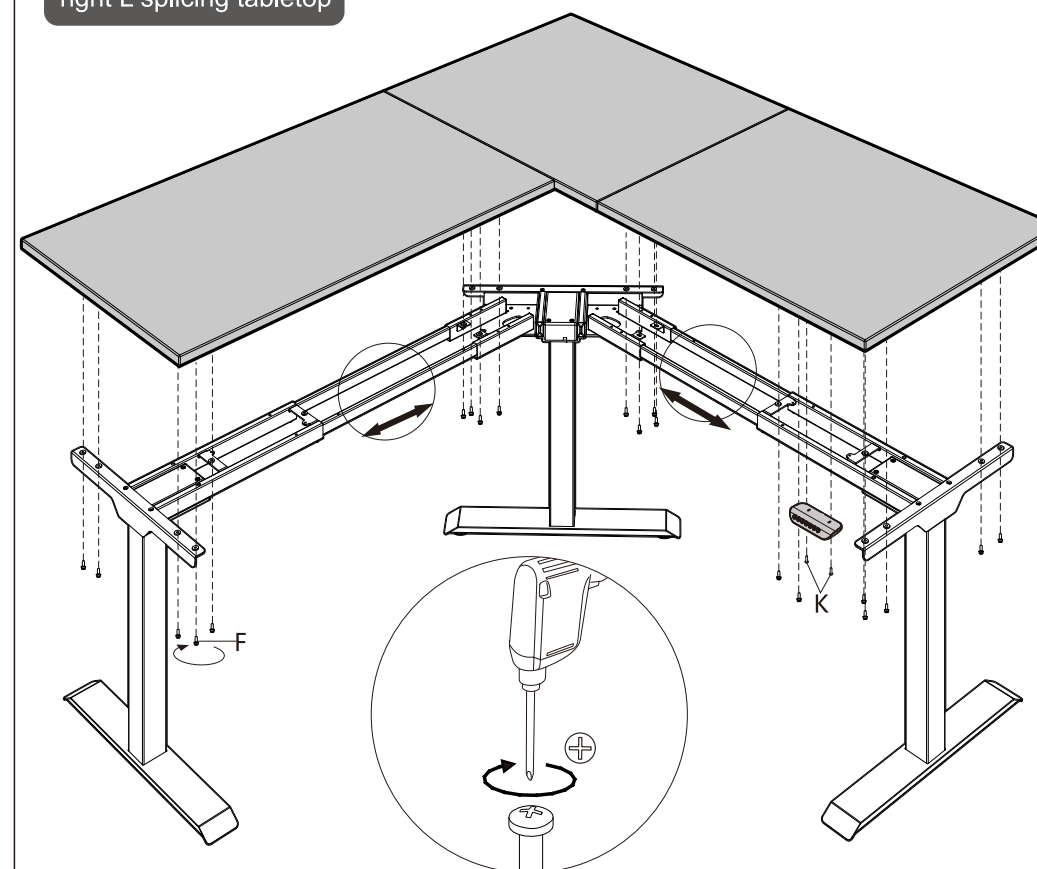


The control box is fixed on the table

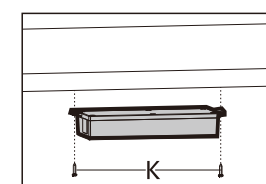


The distance of the telescoping of the supporting crossbeam can be adjusted according to the actual usage situation.

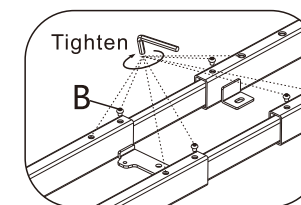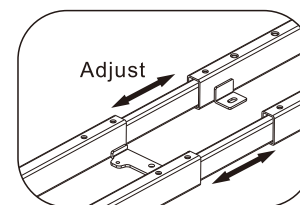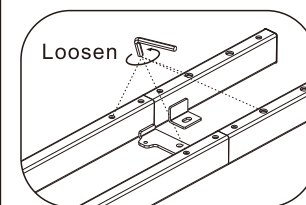




When 60×30" and 48×30" are combined to form a tabletop

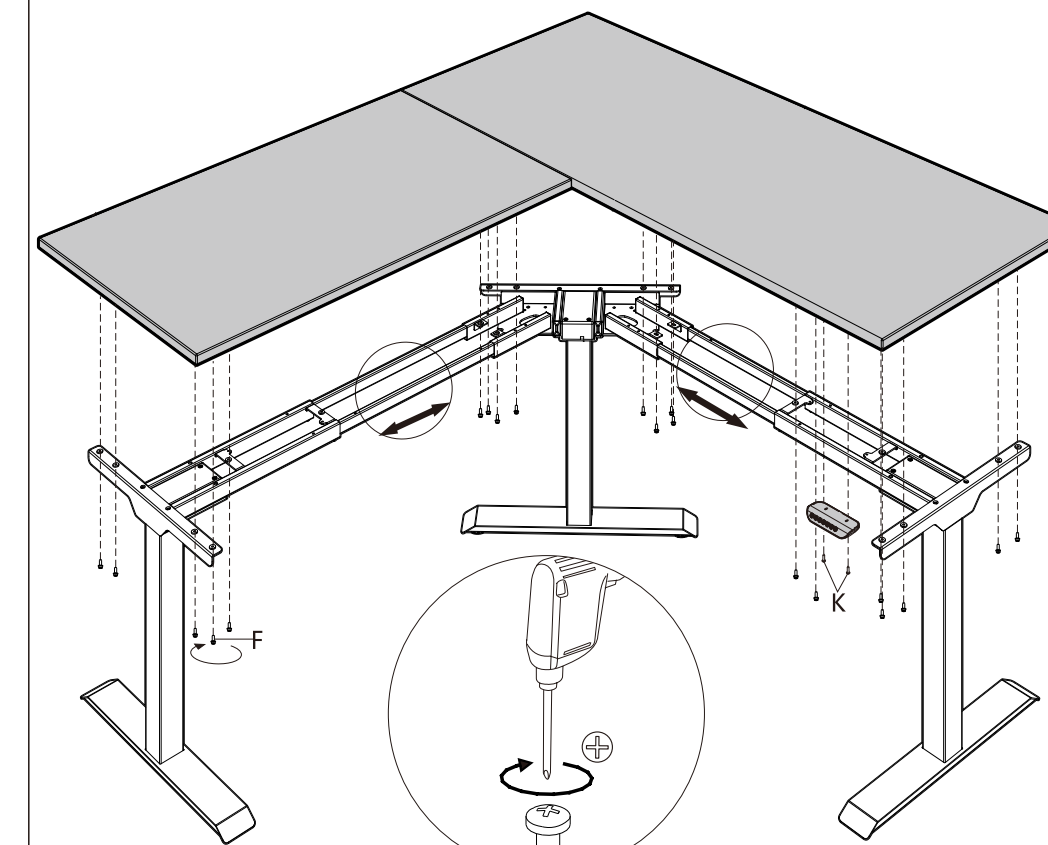

The control box is fixed on the table

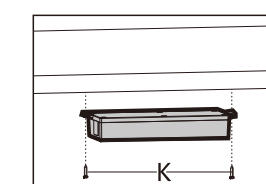


The distance of the telescoping of the supporting crossbeam can be adjusted according to the actual usage situation.

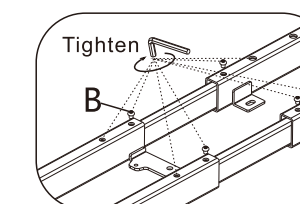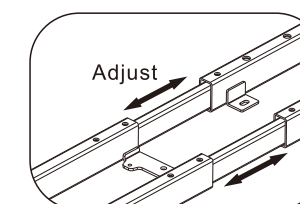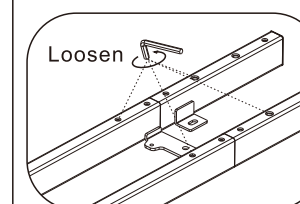


STEP8

Connect the cables

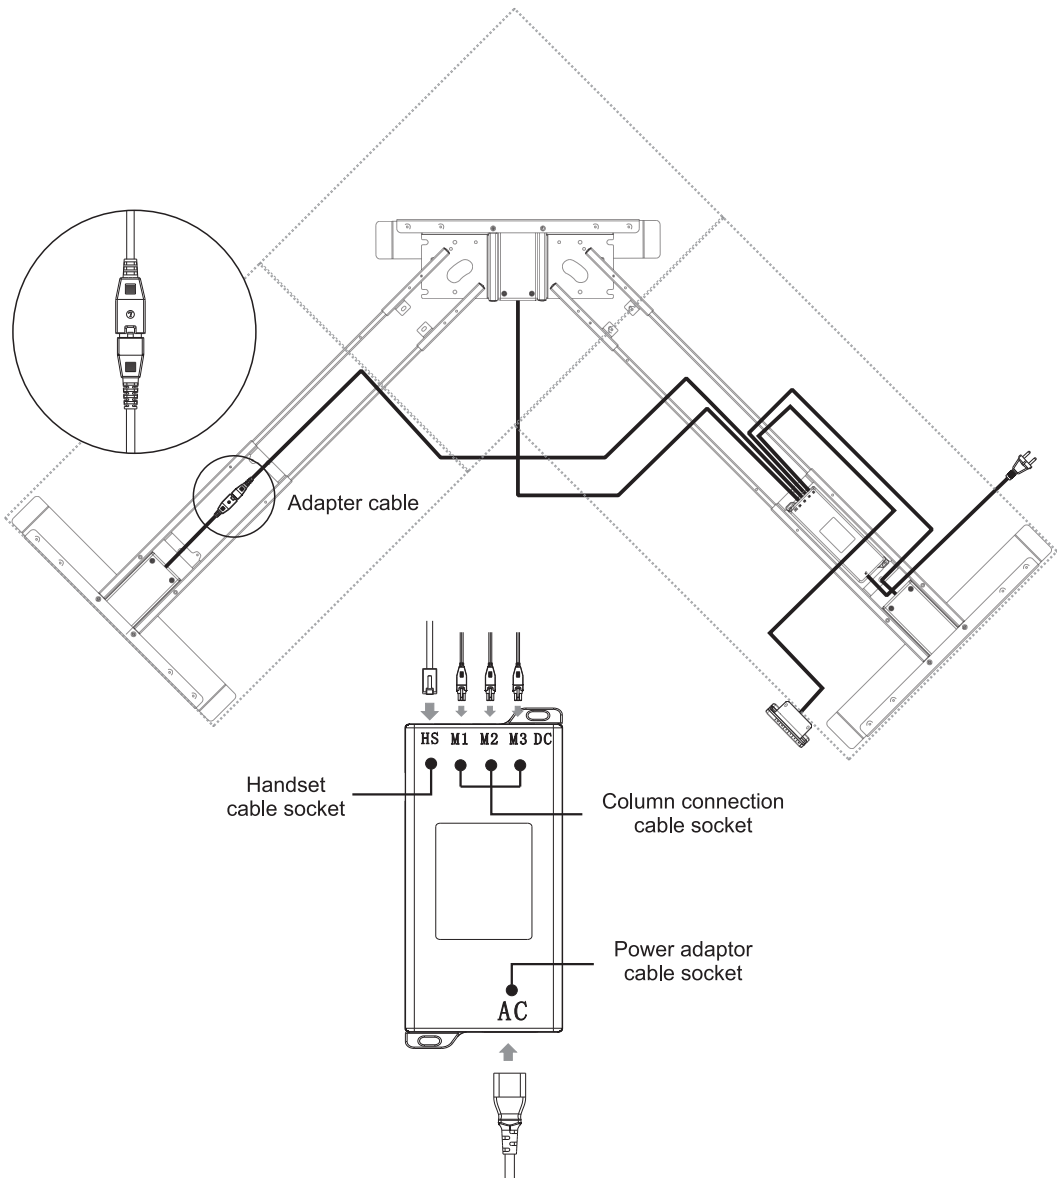


Self-prepared

Use Cable clip to secure the various connecting wires to the desktop, keeping the cables tidy.

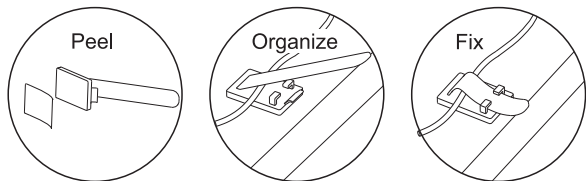

Instructions for using and setting up the handset

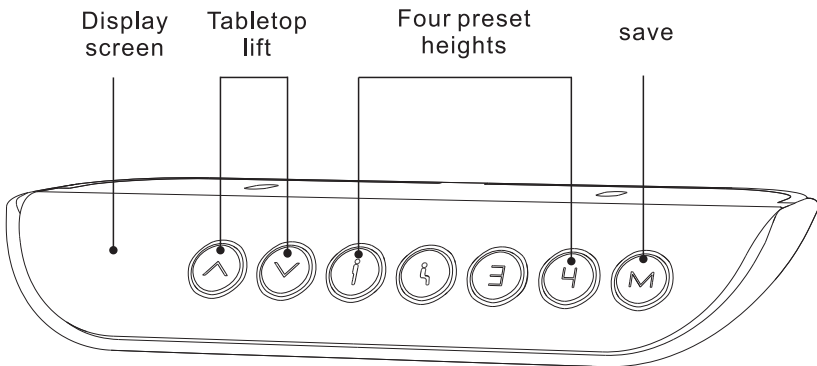


Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.

Suggestion


Set the most comfortable height when sitting as "↓" and the most comfortable height when standing as "↑". Additional preset heights can be freely set to other heights.

● Button Control for Height Adjustment

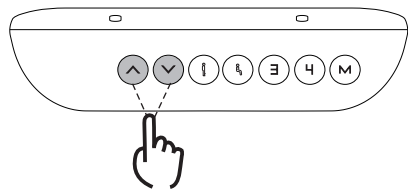


a. By pressing the "↑" or "↓" button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.

● Height Memory Function

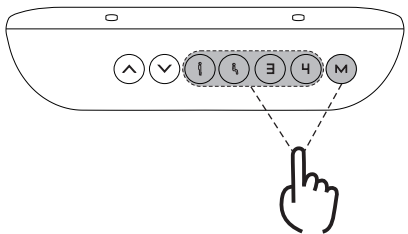

a. Use the up or down key to adjust the height of the lifting desk to the desired level, press the "M" save button, the display screen will show "5-"; then press the "↑" or "↓" or "3" or "4" key to save the height to position "↑" or "↓" or "3" or "4", and the corresponding display screen will show "5-1" or "5-2" or "5-3" or "5-4".
b. Press the "↑", "↓", "3" or "4" button to automatically adjust the desk to the previously saved position.

● Adjusting Collision Sensitivity (Optional)

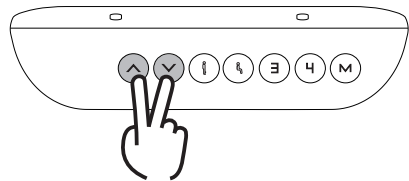

a. By simultaneously holding down the "↑" and "↓" keys for 5 seconds, you can switch the sensitivity. One operation will switch to the next level, divided into 4 levels (A-3, A-2, A-1, A-0).

The display screen shows "A-0", indicating that the collision prevention function is turned off.

The display screen shows "A-1", indicating low sensitivity.


The display screen shows "A-2", indicating medium sensitivity.

The display screen shows "A-3", indicating high sensitivity.

b. When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.

c. If the display screen does not show any of the above codes when simultaneously holding down the "↑" and "↓" keys for 5 seconds, it means that there is no collision prevention function.

● Error Code Processing

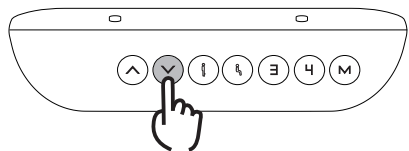

a. Reset function definition: The LED display shows "R5r" or "r-5t". The user holds down the down arrow key "↓" until the desk lowers to the lowest position and then rebounds up to a stop. The display will show the lowest height. After releasing the "↓" down key, the reset is complete and the desk can be used normally again.

b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.

c. If you encounter any other error codes and the "↓" button does not respond, please check if the connection cable is undamaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The LED screen will display "R5r" or "r-5t". Press and hold the "↓" button to reset.

d. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

Troubleshooting

This list is used for checking and solving faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	Check if the load weighs more than 397 lbs
The worksurface slides downward	
The device often enters the reset state	Perform a reset operation
Only descending, not ascending, or only ascending, not descending	
Insufficient height for ascending and descending	
The bottom cannot rise	Power off for 18 minutes and then reconnect the power
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table

Attention

- 1.Power supply: AC100V-240V, frequency 50/60Hz.
- 2.Operating environment: Indoor, 0-40° .
- 3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
- 4.The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
- 5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
- 6.Before first use, familiarize yourself with all the functions and program settings of the product.
7. Children are not allowed to play on this product. Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
11. Children should not perform cleaning and user maintenance without supervision.
12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.