


Item NO.: HG-HCX941-712US

Note:Please read all instructions before assembly or install the product, if have any question, contact us in time.

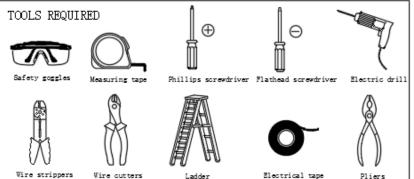

WARNING: (To reduce the risk of fire, electric shock, or injury to persons):

- 1. We suggest installation by a licensed electrician.
 2. Please read the instruction carefully and save it as you may need it at later time.
 3. Before you start, NEVER attempt any work without shutting off the electricity
- Go to the main fuse, or circuit breaker, box in your home. place the main power
- switch in the "OFF" position. B).

 Place the wall switch in the "OFF" position.

 4. Mounting surface should be clean, dry, flat, strong enough and 1/4" larger than
- Any gaps between the mounting surface and canopy exceeding 3/16" should be
- corrected as required.

 5. Make sure that the ceiling or wall can stand the weight of the lamp before fixture.

 6. Make sure the voltage you are using is 120V. The maximum wattage is 40W per bulb.

 7. Keep the lamp away from acidic and basic objects in case of damaging the
- 8. When replacing bulb, you should turn off or unplug the lamp and you must wait until it is cool as bulbs get hot quickly.
- 9. The safety instructions appearing in this manual are not meant to cover all
- possible conditions that may occur.
- It must be understood that common sense, caution and care must be used with any
- electrical products.

 10.Do not touch the bulb or lamp shade during the lighting fixture working.

 11.An individual grounding conductor of a chain—and—canopy suspended.

 Luminaire shall be interwoven through the chain from the luminaire to the canopy.