



 
ITEM #5711886
MODEL #43369

LED FLOOR LAMP

Español p. 8

STYLE SELECTIONS and logo design
are trademarks or registered trademarks
of LF, LLC. All rights reserved.

ATTACH YOUR RECEIPT HERE

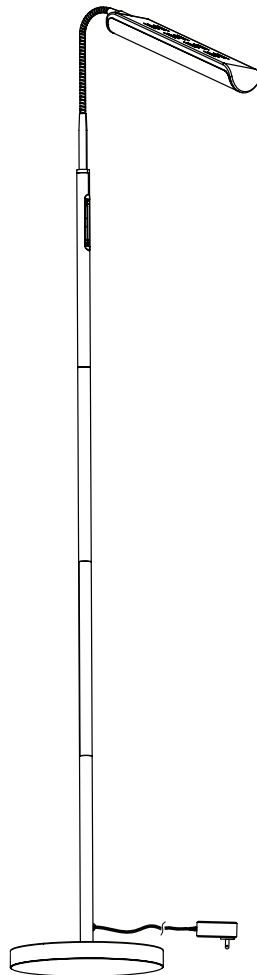

Purchase Date _____

Thank you for purchasing this STYLE SELECTIONS product.
Questions, problems, missing parts?
Before returning, to your retailer, contact us at:
877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Sunday or **ascs@lowes.com**.

DF25293

TABLE OF CONTENTS

Package Contents 3

Safety Information 4

Care and Maintenance 4

Preparation 4

 
Assembly Instructions 5

Operating Instructions 6

Troubleshooting 7

3-Year Limited Warranty 7

PACKAGE CONTENTS

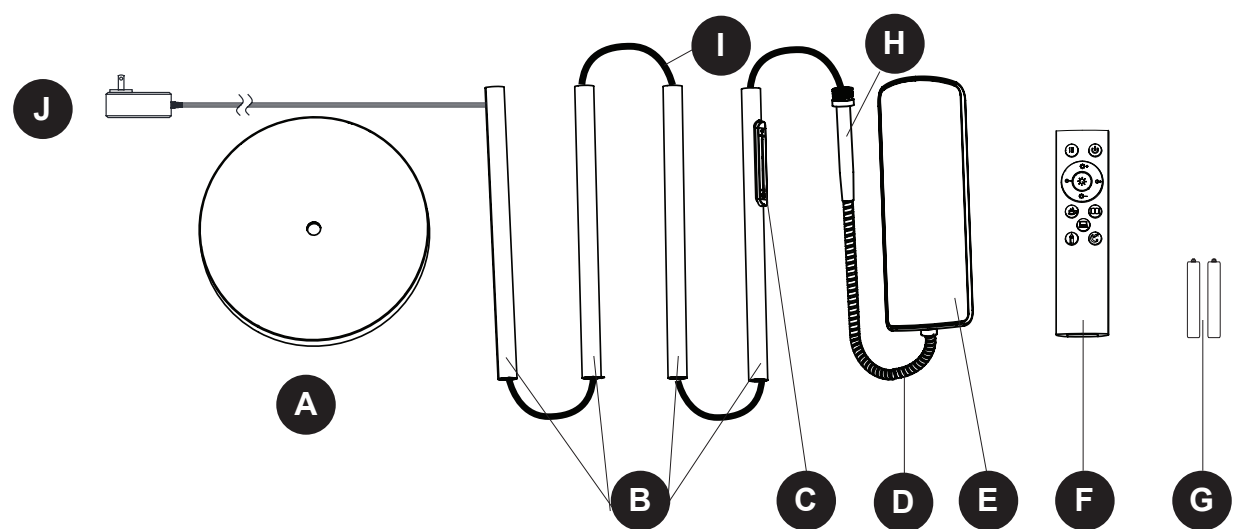

PART	DESCRIPTION	QUANTITY
A	Base	1
B	Tube (preassembled to Lamp Wire [H])	4
C	Light control (preassembled to Tube [B])	1
D	Gooseneck (preassembled to Gooseneck Tube [H])	1
E	LED Lamp (preassembled to Gooseneck [D])	1
F	Remote Control	1
G	Battery	2
H	Gooseneck Tube (preassembled to Lamp Wire [I])	1
I	Lamp Wire	1
J	Power Adapter (preassembled to Lamp Wire [I])	1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.

The net weight of the light is 4.11 lbs.

CAUTION:

- Use the lamp indoors only.
- Keep out of reach of young children and pets.
- The lamp head and the power adapter will be quite warm during operation -- this is normal.
- If the lamp will not be used for extended periods of time, disconnect the power adapter from outlet.
- The LED lens is not replaceable.
- The electrical parts can only be serviced by a qualified repairman.
- This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:
1) This device may cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

Please note changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CARE AND MAINTENANCE

To clean the lamp, use a clean dry cloth. Wait 10 minutes after disconnecting the lamp from power source to allow time to cool.

Battery Replacement: Use 1.5 V (AAA) alkaline batteries. **WARNING:** Keep batteries out of reach of children. May be fatal if swallowed. In the event that a battery is swallowed, immediately consult a doctor. Non-rechargeable batteries are not to be recharged. Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries. Do not mix old and new batteries. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. Do not dispose of batteries in fire, as they may explode or leak.

 
PREPARATION

Estimated Assembly Time: 10 minutes


No Tools Required for Assembly

ASSEMBLY INSTRUCTIONS

1. Starting with the tube (B) to which the power adapter (J) is connected, twist the tube (B) onto the base (A). Then, continue twisting the tubes (B) together and finally twist the gooseneck tube (H) onto the top tube (B).

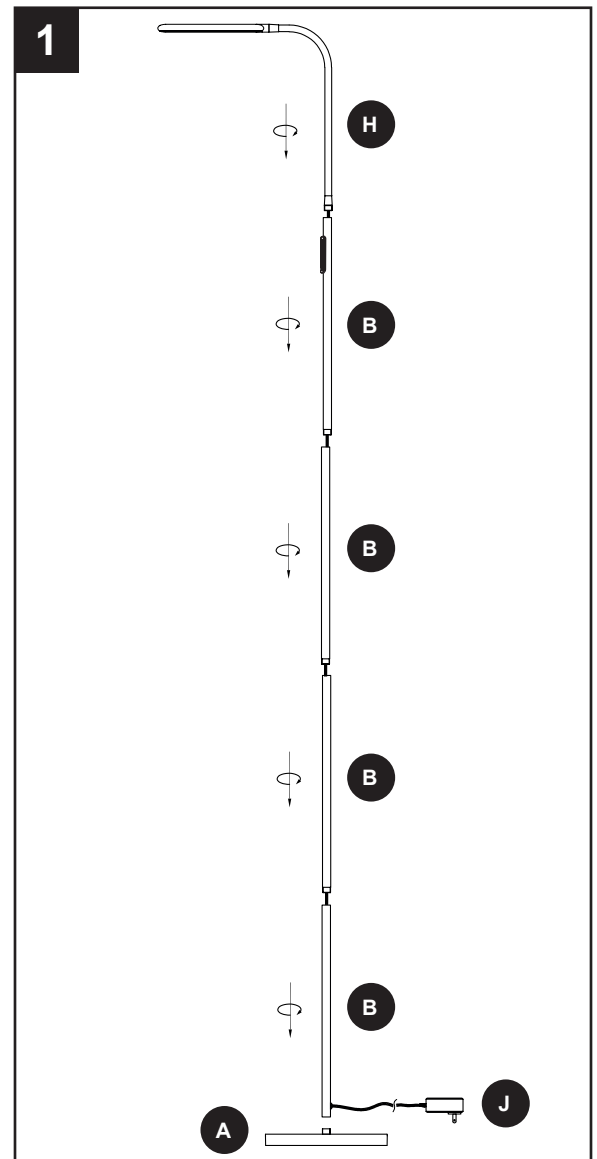

 
2. Plug the power adapter (J) into a grounded 120 V outlet.

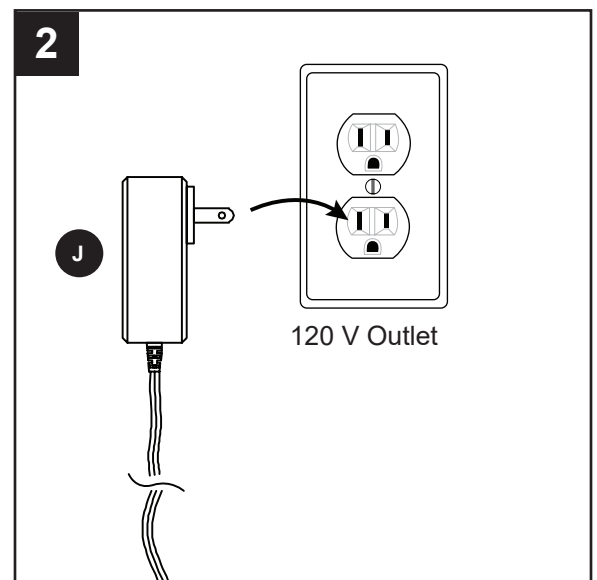

OPERATING INSTRUCTIONS


1. To operate the lamp using the light control (C):

 -  Color change: Press and hold button to cycle through the color temperatures from 3000K (warm white) to 5000K (daylight).
-  Increase brightness: Press and hold to increase the brightness of the light.
-  Light dimmer: Press and hold to dim the brightness of the light.
-  Power on/off: Press button to turn light on/off.
Note: If the power on/off button does not turn on the lamp, see TROUBLESHOOTING (page 7).

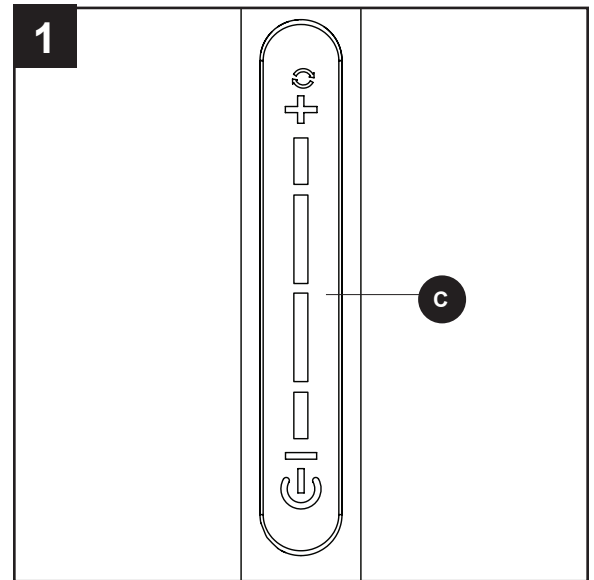


2. Remove the battery cover from the back of the remote (F). Insert the batteries (G) into the remote; ensure polarity of battery matches the polarity indicated in the battery compartment -- positive (+) to positive (+) and negative (-) to negative (-). Replace the battery cover and press the on/off button on the remote to ensure the remote turns on the lamp.

 Note: If remote does not turn on the lamp, see TROUBLESHOOTING (page 7).

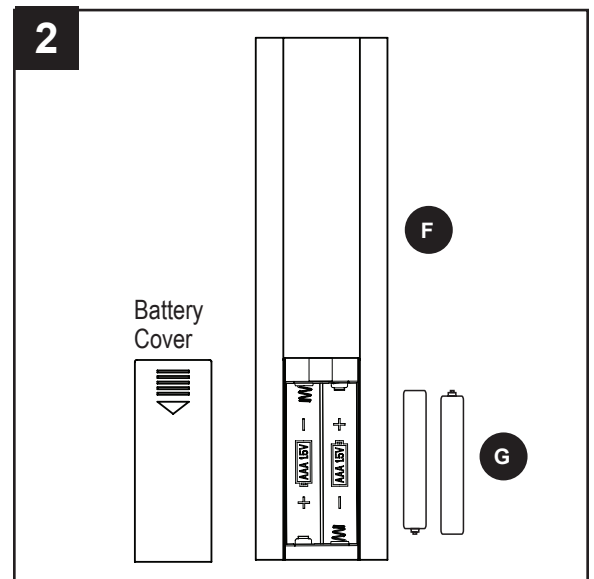

3. To operate lamp using remote control, press the following buttons:

 -  Turn light on/off
-  Turn off light in one hour
-  Turn on light at 4000K and 100% brightness
-  Increase brightness up to 100%
-  Decrease brightness down to 10%
-  Increase color temperature up to 5000K
-  Decrease color temperature down to 3000K
-  Leisure mode: 3000K at 100% brightness
-  Reading mode: 4000K at 50% brightness
-  Office mode: 5000K at 50% brightness
-  Baby feeding mode: 3000K at 50% brightness
-  Sleep mode: 3000K at 25% brightness

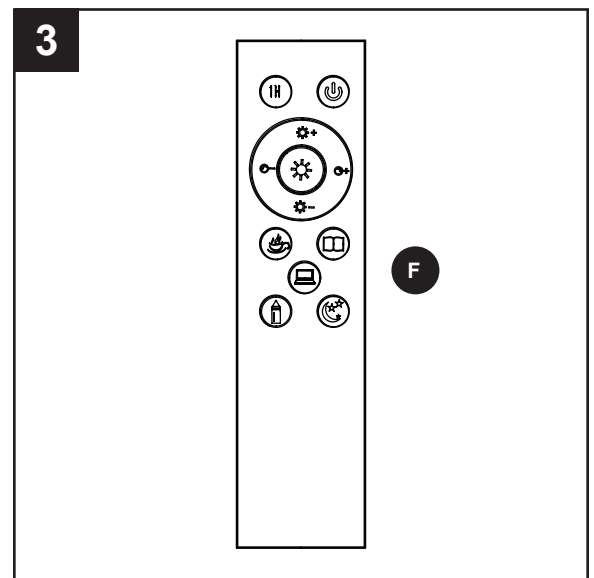

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Light does not turn on.	The power is off, or the fuse is blown.	Turn the power on or check the fuse.
Remote does not work.	1. Power surge may have cleared memory and remote needs to be re-synced to the receiver. 2. Batteries in remote control needs to be replaced.	1. Disconnect the lamp from outlet for 10 seconds and then reconnect it. Within 5 seconds, press and hold the power button (⏻) until the light comes on. Light will blink to signal a successful synchronization. 2. Insert new AAA batteries in battery compartment of the remote.

3-YEAR LIMITED WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.