

MANUAL INSTRUCTION

TV Stand H21015



TV Stand H21015



We offer a diverse range of products to
meet the needs of customers.

Indoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Ours mission is to provide consumers with new lifestyles By collecting consumer feedback,we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

All the TV stands have passed strict quality inspections before delivery. Read this manual carefully to ensure proper usage



WARNING

Ensure that all parts
and hardware are
available before
beginning assembly

NOTICE

1. Children are not allowed to operate.
 2. Faster installation is possible with power tools.
 3. Do not pull the door vigorously to prevent the storage cabinet from tipping over.
 4. Please attach the storage cabinet to the wall with an anti-tip device after installation is complete.
 5. When using the storage cabinet for the first time, please keep it in a ventilated environment to allow the smell to fully evaporate.
 6. When placing the partitions, please make sure the nails are firmly installed to prevent the partitions from falling off.
 7. If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
 8. Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
 9. If accessories are missing, please contact customer service for communication in time, we provide 7x24 hours after-sales service.
 10. Do not use any attachments or accessories other than the original factory attachments and accessories.
 11. Do not alter this equipment. Any alteration will create a safety hazard.
-

WARNING

1. Follow each step carefully to ensure the proper assembly of this product.
2. Two people are recommended for ease in the assembly of this product.
3. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
4. A Phillips head screwdriver is required for the assembly of this product.
5. Power tools should not be used to assemble this product.

TOOLS REQUIRED



Screwdriver



2-4 Persons Assembly

 
 


 
 


Minimum 120 Minutes For Assembly

 

 

 
 



PARTS
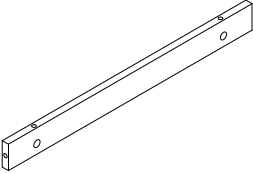
<div>1</div> <div></div> <div>2PCS</div>	<div>2</div> <div></div> <div>1PC</div>
<div>3</div> <div></div> <div>2PCS</div>	<div>4</div> <div></div> <div>1PC</div>
<div>5</div> <div></div> <div>1PC</div>	<div>6</div> <div></div> <div>1PC</div>
<div>7</div> <div></div> <div>1PC</div>	<div>8</div> <div></div> <div>1PC</div>

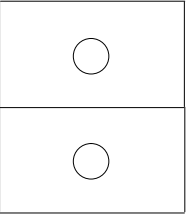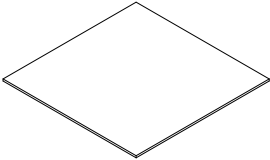PARTS


<div>9</div> <div></div> <div>1PC</div>	<div>10</div> <div></div> <div>1PC</div>
<div>11</div> <div></div> <div>1PC</div>	<div>12</div> <div></div> <div>1PC</div>
<div>13</div> <div></div> <div>2PCS</div>	<div>14</div> <div></div> <div>2PCS</div>

 I HARDWARE


<p>A</p>  <p>$\phi 8 * 30 \text{ mm}$ 6PCS</p>	<p>B</p>  <p>$\phi 15 * 12 \text{ mm}$ 22+1PCS</p>	<p>C</p>  <p>$\phi 6 * 43 \text{ mm}$ 22+1PCS</p>
<p>D</p>  <p>M6 * 12 mm 4+1PCS</p>	<p>E</p>  <p>M6 * 30 mm 10+1PCS</p>	<p>F</p>  <p>M6 * 40 mm 4+1PCS</p>
<p>G</p>  <p>M4 1PC</p>	<p>H</p>  <p>8+1PCS</p>	<p>I</p>  <p>$\phi 20$ 26PCS</p>

PRODUCT ASSEMBLY TV Stand

 - 1** 1. Use 4 bolt "F" secure part ① to part ③ with hex key "G" as per diagram
2. Use 4 bolt "D" to secure the middle of part ③ and the both sides of part ② as per diagram.

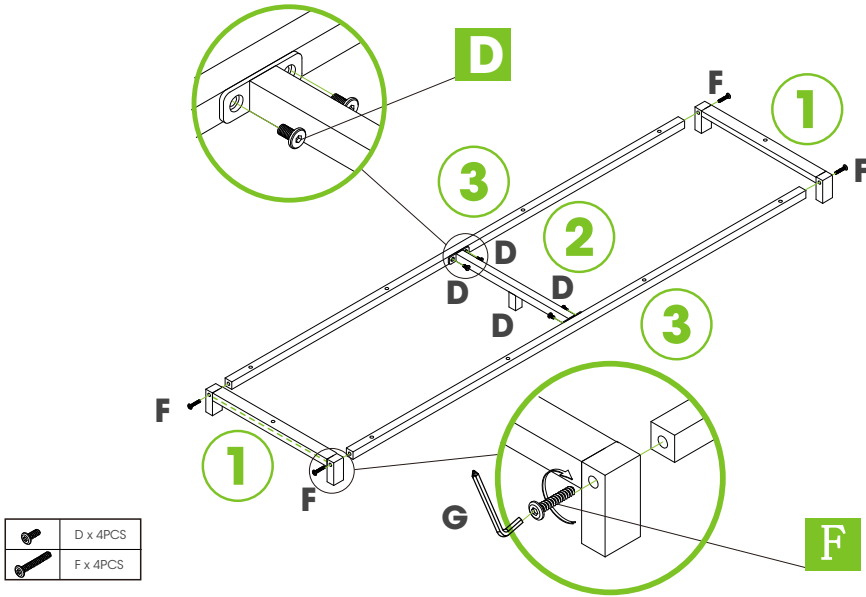

 
- 2** Using 10 bolt "E" secure the Installed part (①②③) to part ⑤ with hex key "G" as per diagram E

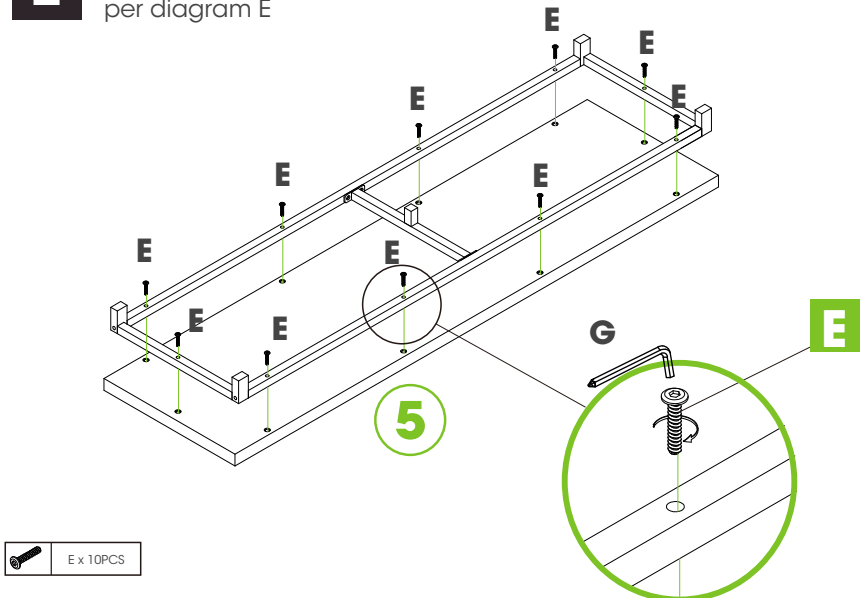

PRODUCT ASSEMBLY


3

 Turn the assembled parts in step 2 face up, and secure 8 cam bolt "c" into part ⑤ with Philips head screwdriver as per diagram.

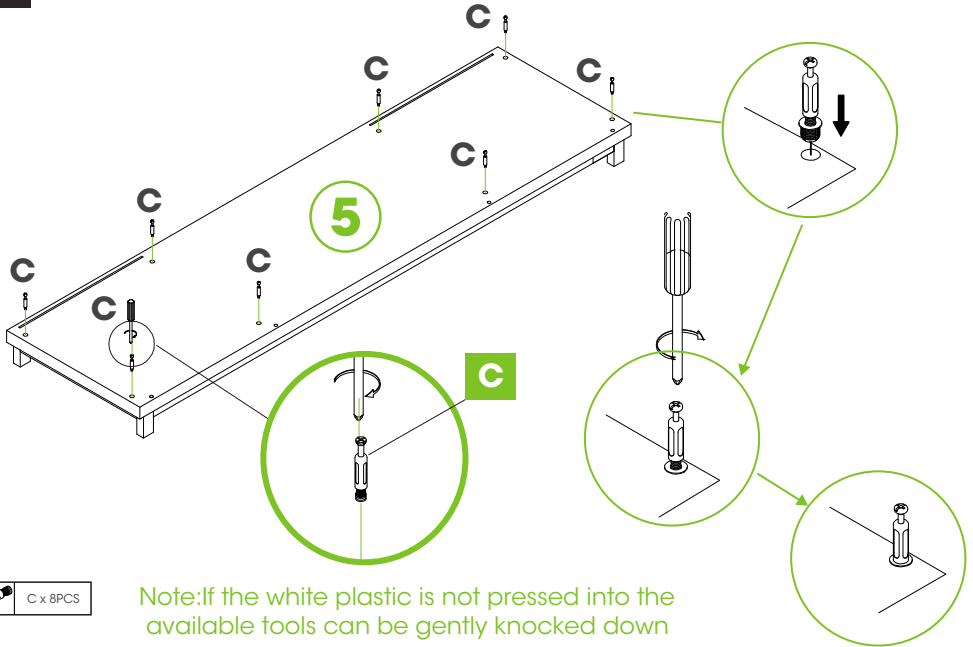

4.1

 Install 2 cam bolt "C" to the corresponding holes of part ⑪, and in the same way, install 2 cam bolt "C" to the corresponding holes of part ⑫.

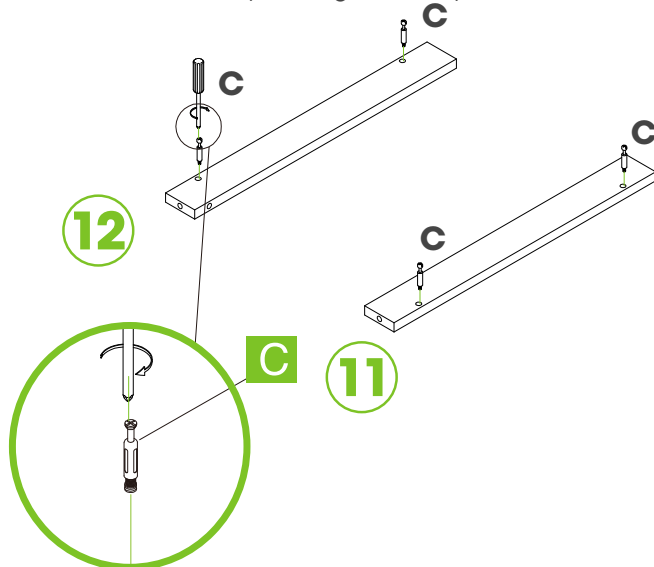

1

4.2

Connect part⑨and part⑫with 2 cam lock"B",and similarly connect part⑪and part with 2 cam lock "B",locking the"B" clockwise.



PRODUCT ASSEMBLY

4.3

 
Use 2 wooden dowel "A" to connect part⑪ & part⑫ with part⑩.

Two People cooperate, and then use 2 wooden dowel "A" to connect part⑪ & part⑫ with part⑤.

Align the holes on the bottom of part⑧ & part⑩ with 4 camlock "C" above the part⑤, as per diagram.

Then put 4 cam lock "B" into the corresponding holes of part⑧ & part⑩, and tighten cam lock "B" clockwise.

NOTE: The slotting direction of part⑧ & part⑩ is adjacent to the slot of part⑤ when installed correctly!

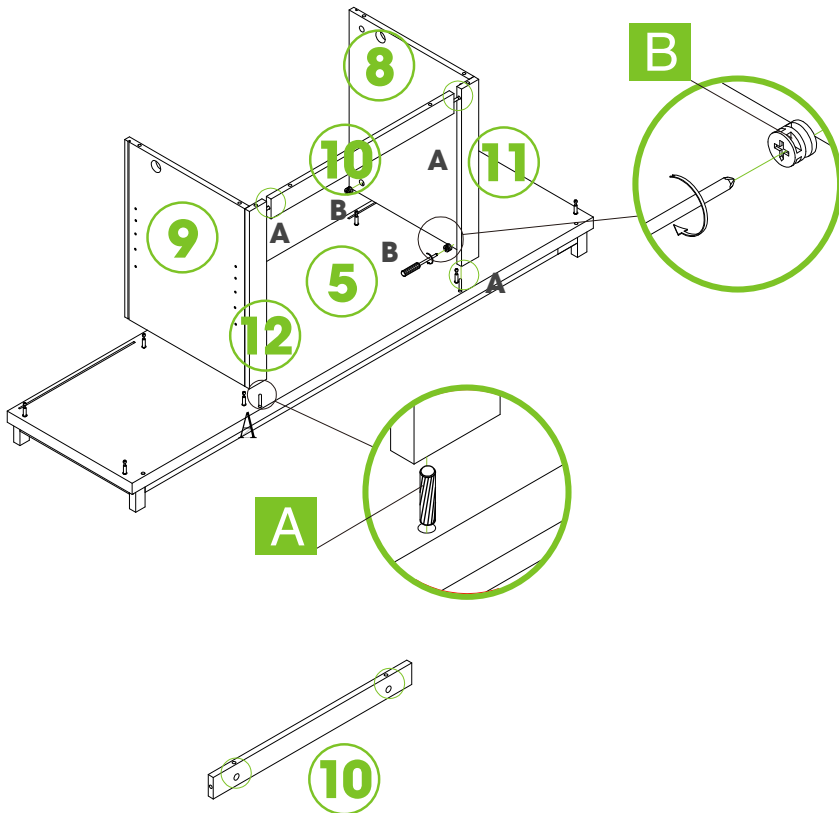


NOTE: For aesthetics, when installing part⑩, place the two large holes towards the inside of the cabinet.

	A x 4PCS
	B x 4PCS

PRODUCT ASSEMBLY

5

 - 1.Align the holes on the bottom of the part⑥&part⑦ with the 4 cam bolt "C"above the part⑤as per diagram.
- 2.Put 4 cam lock"B"into the corresponding holes of part⑥&part⑦, and tighten cam lock"B"clockwise. .

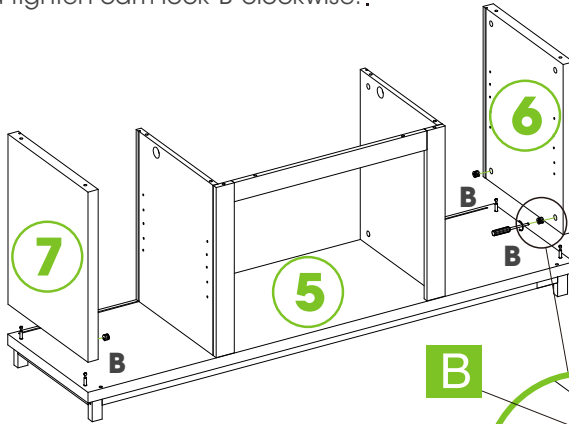

NOTE:When installing, pay attention to distinguish between part⑥ and part⑦, part⑥ is on the left side, and part⑦ is on the right side.

Note: The slotting direction of part⑥ & part⑦ is adjacent to the slot of part⑤ when installed correctly!

 


6

Snap the two part ⑬ down to the bottom along the card slot.

Note:



- 1.The bottom of part⑬ also needs to be snapped into the slot of part⑤.
- 2.For aesthetics, the white side of part⑬, towards the inside of the cabinet; the yellow side of part⑬, towards the outside of the cabinet

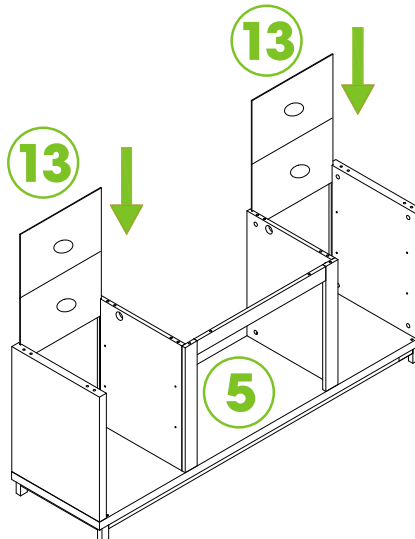

PRODUCT ASSEMBLY

7

  
Screw 10 cam bolt "C" into part ④ corresponding holes as per diagram.

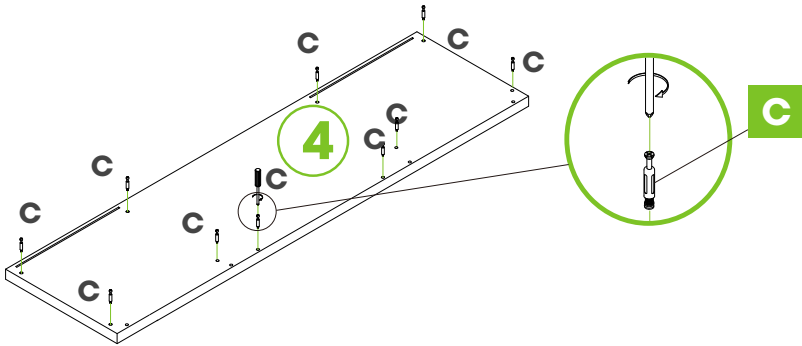


8

Put Two "A" into the holes of part ⑪ and part ⑫, then put "4" into the corresponding position and lock it clockwise with 10 "B", note that "13" should be stuck into the 4 slots.

 Note: Pay attention to lightly put, do not violently press

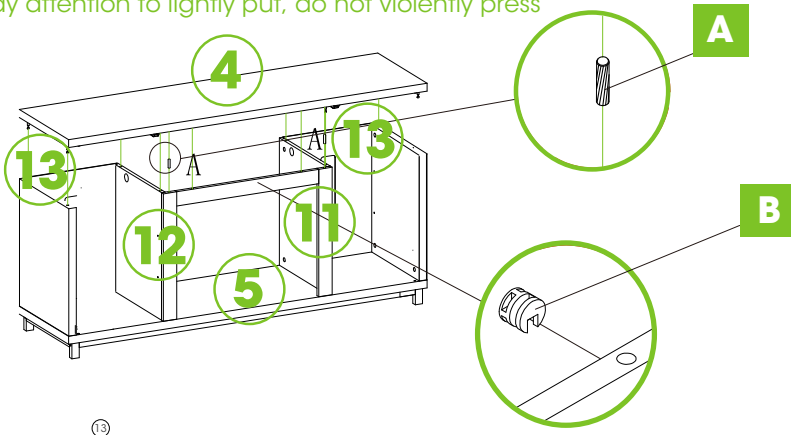

⑬

 


Part ⑬ needs to be snapped into the slot of part ④. While installing part ④, the hardware of part ⑬ needs to be snapped into the corresponding holes of part ④ & part ⑤.

PRODUCT ASSEMBLY


9

 - 1.Put 8"H" into the corresponding holes.
- 2.Then put the glass laminate(part ⑭)into the cabinet.
The cabinet installation is completed.

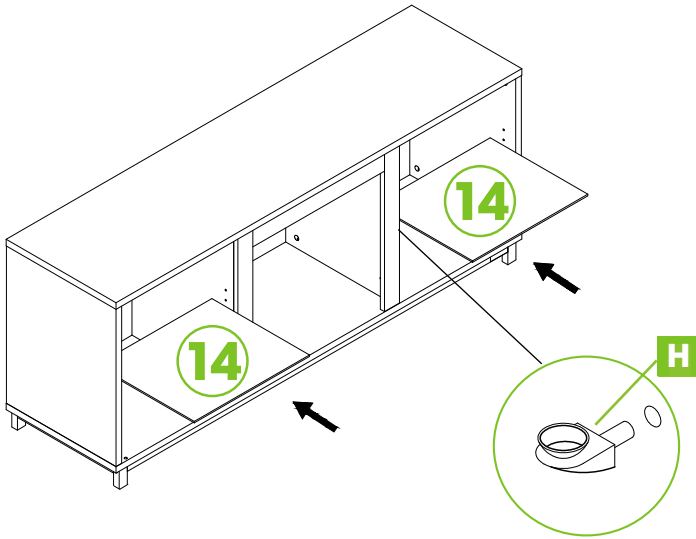

10

 - For beauty, you can cover the exposed holes with "I" according to your needs

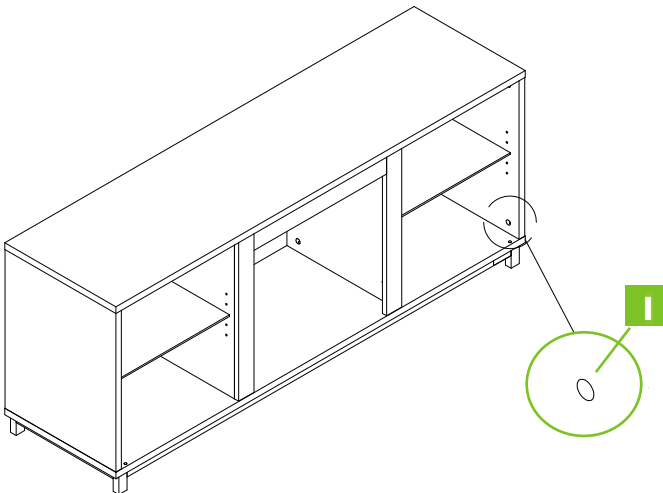


PRODUCT ASSEMBLY

1


Align and attach two side trims(Y) to both sides of the fireplace insert(W) respectively with the right angle side facing the front of the unit, using two screws(12) per trim.

 NOTE: Dear customer, if you purchase a TV stand & fireplace set, the package for the fireplace and the package for the TV stand will be delivered separately. If you purchase only the TV stand, the fireplace is not included.

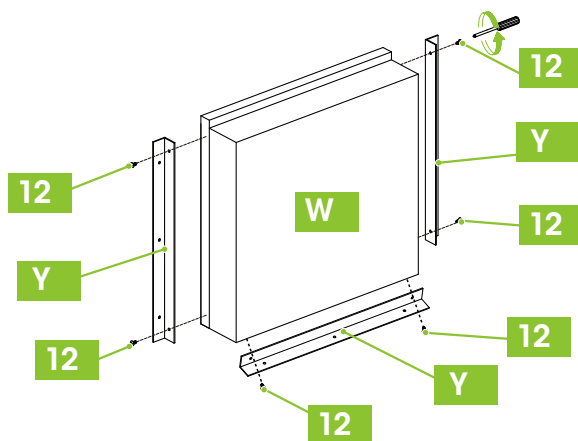


2

 Put the fireplace into the cabinet from the back until the front is against the board. Secure with screw 12 as shown.

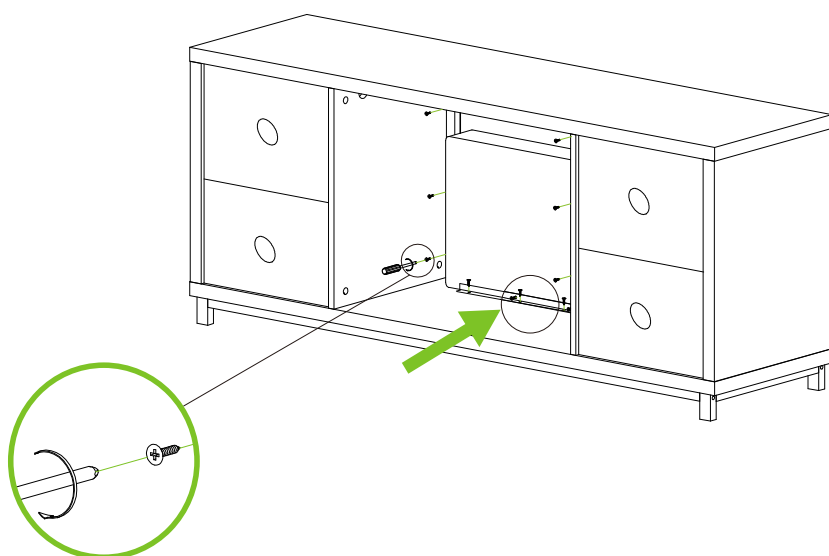


PRODUCT ASSEMBLY


 
3

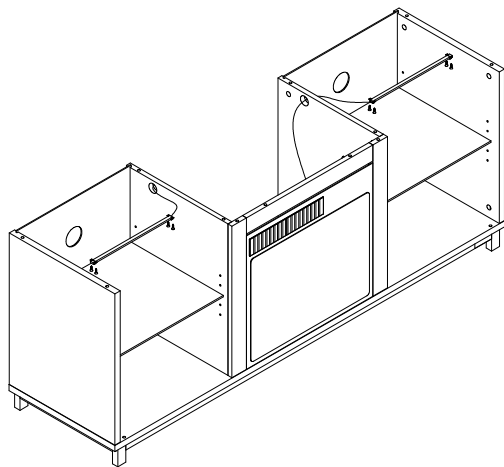

 1. Put the light strip wire through the hole (one long wire and one short wire);
2. Put the long one on side farther from the fireplace wire; the short one on the side closer to the fireplace wire;

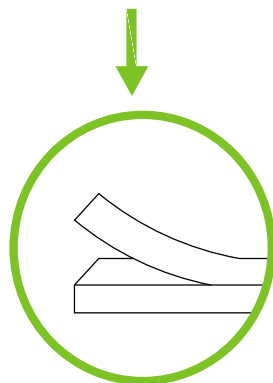

  
3. Tear off the double-sided tape of the light strip and stick it on the board;

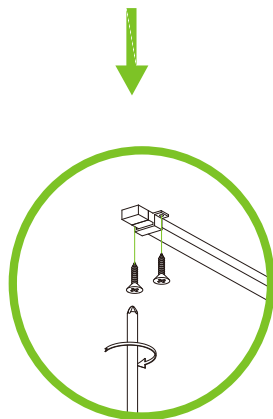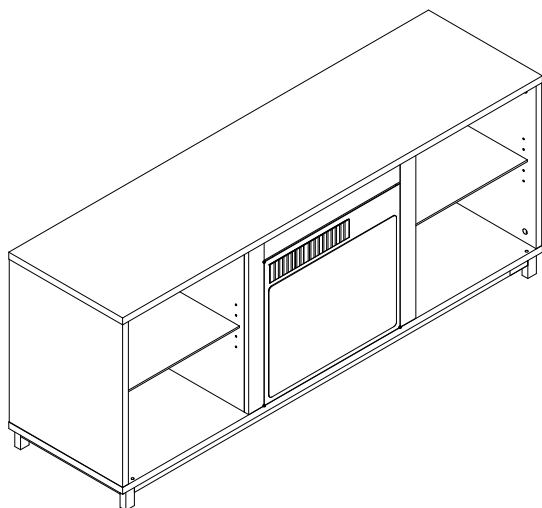


4. Hold the light strip with the clip and lock the screw.

HELP CENTER

 
Question about your product? We're here to help. Visit us at:




Chat Support

 


Product Inquiry

 

Orders FAQ

 

Product Assembly

 

Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with. Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase. In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be:

 
- (1) In a brand new/unused condition, please provide photos before and after packaging.
 - (2) When returning, all accessories and parts are firmly packed in all original packaging.
- If your return does not meet the requirements, you may not get a full refund.

When will I be refunded? The refund is released once the goods have been returned to our warehouse. What if the product is damaged/defective outside of the valid return period? We want you to be a happy customer.

Please reach out to us by email and we will come up with a solution to make sure you are satisfied.

MANUAL INSTRUCTION

TV Stand H21015+door

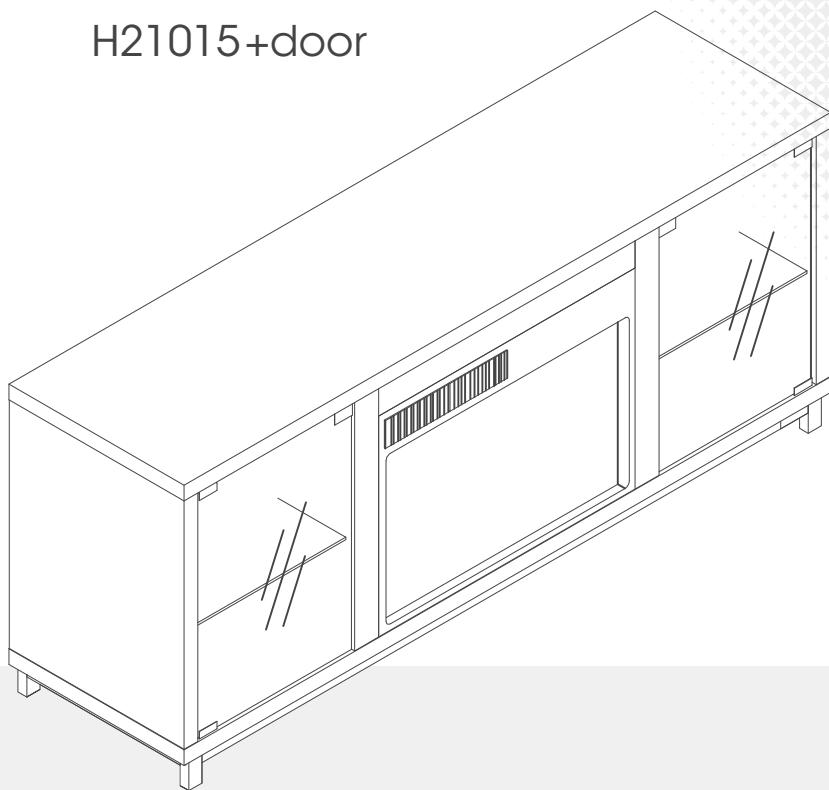

TV Stand H21015+door



We offer a diverse range of products to
meet the needs of customers.

Indoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Ours mission is to provide consumers with new lifestyles By collecting consumer feedback,we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

All the TV stands have passed strict quality inspections before delivery. Read this manual carefully to ensure proper usage



WARNING

Ensure that all parts
and hardware are
available before
beginning assembly

NOTICE

1. Children are not allowed to operate.
 2. Faster installation is possible with power tools.
 3. Do not pull the door vigorously to prevent the storage cabinet from tipping over.
 4. Please attach the storage cabinet to the wall with an anti-tip device after installation is complete.
 5. When using the storage cabinet for the first time, please keep it in a ventilated environment to allow the smell to fully evaporate.
 6. When placing the partitions, please make sure the nails are firmly installed to prevent the partitions from falling off.
 7. If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
 8. Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
 9. If accessories are missing, please contact customer service for communication in time, we provide 7x24 hours after-sales service.
 10. Do not use any attachments or accessories other than the original factory attachments and accessories.
 11. Do not alter this equipment. Any alteration will create a safety hazard.
-

WARNING

1. Follow each step carefully to ensure the proper assembly of this product.
2. Two people are recommended for ease in the assembly of this product.
3. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
4. A Phillips head screwdriver is required for the assembly of this product.
5. Power tools should not be used to assemble this product.

TOOLS REQUIRED



Screwdriver



2-4 Persons Assembly

 
 


 
 
 


Minimum 120 Minutes For Assembly

 



 
 


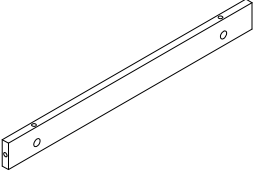 

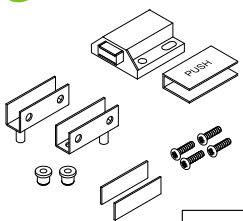 
PARTS
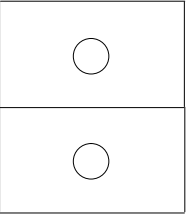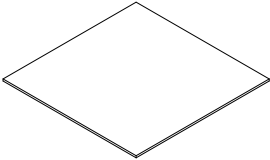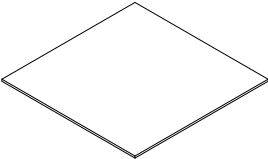
<div>1</div> <div></div> <div>2PCS</div>	<div>2</div> <div></div> <div>1PC</div>
<div>3</div> <div></div> <div>2PCS</div>	<div>4</div> <div></div> <div>1PC</div>
<div>5</div> <div></div> <div>1PC</div>	<div>6</div> <div></div> <div>1PC</div>
<div>7</div> <div></div> <div>1PC</div>	<div>8</div> <div></div> <div>1PC</div>

PARTS


<div>9</div> <div></div> <div>1PC</div>	<div>10</div> <div></div> <div>1PC</div>
<div>11</div> <div></div> <div>1PC</div>	<div>12</div> <div></div> <div>1PC</div>
<div>13</div> <div></div> <div>2PCS</div>	<div>14</div> <div></div> <div>2PCS</div>
<div>15</div> <div></div> <div>2PCS</div>	

I HARDWARE


<p>A</p>  <p>$\phi 8 * 30$ mm 6PCS</p>	<p>B</p>  <p>$\phi 15 * 12$ mm 22+1PCS</p>	<p>C</p>  <p>$\phi 6 * 43$ mm 22+1PCS</p>
<p>D</p>  <p>M6 * 12 mm 4+1PCS</p>	<p>E</p>  <p>M6 * 30 mm 10+1PCS</p>	<p>F</p>  <p>M6 * 40 mm 4+1PCS</p>
<p>G</p>  <p>M4 1PC</p>	<p>H</p>  <p>8+1PCS</p>	<p>I</p>  <p>$\phi 20$ 26PCS</p>
<p>J</p>  <p>3 * 14 mm 8+1PCS</p>	<p>K</p>  <p>2PCS</p>	

PRODUCT ASSEMBLY TV Stand

 - 1** 1. Use 4 bolt "F" secure part ① to part ③ with hex key "G" as per diagram
2. Use 4 bolt "D" to secure the middle of part ③ and the both sides of part ② as per diagram.

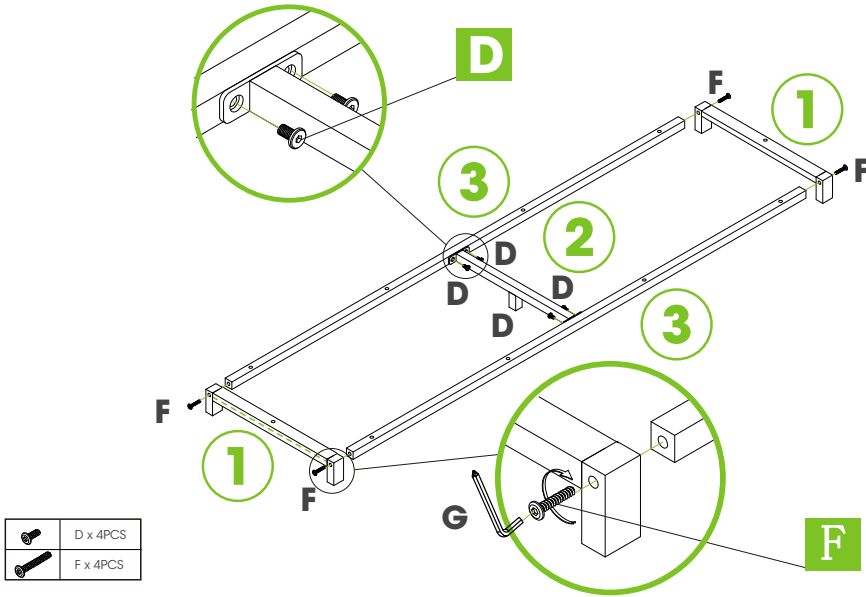

 
- 2** Using 10 bolt "E" secure the Installed part (①②③) to part ⑤ with hex key "G" as per diagram E

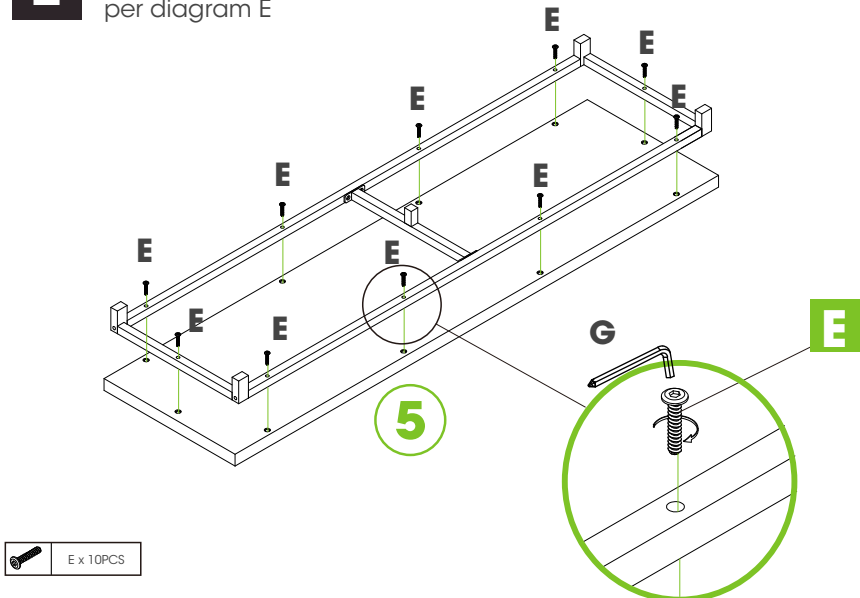

PRODUCT ASSEMBLY


3

 Turn the assembled parts in step 2 face up, and secure 8 cam bolt "c" into part ⑤ with Philips head screwdriver as per diagram.

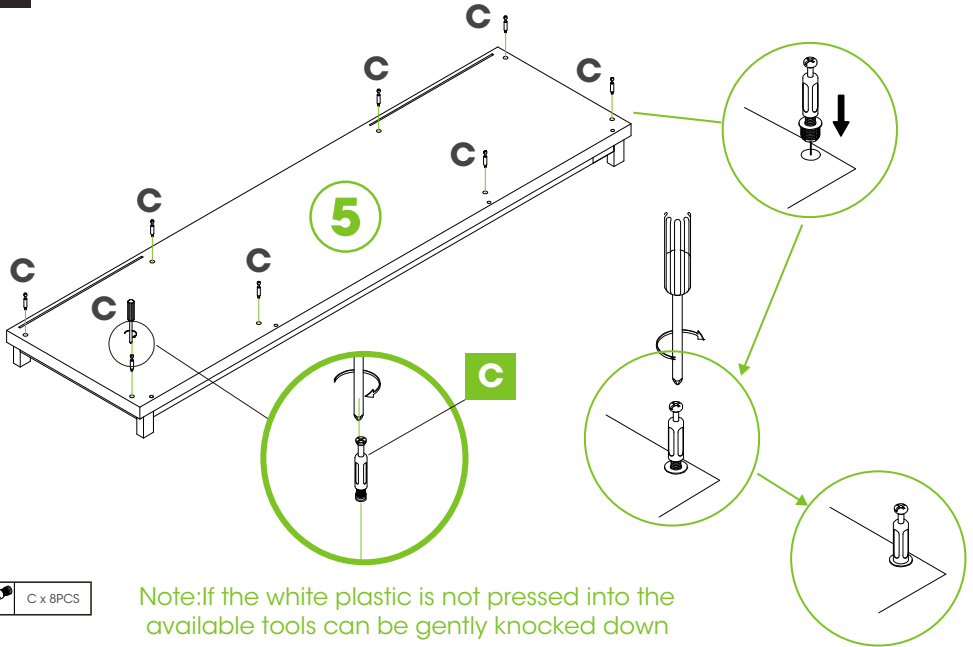

4.1

 
Install 2 cam bolt "C" to the corresponding holes of part ⑪, and in the same way, install 2 cam bolt "C" to the corresponding holes of part ⑫.

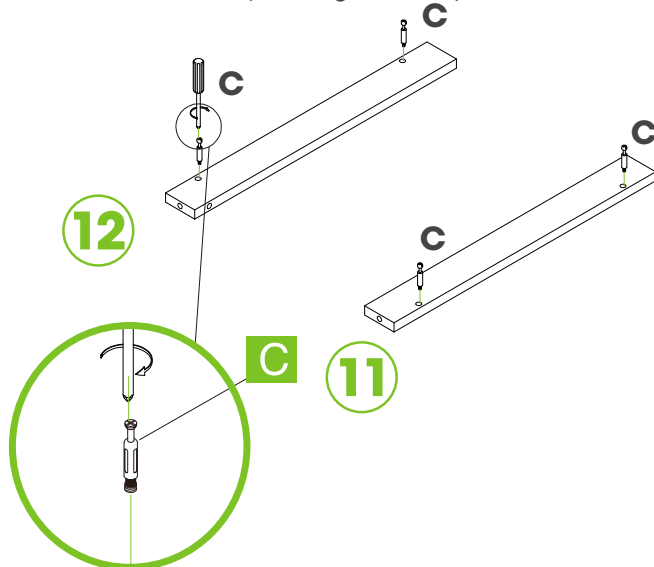

PRODUCT ASSEMBLY

4.2

 Connect part ⑨ and part ⑩ with 2 cam lock "B", and similarly connect part ⑩ and part ⑪ with 2 cam lock "B", locking the "B" clockwise.

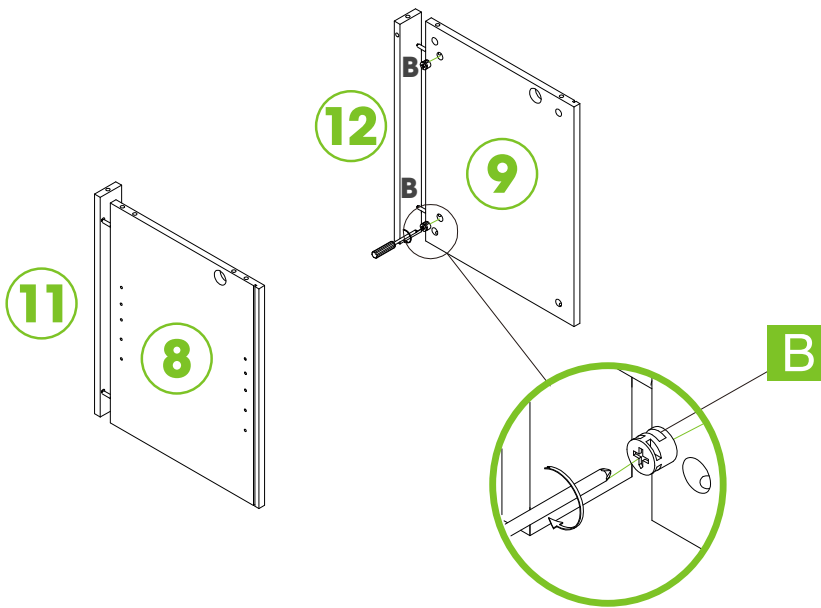

PRODUCT ASSEMBLY

4.3

 
Use 2 wooden dowel "A" to connect part⑪ & part⑫ with part⑩.

Two People cooperate, and then use 2 wooden dowel "A" to connect part⑪ & part⑫ with part⑤.

Align the holes on the bottom of part⑧ & part⑩ with 4 camlock "C" above the part⑤, as per diagram.

Then put 4 cam lock "B" into the corresponding holes of part⑧ & part⑩, and tighten cam lock "B" clockwise.

NOTE: The slotting direction of part⑧ & part⑩ is adjacent to the slot of part⑤ when installed correctly!

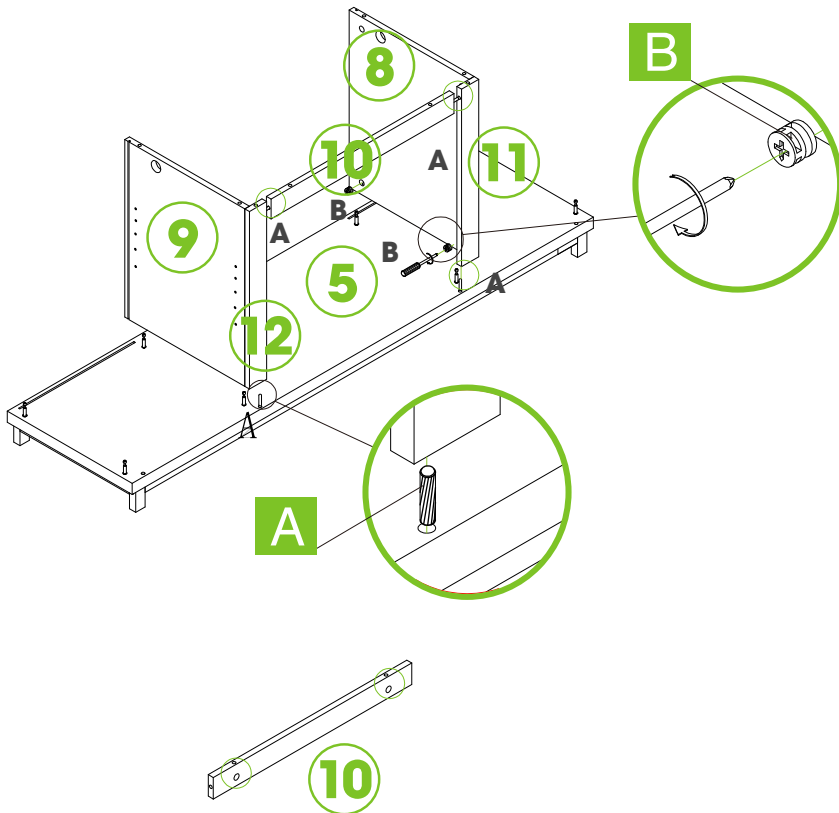


NOTE: For aesthetics, when installing part⑩, place the two large holes towards the inside of the cabinet.

	A x 4PCS
	B x 4PCS

PRODUCT ASSEMBLY

5

 - 1.Align the holes on the bottom of the part⑥&part⑦ with the 4 cam bolt "C"above the part⑤as per diagram.
- 2.Put 4 cam lock"B"into the corresponding holes of part⑥&part⑦, and tighten cam lock"B"clockwise. .

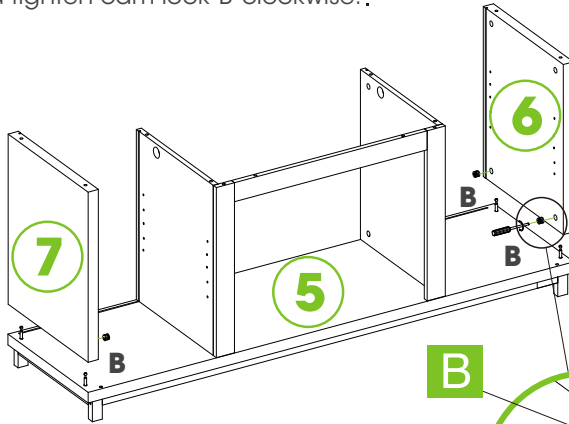

NOTE:When installing, pay attention to distinguish between part⑥ and part⑦, part⑥ is on the left side, and part⑦ is on the right side.

Note: The slotting direction of part⑥ & part⑦ is adjacent to the slot of part⑤ when installed correctly!

 


6

Snap the two part ⑬ down to the bottom along the card slot.

Note:


- 1.The bottom of part⑬ also needs to be snapped into the slot of part⑤.
- 2.For aesthetics, the white side of part⑬, towards the inside of the cabinet;
- the yellow side of part⑬, towards the outside of the cabinet

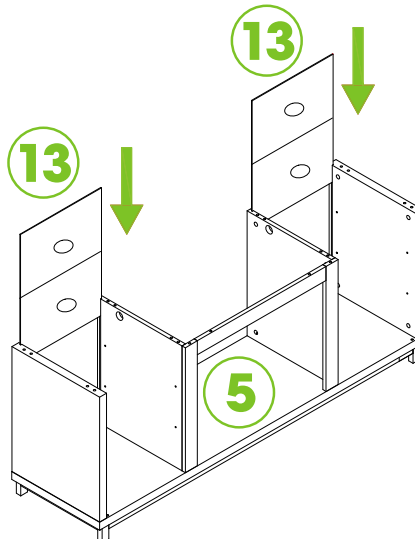

PRODUCT ASSEMBLY

7

 
1. Screw 10 cam bolt "C" into part④ corresponding holes as per diagram.
2. Use 8 screw "J" to install 2 hinge "K" in the corresponding position of part④.
3. Use a hammer gently to knock the 2 black plastic parts (in hinge "K") into the corresponding holes.

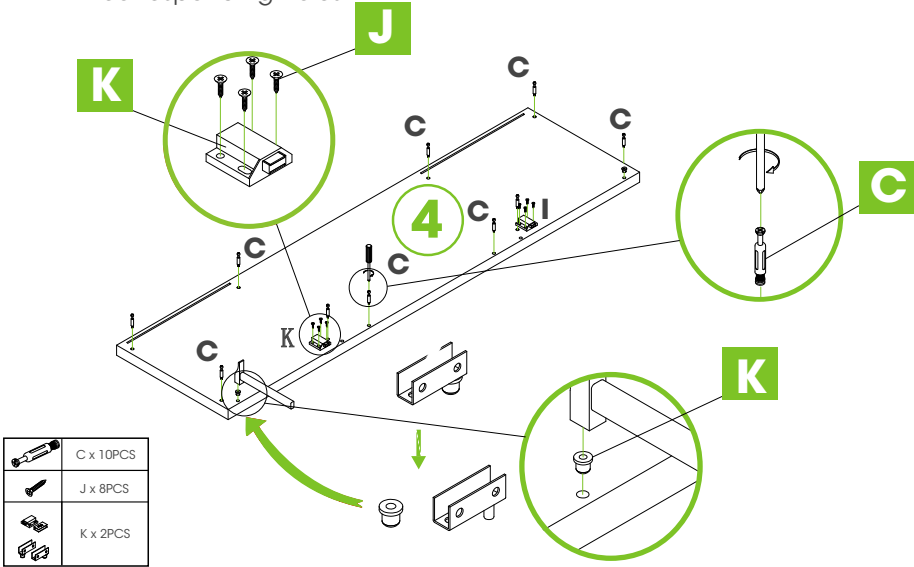

8

- Install 2 hinge "K" on part ⑤ (two sets in total) , pay special attention to the position between the hinge "K" and the glass, and the position where the black plastic sheet is placed in the hinge "K".

 Note: The screw holes of hinge "K" should be on the same side of the glass, and the screws should face the inside of the cabinet when connecting with the cabinet.

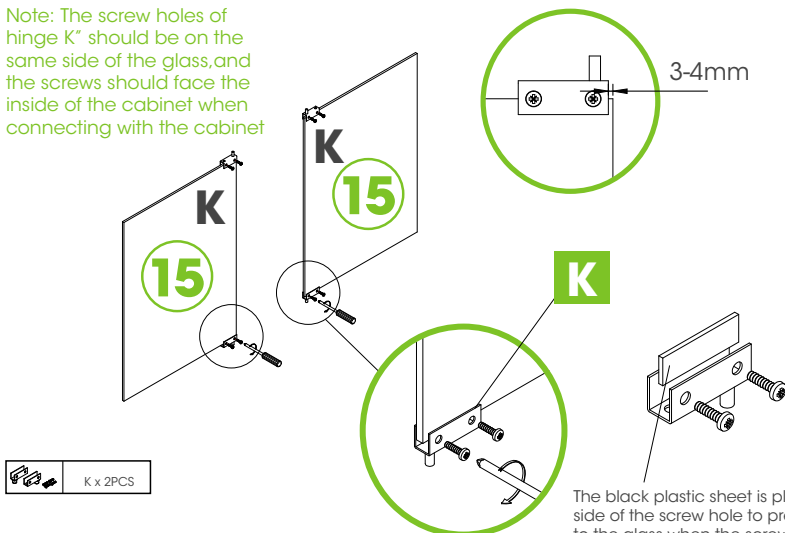


PRODUCT ASSEMBLY

9


1. Gently knock the 2 black plastic parts (in hinge "K") into the part ⑤ corresponding holes with a hammer.
2. Put part ④ into the corresponding position, and at the same time, you need to snap part ⑬ into the slot of the part ④, and use 2 wooden dowel "A" to connect (part ⑪ and part ⑫) to part ④;
3. Insert the hinge "K" of the glass door (part ⑮) into part ⑤ first,
4. Gently lift part ④, and snap the hinge "K" of the glass door (part ⑮) into part ⑤.

 (NOTE: This step requires the cooperation of two or three people.)

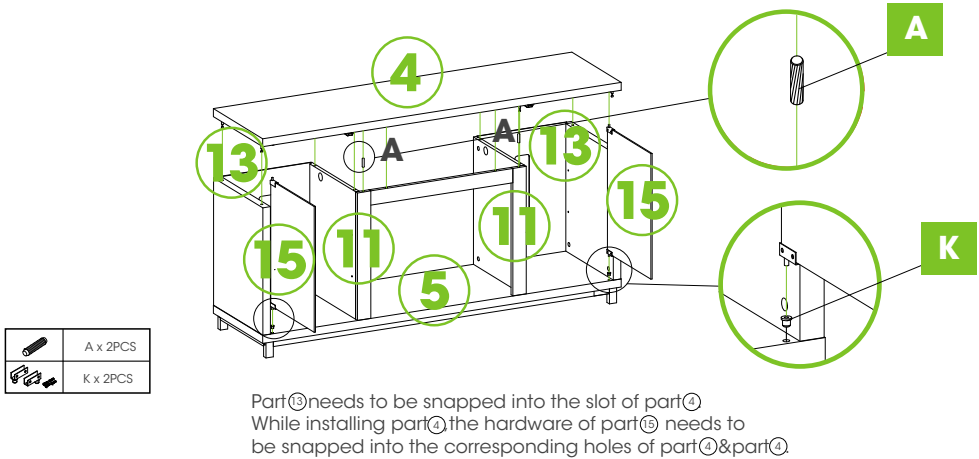

10

 
1. Put the hardware with the word PUSH (in hinge "K") directly on the glass corner.
2. Press to make it close to the glass and will not slide, pay attention to the word PUSH facing outwards.

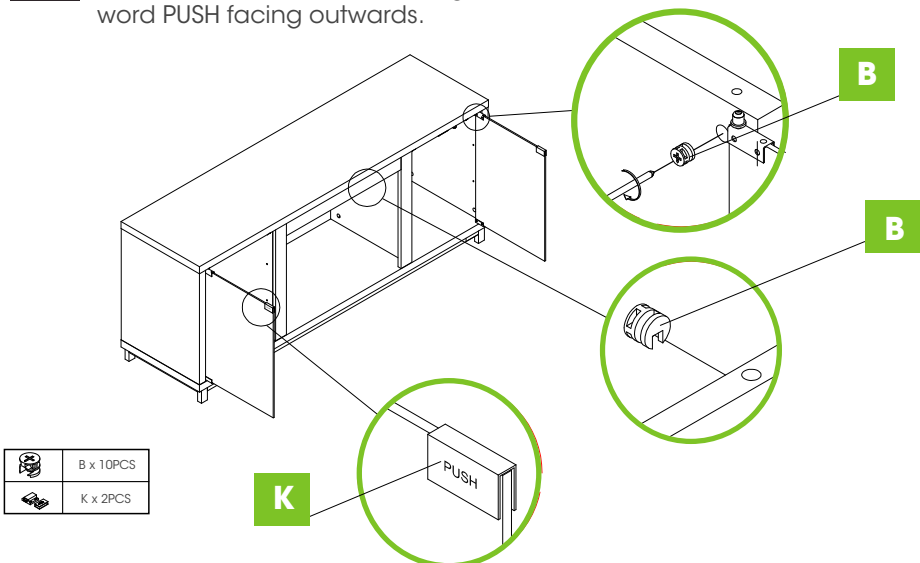

PRODUCT ASSEMBLY


11

 - 1.Put 8"H" into the corresponding holes.
- 2.Then put the glass laminate(part ⑭)into the cabinet.
The cabinet installation is completed.

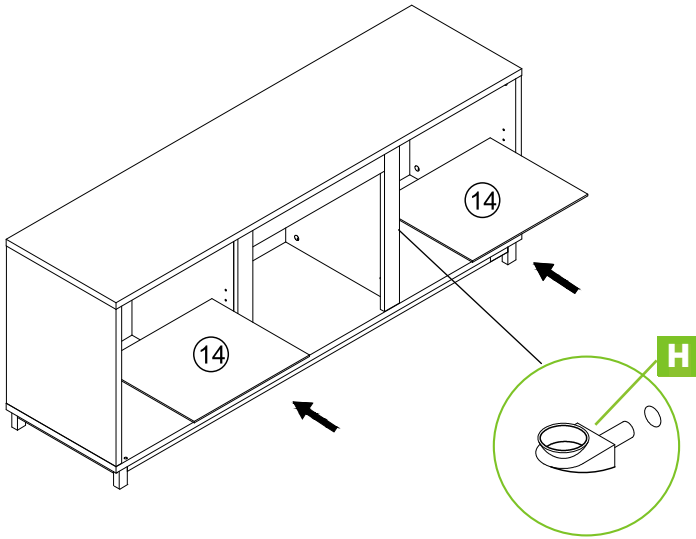

12

 - For beauty, you can cover the exposed holes with "I" according to your needs

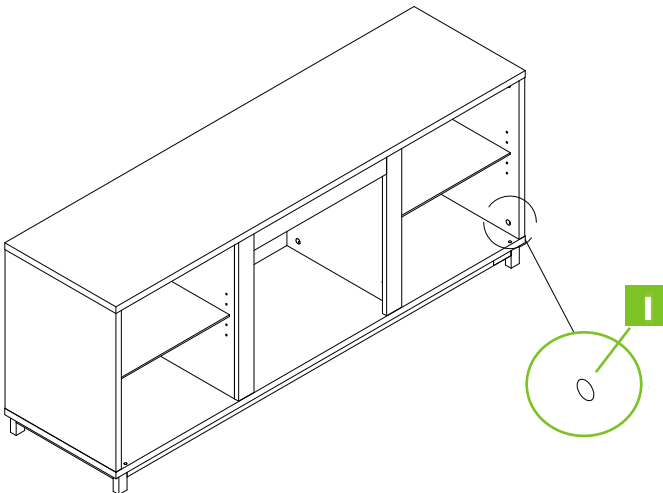


PRODUCT ASSEMBLY

13

The method of glass door switch:

 1. Open the glass door: press the metal sheet in the corner of the glass (with the word PUSH), the door can be automatically opened.
2. Close the glass door: close the glass door and press the glass corner metal sheet (with the word PUSH) until the magnet attracts the glass corner metal sheet.

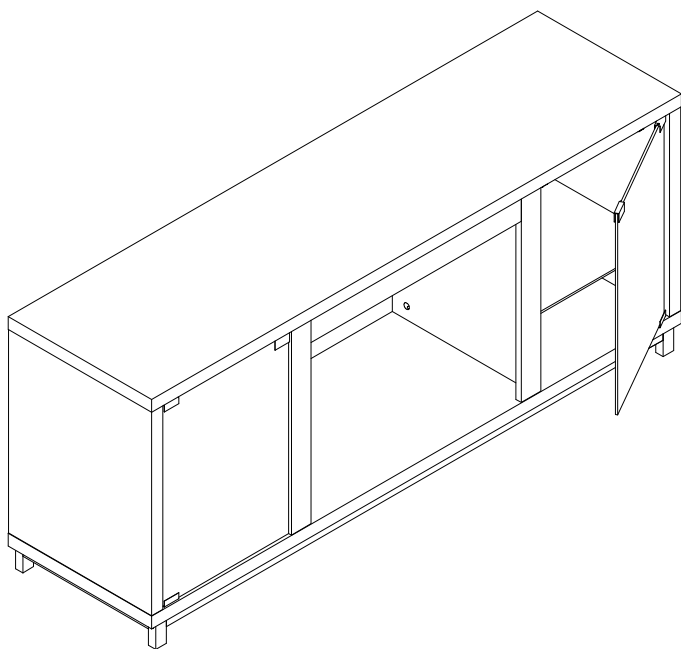


PRODUCT ASSEMBLY

1


Align and attach two side trims(Y) to both sides of the fireplace insert(W) respectively with the right angle side facing the front of the unit, using two screws(12) per trim.

 NOTE: Dear customer, if you purchase a TV stand & fireplace set, the package for the fireplace and the package for the TV stand will be delivered separately. If you purchase only the TV stand, the fireplace is not included.

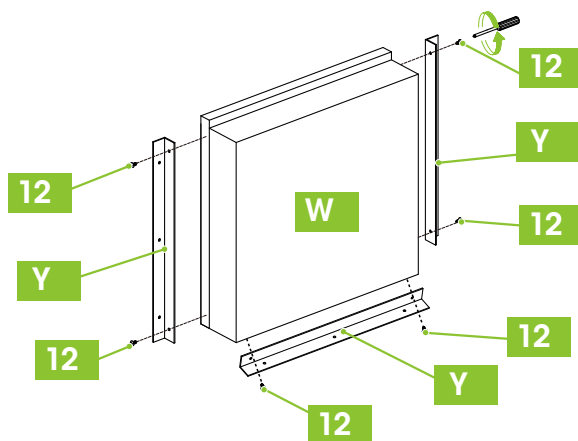


2

 Put the fireplace into the cabinet from the back until the front is against the board. Secure with screw 12 as shown.

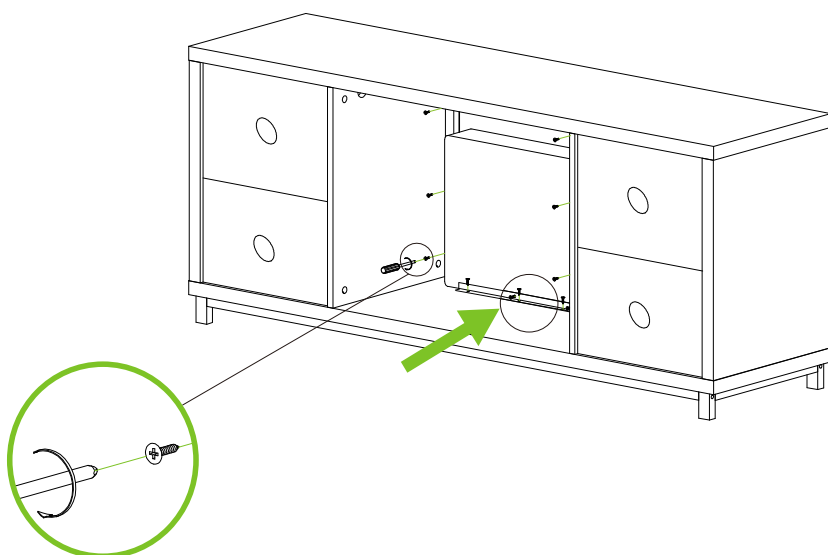


PRODUCT ASSEMBLY


 
3

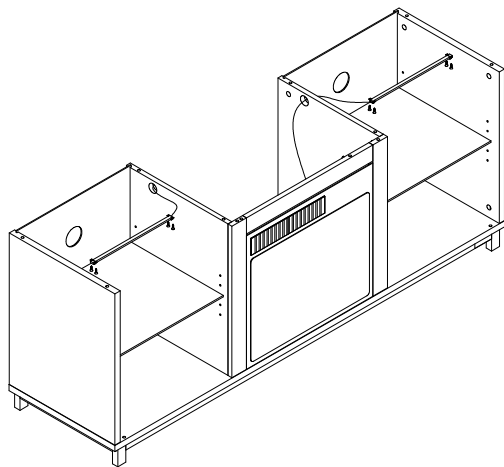

 1. Put the light strip wire through the hole (one long wire and one short wire);
2. Put the long one on side farther from the fireplace wire; the short one on the side closer to the fireplace wire;

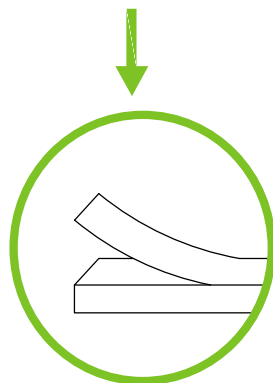

  
3. Tear off the double-sided tape of the light strip and stick it on the board;

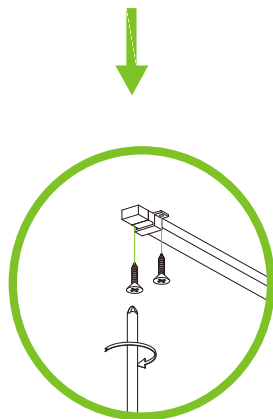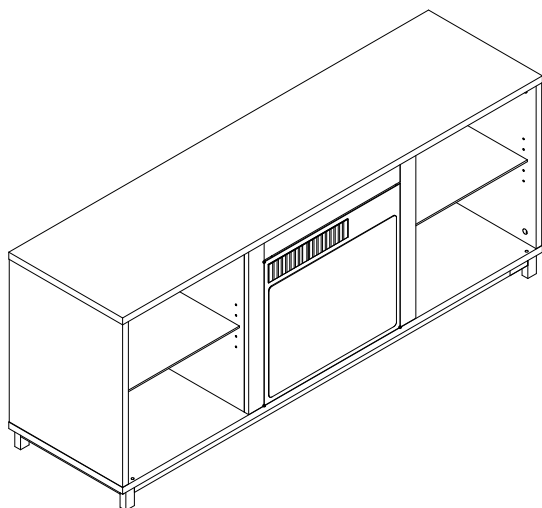


4. Hold the light strip with the clip and lock the screw.

HELP CENTER

 
Question about your product? We're here to help. Visit us at:




Chat Support

 


Product Inquiry

 

Orders FAQ

 

Product Assembly

 

Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with. Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase. In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be:

- (1) In a brand new/unused condition, please provide photos before and after packaging.
- (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded? The refund is released once the goods have been returned to our warehouse. What if the product is damaged/defective outside of the valid return period? We want you to be a happy customer.

Please reach out to us by email and we will come up with a solution to make sure you are satisfied.