 
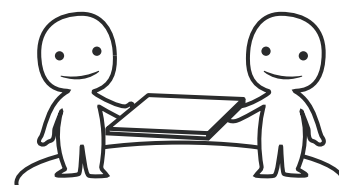 



Wooden Outdoor Playpen

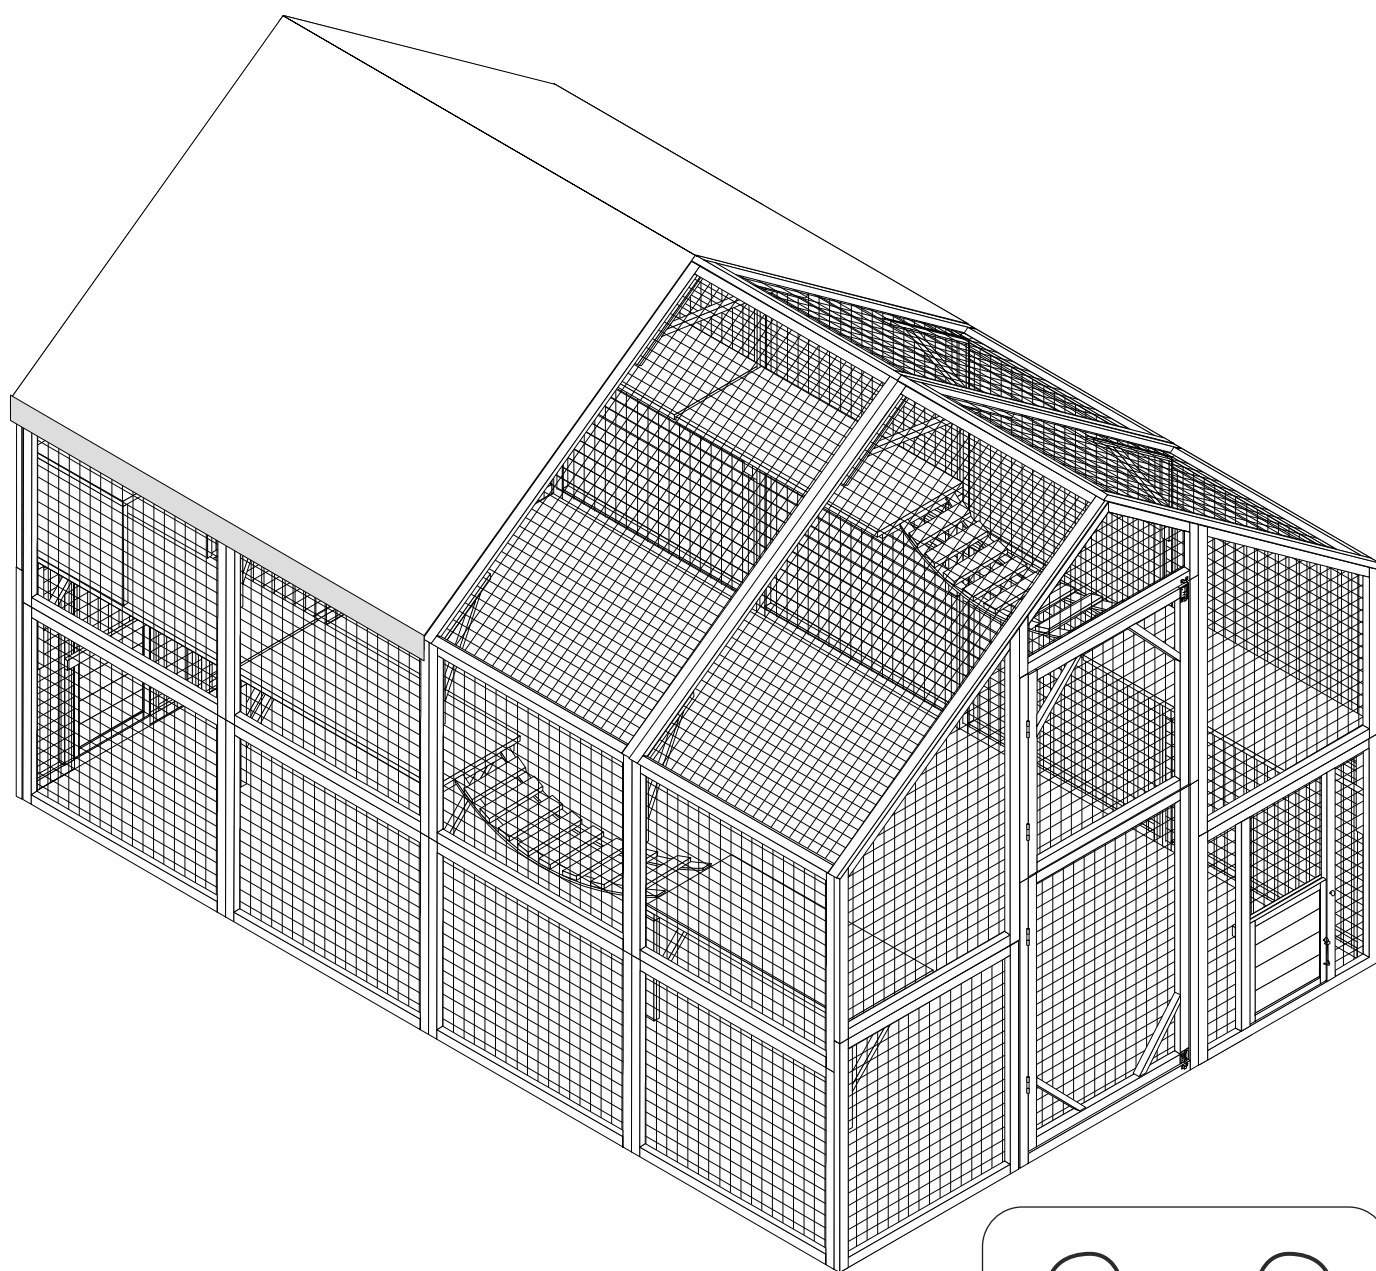

ASSEMBLED BY 2 ADULTS

IMPORTANT

 Please follow the instruction manuals and use a pad to avoid damage during assembly.

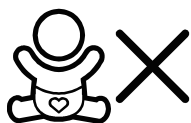


Not intended for use by children. Please keep your children closely supervised.



Keep away from fire or other heat sources.



 Do not use harsh cleaner for cleaning!

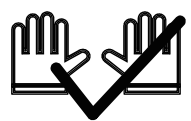

We recommend wearing protective gloves for assembly.



Identify, sort and count the parts before assembly.

 


Please prepare the following tools




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 118




M3.5 x 50 mm

 B x 52




M3.5 x 40 mm

 C x 64




M3.5 x 30 mm

 D x 52




M3.5 x 20 mm

 E x 28




M3 x 16 mm

 F x 2



G x 4

 

H x 2

 


J x 32



K x 8



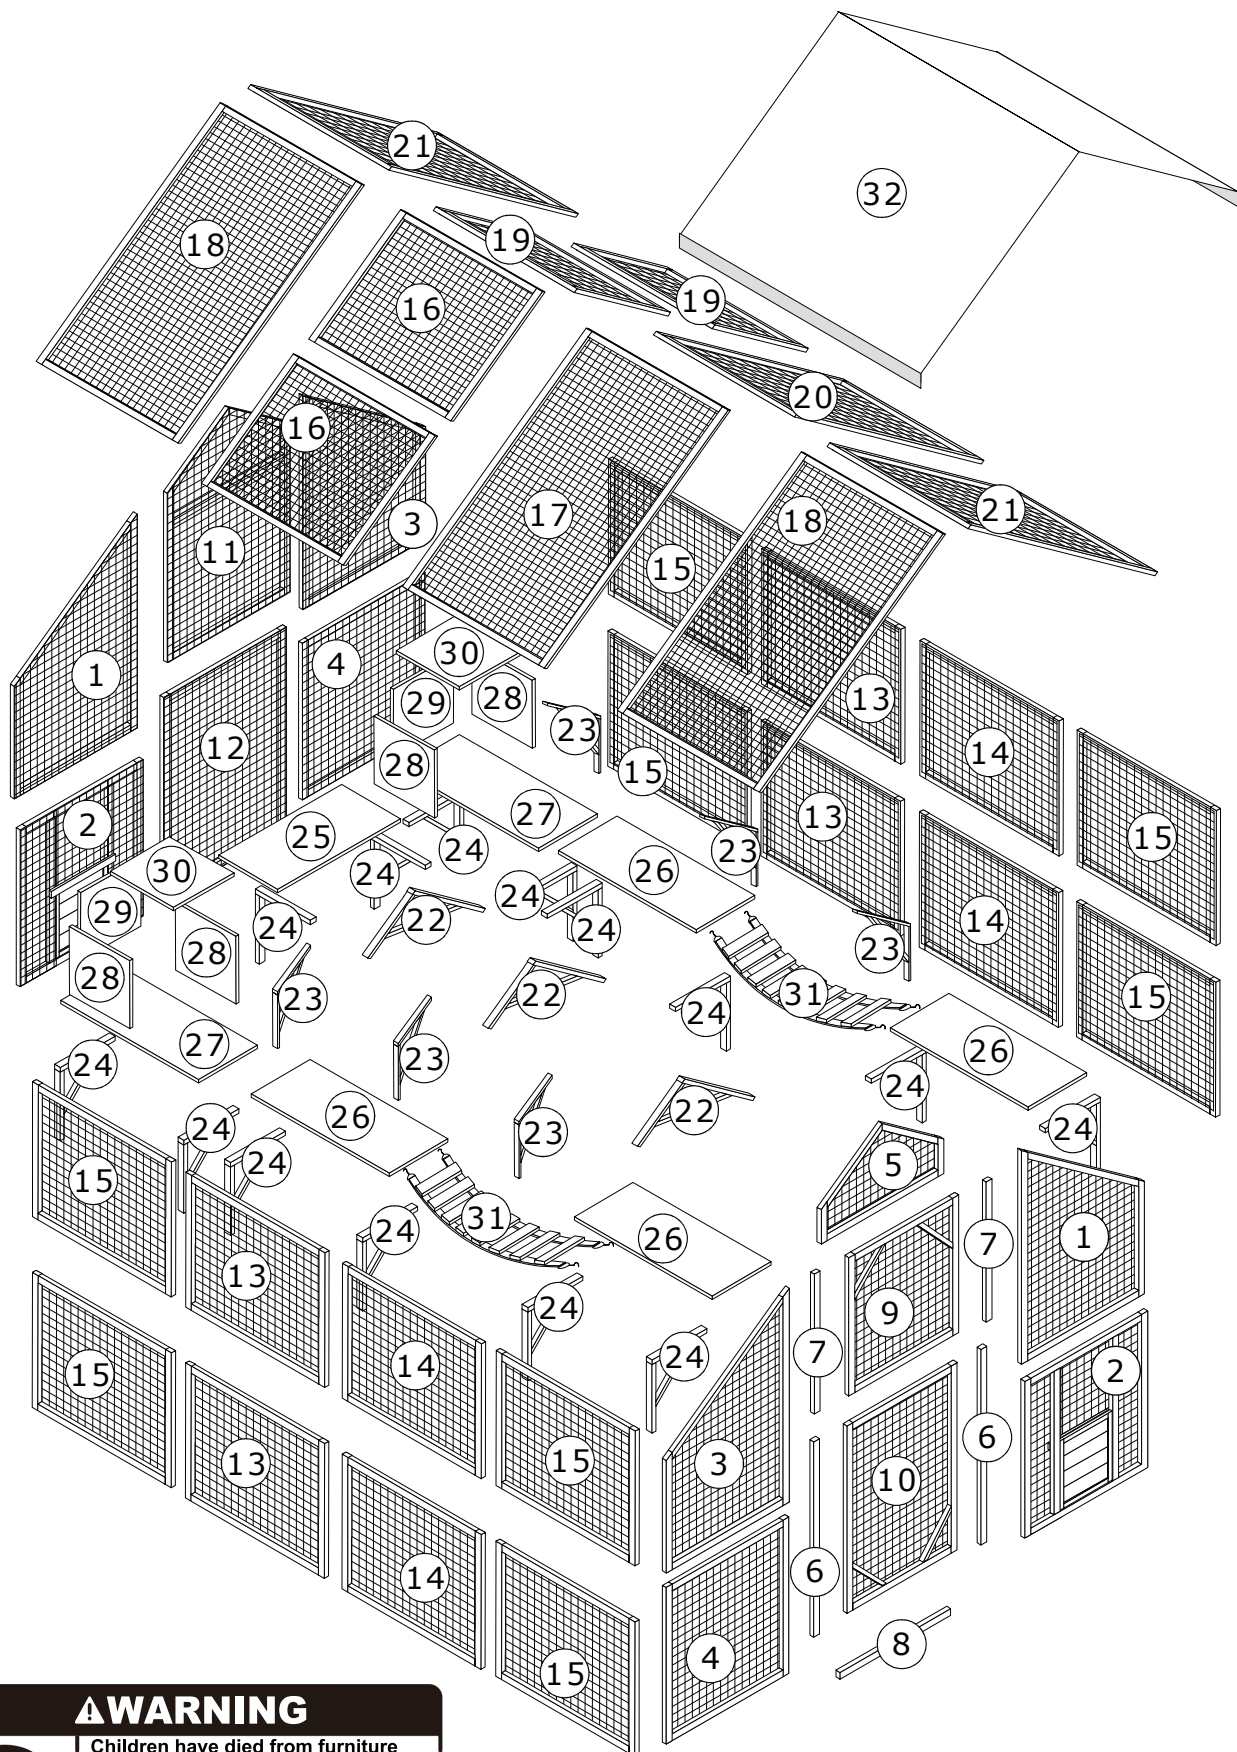

⚠ WARNING

 
 
 
 
 





























Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

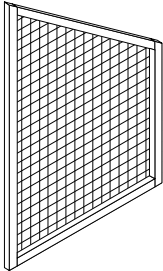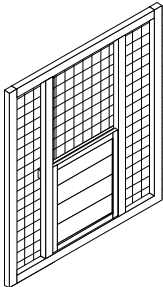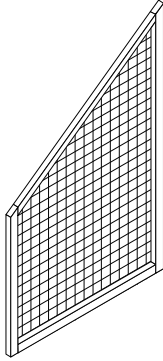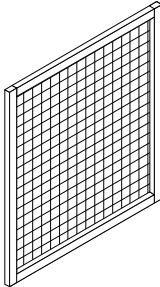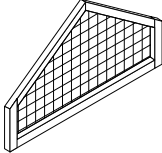

         *This is a permanent label.
Do not remove!*
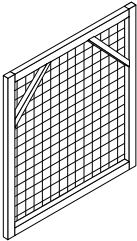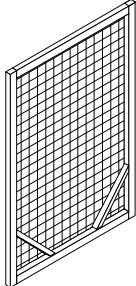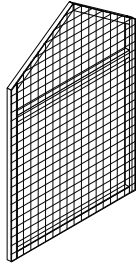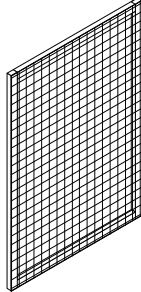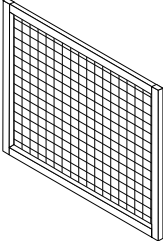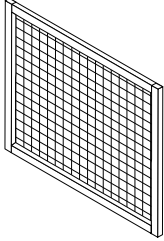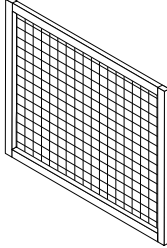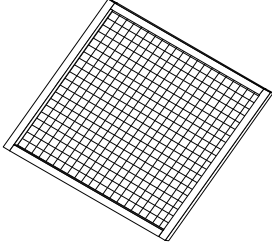
<p>①</p>  <p>x2</p>	<p>②</p>  <p>x2</p>	<p>③</p>  <p>x2</p>	<p>④</p>  <p>x2</p>
<p>⑤</p>  <p>x1</p>	<p>⑥</p>  <p>x2</p>	<p>⑦</p>  <p>x2</p>	<p>⑧</p>  <p>x1</p>
<p>⑨</p>  <p>x1</p>	<p>⑩</p>  <p>x1</p>	<p>⑪</p>  <p>x1</p>	<p>⑫</p>  <p>x1</p>
<p>⑬</p>  <p>x4</p>	<p>⑭</p>  <p>x4</p>	<p>⑮</p>  <p>x8</p>	<p>⑯</p>  <p>x2</p>
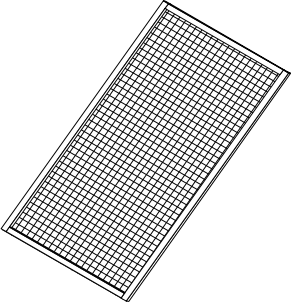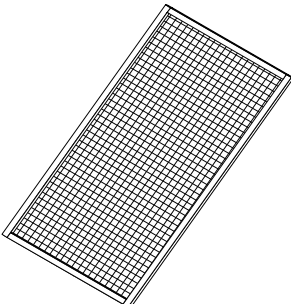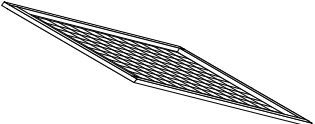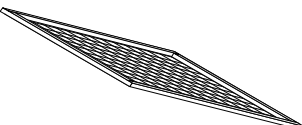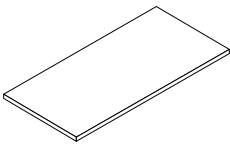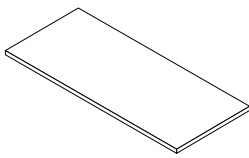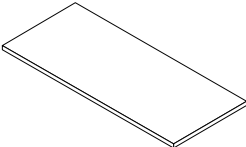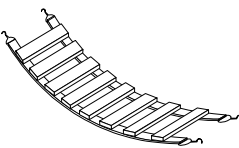                
<p>17</p>  <p>x1</p>	<p>18</p>  <p>x2</p>	<p>19</p>  <p>x2</p>	<p>20</p>  <p>x1</p>
<p>21</p>  <p>x2</p>	<p>22</p>  <p>x3</p>	<p>23</p>  <p>x6</p>	<p>24</p>  <p>x14</p>
<p>25</p>  <p>x1</p>	<p>26</p>  <p>x4</p>	<p>27</p>  <p>x2</p>	<p>28</p>  <p>x4</p>
<p>29</p>  <p>x2</p>	<p>30</p>  <p>x2</p>	<p>31</p>  <p>x2</p>	<p>32</p>  <p>x1</p>

1

A x 4

 


M3.5 x 50 mm

H x 2




When turning the screws, please do it slowly and keep the direction vertical.

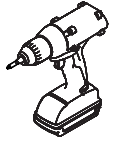

Attach two part 2 to two part 1 with four part A screws.

 
Screw up two part H on two sliding doors of part 2.

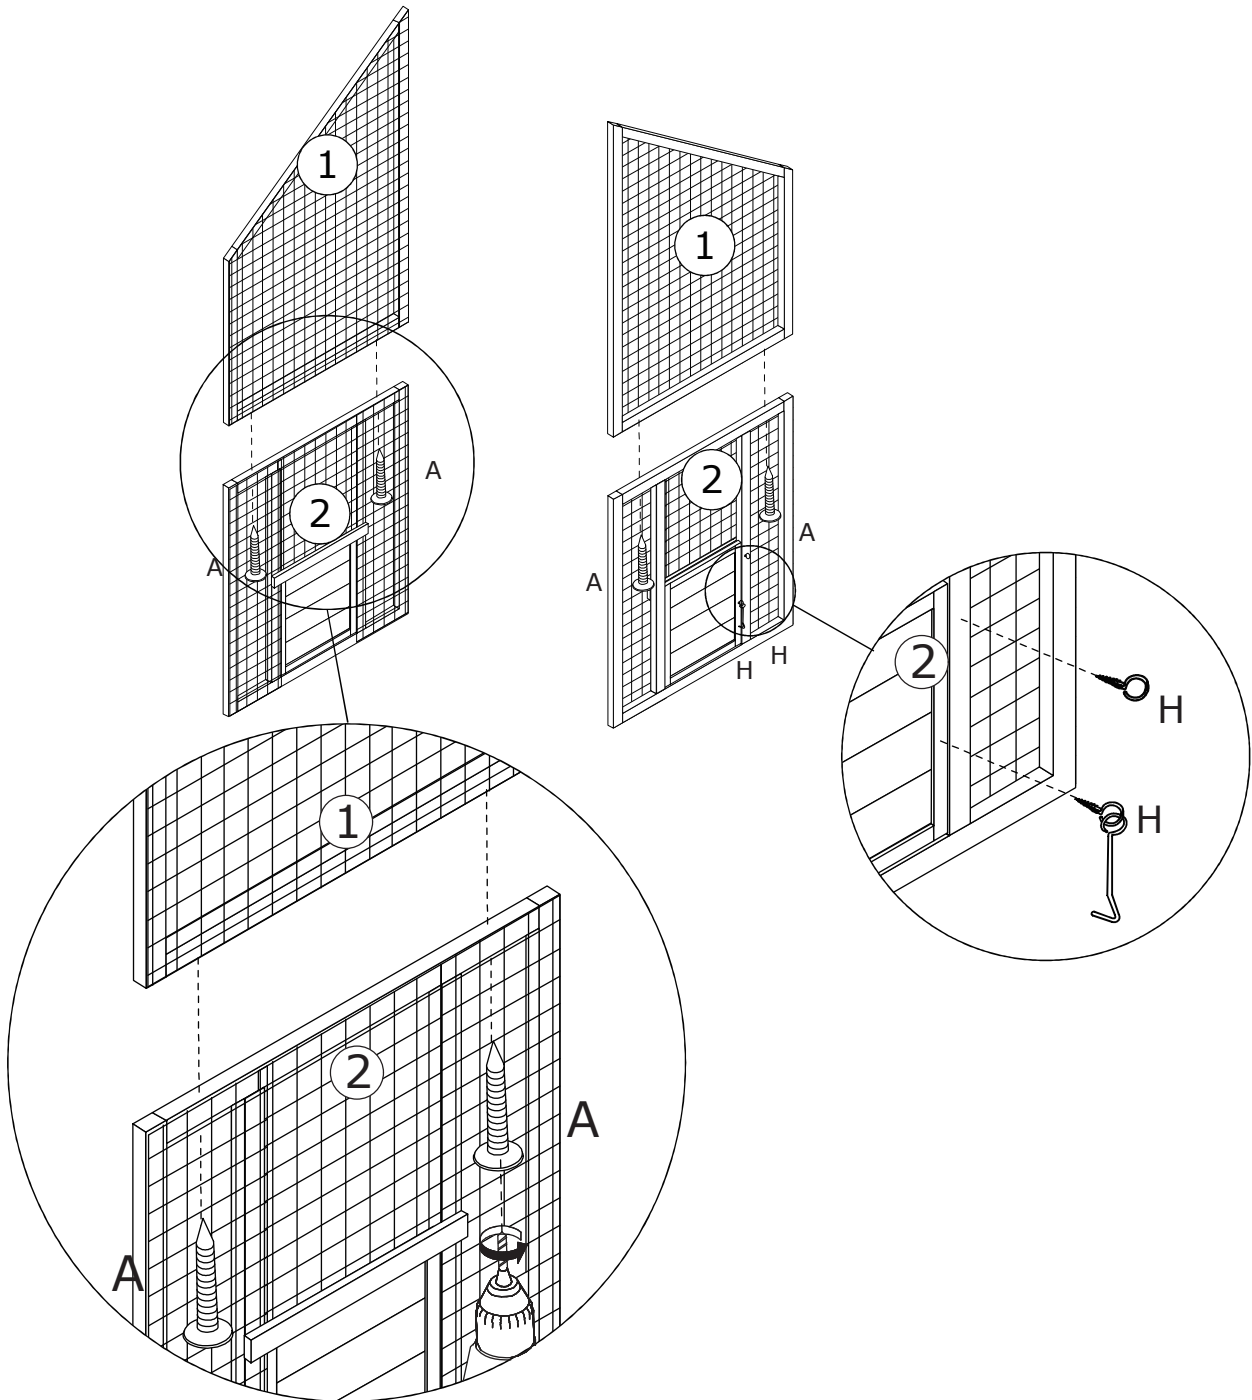


2

A x 14
M3.5 x 50 mm


 
When turning the screws, please do it slowly
and keep the direction vertical.

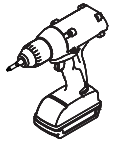

 Attach two part 4 to two part 3 with four part A screws.

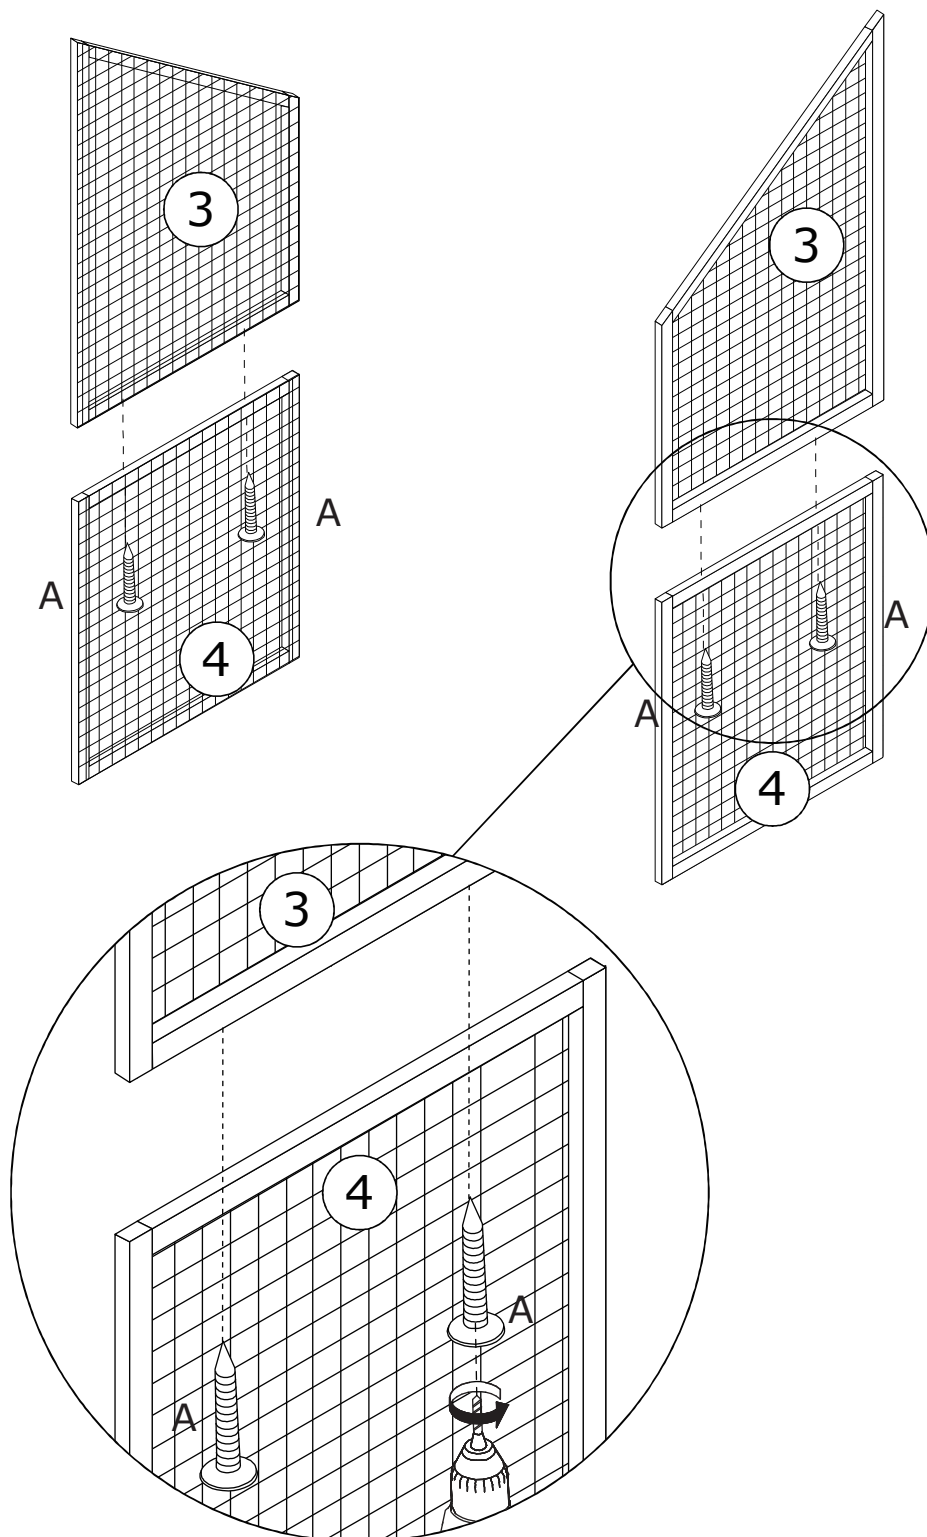

3

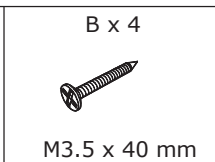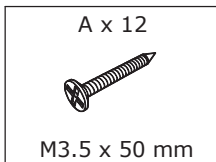  



When turning the screws, please do it slowly and keep the direction vertical.



Connect two part 6 and part 8 with four part B screws,
then attach the assembled part to front and back side panels
with six part A screws.

Attach two part 7 to front and back side panels with four
part A screws.

  Attach part 5 to front side panels with two part A screws.

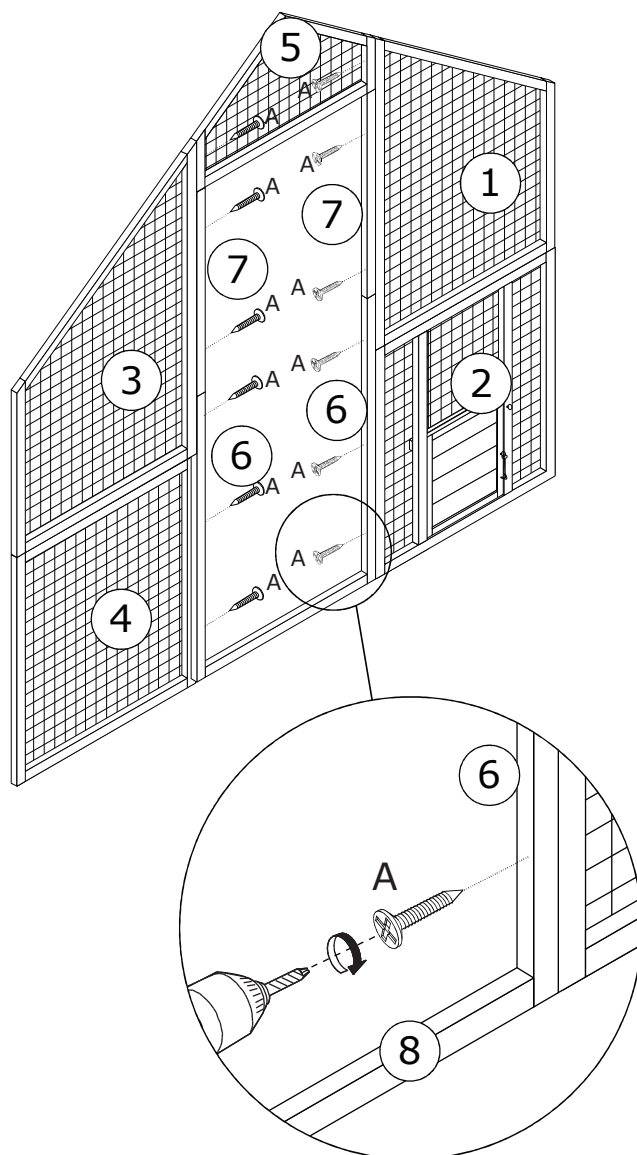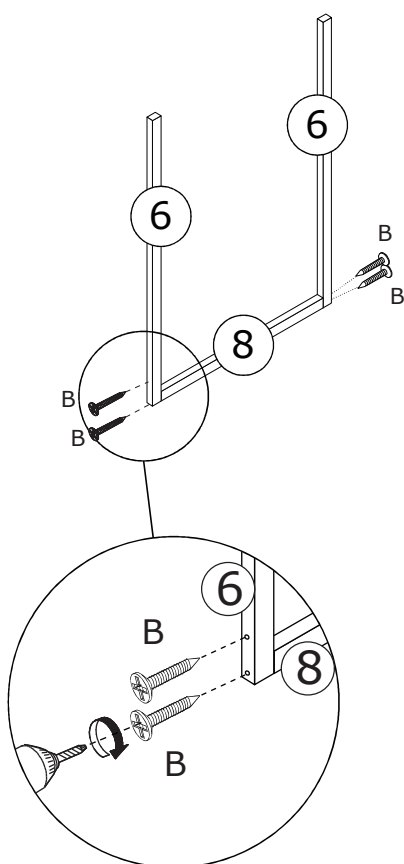

4

A x 2



M3.5 x 50 mm

E x 16



M3 x 16 mm

 
G x 4



When turning the screws, please do it slowly and keep the direction vertical.



Attach two front doors part 10 to part 9 with two part A screws, then attach the assembled door to front panel with four part G hinges and sixteen part E screws.

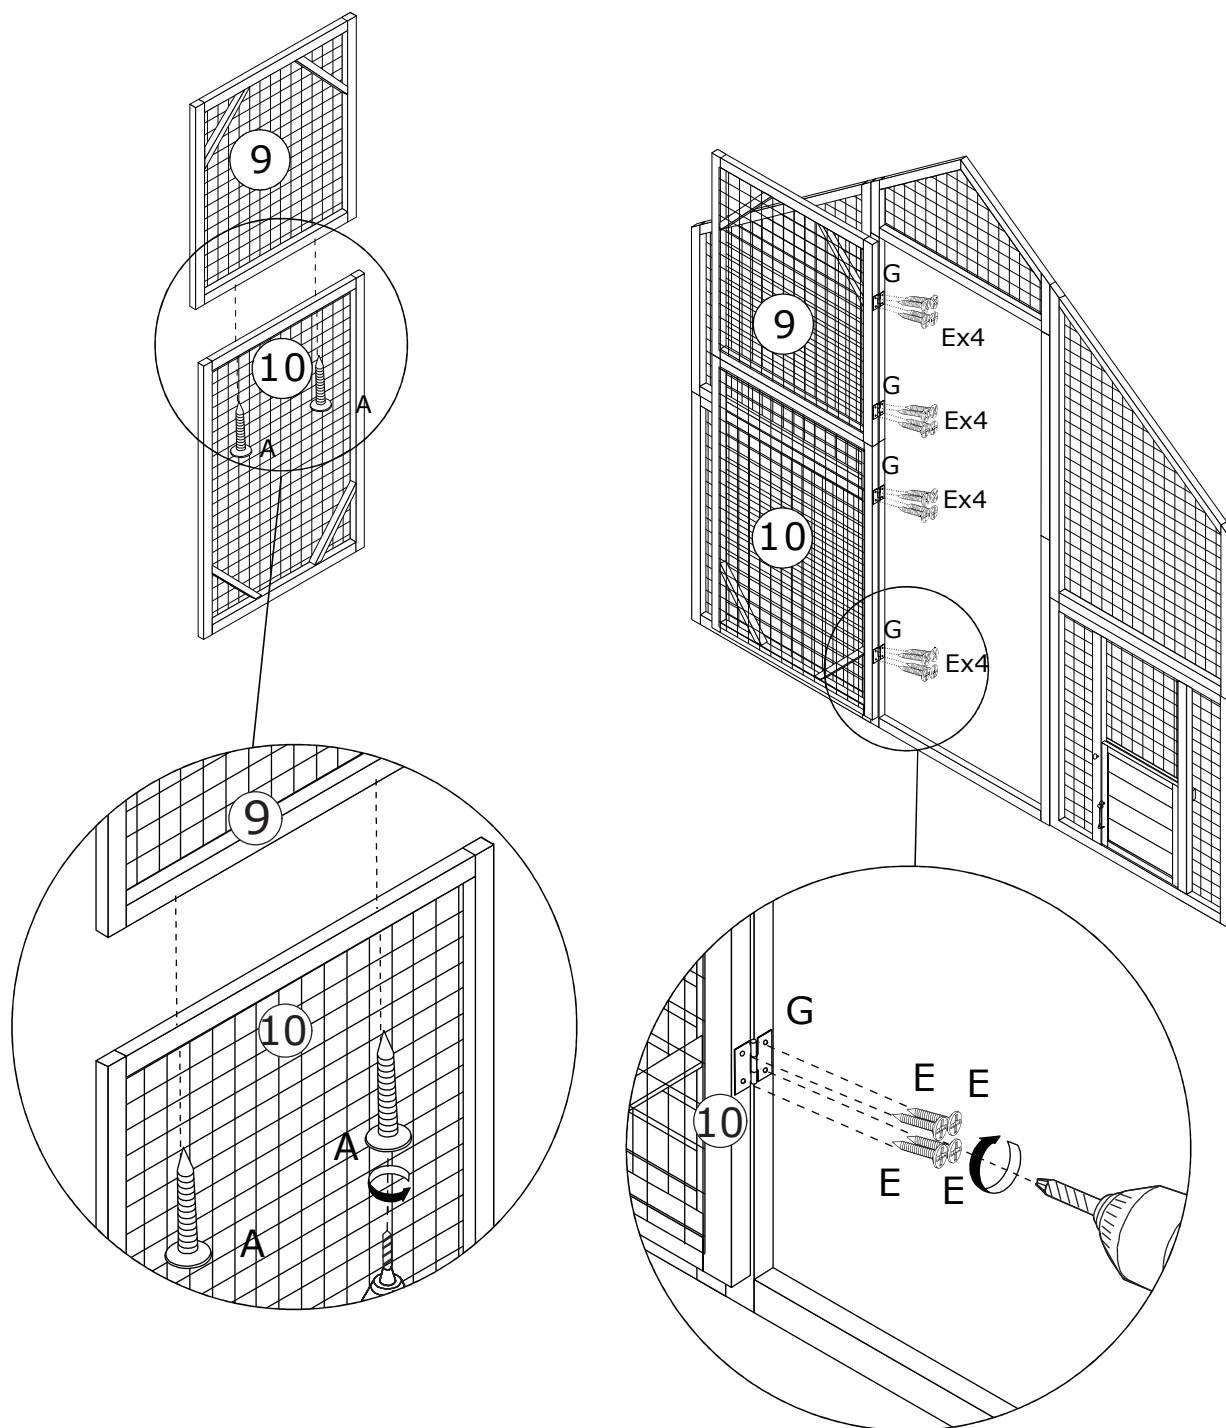

5

A x 4

 


M3.5 x 50 mm

When turning the screws, please do it slowly
and keep the direction vertical.



Attach part 12 to part 11 with two part A screws, then attach the
assembled part to two back side panels with twelve part A screws.

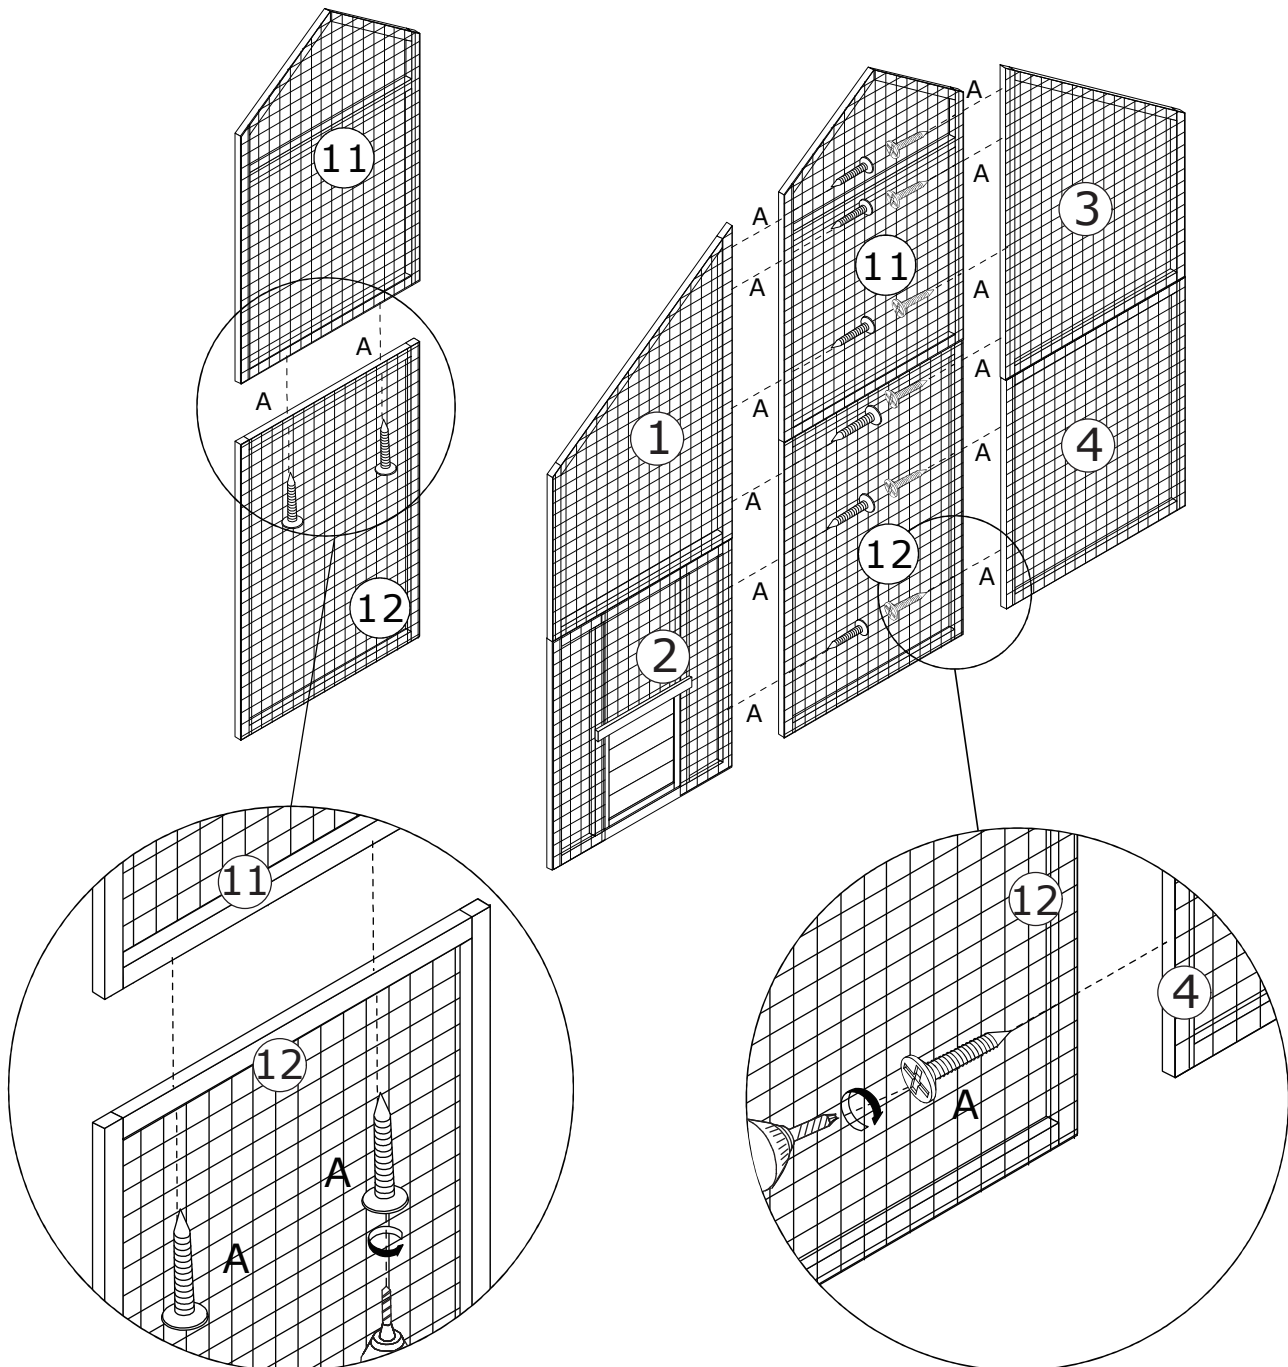

6

A x 4



M3.5 x 50 mm

B x 10

 


M3.5 x 40 mm

When turning the screws, please do it slowly
and keep the direction vertical.



Connect two part 15 with two part A screws. Do this twice.
Attach the assembled back part to the assembled side part
with ten part B screws.

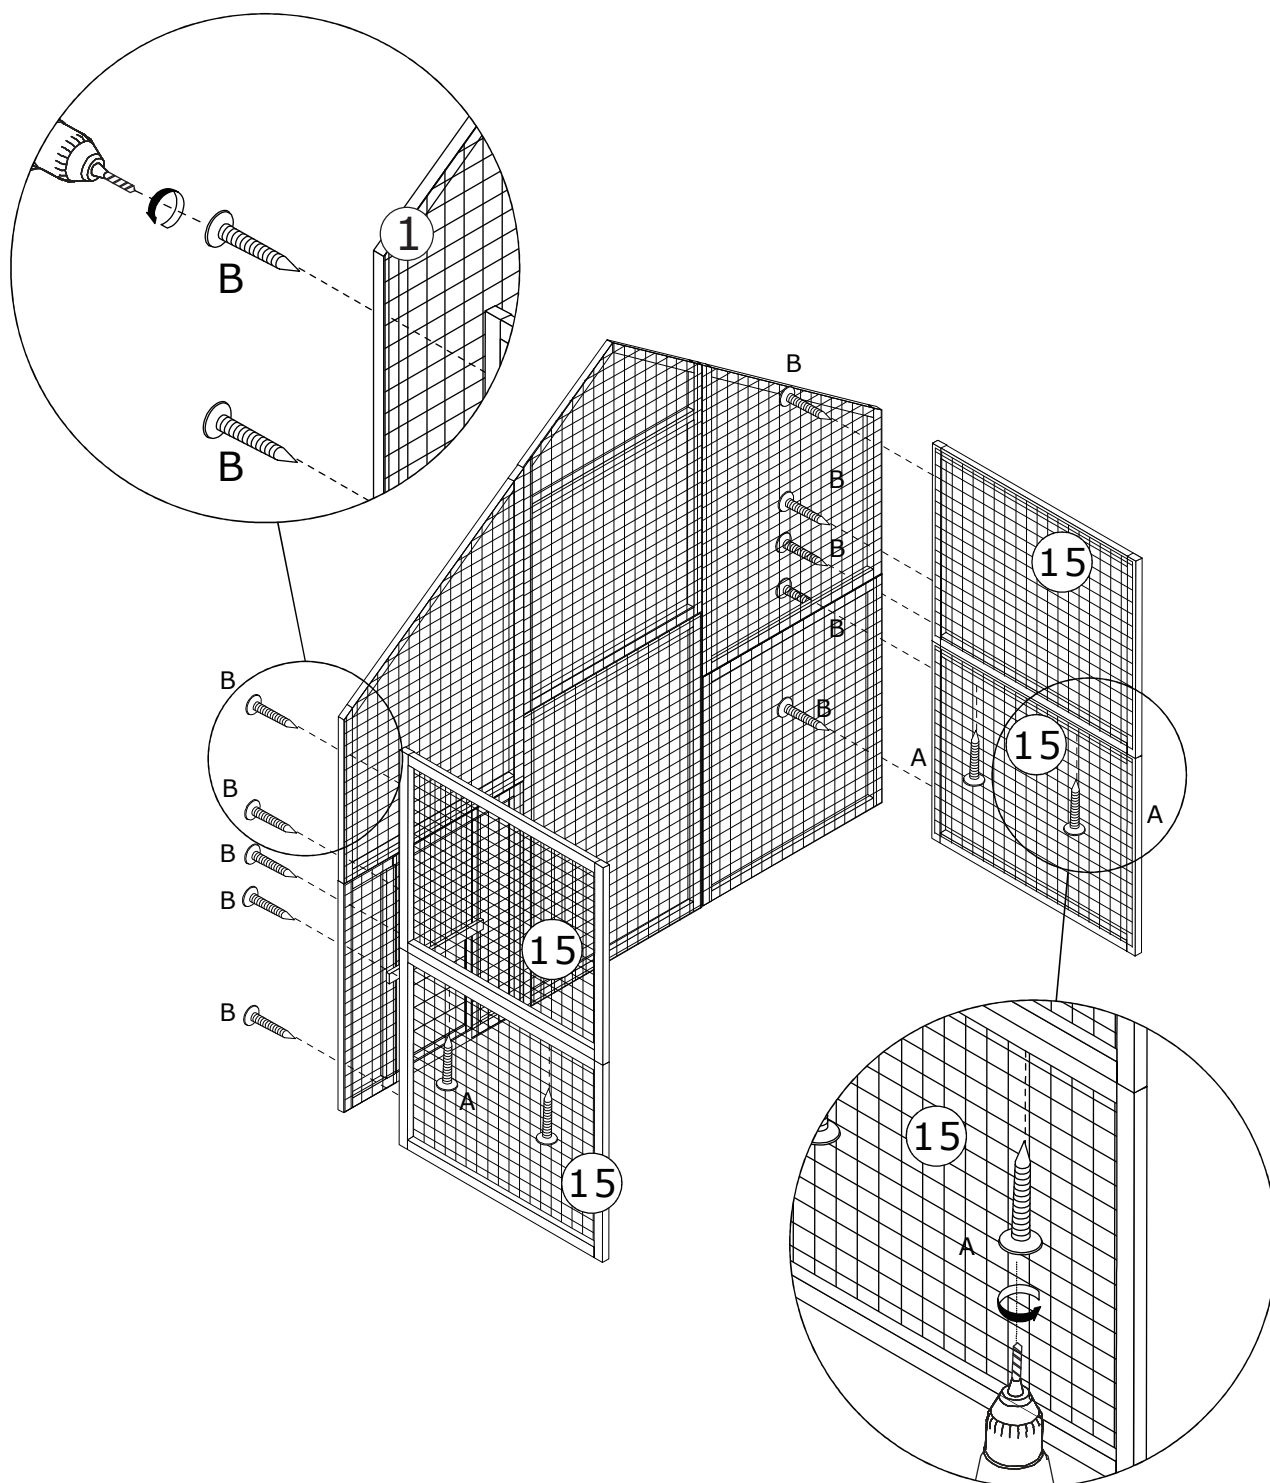


7

A x 24




M3.5 x 50 mm

 
When turning the screws, please do it slowly
and keep the direction vertical.

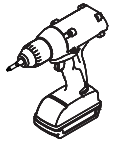

 Connect two part 13 with two part A screws. Do this twice.
Connect two part 14 with two part A screws. Do this twice.
Attach the assembled two 13 parts to the assembled
two side part 14 and two assemble part 15 with
eight part A screws. Do this twice.

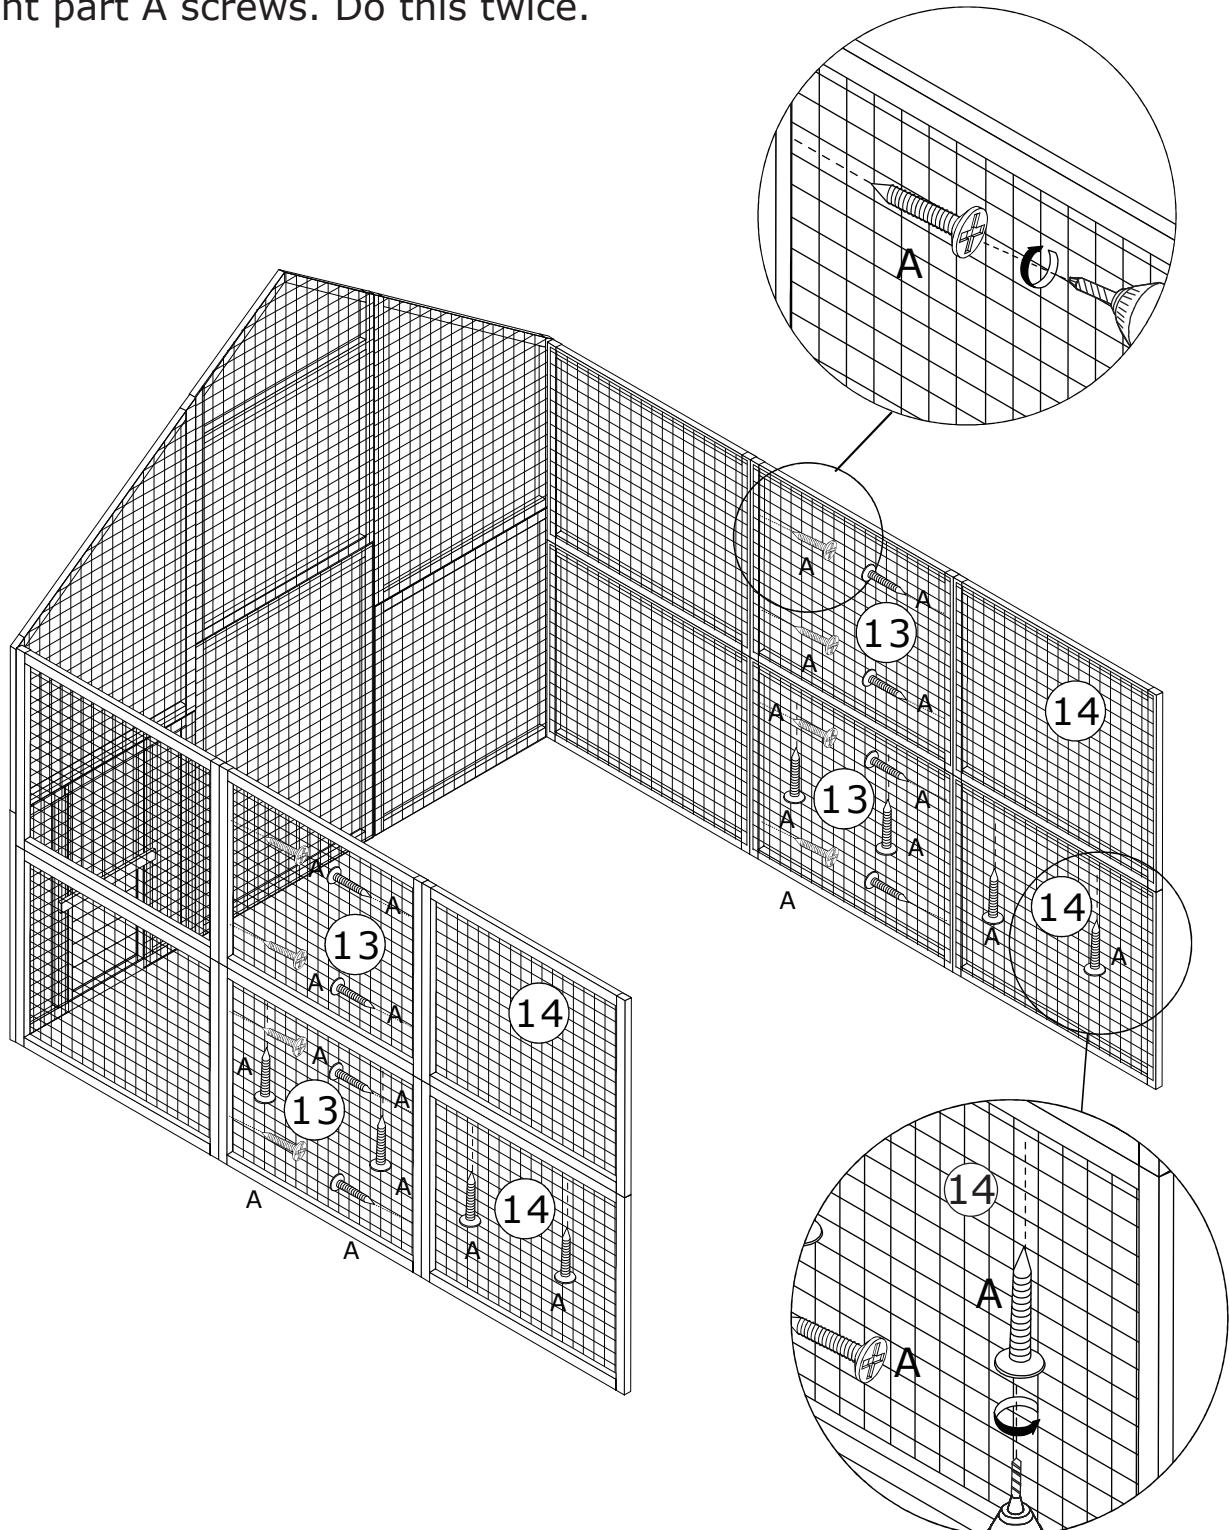


8

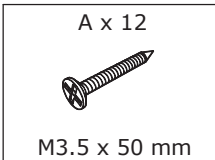 


When turning the screws, please do it slowly
and keep the direction vertical.



 Connect two part 15 with two part A screws. Do this twice.
Attach the assembled two part 14 to the assembled
two part 15 with four part A screws. Do this twice.

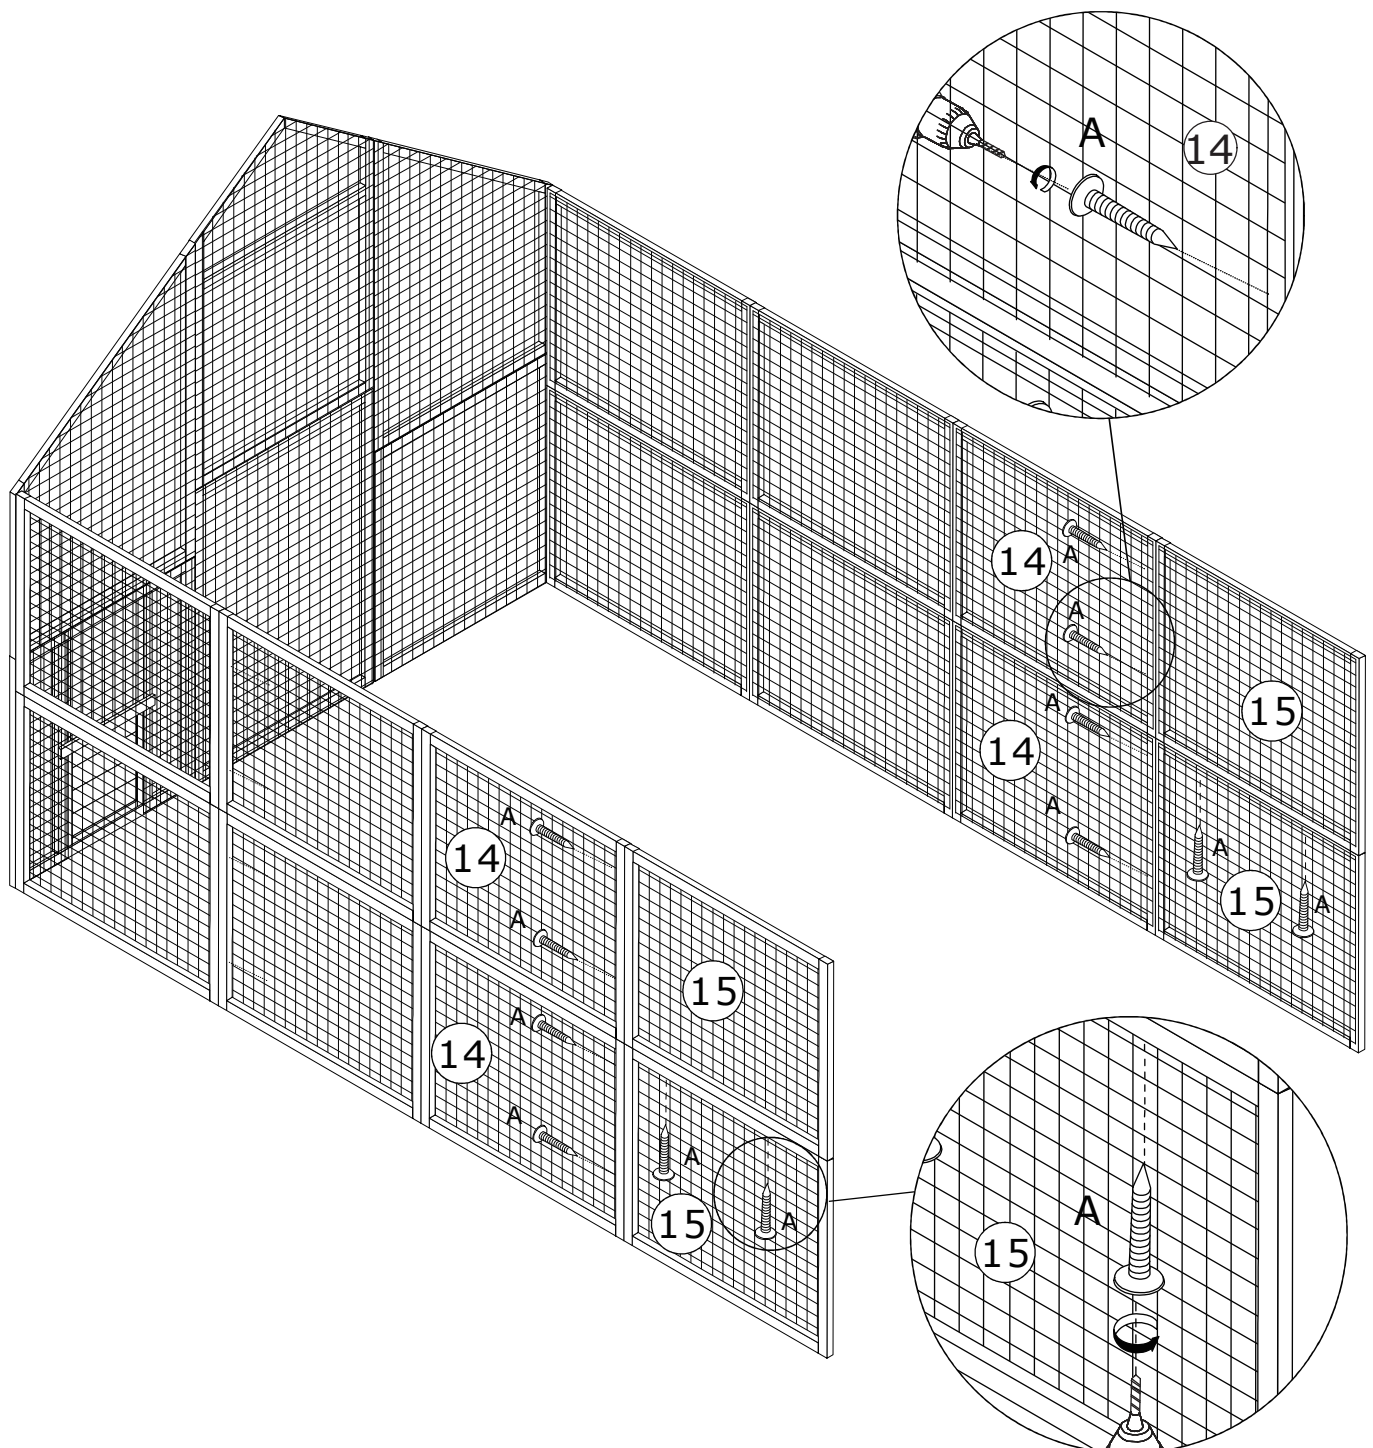


9

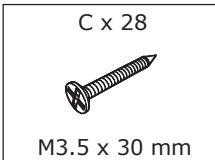 

When turning the screws, please do it slowly
and keep the direction vertical.



 Attach fourteen part 24 triangle support to the cage with twenty-eight
part C screws.

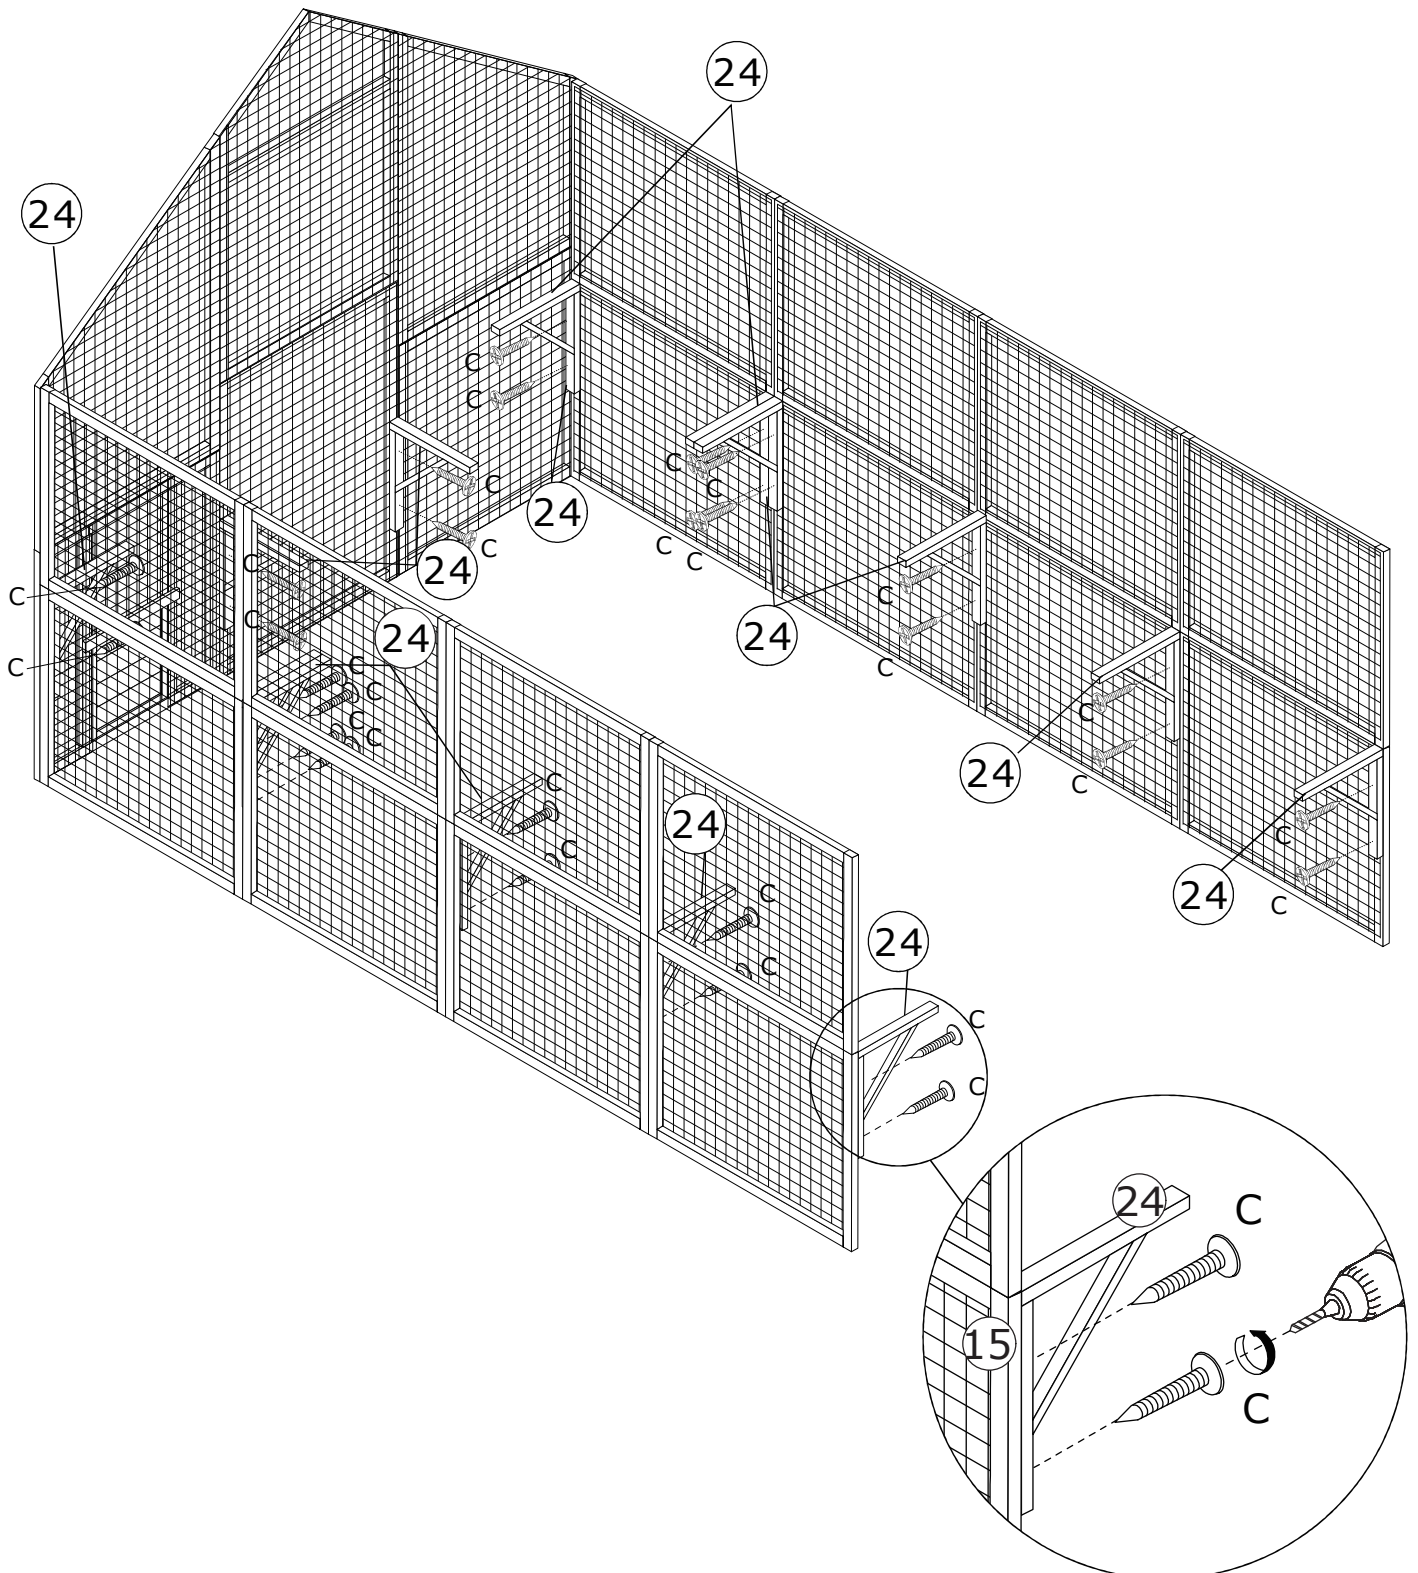

10

D x 44



M3.5 x 20 mm

K x 8



When turning the screws, please do it slowly and keep the direction vertical.



 
Connect part 27 small house bottom and two part 28 small house side panels with four part D screws, then connect part 29 small house back panel to side panels with four part D screws.

Do above assembling twice.

Attach the two assembled small house to the fixed triangle support with eight part D crews.

Attach four part 26 and one part 25 to the fixed triangle support with twenty part D screws.

Screw up eight part K to the fixed part 24 triangle supports.

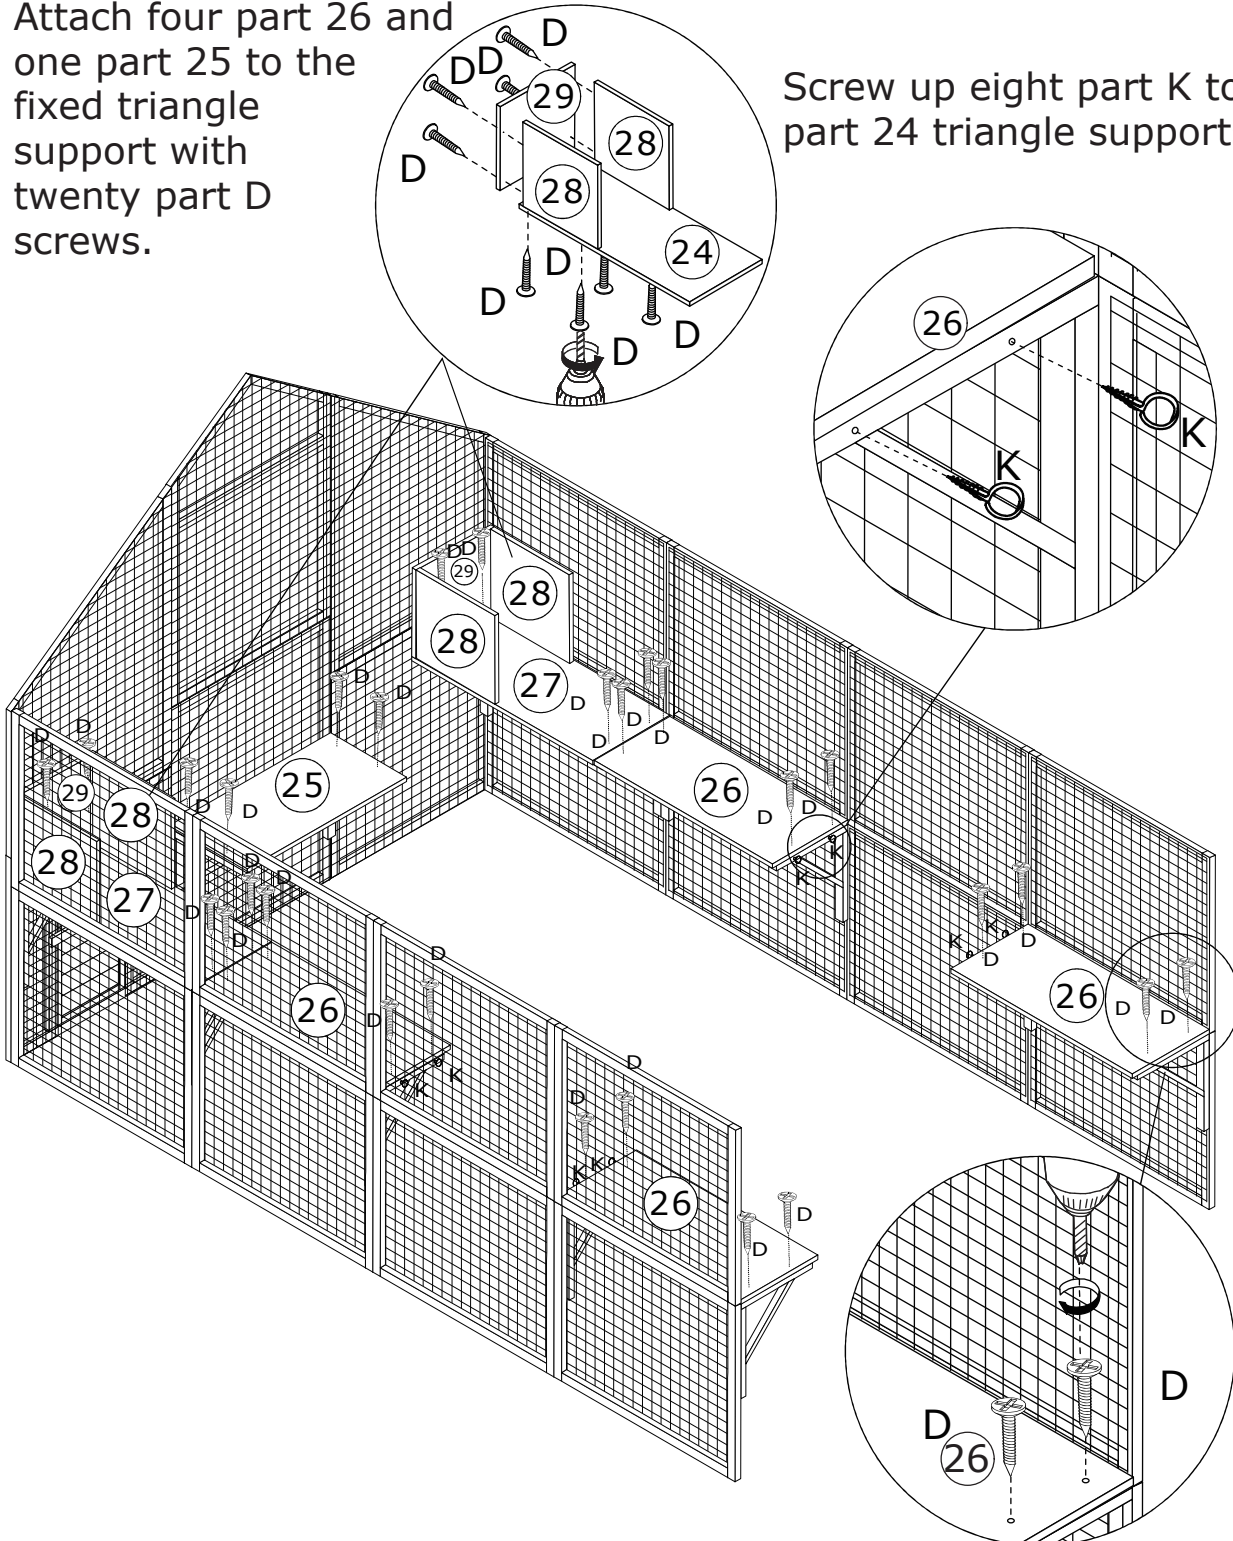

11

B x 10



M3.5 x 40 mm

D x 8



M3.5 x 20 mm

 
When turning the screws, please do it slowly and keep the direction vertical.



Hang up two part 31 swing bridges.

Fix two part 30 small house top panels with eight part D screws.

Attach the assembled front part to side parts with ten part B screws.

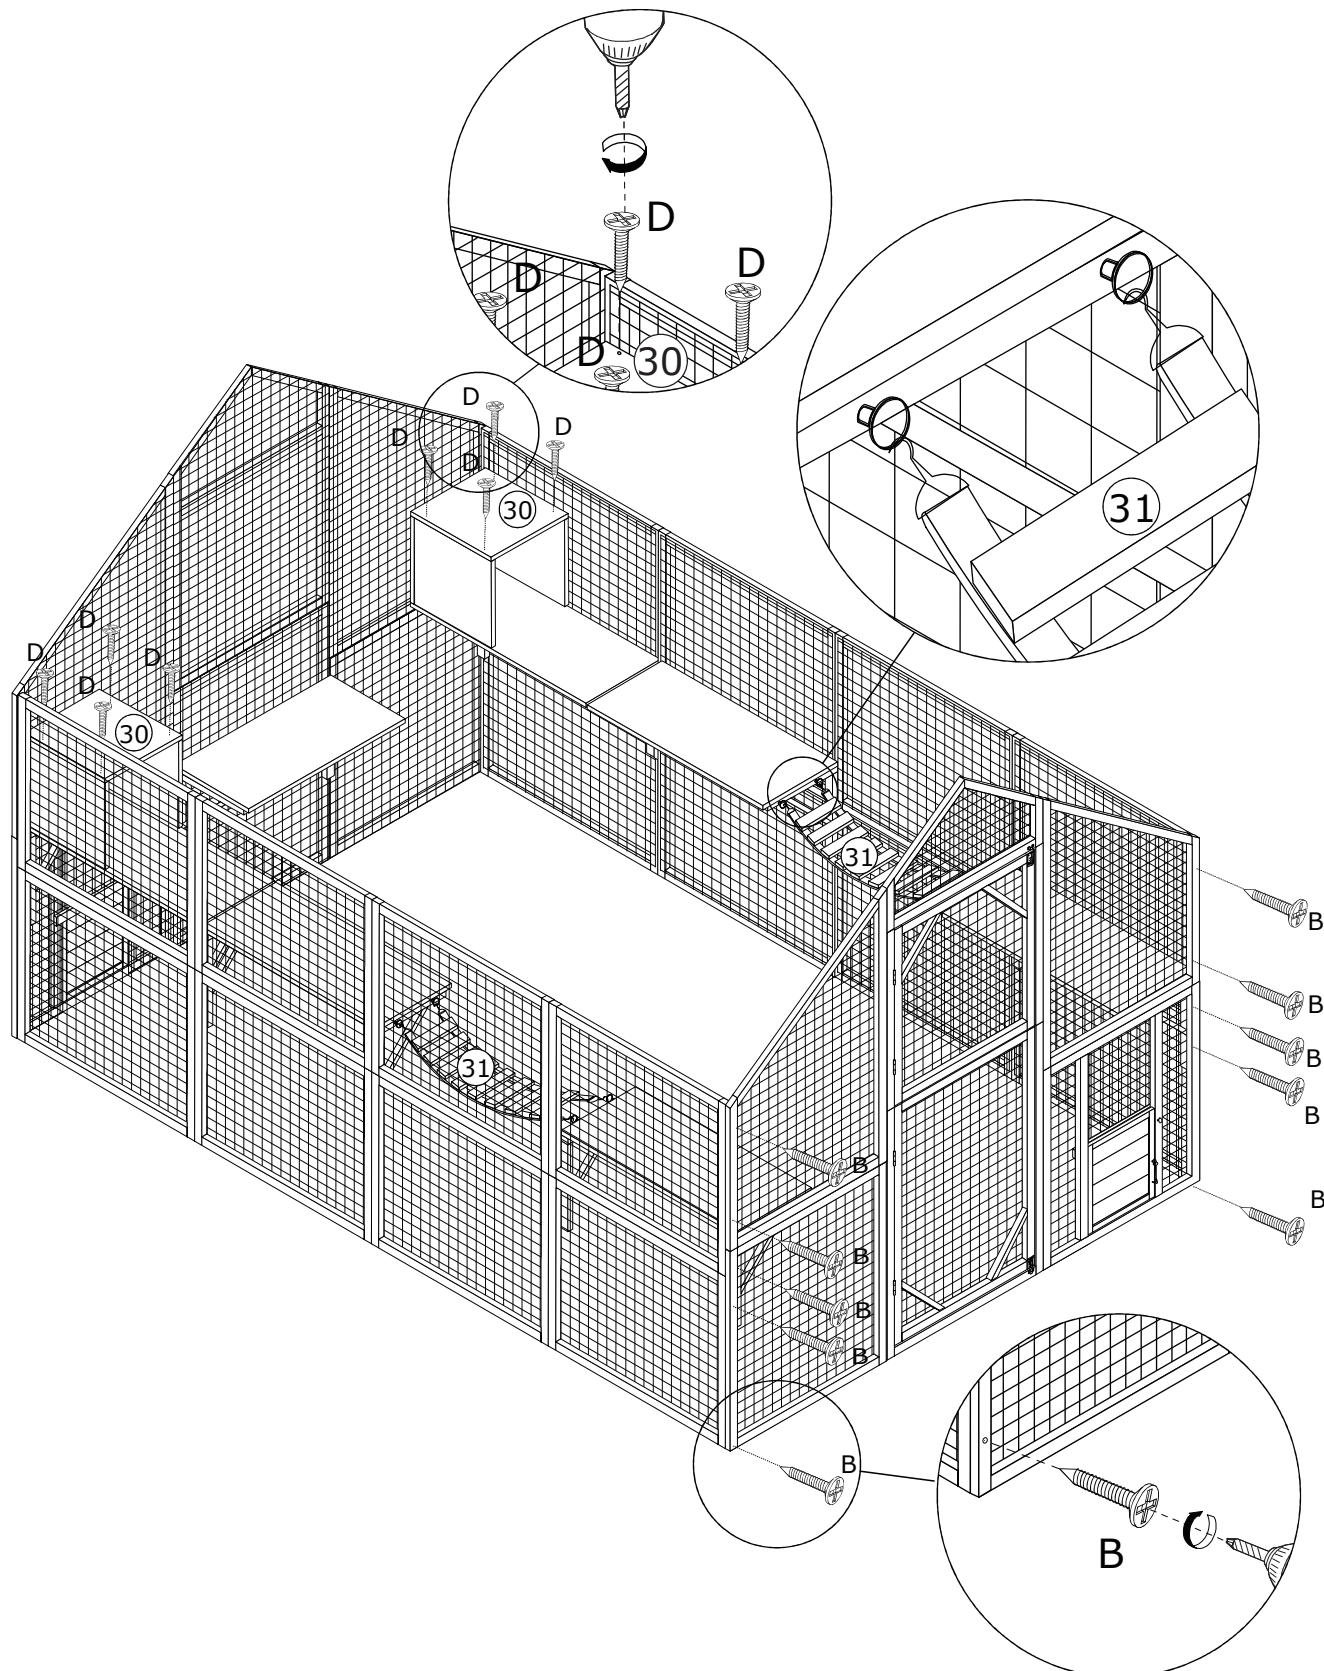


12

A x 26



M3.5 x 50 mm

 When turning the screws, please do it slowly and keep the direction vertical.

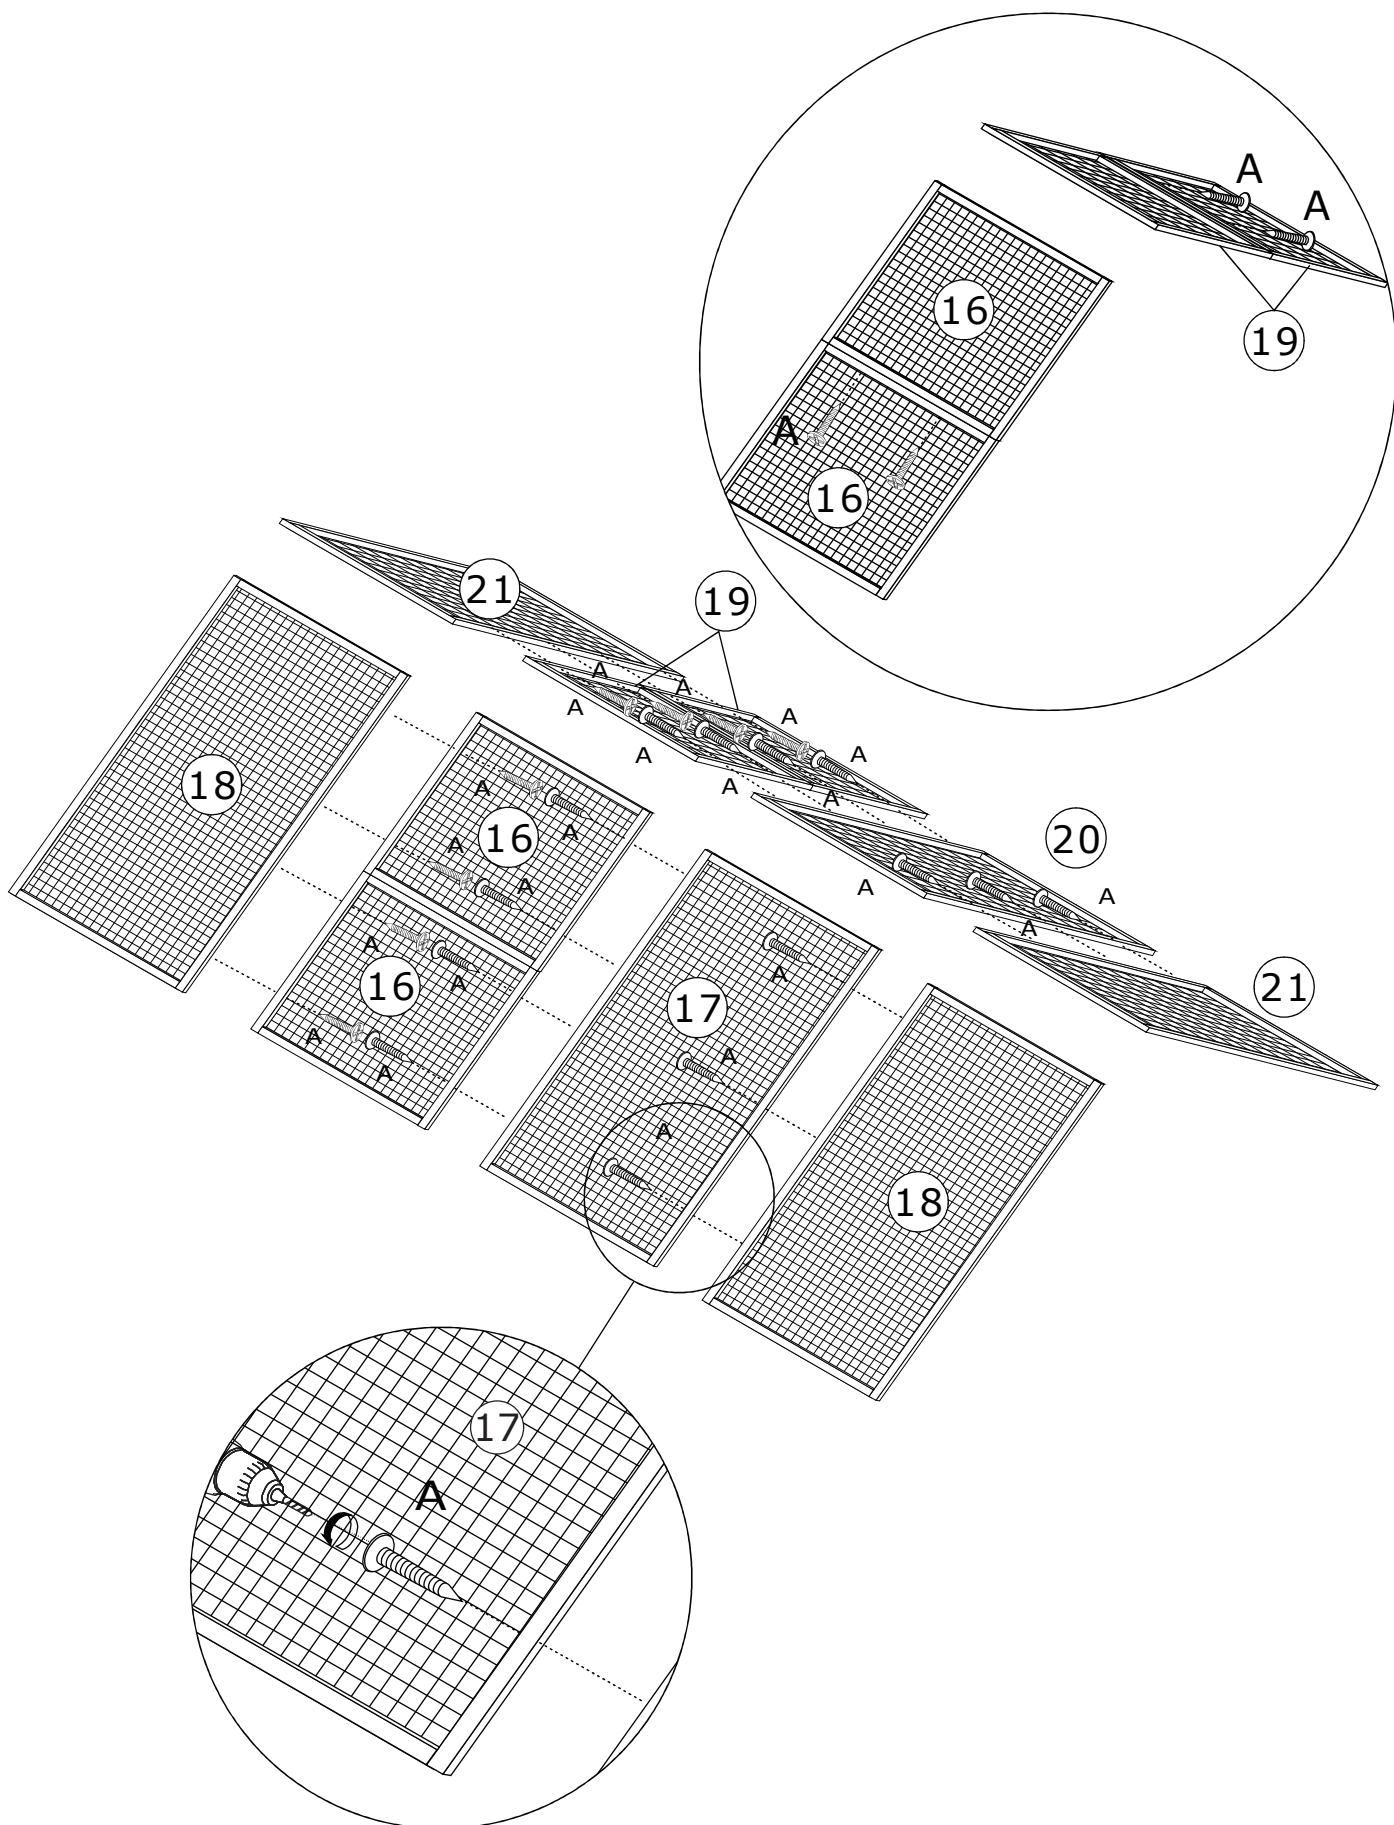


13

C x 12




M3.5 x 30 mm

 When turning the screws, please do it slowly and keep the direction vertical.

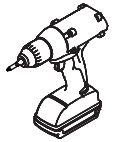

 Attach three part 22 roof triangle supports from inside to the assembled left and right roof parts with the correct support angle.

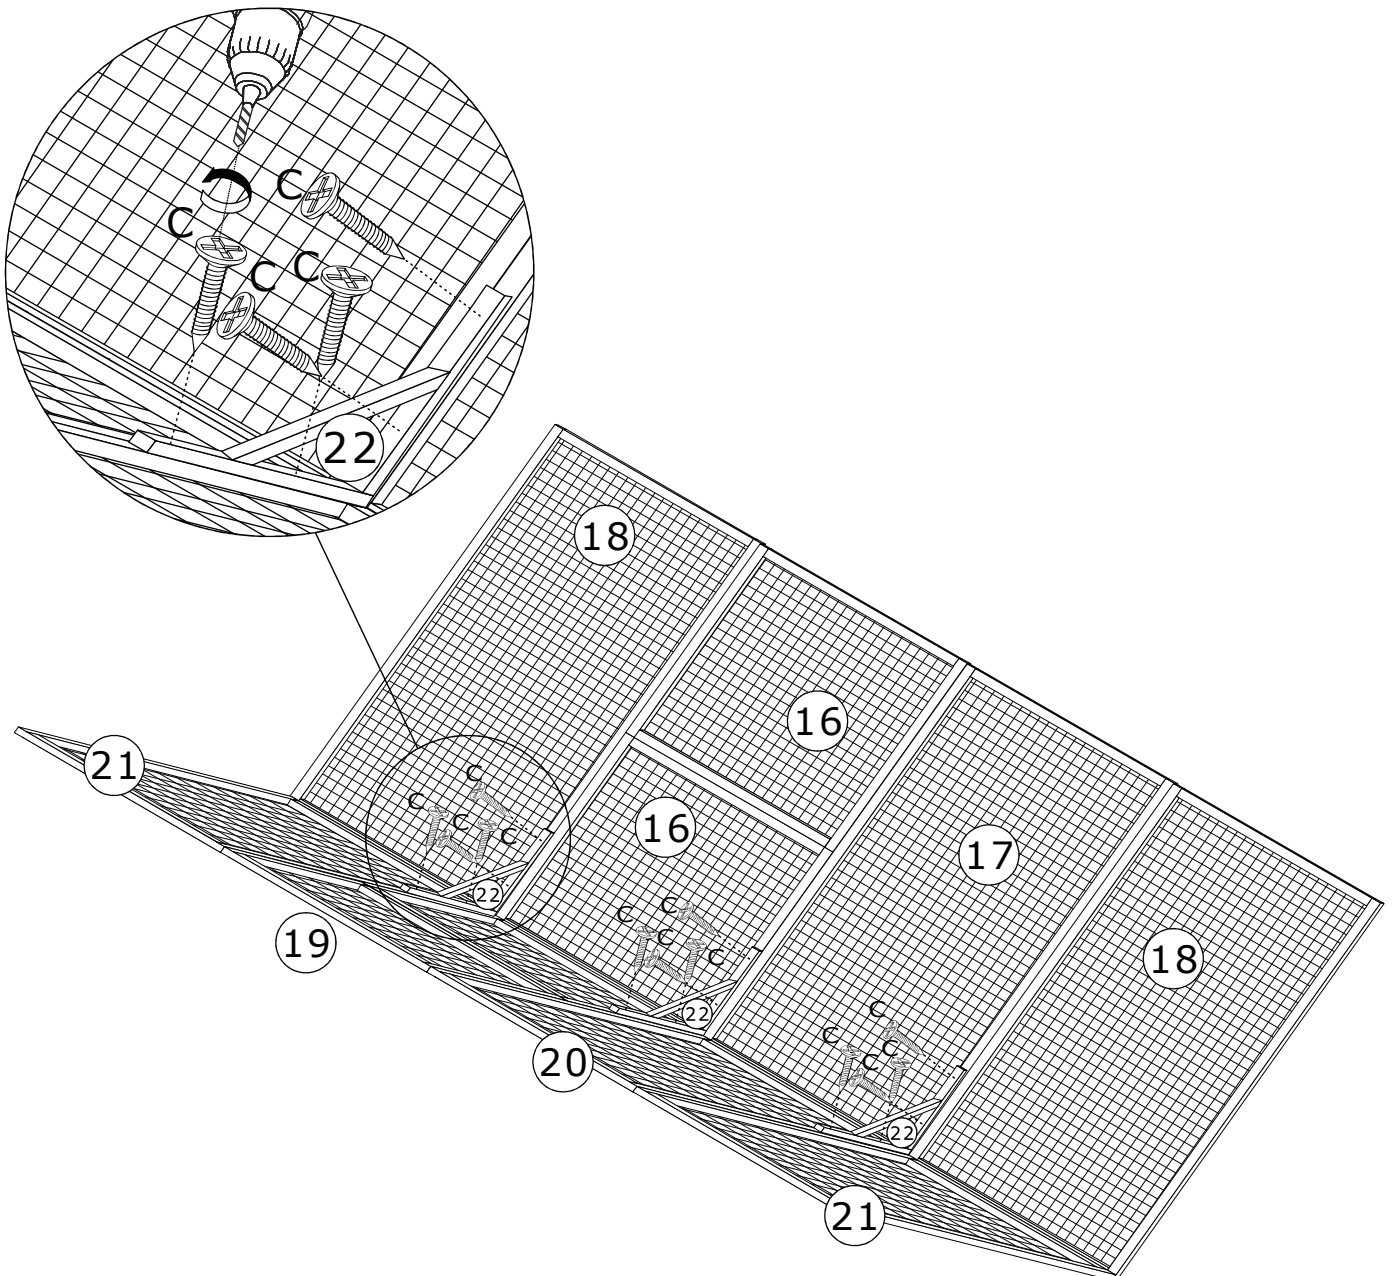


14

B x 8
M3.5 x 40 mm

When turning the screws, please do it slowly
and keep the direction vertical.



 Attach the assembled right roof part to the assembled left roof part
with eight part B screws.

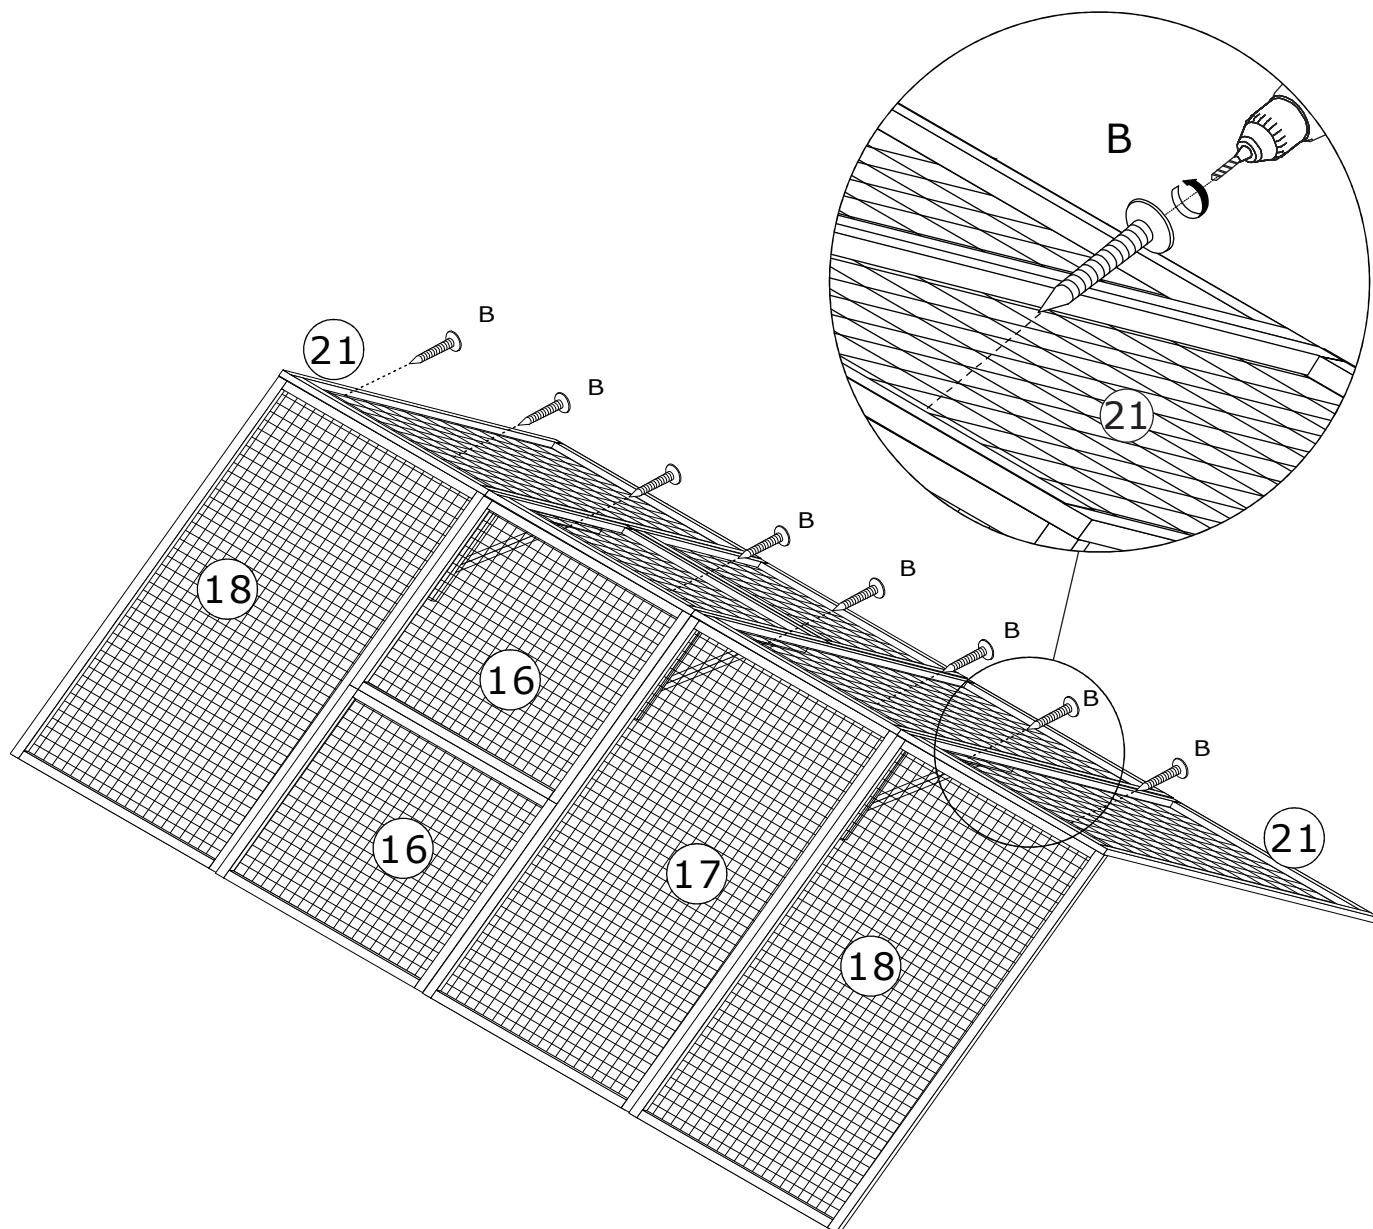

15

E x 12



M3 x 16 mm

 
 
F x 2



When turning the screws, please do it slowly and keep the direction vertical.



Put the whole roof cover on the cage.
Fix two part F door latches with twelve part E screws.

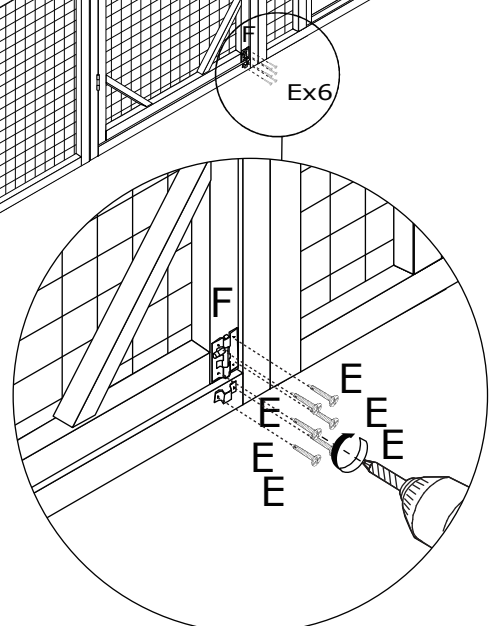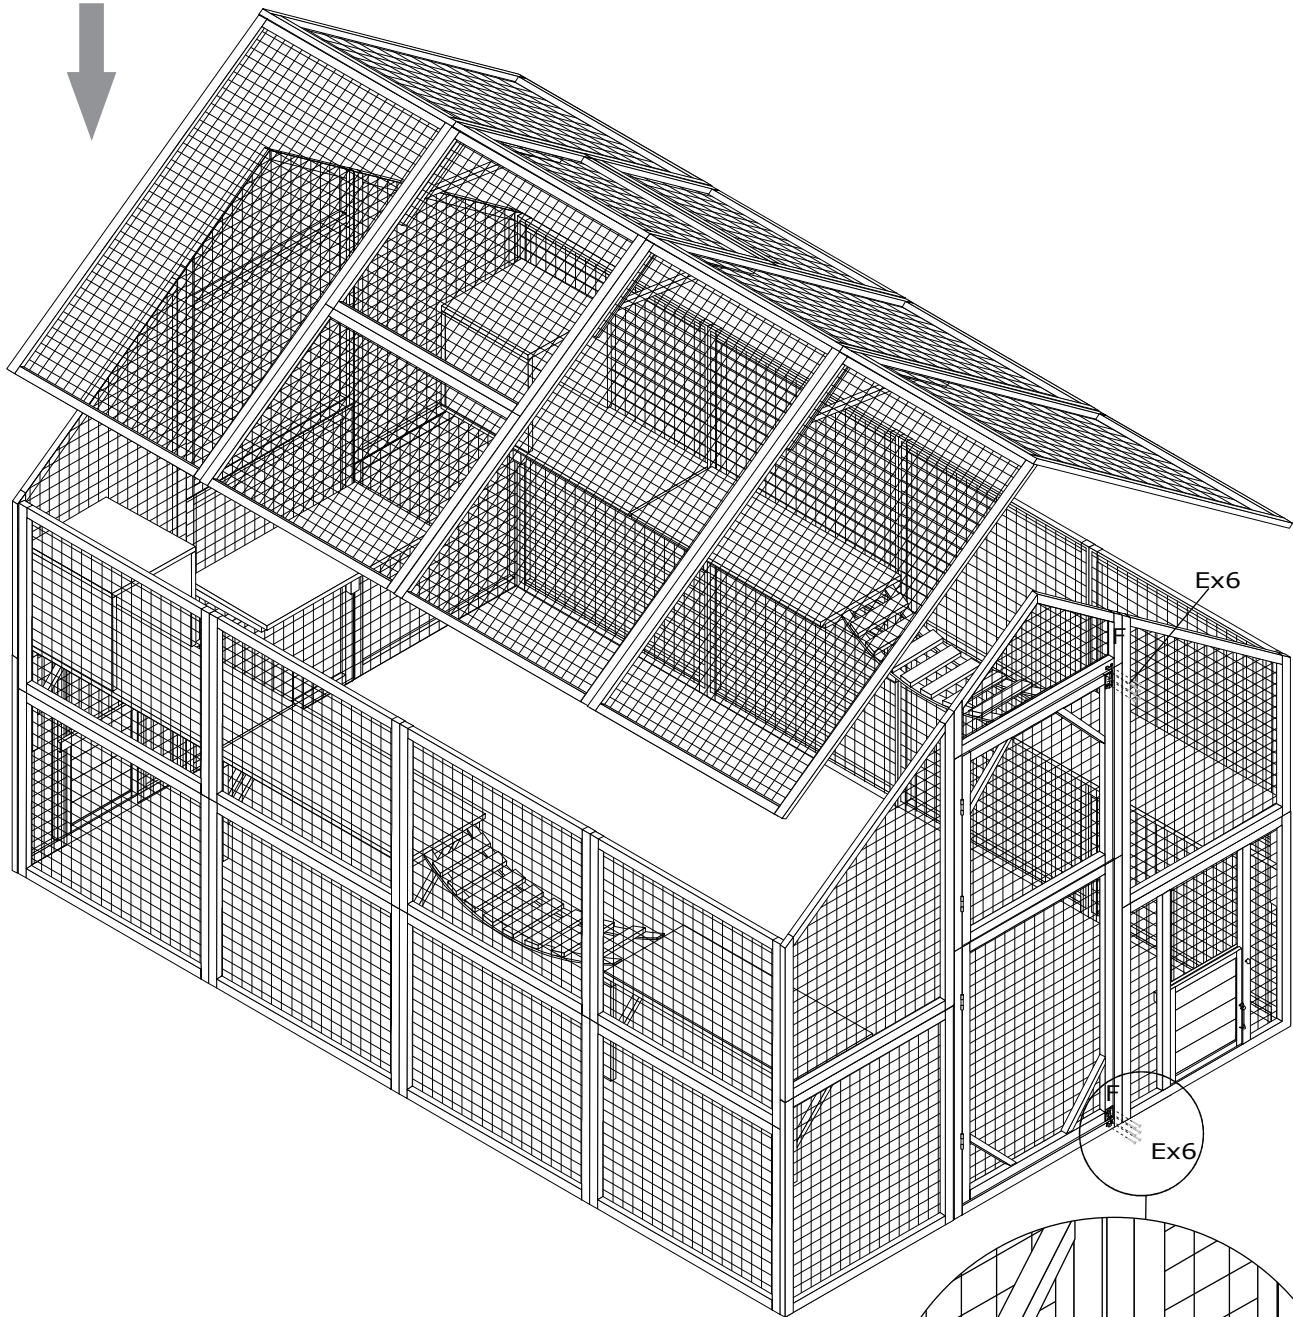

16

C x 24

 


M3.5 x 30 mm

When turning the screws, please do it slowly
and keep the direction vertical.



Fix six part 23 triangle supports to connect roof
covers and side panels with twenty-four part C
screws.

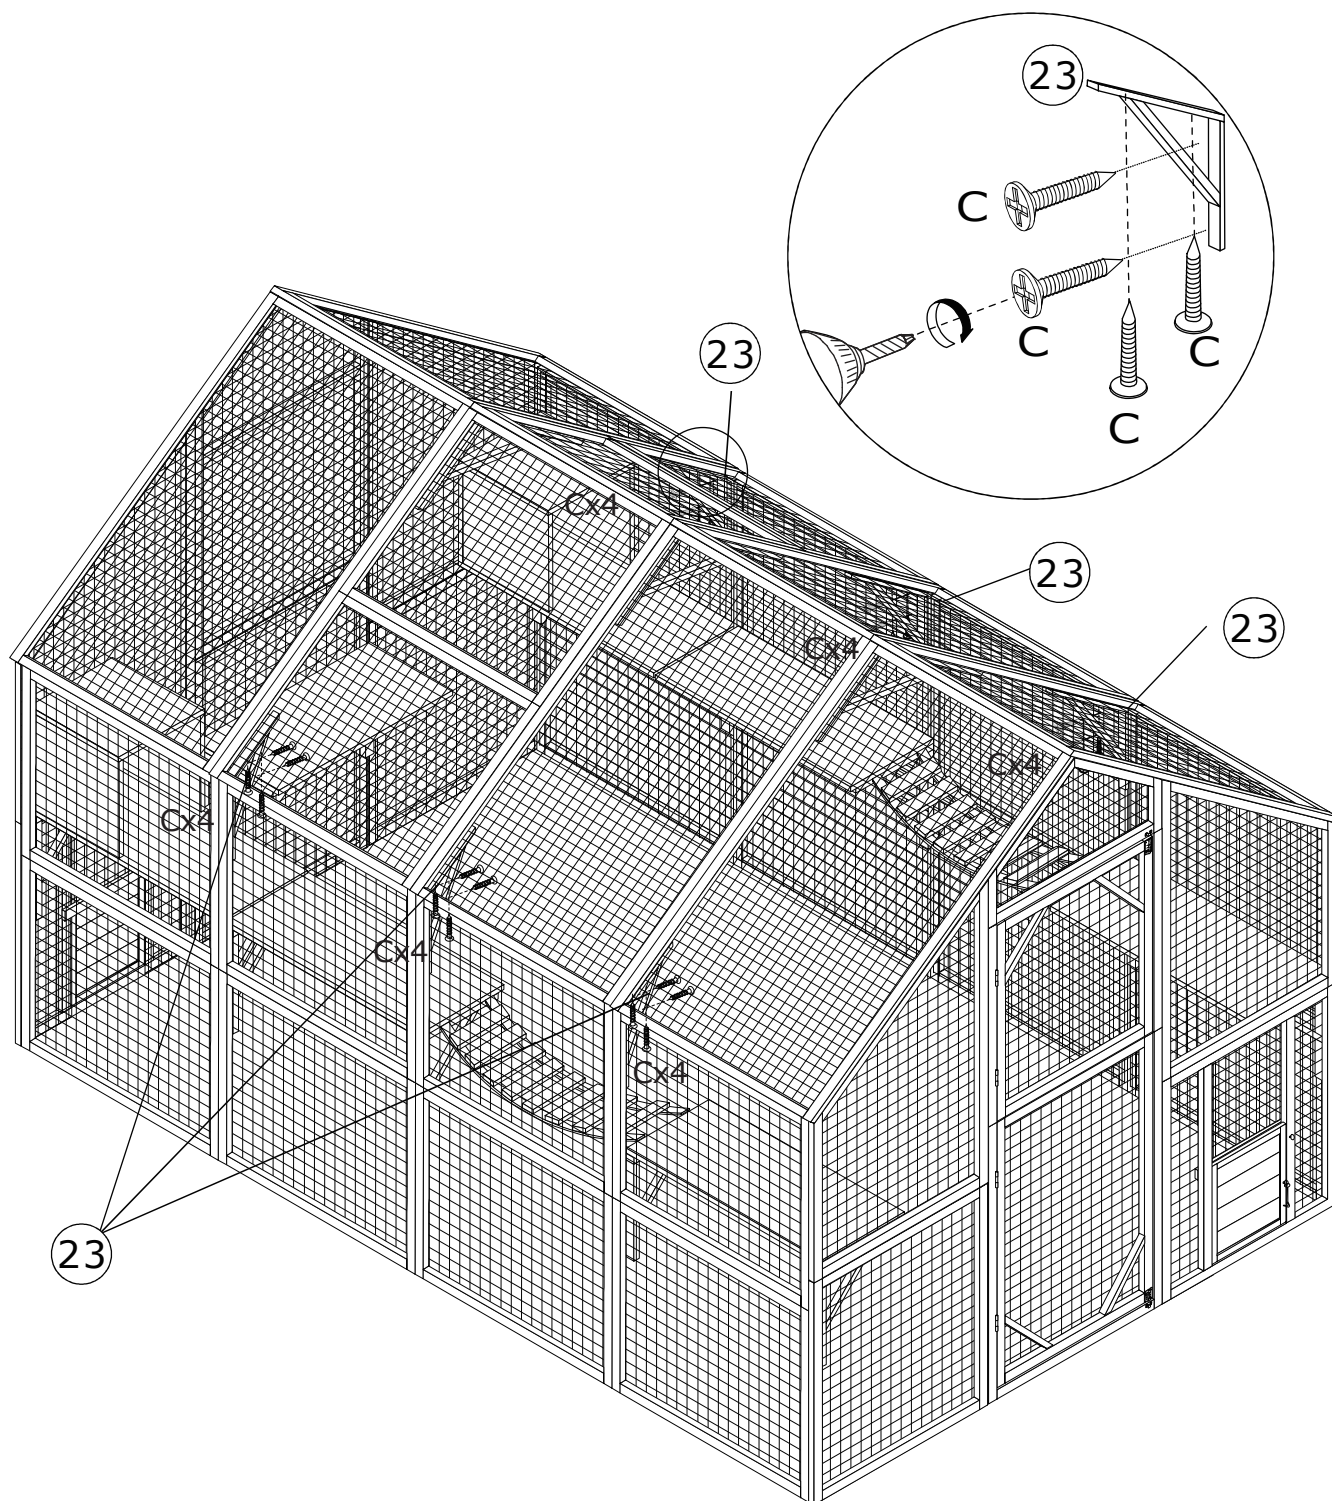

17

B x 20

 


M3.5 x 40 mm

When turning the screws, please do it slowly
and keep the direction vertical.




Attach front and back panels to roof cover with
twenty part B screws.

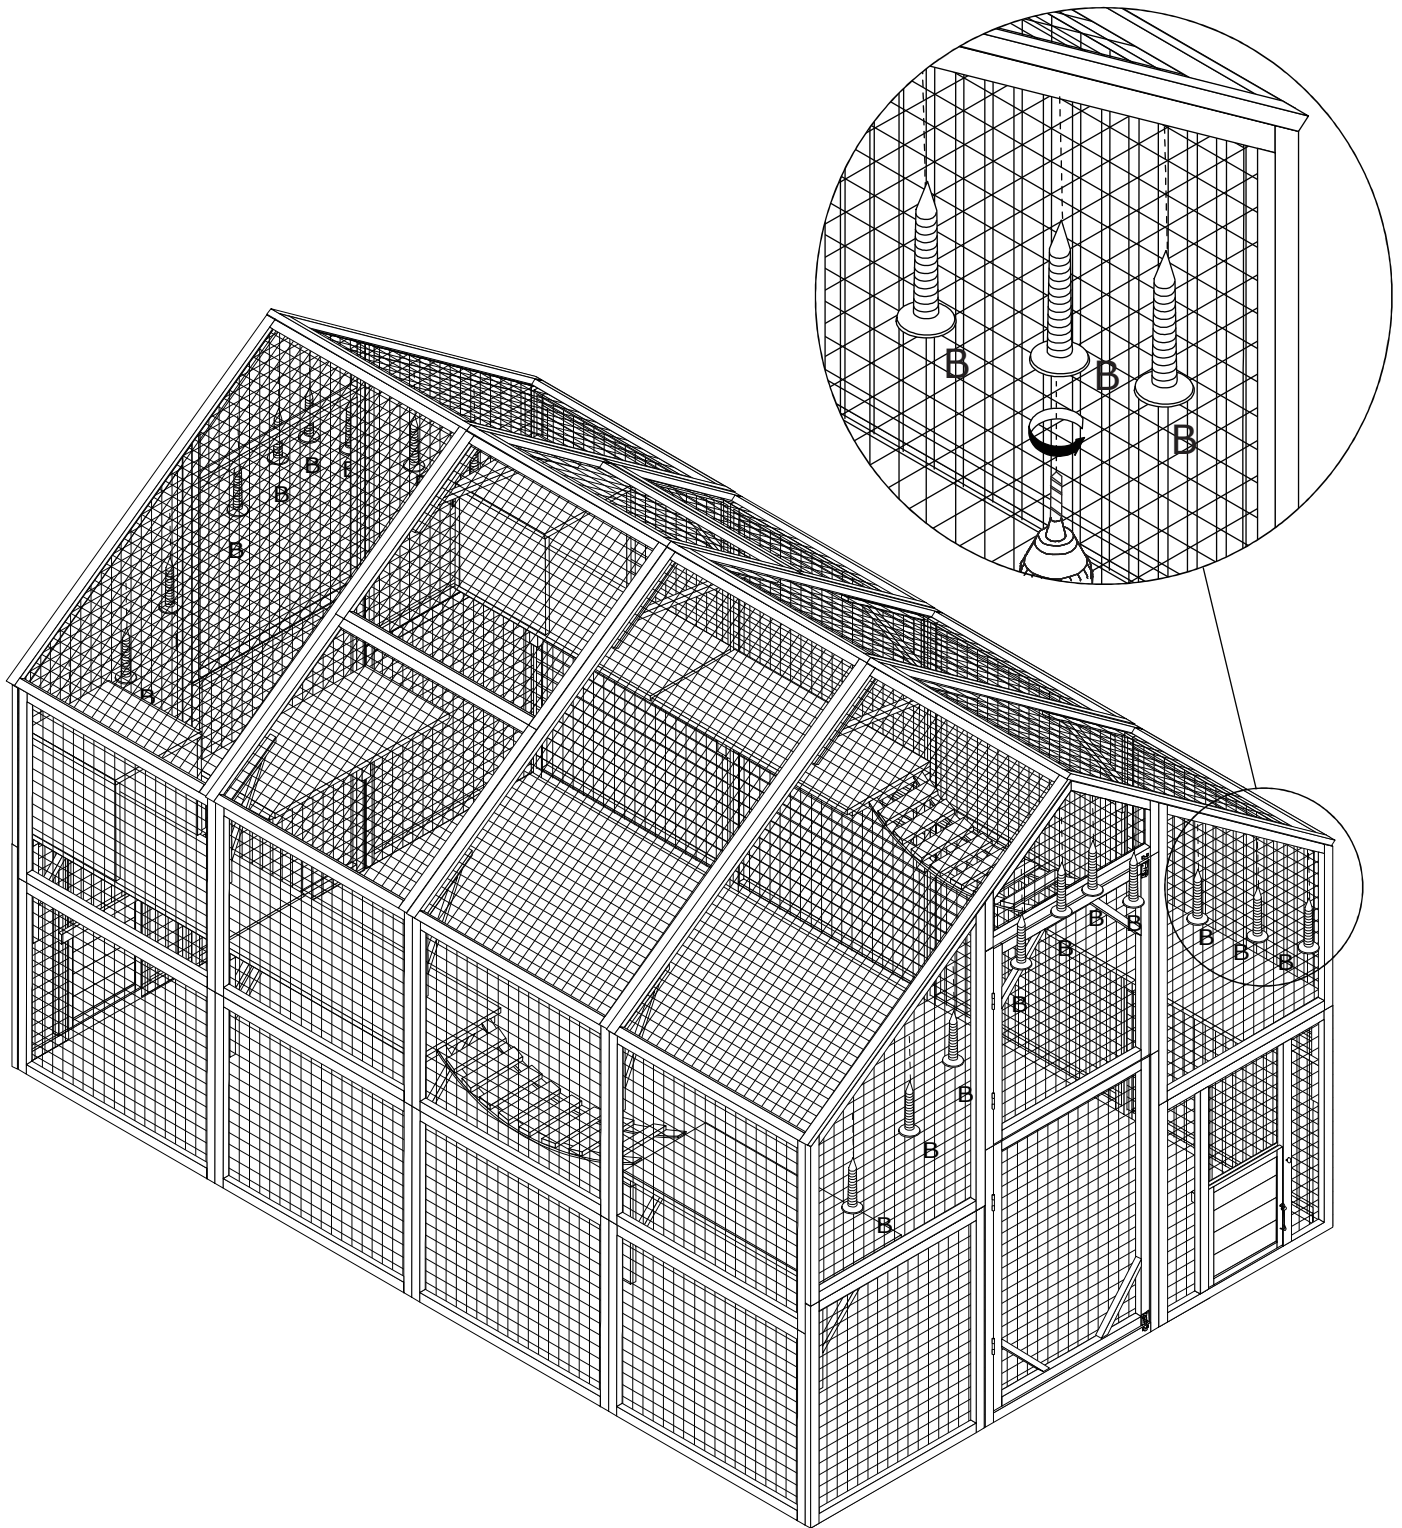

18

 A x 16




M3.5 x 50 mm

When turning the screws, please do it slowly
and keep the direction vertical.



 Attach two side panels to roof cover with sixteen part A screws.

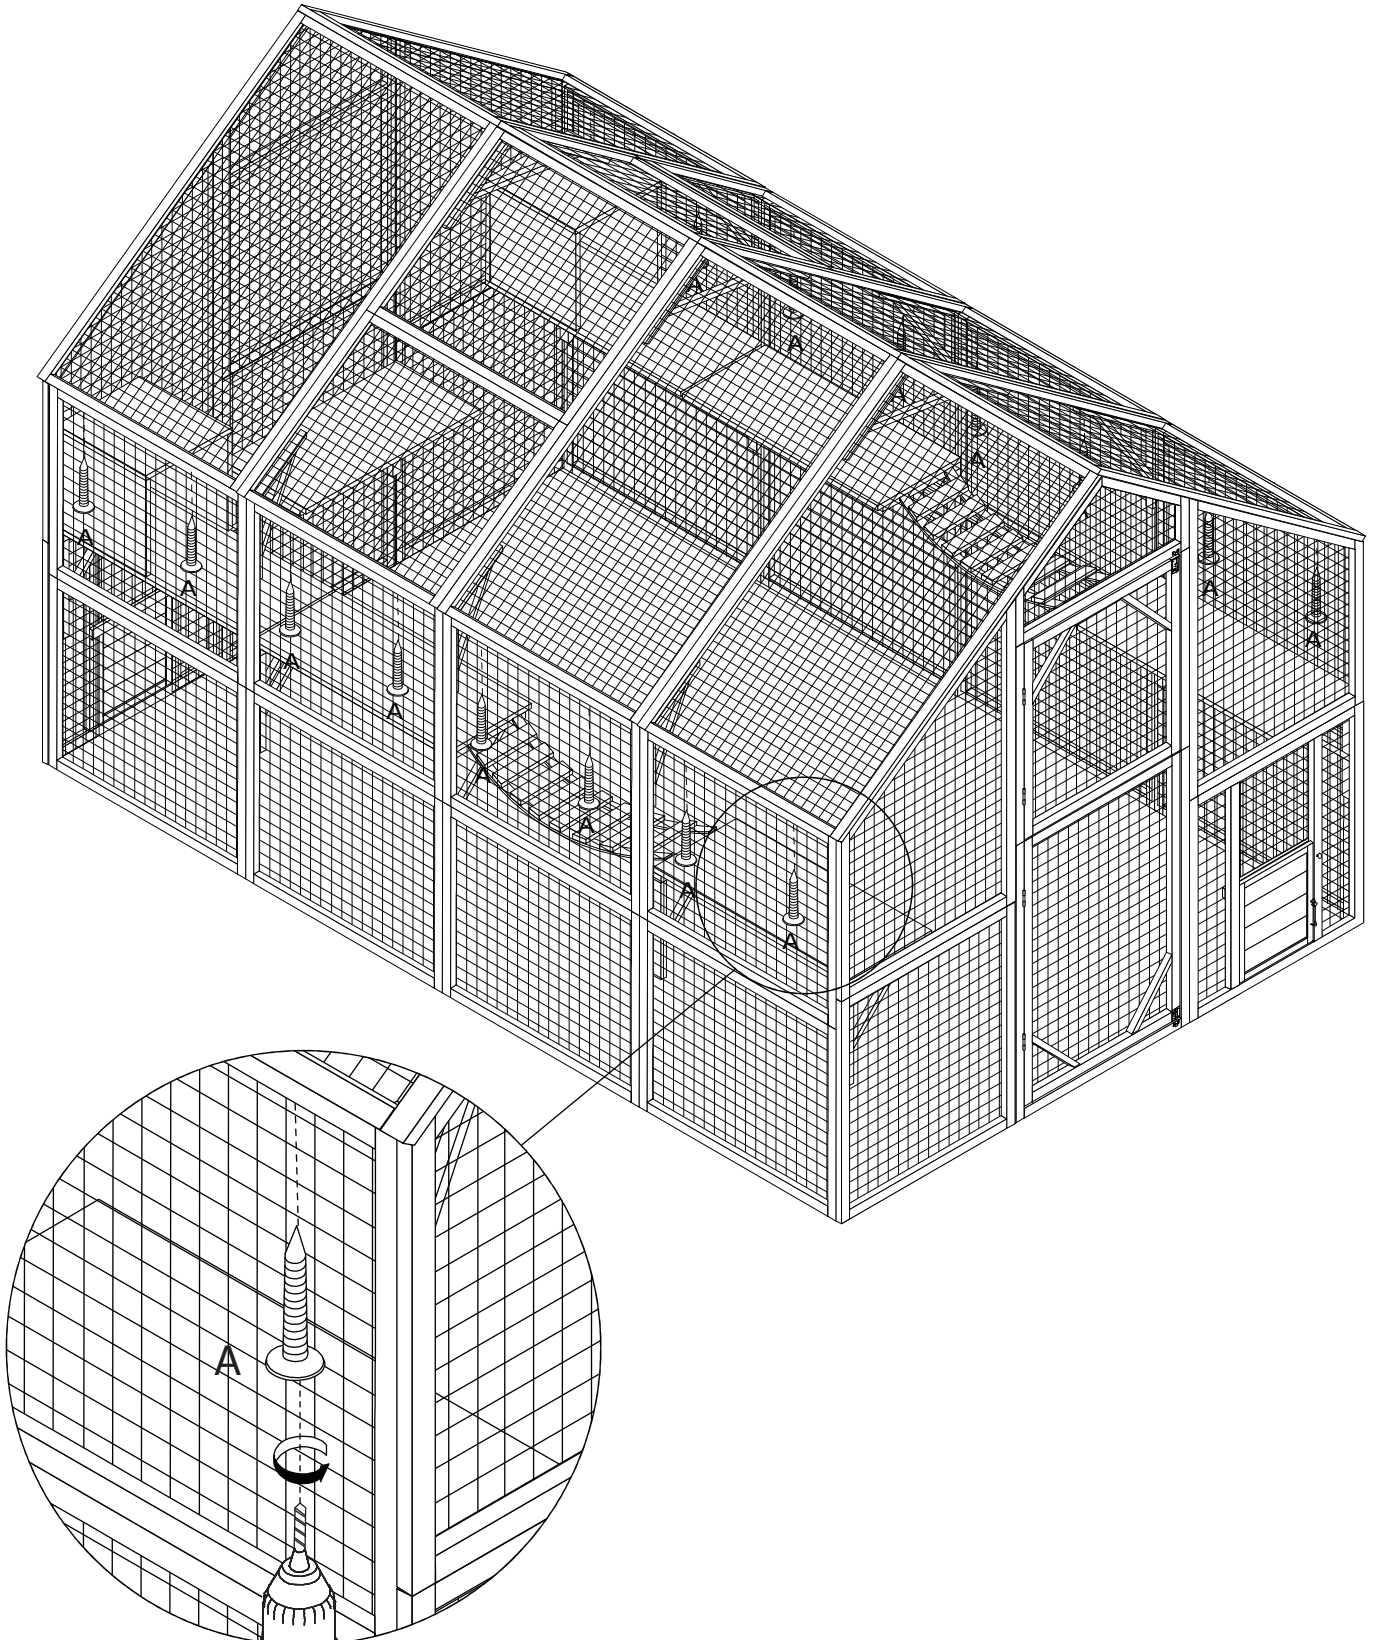


19

J x 32



When turning the screws, please do it slowly and keep the direction vertical.

 Put part 32 water-proof cover cloth and fix it with thirty two part J nails.

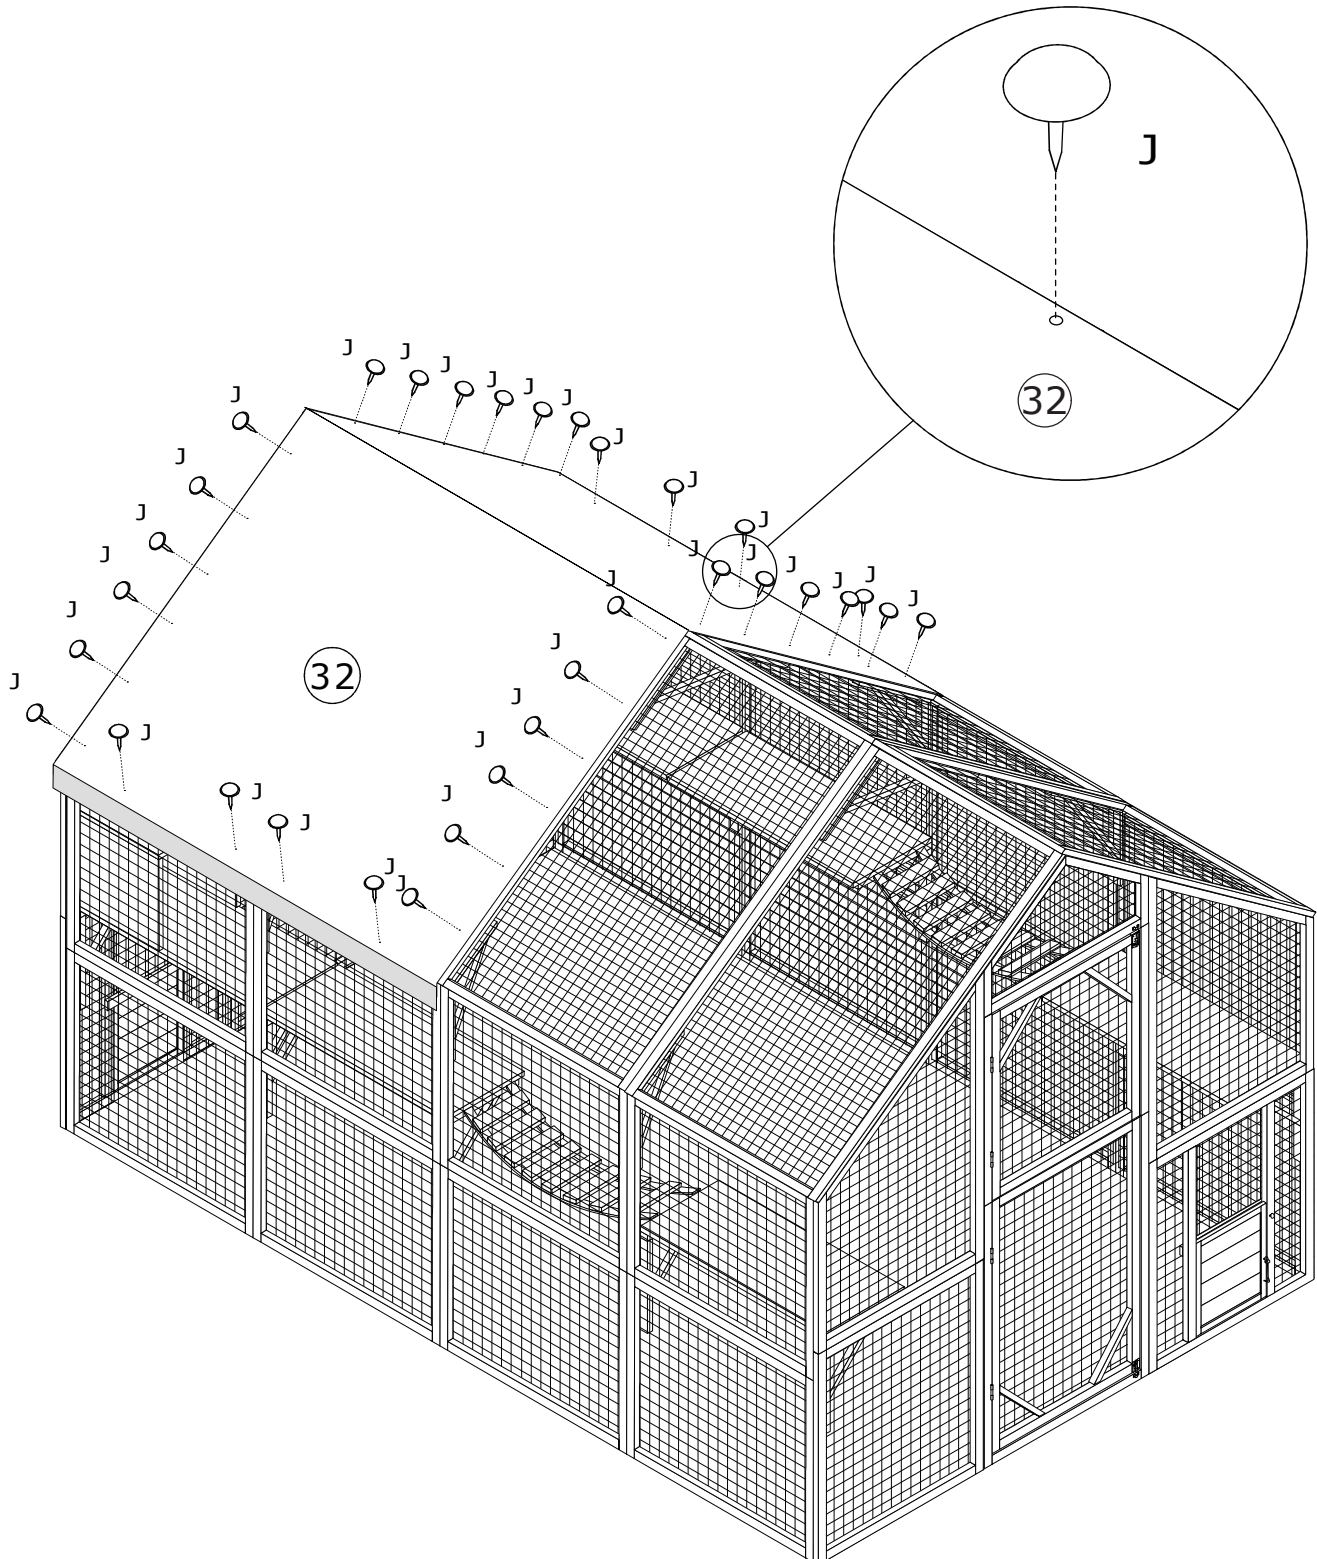

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387