

USE AND CARE MANUAL

GLASS TABLE LAMP WITH NIGHT LIGHT Model number: 21462

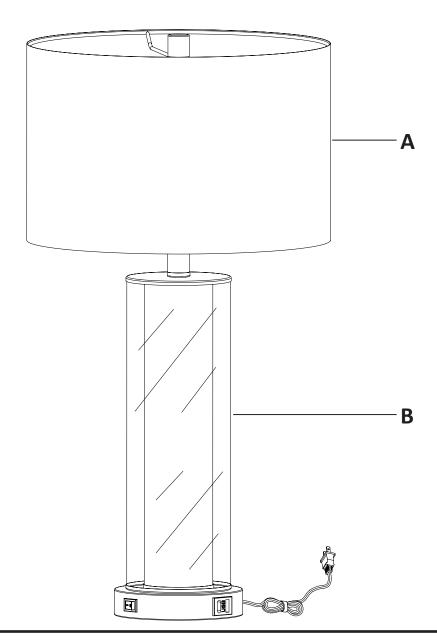

Hardware (Parts are not to scale)

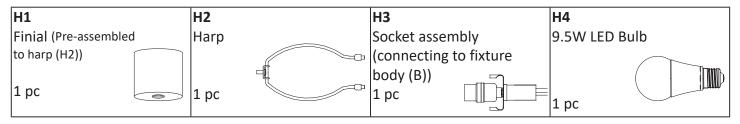

THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

IMPORTANT SAFETY INFORMATION

- This lamp is for indoor use only. The lamp should not be used near water. Never immerse the lamp in water
 or other liquids.
- Never cover the lamp with any object including cloth or paper as this is a fire hazard.
- Do not handle the bulb immediately after the light is turned off as it will be hot.
- This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.


PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare
parts with package contents list and diagram on the previous page. If any part is missing or damaged, do
not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

ASSEMBLY


$oldsymbol{1}$ Assembling the socket assembly

- Properly fold the wire as per the method as shown in the below diagram, and insert the folded wire into tube of the socket assembly (H3).
- Tighten the socket assembly (H3) onto the fixture body (B).

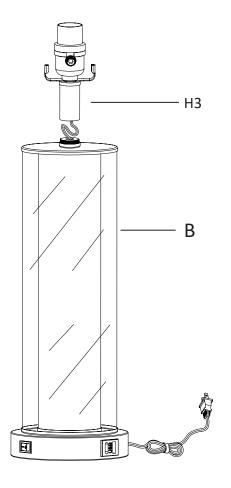

2 Installing the harp

• Insert the harp (H2) prongs into the saddle of the socket assembly (H3) and slide the retaining covers over joints to secure the harp.

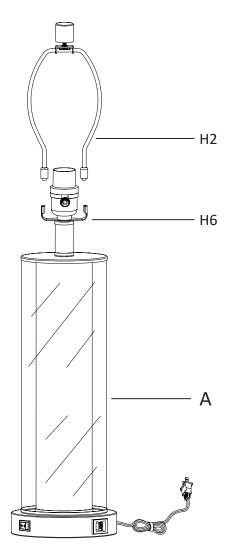


ASSEMBLY (continued)

$oldsymbol{3}$ Installing the light bulb

 Install the light bulb (H4) into the socket. Use one MAX 16W medium base (E26) self-ballasted LED bulb (9.5 W medium base (E26) self-ballasted LED bulb included).


NOTE: You can also use one MAX 100W medium base (E26) type "A" bulb. Do not exceed the recommended wattage.

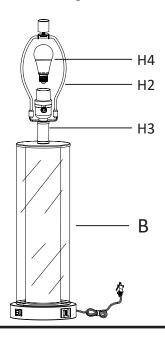

4 Installing the shade


- Unscrew the finial (H1) from the harp (H2).
- Place the shade (A) onto the harp (H2) and secure with the finial (H1).

NOTE: Grasp the finial (H1) to adjust the shade (B) to level if shade is skewed. Remove the plastic cover from the shade before using.

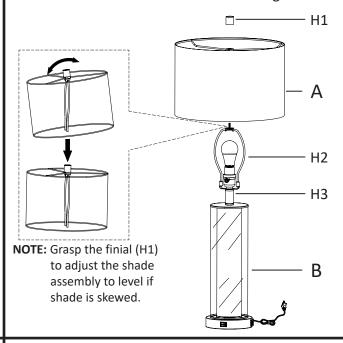


5 Using the table lamp

- Plug into the wall outlet, turn on the switch and enjoy.
 - **Upper light** Turn the switch clockwise on the top of the lamp to control the upper light.
 - Night light Turn on the rocker switch on the front the base to control the night light.

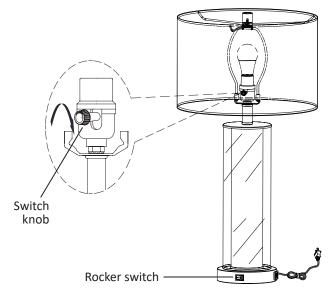

6 Using the USB port

- On the side of the base, there is a built in Dual USB (type A port and one type C port) for you to connect a charging cable (not included) (powers phones, tablets & more).
- The built-in USB port type A and type C rating: 5Vdc, 2.1A.

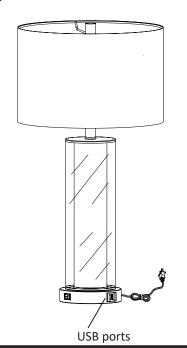

CLEANING

- Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry, soft cloth to dust or wipe carefully.
- To clean the fixture, pull the plug from the wall outlet. Use a dry or slightly dampened, clean cloth to wipe the exterior surface of the fixture.

TROUBLESHOOTING

- The light does not come on at all:
 - a) Check whether the bulb was burned out.
 - b) Ensure the power supply is turned on.
 - c) Ensure the cord is plugged into an outlet.
 - d) Ensure the circuit breaker is set in the "ON" position.
- Fuse blows or circuit trips when light is turned on.
 - a) Check for crossed wires, ensure wiring is correct.