



PATIO LANTERN

Owner's Manual

IMPORTANT SAFETY INSTRUCTIONS

READ THE ENTIRE PRODUCT LABEL AND OWNER'S MANUAL BEFORE USING

For Indoor or Outdoor Use

Weatherproof Construction

Grid Voltage: 600V

Charging: Charges in Direct Sun

Run Time: 6+ Hours

Features & Benefits

UV LED

Flame Effect LED

Easy-Clean Catch Bin

No Open Flame Concern



ELECTRIC SHOCK RISK-


DO NOT TOUCH THE ELECTRIC NET

ABOUT THIS PRODUCT:

Thank you for choosing the solar powered **PIC® Pest Free Living Patio Lantern**. Please read this owner's manual carefully to ensure use of this product complies with all safety regulations.

This weatherproof unit is designed to charge in direct sunlight. It is equipped with a UV light function and a zapping grid which kills bugs on contact. The flame effect serves as a beautiful accent light. The white LED light is suitable for illuminating the area. It's recommended to place the product away from your outdoor living space when using as a zapper. It can be carried, placed on a table or hung on a hook.

Both modes are controlled by the power button located near the bottom of the device. Simply press the button per the **Directions for Use** to toggle through the functions. When turning the unit on, the first mode is **UV/Zapper/Flame Effect**. The second mode is **Zapper/white LED Lantern**. Pressing the button a third time powers the device off.

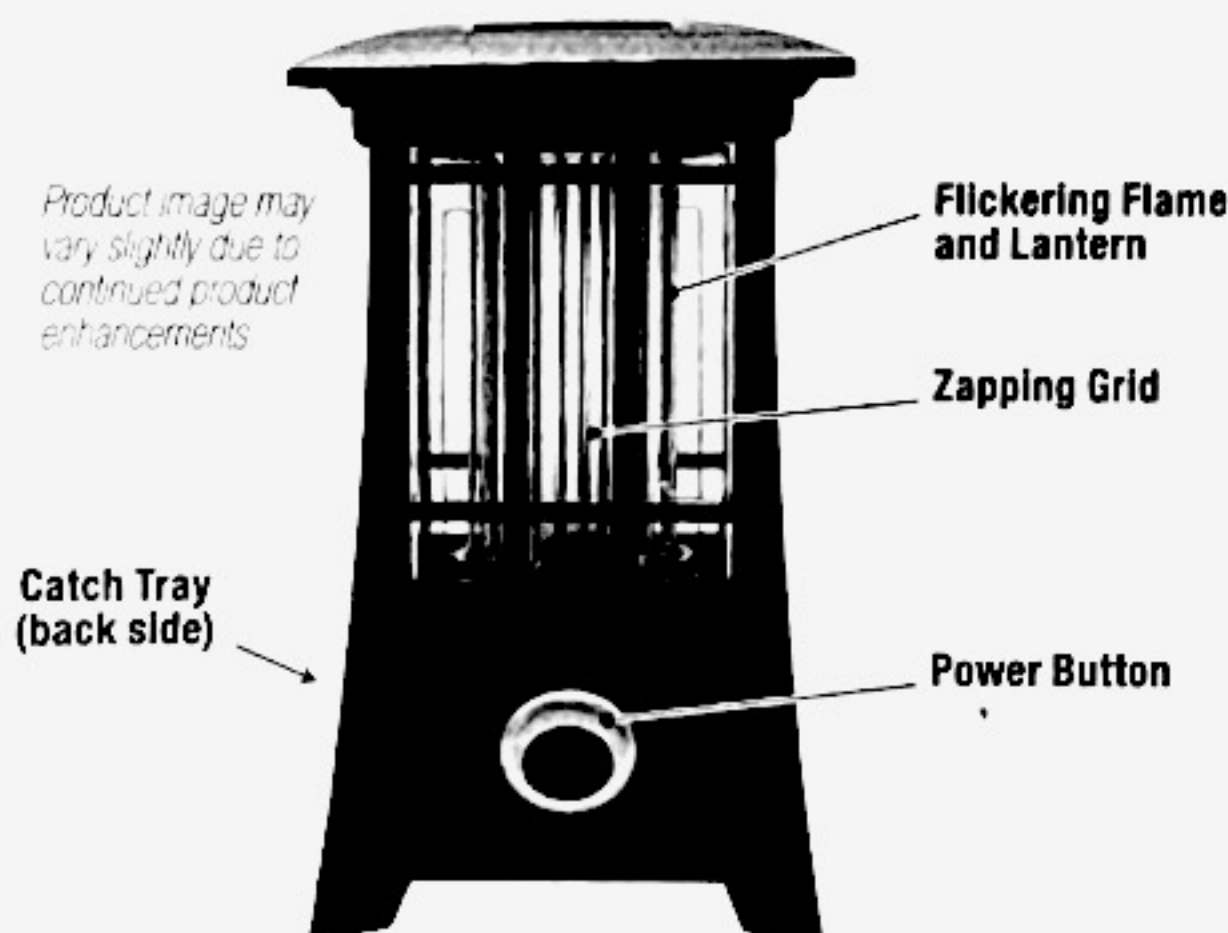

DIRECTIONS FOR USE:

For optimal performance, charge the device in direct sunlight for a minimum of 6 hours prior to each use.

1. To turn the device **ON**, simply press the power button to activate the Zapper/UV/Flame Effect mode. *(By keeping the device on at all times, the device will recharge during the day in direct sunlight and the dusk-till-dawn sensor will activate the flames again at night.)*

2. To switch from Flame Effect mode to Zapper/White LED Lantern mode, simply press the power button again.

3. To turn the device **OFF**, press the power button one final time. Keep the device off when not in use.

Prior to **cleaning the device**, ensure the device is powered off. Wait 45 minutes for the grid to lose power. Gently use canned air or hair dryer on cool/high setting to blow out accumulated debris from the zapping grid. Periodically remove the catch tray located on the back of the device to shake out dead insects and debris from the inside as well.

Pro Tip: For off-season storage, save the outer box, this manual, and packing materials. Ensure the product is **OFF** per directions above before storing.

This device is not intended for use by young children. Children should be supervised to ensure they do not play with the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INFORMATION

This product is suitable for indoor and outdoor use. Check the product frequently for accumulating debris/dead insects as it may contribute to fire. Do not bend electrical grid and do not attempt to make repairs on the unit. Call our customer service department at 1-800-799-7302 for assistance.

CAUTION – High Voltage, Keep out of Reach of Children.

CAUTION – High Voltage, Power off unit before servicing.

CAUTION – Collected insects may be a fire hazard. Clean dead insects from the unit frequently.

WARNING – Skin or eye damage may result from directly viewing the light produced by this apparatus.

CAUTION – ELECTRICAL SHOCK HAZARD MAY EXIST IF WATER FROM A GARDEN HOSE IS DIRECTED AT UNIT WHILE IN OPERATION.

CAUTION – Do not stick foreign objects, metal objects or fingers into the unit.

CAUTION – Do not tamper with or modify unit.

CAUTION – Do not clean unit while it is powered on.

CAUTION – Before cleaning, allow unit to sit for at least 45 minutes to release charge from electric grid.

CAUTION – Do not clean or spray the unit with water, cleaning spray, or any other liquid.

CAUTION – Do not submerge unit in water or any liquid.

CAUTION – Keep out of contact with flammable items such as paper or clothing.

CAUTION – Do not use flammable liquids around unit.

Manufactured For:
PIC® Corporation
1101-1107 W Elizabeth Ave.
Linden, NJ 07036
1-800-799-7302

U.S. Patent Number 11,002,417
Other Patents Pending in the U.S. and Abroad
MADE IN CHINA
EPA Est. No. 94412-CHN-1
STOCK# PIC-99188
v030922