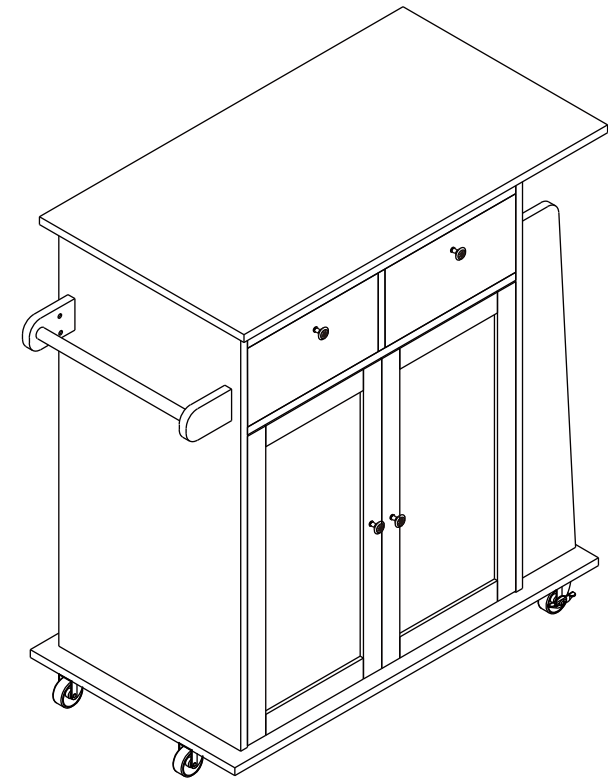 
 
 


















USER'S MANUAL
Kitchen Cart


Hardware List

Ax32 	Bx32 	Cx16 	Dx26  M3x12mm
Ex24  M4x35mm	Fx4  M4x10mm	Gx2 	Hx1 
Ix4 	Jx4 	Kx2 	Lx2 
Mx4 	Nx4 	Ox2  M3x14mm	Px16  M5x14mm
Qx4 	Rx4  M5x45mm	Sx4 	

              
Parts List





1		x1	13		x1
2		x1	14		x1
3		x1	15		x1
4		x1	16		x1
5		x1	17		x1
6		x1	18		x1
7		x1	19		x2
8		x2	20		x2
9		x5	21		x2
10		x1	22		x2
11		x1	23		x2
12		x1	24		x1

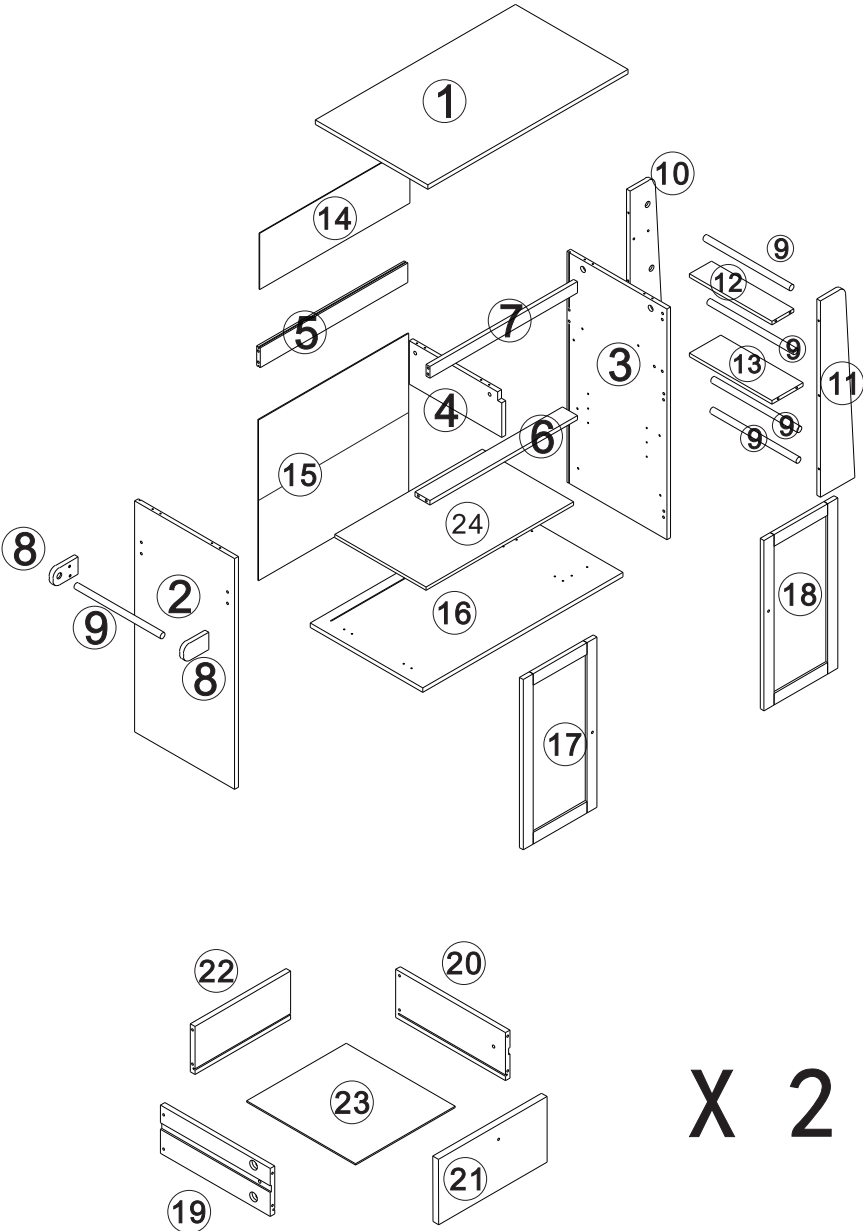 Part List Assembly Overview




X 2

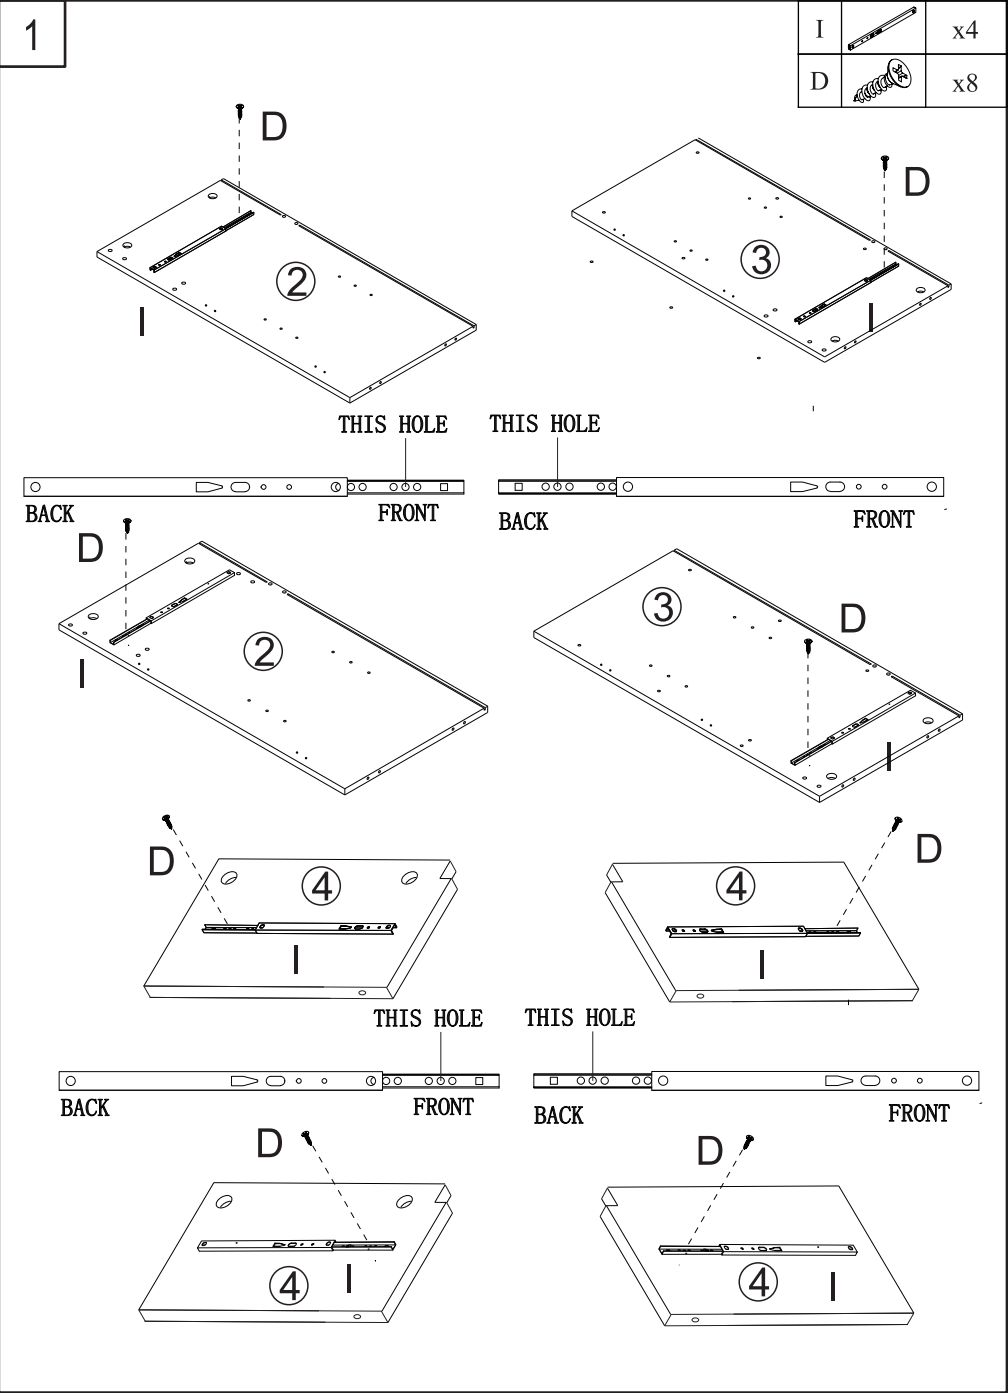 


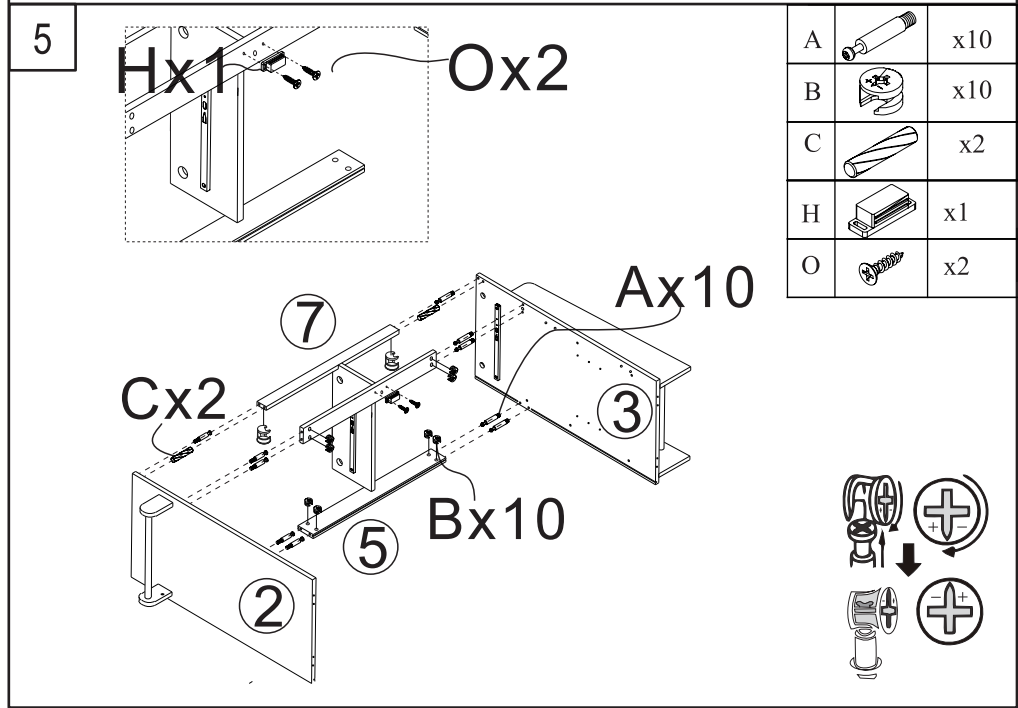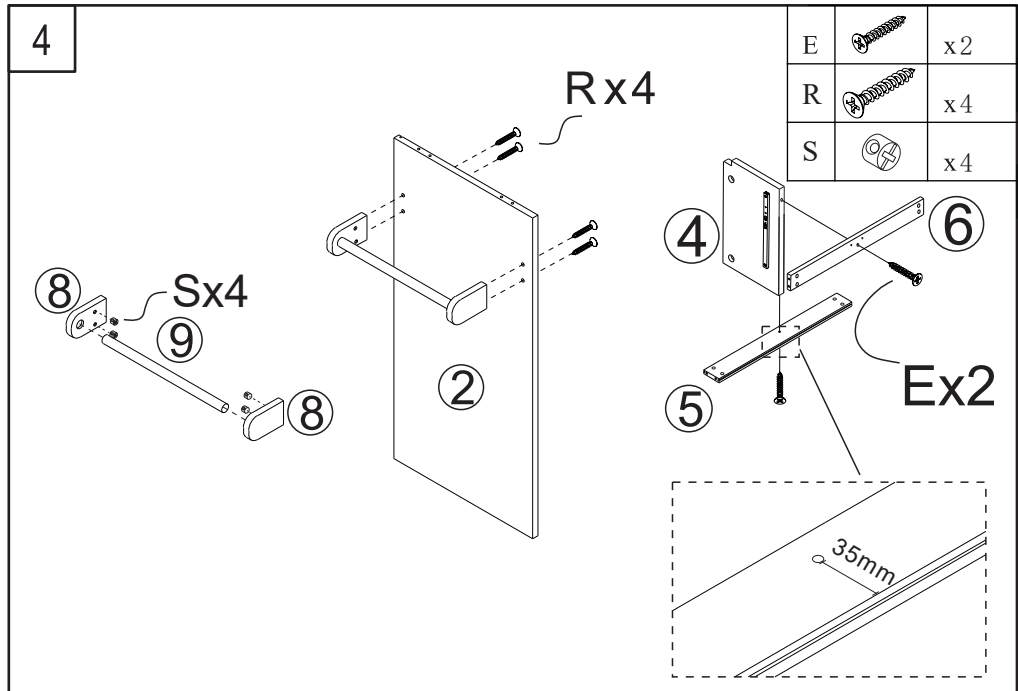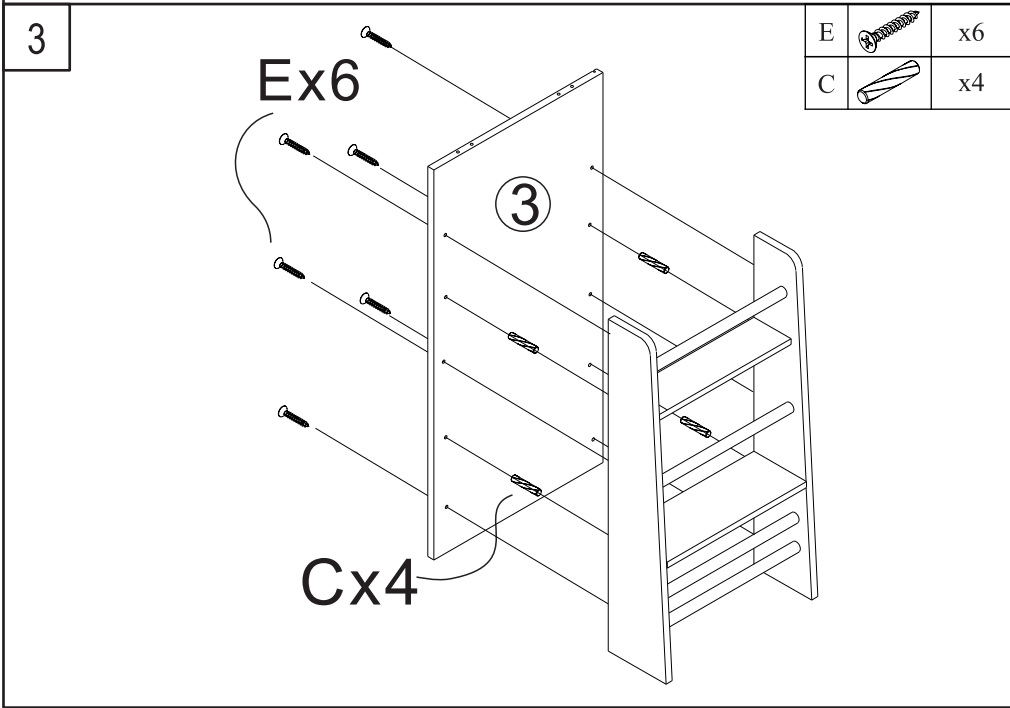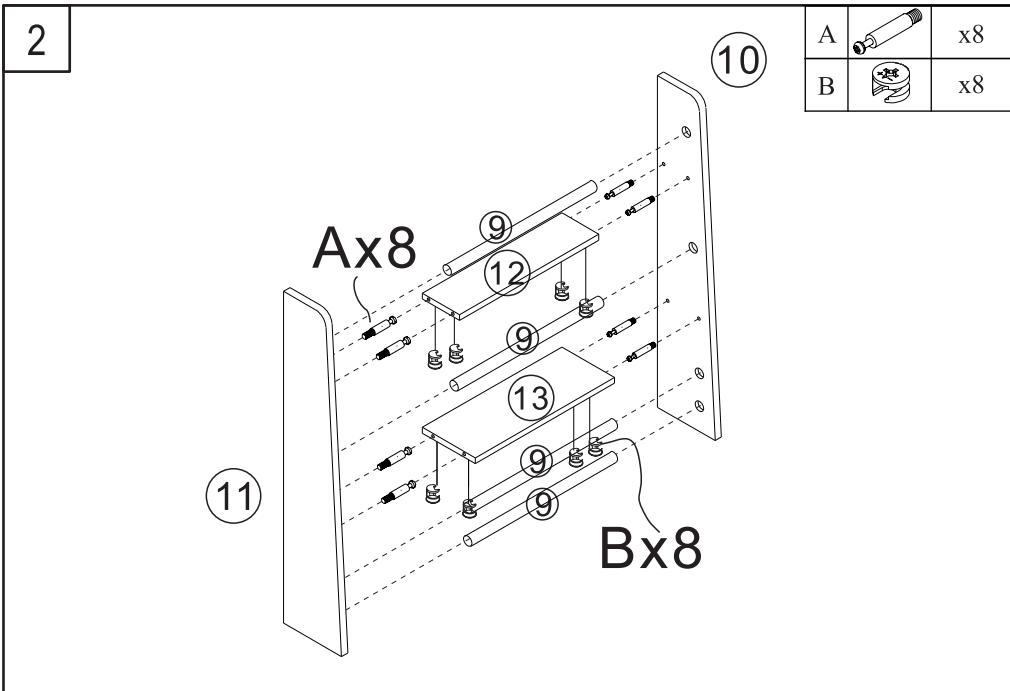    

6

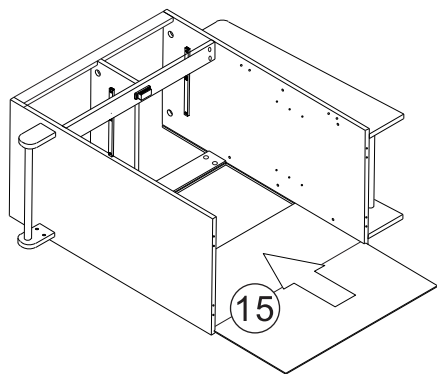 


7

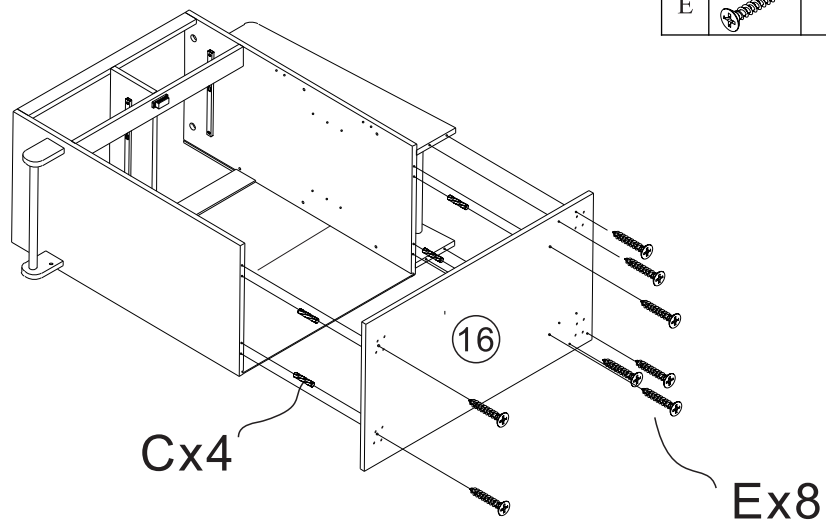 


C		x4
E		x8

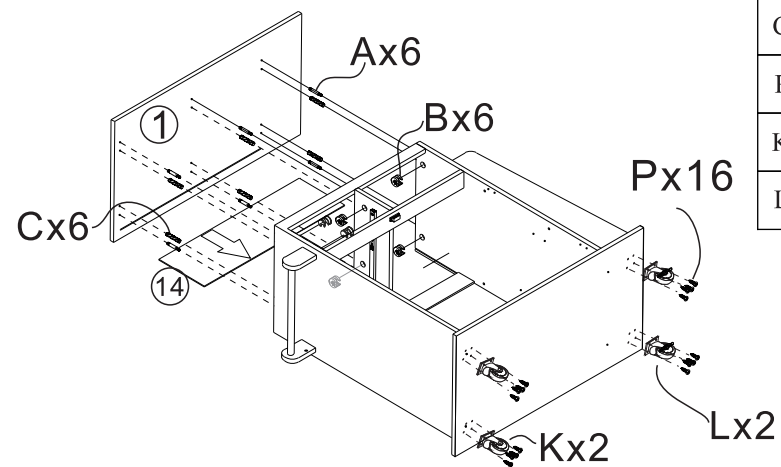 8



A		x6
B		x6
C		x6
P		x16
K		x2
L		x2

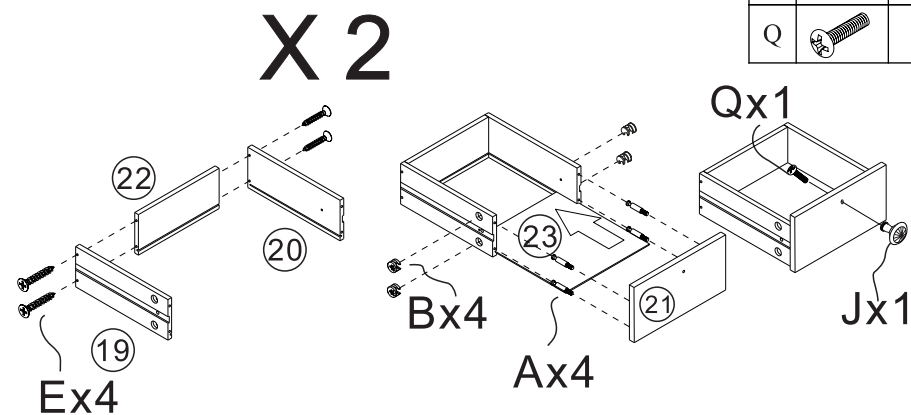 9



A		x8
B		x8
E		x8
J		x2
Q		x2

