



**PROJECT
SOURCE.**

Project Source® is a registered trademark
of LF, LLC. All rights reserved.

 
ITEM #0156459
0156460

WALL LANTERN

MODEL #FY05-005BLK-M
FY05-005WH

Français p. 8

Español p. 15

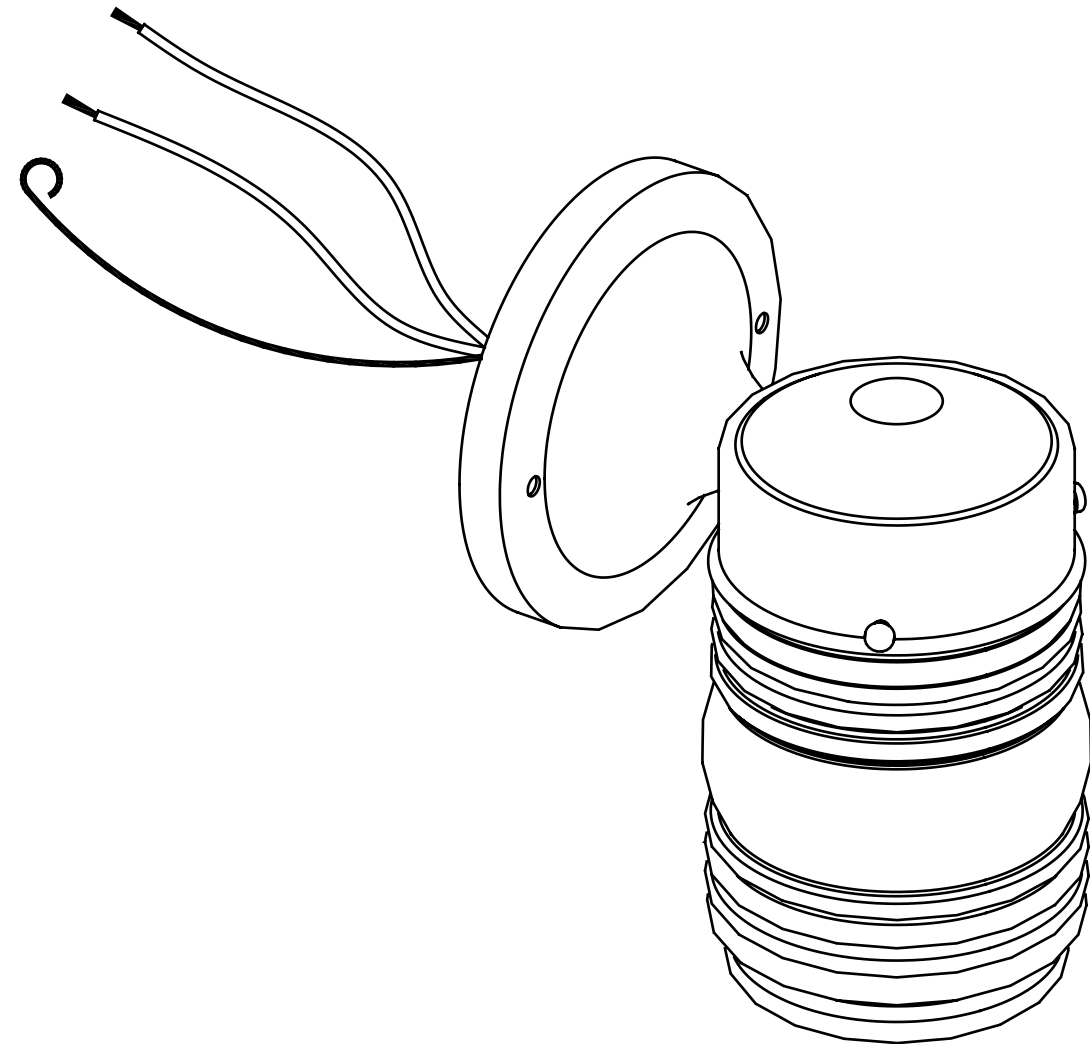

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

 


Intertek



Questions, problems, missing parts? Before returning to your retailer, call our customer
service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday,
8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

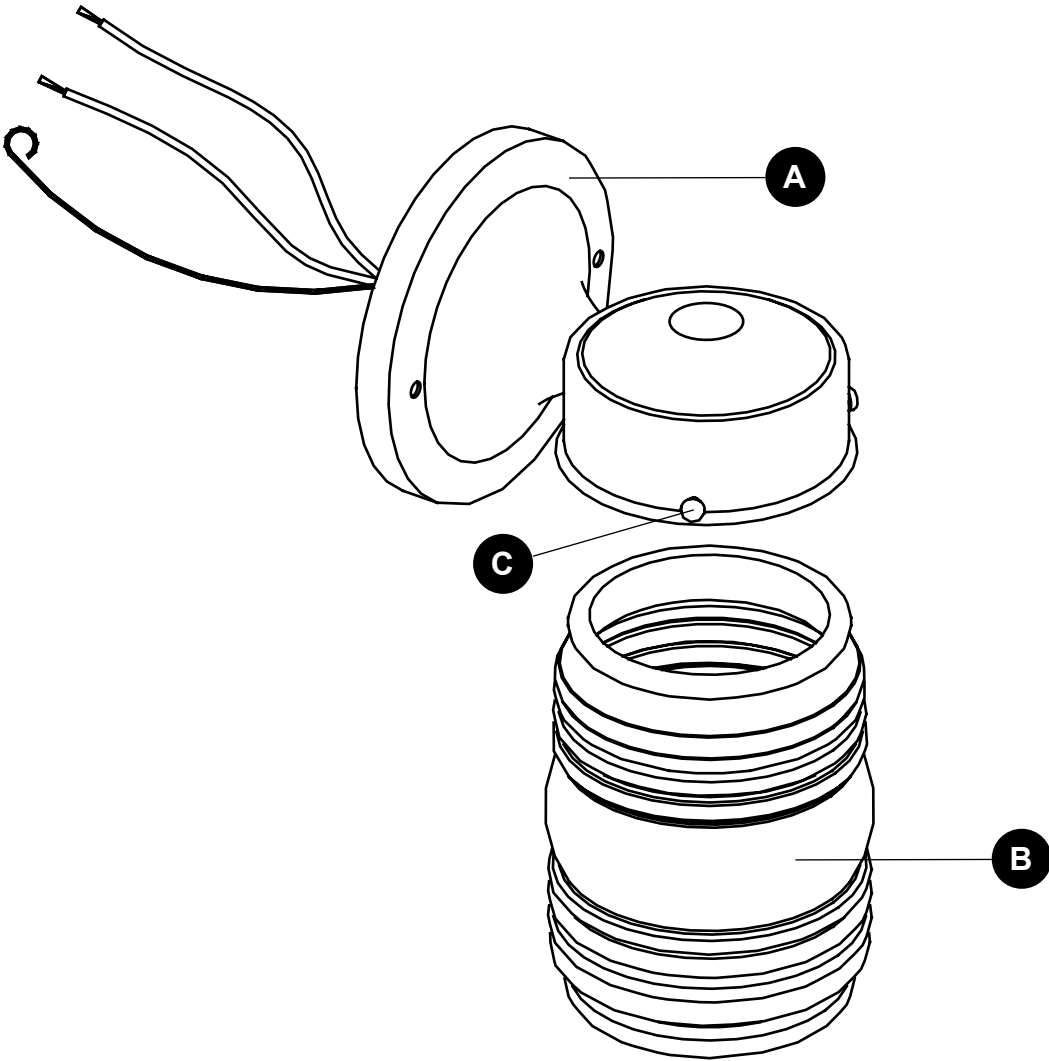

PART	DESCRIPTION	QUANTITY
A	Wall fixture	1
B	Glass shade	1
C	Side screw (preassembled to Wall fixture (A))	2

HARDWARE CONTENTS

AA	BB	CC	DD	EE
Mounting screw (preassembled to Crossbar (EE))	Outlet box screw	Wire nut	Decorative nut (preassembled to Mounting screw (AA))	Crossbar (Not actual size)
Qty. 2	Qty. 2	Qty. 3	Qty. 2	Qty. 1

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

! WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90° C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes

 
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers.

ASSEMBLY INSTRUCTIONS

1. Remove decorative nuts (DD) from mounting screws (AA) preassembled on crossbar (EE). Then, attach crossbar (EE) to outlet box (not included) with outlet box screws (BB). Note: The mounting screws (AA) should protrude away from the outlet box.


Hardware Used




AA	Mounting screw		x 2
BB	Outlet box screw		x 2
DD	Decorative nut		x 2
EE	Crossbar		x 1

2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded junction box.

3. Attach wire nuts (CC). Tape wire nuts (CC) and wires together.

 Hardware Used

CC	Wire nut		x 3
----	----------	---	-----

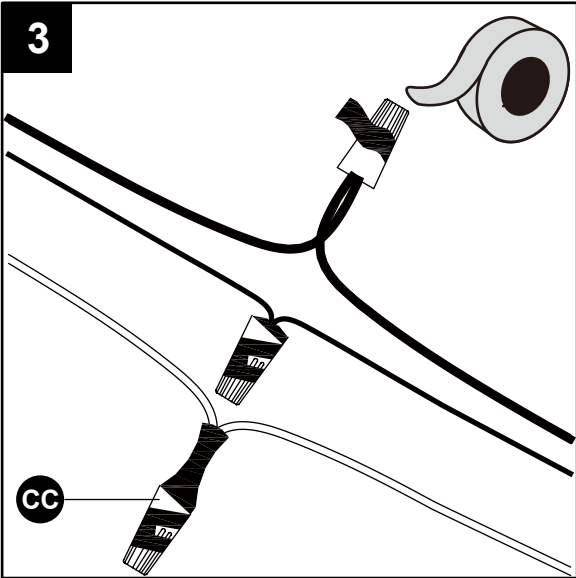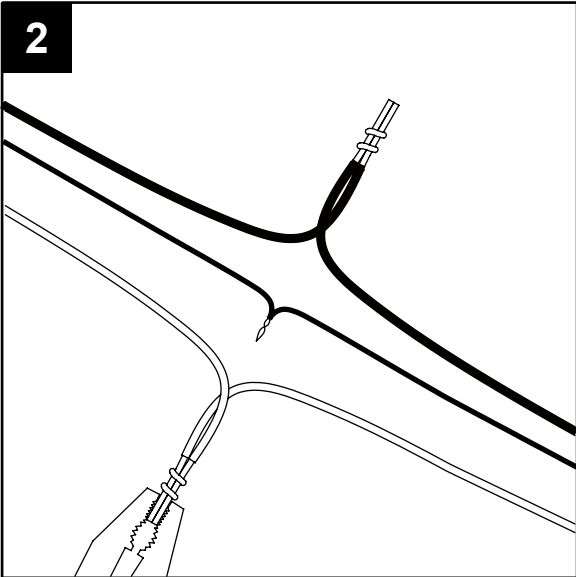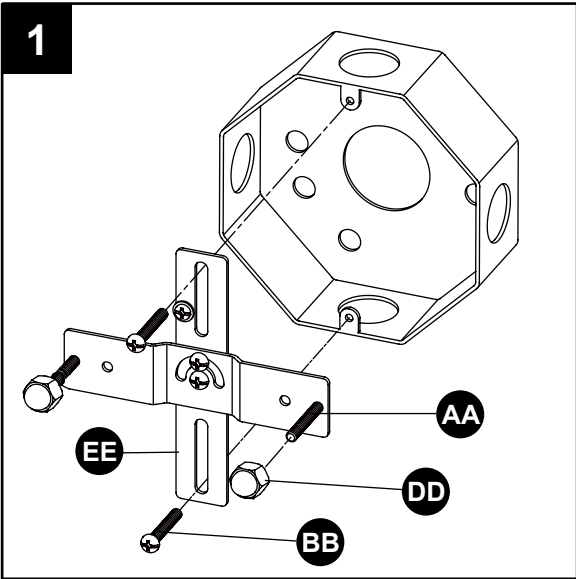   


ASSEMBLY INSTRUCTIONS




4. Install light bulb (not included). Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL.

5. Install glass shade (B) on wall fixture (A). Secure with preassembled side screws (C).

6. Insert wall fixture (A) through the protruding mounting screws (AA) and secure with previously removed decorative nuts (DD). Then, add silicone sealant (not included) between mounting surface and canopy of wall fixture (A), leaving the bottom clear so moisture can drip down.

 Hardware Used

AA	Mounting screw		x 2
DD	Decorative nut		x 2

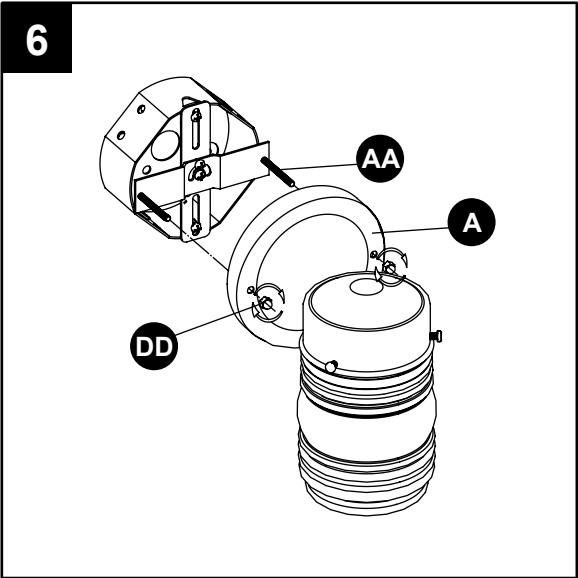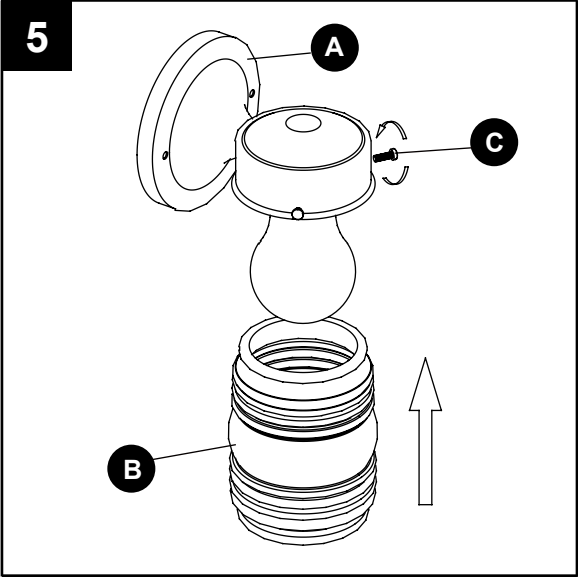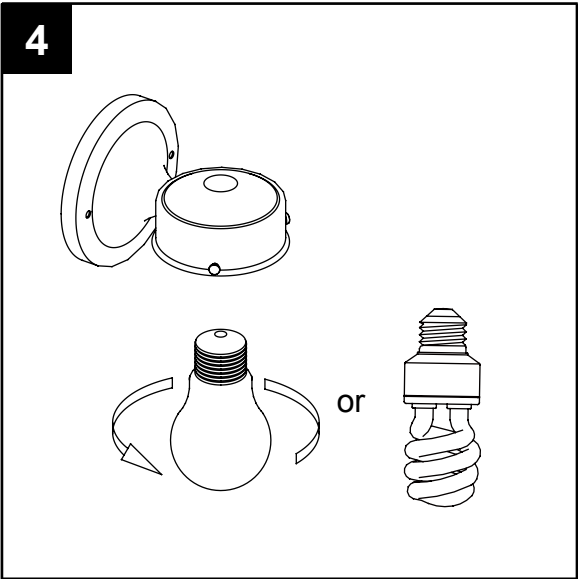   

CARE AND MAINTENANCE

- Clean with soft, dry cloth. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-389-8827, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Mounting screw	109-041800
BB	Outlex box screw	109-042600
CC	Wire nut	375-022000
DD	Decorative nut	110-080700
EE	Crossbar	152-103000

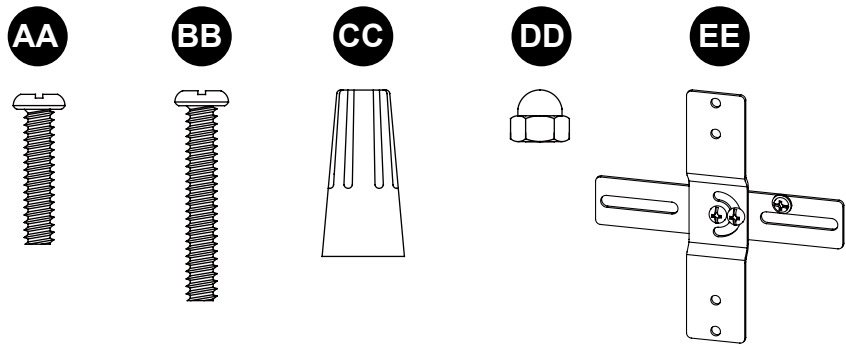 

Printed in China

Project Source® is a registered trademark of LF, LLC. All rights reserved.