



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2011 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 04/29/11)



CCM600

Vintage Series™
Old Fashioned Commercial Cotton Candy Maker

Instructions and Recipes



CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	11
HELPFUL TIPS	11
CLEANING & MAINTENANCE	12
RETURNS & WARRANTY	13

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz

700 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER use a scouring pad on the unit.
2. NEVER leave unit unattended while in use.
3. NEVER place anything other than the intended sugar in the Extractor Head.
4. NEVER pour water or any other liquid into the Extractor Head.
5. NEVER put fingers on or near the Extractor Head or Heating Element while machine is on, nor while it is still hot.
6. Unplug unit from outlet when not in use and when cleaning.
7. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
8. DO NOT put parts in dishwasher for cleaning.
9. DO NOT use outdoors. For indoor use only.
10. This appliance is NOT A TOY.
11. This appliance is not intended for use by young children.
12. Young children should be supervised while product is in use to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

13. **Read all instructions before operating this appliance.**
14. DO NOT TOUCH the hot surfaces.
15. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
16. Close supervision is necessary when any appliance is used by or near children.
17. Unplug from outlet when not in use and before removing parts for cleaning.
18. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
19. The manufacturer does not recommend the use of accessory attachments. Use of attachments may cause injuries.
20. DO NOT let the cord touch hot surfaces.
21. DO NOT pour water or any other liquid into the Extractor Head.
22. DO NOT place parts on or near a hot gas or electric burner, or in a heated oven.
23. Extreme caution must be used when moving this appliance.
24. This unit must be on a level surface to operate properly.
25. DO NOT use this machine for other than its intended use.

26. DO NOT leave unit unattended while in use or when plugged into an outlet.
27. Check the Extractor Head for foreign objects before switching to ON position.
28. The Extractor Head will get hot. Avoid contact until fully cooled.
29. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
30. Extension cord can be used if care is exercised in use.
31. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
32. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
33. Keep hands away from the machine when it is in the ON position and is spinning.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

 
The OLD FASHIONED COMMERCIAL COTTON CANDY MAKER is designed to resemble vendor carts of the early 1900s, with the convenience of a modern appliance. Simply plug in, turn on, pour pure, granulated sugar into the center receptacle, and start spinning colorful and tasty treats.

This fanciful product is fun for the whole family and brings out the kid in everyone. Instantly, gatherings are transformed into carnivals and dessert time into party time!

Your OLD FASHIONED COMMERCIAL COTTON CANDY MAKER will spin the sugar into a sweet candy floss that you collect on cones by spinning the cone as it circles the bowl...just like at the carnival!

PARTS & ASSEMBLY

HARDWARE



#1 Screw (10mm)
Qty. 8

#2 Bolt (10mm)
Qty. 8

#3 Axle Bolt (95mm)
Qty. 2

 


#4 Bolt (60mm)
Qty. 2

#5 Small Flat Washer
Qty. 8

#6 Large Flat Washer
Qty. 4

#7 Nut Cap
Qty. 4






#8 Extra Fuses
(10 Amp) Qty. 2

#9 Extra Kryptol
Qty. 2

#10 Screw (6mm)
Qty. 3

 PARTS

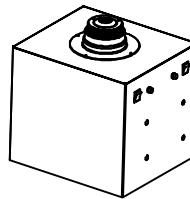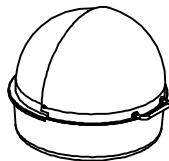


(A) Bowl & Dome

(B) Sugar Shovel

(C) Main Unit

(D) Display Tray

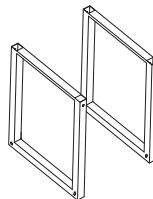

(E) Push Handle

(F) Wheels

(G) Base Support

(H) Leg Assembly



(I) Cross Bar


(J) Screwdriver




(K) Wrench #1

(L) Wrench #2


ASSEMBLY OF BASE SUPPORT

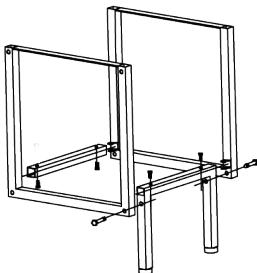

1. Insert Cross Bar (I) into the square inserts on the inside of Base Support (G) and secure from below with two #2 Bolts and two #5 Flat Washers.
2. Insert the Leg Assembly (H) into the square inserts between the ends of the Base Support (G) and fasten from inside with two #4 Bolts, two #6 Flat Washers and two #7 Nut Caps and from the top with two #2 Bolts.

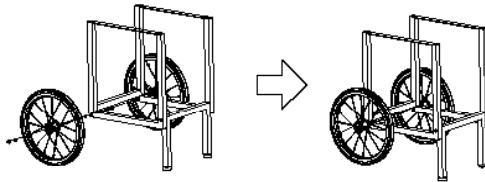ASSEMBLY OF THE WHEELS


1. Insert #3 Axle Bolt into Base Support (G).
2. Put on #6 Flat Washer. Slide one Wheel (F) into #3 Axle Bolt and add a #5 Flat Washer and a #7 Nut Cap.
3. Use #2 Wrench (L) to tighten the #7 Nut Cap.
4. Insert the second #3 Axle Bolt to the other side of Base Support (G), add #6 Flat Washer, second Wheel (F), another #5 Flat Washer, and #7 Nut Cap to the other side of the #3 Axle Bolt, following the directions above.
5. Use #2 Wrench (L) to tighten the #7 Nut Cap.

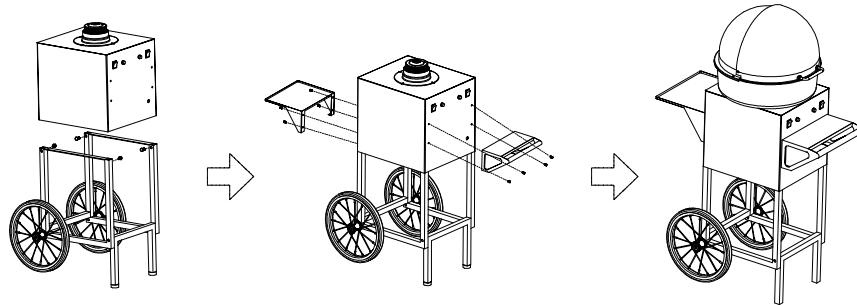ASSEMBLY OF THE MAIN UNIT

1. Assemble Base Support (G) into the bottom of the Main Unit (C) and secure with four #2 Bolts.
2. Push Handle (E) attaches onto the Main Unit (C) using four of the supplied #1 Screws and four #5 Flat Washers. Attach Display Tray (D) to Main Unit (C) using four #1 Screws.
3. Attach Bowl (A) to Main Unit (C) by placing Bowl (A) over collar and turning clockwise. Attach Dome to Bowl using three #10 Screws.

CHANGING THE FUSES

The Fuses are marked under each fuse compartment. Two extra 10 Amp fuses are also included with this unit.

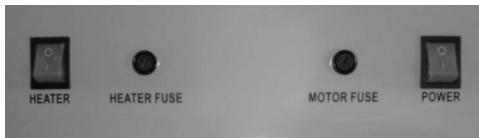

1. Using a flathead screwdriver, push in, turning counter-clockwise.
2. Fuse is then accessible and can be changed. Once changed, push in and turn clockwise to lock fuse into place.

CHANGING EXTRACTOR HEAD


1. Before changing the Extractor Head, make sure that the machine is turned OFF, unplugged, and that the Extractor Head has cooled completely.



2. Use #1 Wrench (K) to remove the center bolt.



3. Use pliers to loosen and remove the red and black wires from the bottom of the Extractor Head.

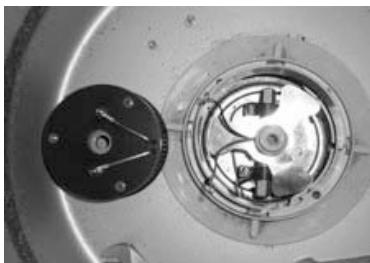

4. Attach the red and black wires to the new Extractor Head and tighten.



5. Place the new Extractor Head with wires attached onto the shaft and replace center bolt.



6. Tighten the center bolt using the #1 Wrench (K)



CHANGING THE KRYPTOL

The Kryptol is the connection point that powers the heating element on the extractor head. The electricity from the machine transmits heat through the Kryptol which allows the Extractor Head to get hot and melt the sugar. Eventually the Kryptol wears down with continued use of the OLD FASHIONED COMMERCIAL COTTON CANDY MAKER, and needs to be replaced. Follow the directions below when changing the Kryptol:


1. Before replacing the Kryptol, make sure that the machine is turned OFF, unplugged, and the Extractor Head has cooled completely.
2. Use the Screwdriver to remove all screws from the collar and remove collar.



3. Remove Kryptol Housing Cover using (K) Wrench #1.



4. Pull Kryptol out of Housing and replace with new Kryptol.

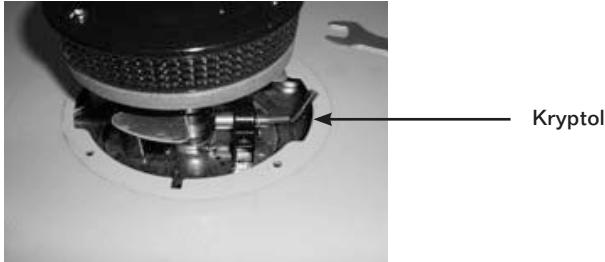

5. Replace Kryptol Housing cover and tighten with #1 Wrench (K).
6. Repeat steps 3, 4 and 5 with the other Kryptol Housing.
7. Replace Collar and tighten screws using Screwdriver.

HOW TO OPERATE

1. First, position OLD FASHIONED COMMERCIAL COTTON CANDY MAKER close to an electrical outlet before starting. Make sure the cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Plug in unit at the OFF position.
3. Turn both power switch and heater switch to ON position and allow unit to run for at least 3-5 minutes before adding sugar. This will allow the Extractor Head to heat.
4. Once Extractor Head has heated, turn unit OFF.
5. Place no more than one scoop of sugar (flavored or white, granulated) or up to four pieces of hard candy into the Extractor Head.
6. Switch to ON position.
7. When you see the cotton candy web begin, collect the cotton candy on the cone by holding the cone and rotating the cone with your fingers while you circle the bowl.
8. Repeat above steps by turning off machine and adding another scoop of sugar or four more pieces of hard candy into the Extractor Head. Once you have added sugar or candy, start machine again. The cotton candy should flow more quickly as the unit is sufficiently warm.
9. Never use ingredients other than sugar or hard candy. DO NOT overfill the Extractor Head by adding more than one scoop of sugar or more than four pieces of hard candy at a time. This will cause clogging and unit will not work properly.
10. By following these simple instructions, using your OLD FASHIONED COMMERCIAL COTTON CANDY MAKER will be a fun experience for kids of all ages and will bring the excitement of a carnival to any occasion.

HELPFUL TIPS

How Cotton Candy is Made

Cotton candy is made by heating sugar. This turns sugar into a liquid form. Then the sugar liquid is forced out of tiny mesh with holes in the extractor head by centrifugal force as the extractor head spins. As the liquid sugar hits the air, it returns to a solid fluffy material that adheres to a paper cone.

Cleaning the Extractor Head

It is very important that the unit be cleaned properly after every use. If it is not, the holes will get clogged and sugar will not be able to sift through the tiny holes properly. NEVER put water in the extractor head.

You can clean the Extractor Head by letting the machine run with an empty Extractor Head for five minutes.

Catching Floss

If floss does not adhere easily to the cone, you can spray the cone lightly with water.

CLEANING & MAINTENANCE

1. When you have finished making cotton candy, run unit for about five minutes until all sugar has been released through the extractor head.
2. When all remaining sugar is gone, unplug unit and allow to cool down before cleaning.
3. Make sure the unit is unplugged and has had time to cool down before cleaning.
4. Use a clean, slightly damp, non-abrasive sponge or non-abrasive cloth to wipe the outside of the metal extractor head, aluminum Bowl, and inside and outside of plastic Dome, then wipe with a non-abrasive towel to dry.
5. Use a clean, slightly damp, non-abrasive sponge or non-abrasive cloth to wipe down the outside of the Main Unit, then wipe with a non-abrasive towel to dry.
6. NEVER put water in the Extractor Head.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Vintage Series™

Old Fashioned Commercial Cotton Candy Maker / CCM600

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

