

Troubleshooting Chart

Problem	Cause	Solution
Flow is irregular.	Accumulation of sediment in spray wand.	Remove and clean spray wand (J). Replace spray wand if necessary.
Same as above.	Accumulation of sediment in cartridge.	Remove and clean cartridge (K). See Maintenance section (page 4). Replace cartridge if necessary.
Handle is sticking to cartridge.	Same as above.	Same as above.
Handle is loose.	Set screw has loosened.	Tighten set screw (I).
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.