



## **Bluetooth MP3 Player**

User's Guide for Model MWB308 v2042-01

# FCC WARNINGS

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ADDITIONAL WARNINGS

- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **WARNING :** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- **To avoid hearing damage,** make sure that the volume on your music player is turned down before connecting your earbuds or headphones. After placing earbuds in/on your ears, gradually turn up the volume until you reach a comfortable listening level.



**WARNING :** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). **This product meets and complies with all Federal regulations.**

# **Table of Contents**

**Features – 5**

**Includes – 5**

**Overview & Controls – 6**

**Charging the Battery – 8**

**Loading Music & Files – 9**

**Music Menu / Playing Music – 10**

**Bluetooth Menu – 11**

**Radio Menu – 12**

**Record Menu – 13**

**E Book Menu – 14**

**Folder View – 14**

**Settings Menu (Set) – 15**

**Contact Information – 16**

## **Features**

- Bluetooth wirelessly transmits audio to headphones/speakers
- Voice recording with built-in microphone
- MP3 player
- FM radio
- Micro-USB port for battery recharge
- DC battery power: built-in rechargeable battery
- Battery life: approx. 2.5 hrs in Bluetooth Mode, 8 hrs in Aux Mode

## **Includes**

- 1 pair of earbuds
- Micro-USB to USB charging cable
- User's guide


## Overview & Controls

### Power/Confirm/Play/Pause

Press and hold to power the unit on or off.  
Press to confirm menu selections.  
In Play Mode, press to play/pause audio.

### Display

### Volume Up/Down

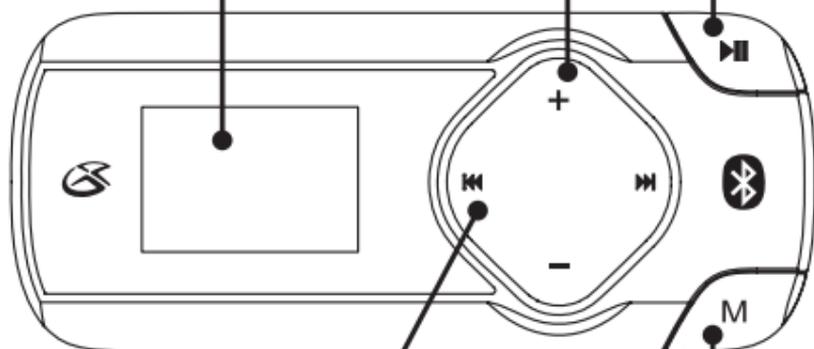


### Rev/Fwd

Press to skip audio tracks.  
Press and hold to scan through audio tracks.  
Press to navigate the display menu.

### Menu


Press to return to previous menu.  
In Play Mode, press and hold to set the EQ, shuffle/repeat settings, and other options.

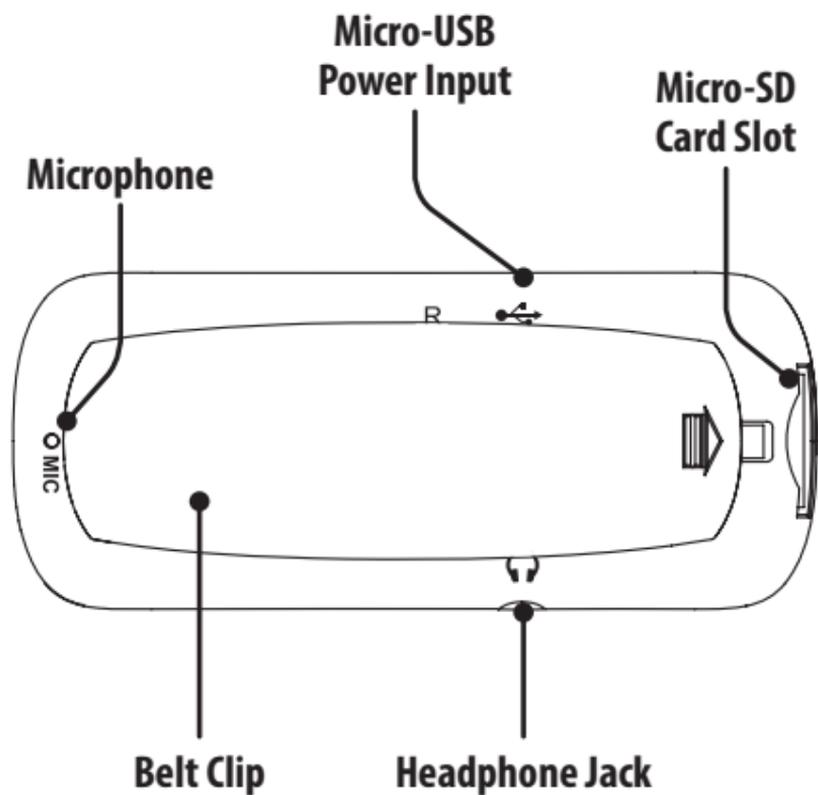

## Charging the Battery

Initial charge time is approximately 2 hours. The player will automatically power off when not in use.

1. Use a **Micro-USB to USB** cable (included) to connect the player to the USB port of a powered on computer or USB power adapter (not included).
2. If connecting to a PC, a menu for the connection type will appear on the player's display.
  - » **Charge & Transfer** - Charge the player and connect to PC for file transfer (see Loading Music & Files).
  - » **Charge & Play** - Charge the player and remain in Play Mode (does not connect for file transfer).
3. Use the **⏪ ⏩** buttons to make your selection, then press **▶||** to confirm or wait for the timer to count down and select the highlighted option.

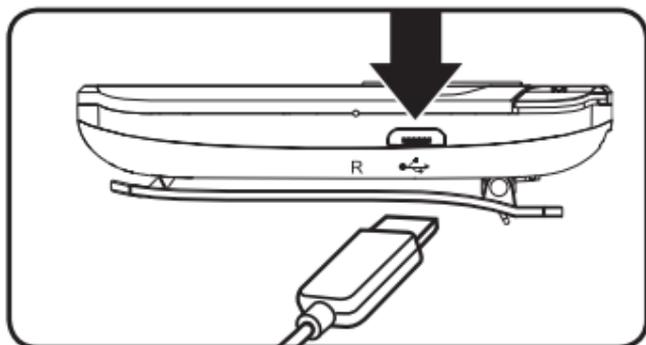

## Loading Music & Files

**Note:** To transfer files, the USB cable must be able to transmit data (included).

1. Connect the MP3 player to a computer using a Micro-USB cable (see note above). Use the **⏪ ⏩** buttons to select **Charge & Transfer**, then press **▶||** to confirm or wait for the timer.
2. Once connected, the computer will recognize the player as a storage device (device name: GPX).
3. Open your computer's file explorer to drag and drop files into the folder for the player and Micro-SD Card (if connected to the player).
4. When you are finished transferring files, right click on the drive and eject it from the computer. Then you can safely disconnect it from the computer.

## Music Menu / Playing Music

Use the **I◀◀ ▶▶I** buttons to select **Music** from the main menu, then press the **▶||** button to confirm.

Press **I◀◀ ▶▶I** to navigate the menu, press **▶||** to confirm your selections.

- **All Songs** - Access audio files on the device, create, save and play playlists, and other options.
- **Now Playing** - Show the current audio file.
- **Resume** - Resume from the last track played.
- **Artists** - View audio files by artist.
- **Albums** - View audio files by album.
- **Genres** - View audio files by music genre.
- **Playlists** - View available playlists.
- **Create Playlist** - Select Shuffle All to play all available audio files.
- **Local Folder** - View audio files on the player's internal storage.
- **Card Folder** - View audio files on a connected Micro-SD Card.

After making a selection, press the **▶||** button to begin playing music. Use the **I◀◀ ▶▶I** buttons to skip audio tracks, or press and hold to search through the track.

## Bluetooth Menu

This unit can transmit to Bluetooth audio receivers, such as Bluetooth speakers or headphones. It is not a Bluetooth receiver and will not play music from another Bluetooth device, like a smartphone or tablet.

Use the **◀◀ ▶▶** buttons to select **Bluetooth** from the main menu, then press the **▶▶** button to confirm.

- After entering the Bluetooth Menu, the unit will begin searching for devices. Be sure the device you are connecting to is in pairing mode and use the **◀◀ ▶▶** buttons to select the device.

**Note:** In Bluetooth Mode, the player is restricted to the Bluetooth Menu. **To play music, select Music or All Songs from the menu.** To exit the Bluetooth Menu, press **M** and confirm "Bluetooth Unlink".

Press **◀◀ ▶▶** to navigate the menu, press **▶▶** to confirm your selections.

- **Bluetooth Status** - Enable/Disable Bluetooth.
- **Bluetooth Search** - Search for and connect to available Bluetooth devices.
- **Device List** - All saved Bluetooth Devices.
- **All Songs** - All songs saved on the MP3 player.
- **Music** - Displays current selected track.

## Radio Menu

**Note:** This unit uses a connected headphone cord as an FM antenna. For radio play, you must connect wired headphones or earbuds to the headphone jack.

Use the **◀◀ ▶▶** buttons to select **Radio** from the main menu, then press the **▶||** button to confirm.

Press **◀◀ ▶▶** to navigate the menu, press **▶||** to confirm your selections.

- **Presets** - Lists all saved FM stations on the player. If there are no presets, follow the on screen prompt to automatically scan and save up to 30 FM stations.
- **Manual Tune** - use the **◀◀ ▶▶** buttons manually tune the radio.
- **Auto Tune** - Follow the on screen prompt to automatically scan and save up to 30 FM stations (same as Presets above).
- **FM Recording** - While playing from Radio, press and hold **M**, then select **Start FM Recording** to record radio broadcasts. Select **FM Recording** to access and select those files recorded from radio.

## Record Menu

Use the **◀◀ ▶▶** buttons to select **Recordings** from the main menu, then press the **▶▶** button to confirm.

Press **◀◀ ▶▶** to navigate the menu, press **▶▶** to confirm your selections.

- **Start Voice Recording** - Press **▶▶** to select and begin a recording using the built-in microphone. Press **▶▶** to resume or pause the recording. Press **M** to stop and save or delete the recording.
- **Recording Library** - Select Local or Card folder to access recordings on the device or a connected memory card.
- **Storage** - Select Internal or External Memory as a destination for recorded files.
- **Record Format** - Select WAV or MP3.
- **Record Settings** - Set the bit rate for recordings. Set Track AVR mode on or off.

## E Book Menu

**Note:** This unit is compatible with .TXT files only.

Use the ◀◀ ▶▶ buttons to select **E Book** from the main menu, then press the ▶▶ button to confirm.

- Use the ◀◀ ▶▶ button to select a file, then press ▶▶ to confirm. Use the ◀◀ ▶▶ buttons to change the page.

## Folder View

Use the ◀◀ ▶▶ buttons to select **Folder View** from the main menu, then press the ▶▶ button to confirm.

- View all files and folders on the device and SD Card (if connected). Press ◀◀ ▶▶ to navigate, press ▶▶ to confirm your selection.

## Settings Menu (Set)

Use the ◀◀ ▶▶ buttons to select **Set** from the main menu, then press the ▶|| button to confirm.

- **Play Mode** - Set default play settings, repeat and shuffle on or off.
- **Sound Settings** - Adjust EQ settings and device Key Tone.
- **Sleep Timer** - Select Set Sleep Timer and use the +/- buttons to adjust the time in minutes (1-99). Press ▶|| to confirm and begin the timer.
- **Display Settings** - Adjust the back light timer for the display.
- **Language** - Set the language for the device.
- **Information** - View player information and memory storage space.
- **Format Device** - Format internal memory and SD Card (if connected).
- **Factory Settings** - Restore factory settings.

## Contact Information

**Website:** [www.gpx.com](http://www.gpx.com)

**Customer Support:** <http://gpx.com/customer-service-support.html>

**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)

**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

**Phone Support:** 1-888-999-4215

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the Customer Service section at:

...

Para descargar este Manual del Usuario en Inglés, Español y Francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:

...

Pour télécharger ce guide de l'utilisateur en Anglais, Espagnol ou Français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:

**[www.gpx.com](http://www.gpx.com)**



Specifications are subject to change without notice.

Copyright © 2017 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners.