

## Instructions

Adjustable Wrench

1. Turn off water supply

Tools Required: Screwdriver,

- Turn off water supply.
   Remove handle screw (A)
- and pull off handle (B).

  3. Unscrew bonnet (C) and pull out stem (D).
- 4. Insert new seat (E) into faucet body.5. Insert new stem into faucet body.
- body.

  6. Replace bonnet (C) and tighten.
- 7. Place handle (B) on stem and tighten with screw (A).