



# Wooden Garden Bench

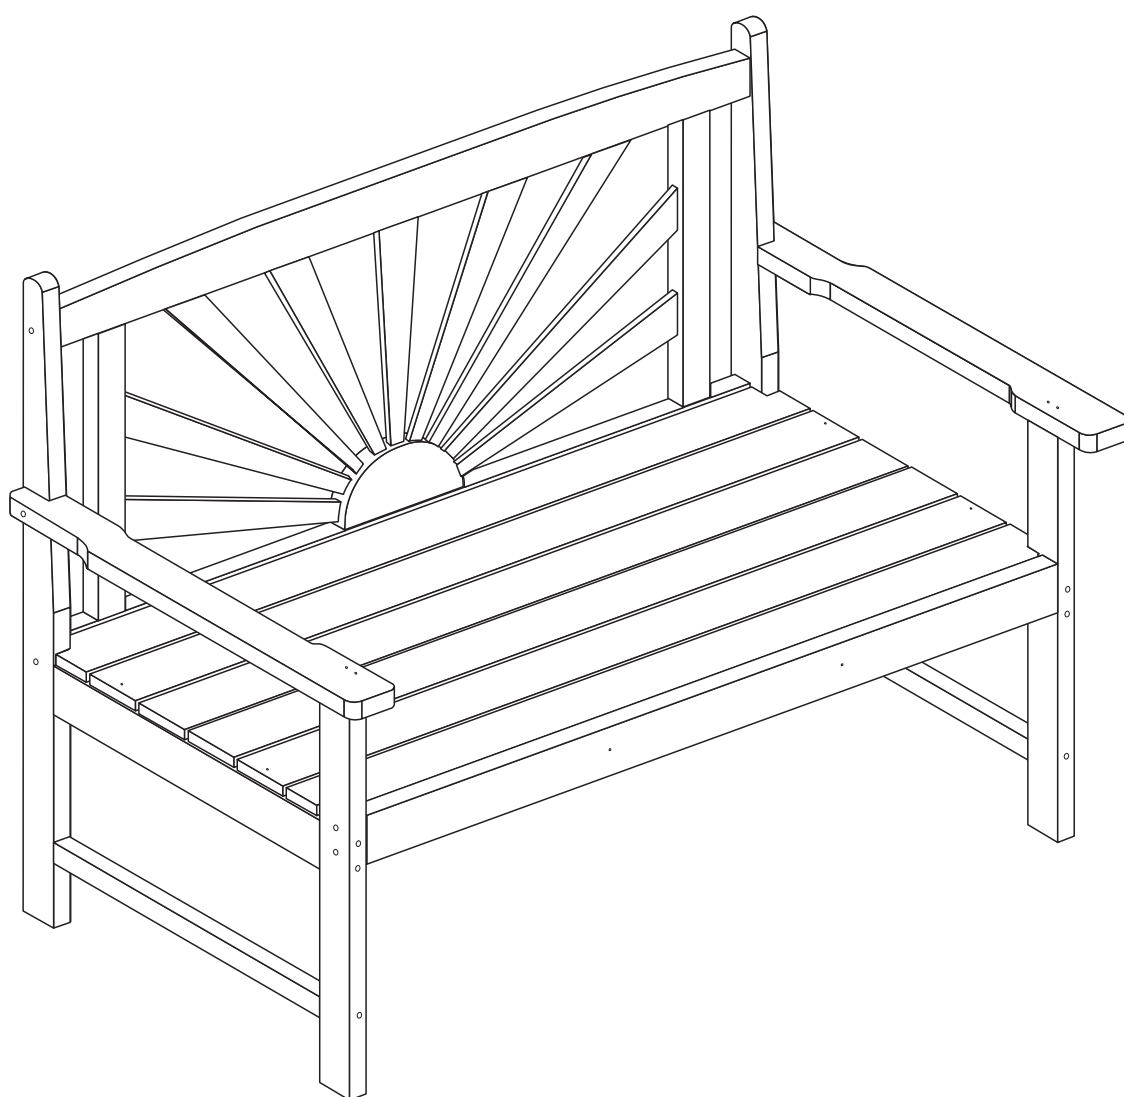

# **IMPORTANT**

Please follow the instruction manuals and use a pad to avoid damage during assembly.

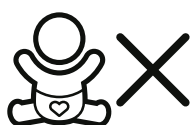


Not intended for use by children. Please keep your children closely supervised.



Keep away from fire or other heat sources.




Do not use harsh cleaner for cleaning!

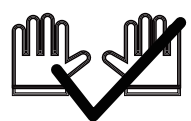



We recommend wearing protective gloves for assembly.



Identify, sort and count the parts before assembly.

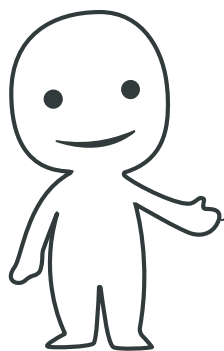


Please prepare the following tools

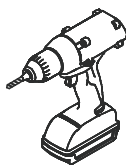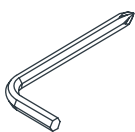

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax12



M6x65mm

Bx10



M6x40mm

Cx8




M4x50mm

 
Dx4






 
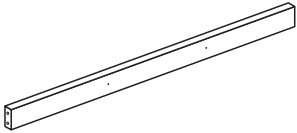
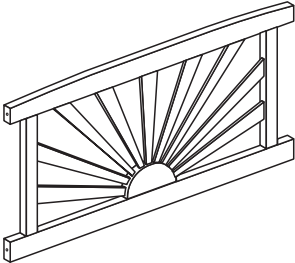
 
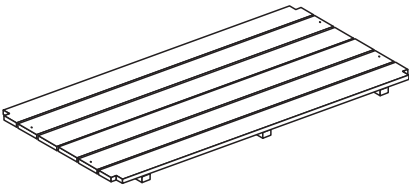
 
 


M4x30mm

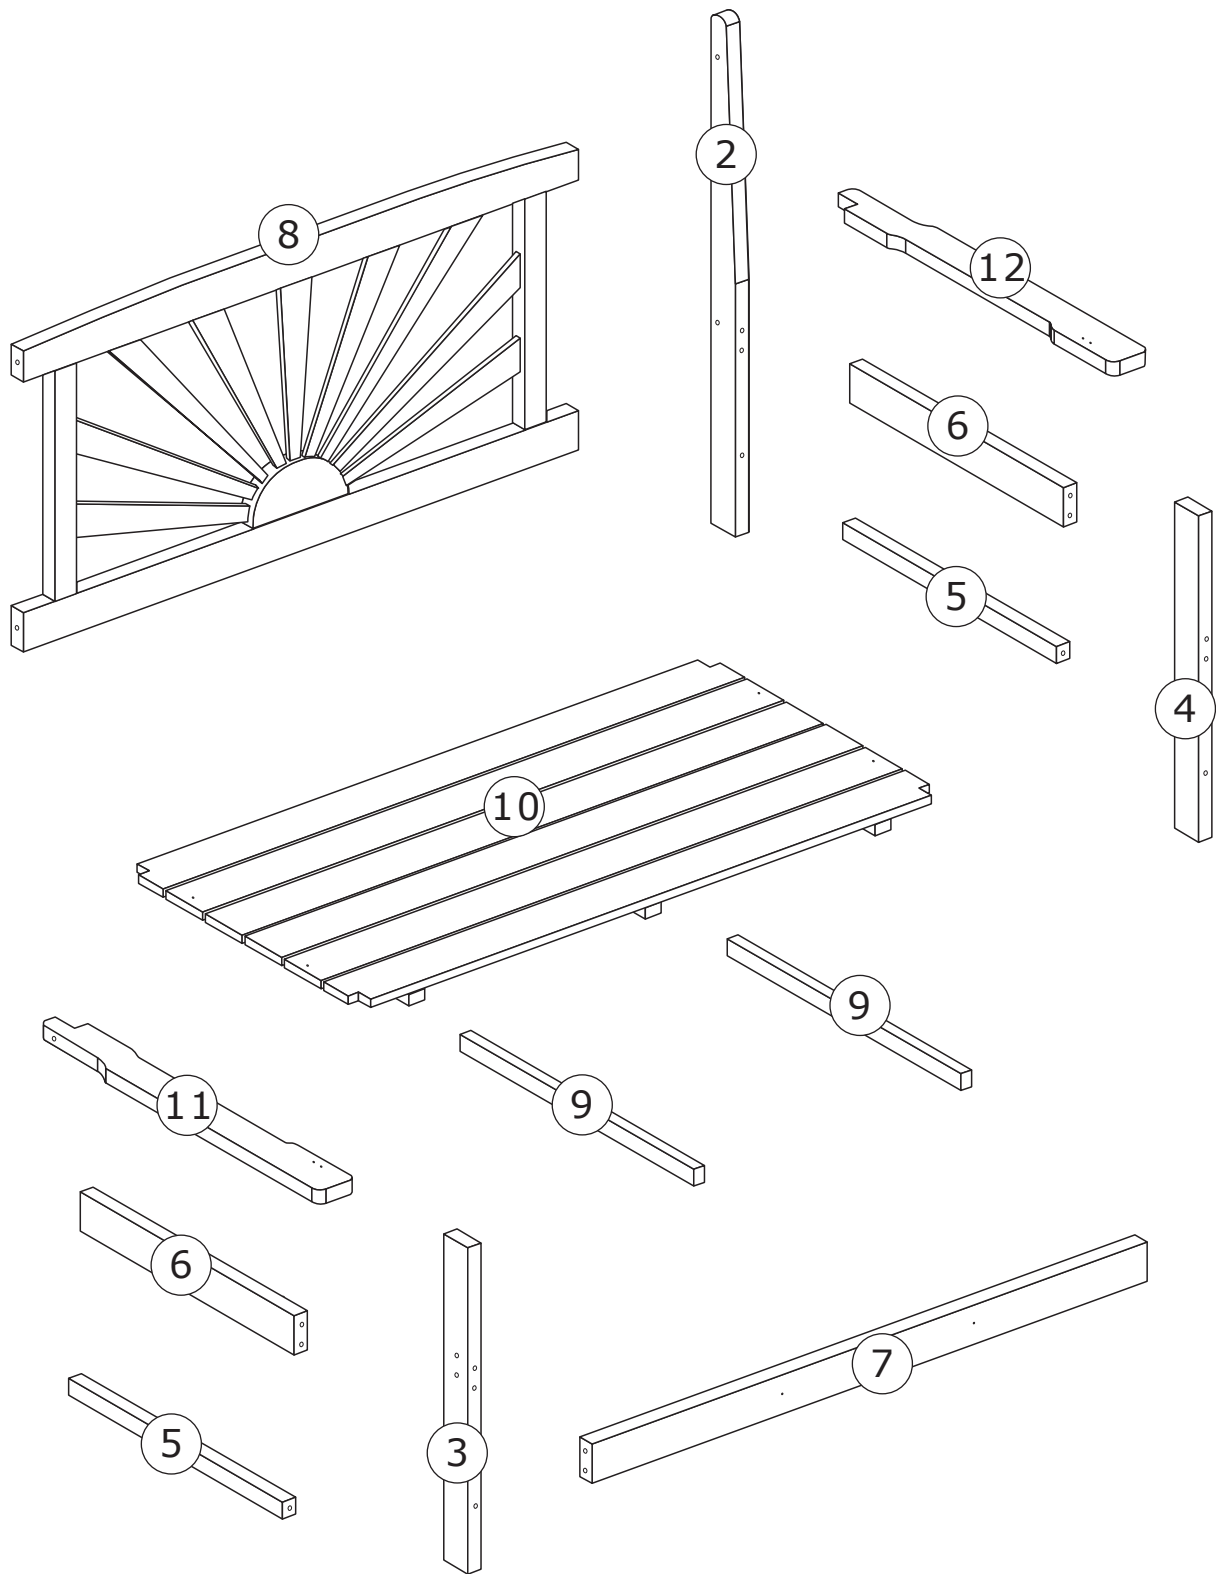Ex1






<p>①</p>  <p>x1</p>	<p>②</p>  <p>x1</p>	<p>③</p>  <p>x1</p>
<p>④</p>  <p>x1</p>	<p>⑤</p>  <p>x2</p>	<p>⑥</p>  <p>x2</p>
<p>⑦</p>  <p>x1</p>	<p>⑧</p>  <p>x1</p>	<p>⑨</p>  <p>x2</p>
<p>⑩</p>  <p>x1</p>	<p>⑪</p>  <p>x1</p>	<p>⑫</p>  <p>x1</p>

# 1

<p>Ax12</p>  <p>M6x65mm</p>	<p>Ex1</p> 	
--	--	--

Attach one part 5 and one part 6 to part 3 front left-leg and part 1 back left-leg with six part A screws.

Attach one part 5 and one part 6 to part 4 front right -leg and part 2 back right-leg with 6 part A screws.

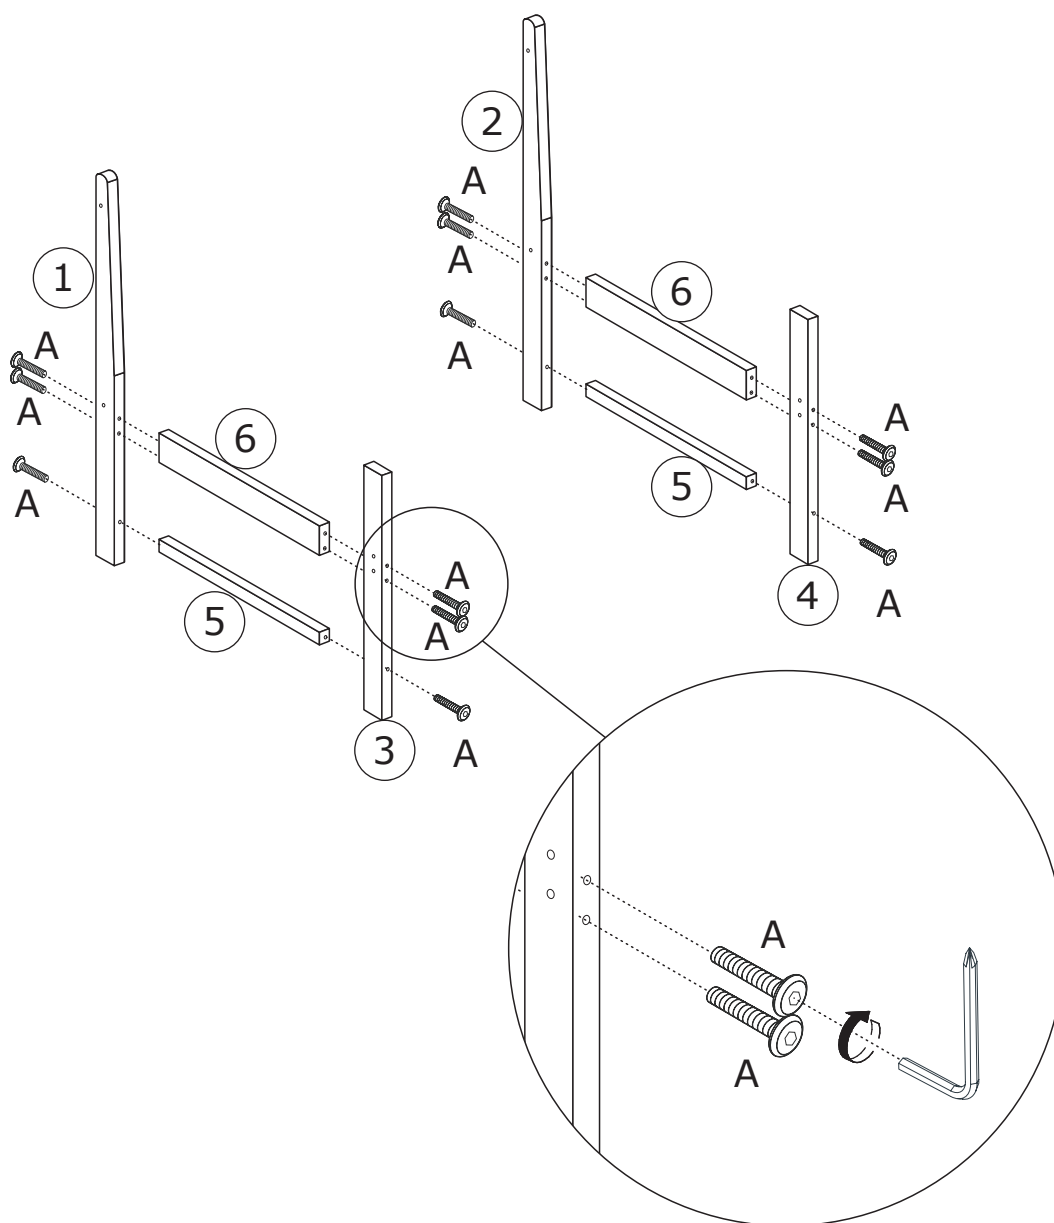

2

Bx8





M6x40mm

Ex1



Attach part 7 front frame with four  
part B screws.  
Attach part 8 backrest with four  
part B screws.

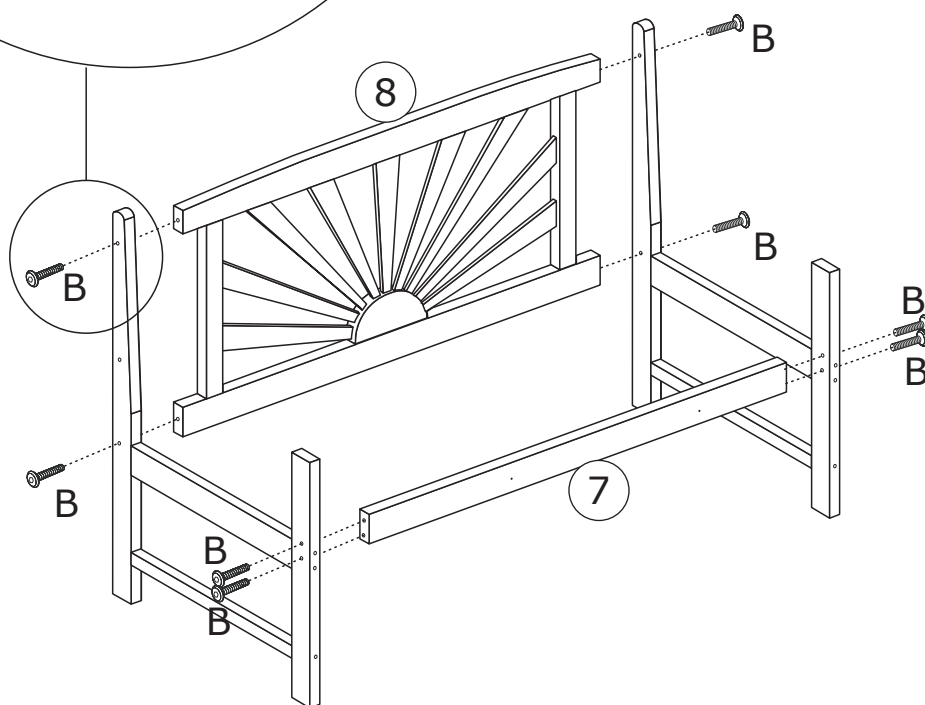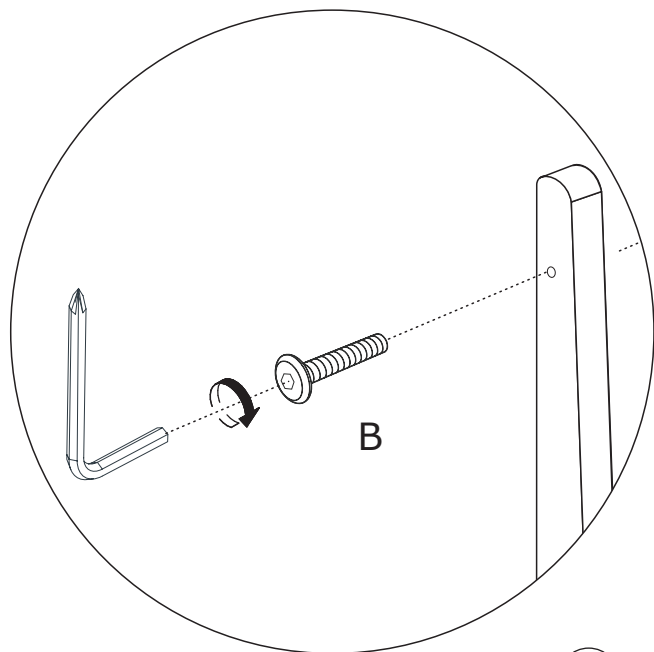

3

Cx4




M4x50mm

When turning the screws, please do it slowly  
and keep the direction vertical.



Attach two part 9 seat supports to front frame  
and backrest with four part C screws.

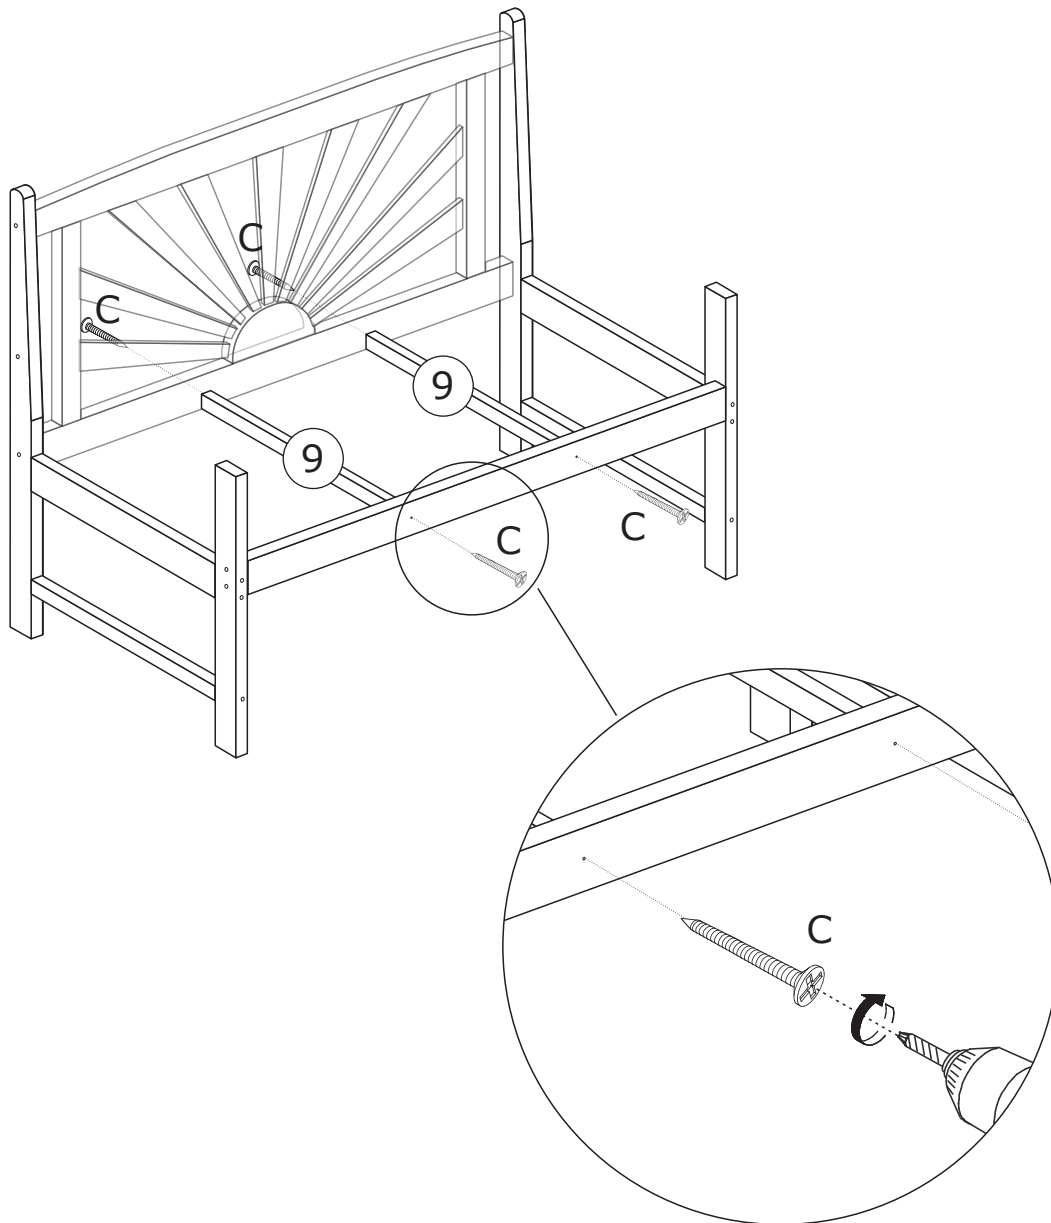



4

Dx4




M4x30mm

When turning the screws, please do it slowly  
and keep the direction vertical.



Attach part 10 bench seat with four part D screws.

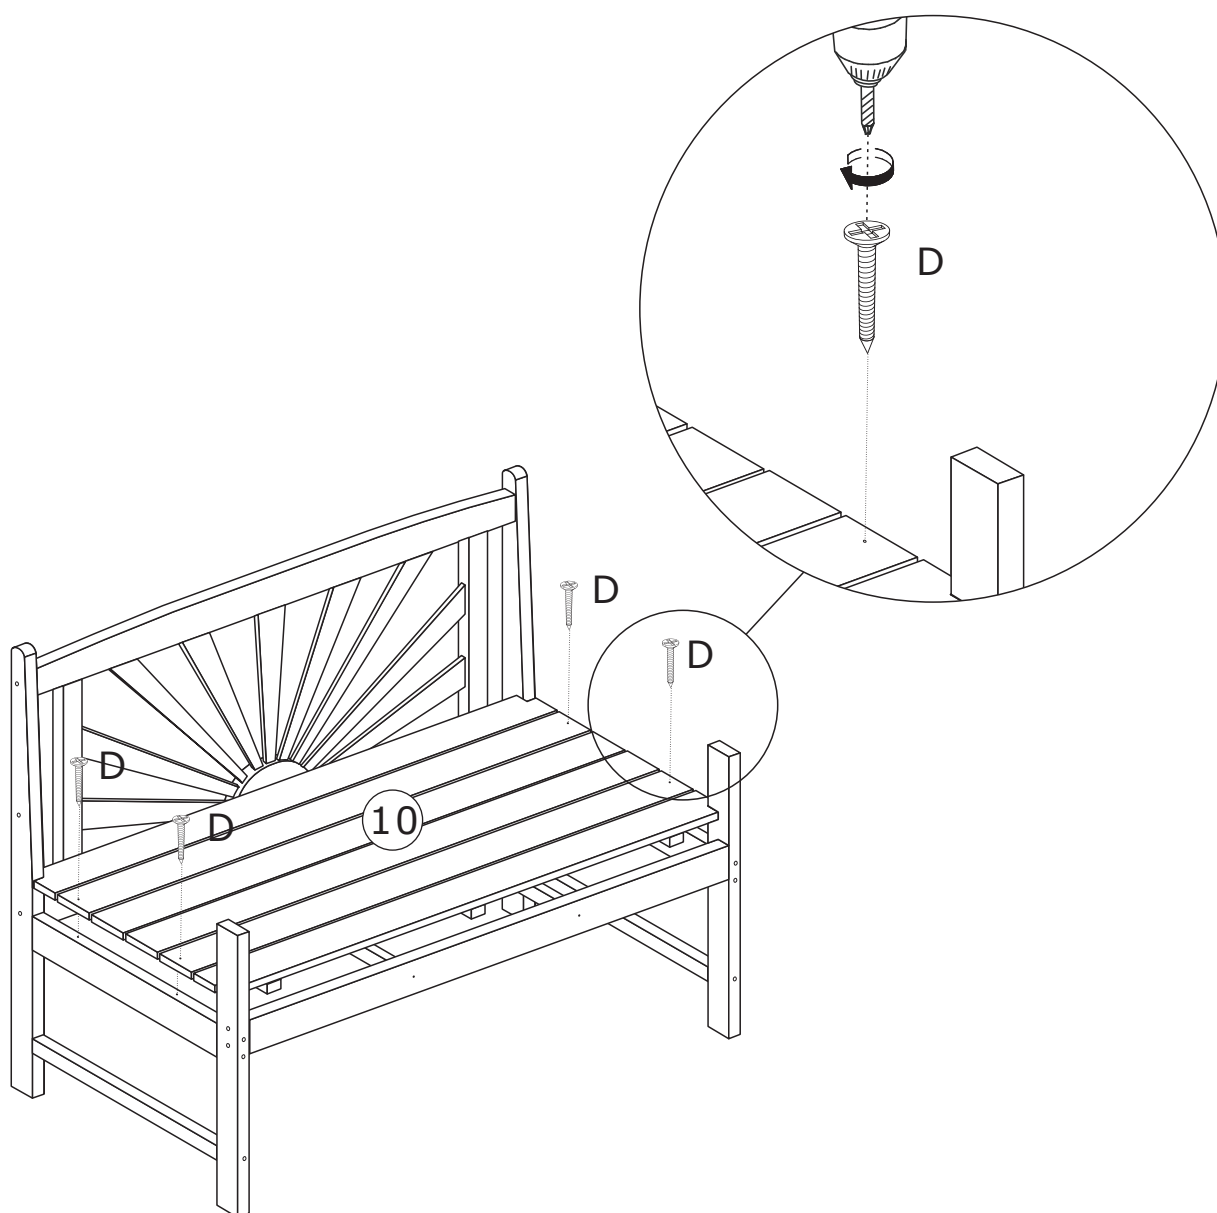

5

Bx2



M6x40mm

Cx4



M4x50mm




Ex1



When turning the screws,  
please do it slowly and keep  
the direction vertical.



Attach part 11 and part 12 seat-armrests with  
two part B screws and four part C screws.

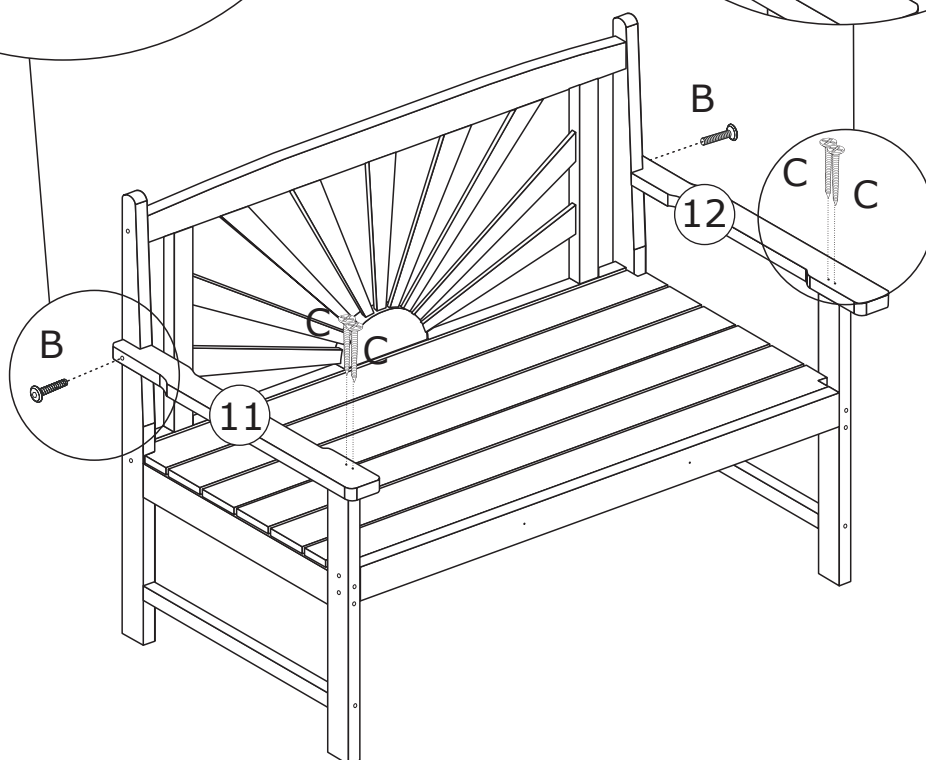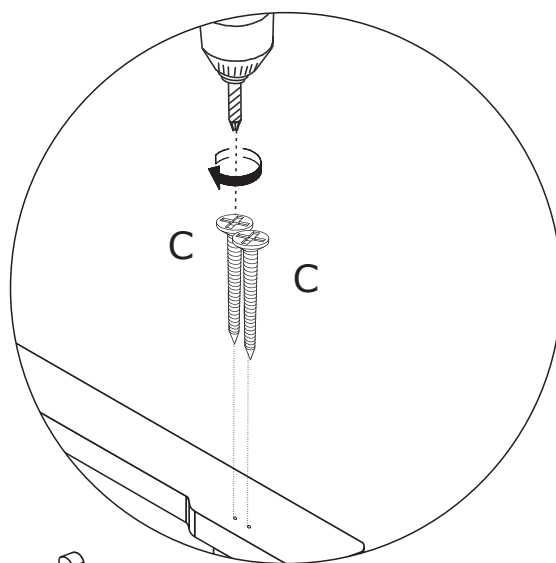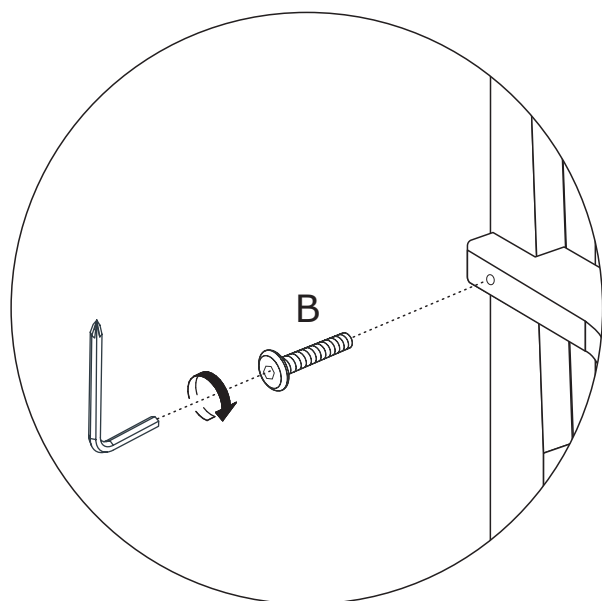

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.