



Care, Cleaning and Adjustment Guide

All-Weatherboard™ · Factory Built to Order · Ships in 10 Days



**LIFETIME
LIMITED
WARRANTY**

Applies to Designer
Solid and Designer
Woodgrain Finishes





AFTER INSTALLATION CARE

After your cabinets have been installed, wipe down all exteriors with a damp cloth to remove dust.

Clean Up: Wash WeatherStrong with water and a soft cloth or sponge. A mild dishwashing liquid can be used if needed. For tougher to clean spots, wash with Simply Green All-Purpose Household Cleaner. A soft bristle brush may be used if needed.

EVERYDAY CARE

Salt Water Environments: Oceanfront environments with salt air and sea spray will require regular maintenance and cleaning to prevent rust from forming on the handles, hinges and drawer runners. Clean stainless steel surfaces several times a month to keep the chemical reaction, from the salt, from gaining a foothold on the hardware. With regular cleaning, your cabinets will look like new for many years. To achieve maximum corrosion and stain resistance, the surface of the stainless steel must be kept clean.

NEVER use abrasive cleaners, scouring pads or powdered cleansers.

HARDWARE CARE

Use mild soap and warm water to clean door, drawer knobs and pulls. Thoroughly dry hardware surfaces after cleaning. **DO NOT** use silver or brass polish.

GRILL & SIDE BURNER CABINET MODIFICATIONS

Grill and side burner cabinets are manufactured with two full upper face plates that will need to be field modified to accept the respective insulated jacket used with the gas grill or side burner.

The second matching panel will be shipped loose for ease of modification and installation. It can be attached with stainless steel screws or a suitable construction grade adhesive. Under no circumstance should a grill or side burner be installed without the appropriate heat liner specified by the manufacturer of the appliance.

HEAT APPLIANCES

Free-standing grills with adequate space from direct heat are recommended or grills with insulated jacket specified by the grill manufacturer can be installed in WeatherStrong cabinets.

*Insulated jackets are **required** for heat admitting appliances being installed in WeatherStrong*

LIGHT EXPOSURE

Cabinet sides and backs that will be exposed to direct sunlight and other weather elements **MUST** be covered by a matching end panel in coordinating High Density Polyethylene (HDPE). Failure to install these protective panels will void the cabinet warranty.



DRAWER REMOVAL MANUAL



STEP 1

Fully open drawer and remove contents.



STEP 2

With drawer fully opened locate slide tab on left side of drawer box and push up to release.



STEP 3

Locate slide tab on the right side of drawer box and push down to release.



STEP 4

To re-install, align drawer slides and gently push drawer closed. Locking tabs do not need to be pressed.



STEP 5

Open and close drawer several times to ensure proper alignment.



ROLL-OUT TRAY RELOCATION/INSTALLATION



In a standard base cabinet there is a location on the inside for the roll-out tray. Indicated by the two sets of pre-drilled holes on the back panel.




STEP 1

Put the roll-out tray at the desired area in the base cabinet and pick the same desired height on the opposite side.



STEP 2

Once the desired area is reached on both sides attach the roll-out tray on the left and right.

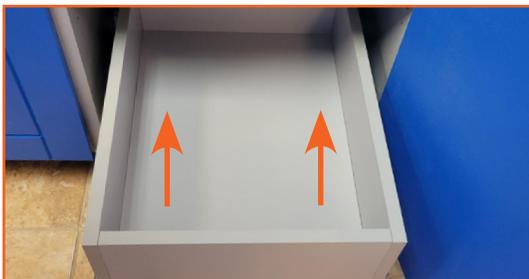

STEP 3

Push to lock in place.




STEP 4

Roll-out tray is installed.




DOOR POSITION ADJUSTMENT MANUAL

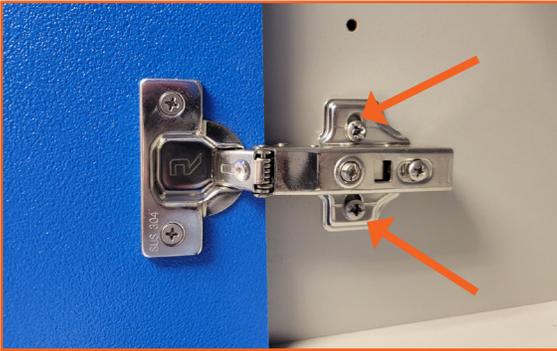


HEIGHT

Loosen two screws and adjust door to desired position. Re-tighten all screws.

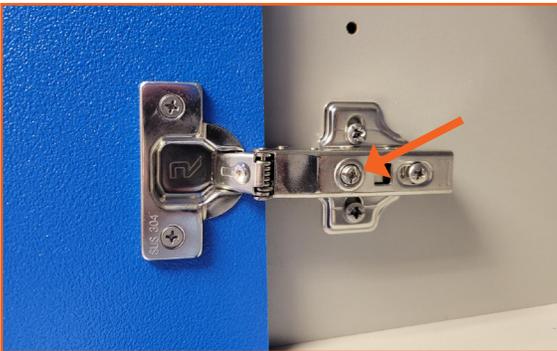

SIDE TO SIDE

Using a Phillips screwdriver, rotate front screw to move the door to the desired position.

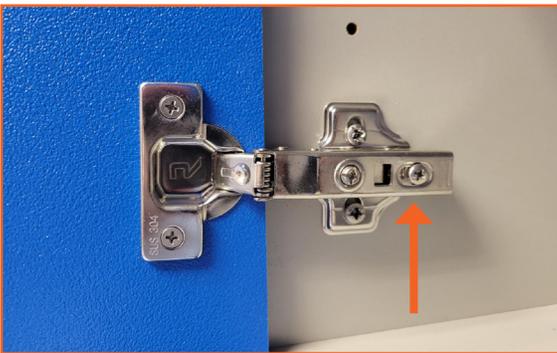


DEPTH

Using a Phillips screwdriver, rotate back screw to move the door to the desired position.


HEIGHT

For vertical door adjustment loosen center screw on each hinge. Set door at desired height. Re-tighten each screw.

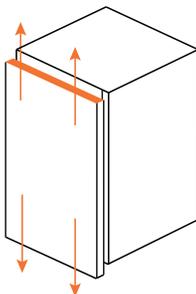


SIDE TO SIDE

Rotate front screw for horizontal door adjustment.

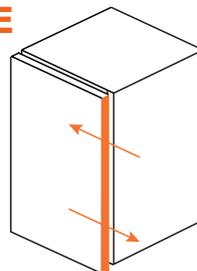

DEPTH


Rotate back screw for front to back door adjustment.

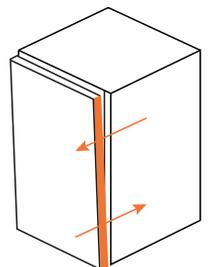



SHELF PINS

Cabinet shelves feature locking shelf pins. To release, simply push in the tab and lift the shelf.

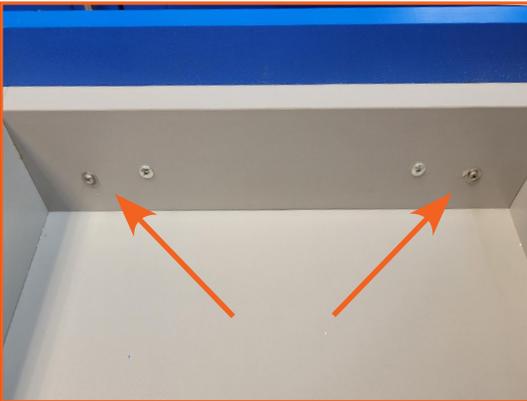

DRAWER FRONT ADJUSTMENT

If additional adjustment is required, loosen screws and twist drawer front for proper alignment. Tighten screws securely.



Applies to Designer
Solid and Designer
Woodgrain Finishes

