




INSTRUCTIONS FOR PROPER USAGE AND INSTALLATION

1. THE CONNECTOR IS INTENDED ONLY FOR USE OUTDOORS WITH PORTABLE APPLIANCES THAT MAY BE MOVED FOR CONVENIENCE OF OPERATION.
2. CONNECTORS ARE DESIGNED FOR MOVEMENT AFTER INSTALLATION, BUT MUST NOT BE KINKED, TWISTED OR TORQUED, PERIODIC VISUAL INSPECTION SHOULD BE MADE TO DETERMINE THAT THE CONNECTOR IS SUITABLE FOR CONTINUED USE.
3. CONTACT WITH DAMAGING FOREIGN OBJECTS OR SUBSTANCES MUST BE AVOIDED.
4. CONNECTED HOSE ASSEMBLY SHALL BE OF ADEQUATE LENGTH AND CAPACITY FOR INTENDED APPLICATION. FINAL ASSEMBLY MUST BE TESTED FOR LEAKS.

CAUTION: ALL ADAPTERS (UNIONS) SUPPLIED WITH THE CONNECTOR MUST BE USED UNLESS THE APPLIANCE VALVE A UNION CONNECTION. NO ATTEMPT SHALL BE MADE TO CONNECT THE FITTINGS ON THE CONNECTOR DIRECTLY TO THE THREADED RIGID PIPE ENDS ON THE EQUIPMENT MANIFOLD OR THE OUTLET OF THE FUEL GAS PIPING SYSTEM.

CAUTION: TEST FOR LEAKS ONLY WITH LEAK TEST SOLUTION. RINSE WITH CLEAR WATER AFTER LEAK TEST TO REMOVE ANY CORROSIVE RESIDUE. DO NOT USE OPEN FLAME TO TEST FOR GAS LEAKS.

5. FOR USE WITH SYSTEM PRESSURES NOT TO EXCEED 1/2 PSI (3.5 Kpa)

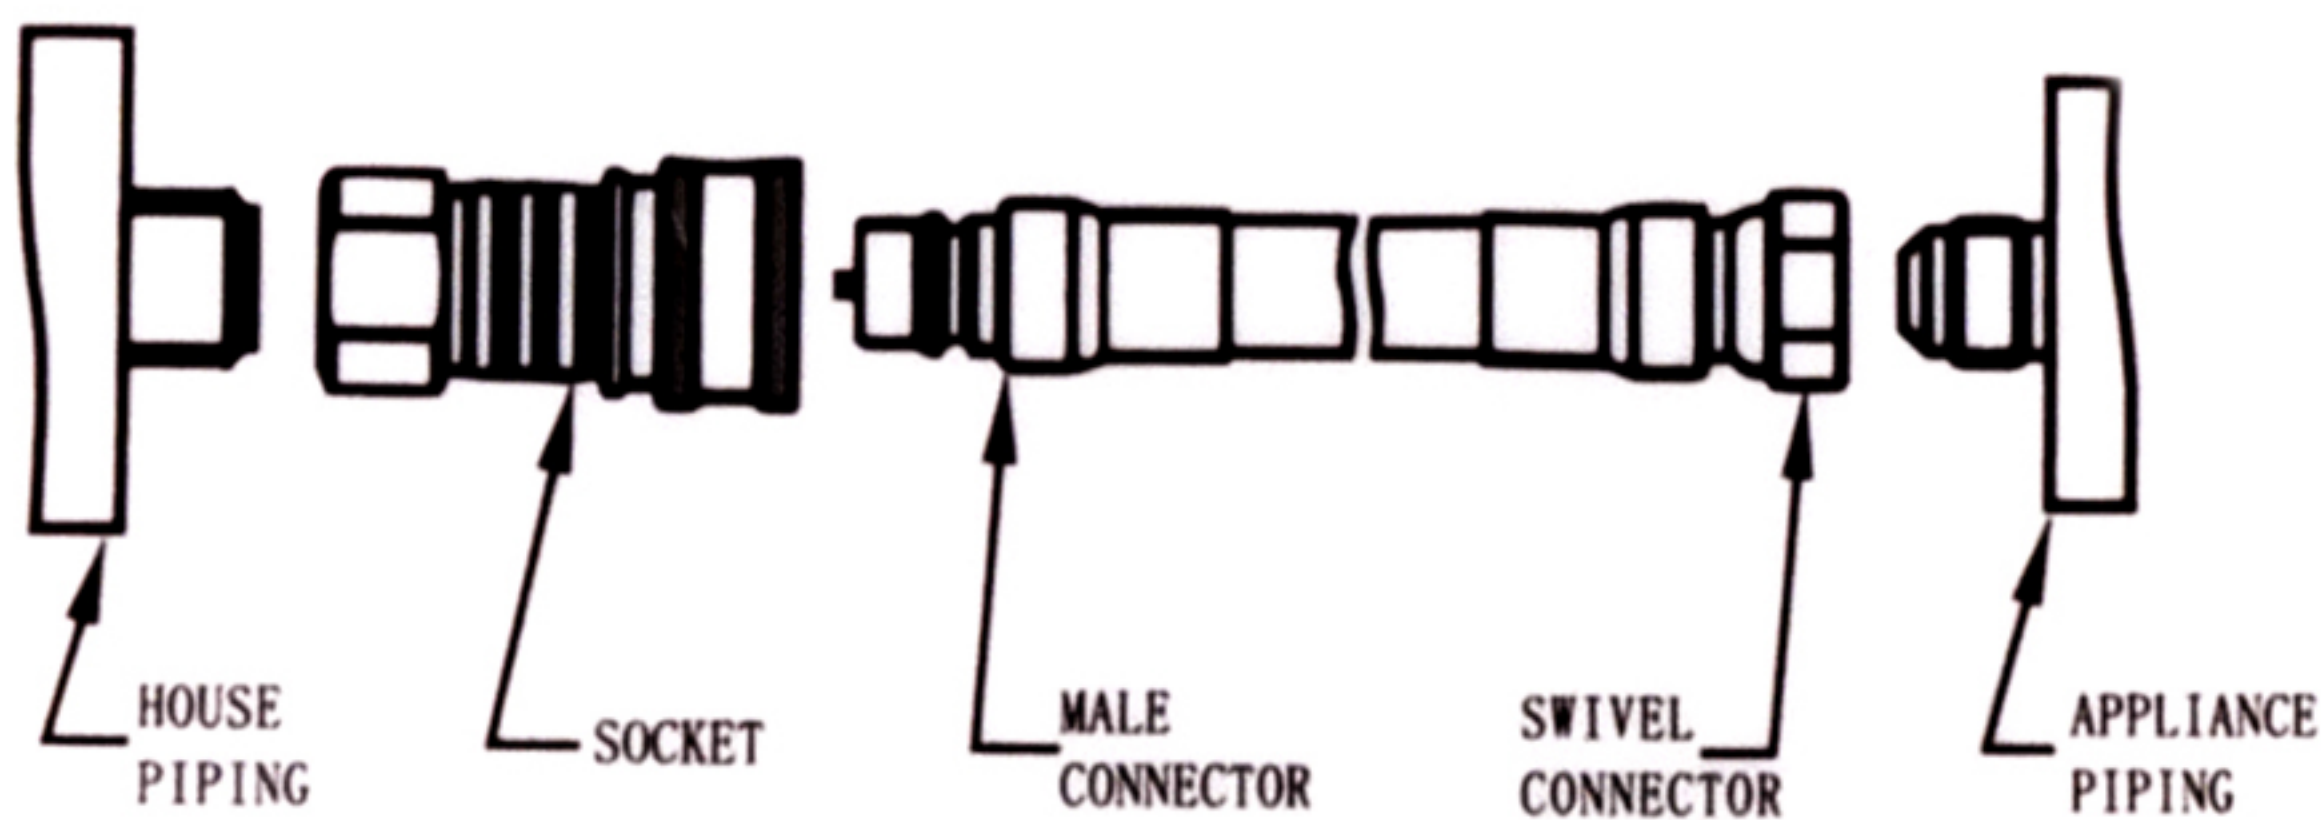


C US
IMPORTANT