



# Instruction Manual

**SAVE THESE INSTRUCTIONS**—This manual contains important safety and operating instructions for power units.

<b>Product Name:</b>	8ft Santa Christmas Tree Delivery Truck Inflatable with LED Lights
<b>SKU #:</b>	WHIN1387

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

## **PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts inside the carton to ensure no missing or damaged parts. Check all packaging thoroughly. Do not attempt to assemble or use the product if any parts are missing or damaged.

### **CARTON CONTENTS:**

Description
Inflatable x 1pc
Tethers x 4pcs
Stakes x 8pcs

### **Operating Instructions**

**BEFORE USING THIS PRODUCT: READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.**

#### **To Set Up and Use**

Remove contents from packaging.

1. Place the inflatable in a clean, open area free from obstruction or other debris.
2. Roll out the fabric and lay out the contents.
3. Plug in the adaptor in the appropriate electric outlet.
4. Turn the unit upright. Ensure the fan's air intake is clear of fabric and free of obstruction.
5. Be sure the zipper is closed to inflate the inflatable figure fully.
6. To secure the Inflatable from the wind, use the plastic stakes and tethers provided. Insert a plastic stake into the ground through each hole in the lower tabs of the inflatable figure.
7. To deflate, unplug from the outlet device and open the zipper on the back of the inflatable. Do not unplug by pulling on the cord.



#### ***Important Safety Instructions***

- This seasonal decoration is not intended for permanent installation or year-round use. It is recommended not to use it for more than 90 consecutive days.
- Do not attempt to inflate during unusually strong winds. If it becomes too windy for safe operation, allow your inflatable to deflate, secure it, and wait for better conditions before re-inflating.
- This is an electric product – not a toy. Keep the product out of the reach of children to avoid any accidents or electrical shocks.
- Protect the electric fan and power cord from exposure to water. This precaution will reduce the risk of electrical shock.



## Instruction Manual

**SAVE THESE INSTRUCTIONS**—This manual contains important safety and operating instructions for power units.

<b>Product Name:</b>	8ft Santa Christmas Tree Delivery Truck Inflatable with LED Lights
<b>SKU #:</b>	WHIN1387

- Always plug into a GFCI waterproof receptacle.
- Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.
- Do not expose the product to sharp items, which may cause rupture and damage.
- Repairing the damaged main connection cable is only allowed by a qualified technician.
- Do not hang ornaments or other objects.
- Do not close the door or window onto the power cord or extension cords, which may damage the product's wire insulation.
- Do not secure the product's wiring with staples, nails, or other sharp objects, or place wiring on sharp hooks or nails.
- The motor may temporarily stop running when the temperature is below 5° F (-15° C). The motor will begin functioning again at higher temperatures.



### **WARNING:**

- This inflatable has a plug that will fit into a polarized outlet only one way. This is a safety feature. If you cannot insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug. Reference the National Electrical Code. ANSI/NFPA 70, specifically for installing wiring and clearances from power and lighting conductors.
- For a cord-connected or direct plug-in power unit. Do not install or use Within 10 feet of a pool.
- For a cord-connected or direct plug-in unit, do not use it in the bathroom.
- This is an electric product – not a toy. Keep the product out of the reach of children and pets to avoid the risk of fire, burns, electrical shock, or serious personal injury. Extra caution is necessary when using this product near children. Do not allow children or pets to play near the product.
- Always unplug the product from the electrical outlet when leaving the house, retiring for the night, or not using it.
- Do not mount or place near a gas or electric heater, fireplaces, candles, or similar heat sources.
- Do not use attachments not recommended or sold by the product manufacturers as a risk of fire, electrical shock, or serious personal injury.
- Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.



# Instruction Manual

**SAVE THESE INSTRUCTIONS**—This manual contains important safety and operating instructions for power units.

<b>Product Name:</b>	8ft Santa Christmas Tree Delivery Truck Inflatable with LED Lights
<b>SKU #:</b>	WHIN1387



## **WARNING:** Risk of Electric Shock.

When used outdoors, install only a covered Class A GFCI-protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover. Mount the unit at a height greater than 1 foot from the ground surface. Don't plug in the power when it is in the box.

## **Care and Maintenance**

- Periodically check to ensure no holes or tears in the inflatable figure. If you find any tears in the fabric, you can repair them with a needle and regular thread. No special thread is necessary.
- Only use a mild detergent with cold water and a soft damp cloth to clean the figure.
- Periodically unplug the product from the electrical outlet to allow the transformer and fan to cool down to avoid overheating and/or product damage.
- Neatly fold and store the product in a cool, dry location away from sunlight or heat sources.
- Unplug, roll up, and store in original package or similar size box.
- Be careful not to get any moisture or water inside the motor.

## **Troubleshooting Guide:**

<b>Item will not fully inflate.</b>	Ensure zippers on the back of each inflatable figure are closed. Inspect fabric for tears and holes; repair if necessary. Make sure the fan is not obstructed by any debris or snow. Unplug fan from the electrical outlet and let cool down completely, before clearing debris.
<b>Fan does not operate.</b>	Ensure fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet). Fan may be overheated. Unplug the fan from the electrical outlet and let cool down completely.