

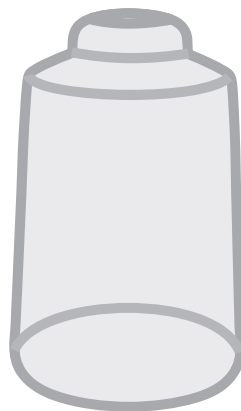



Assembly Item No. 21157

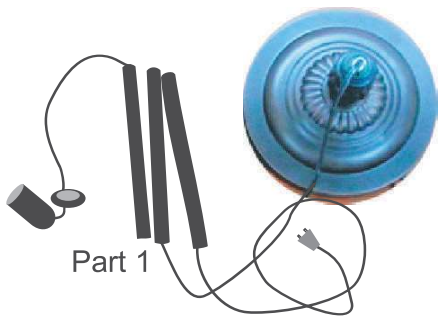

Glass Shade
Part 2


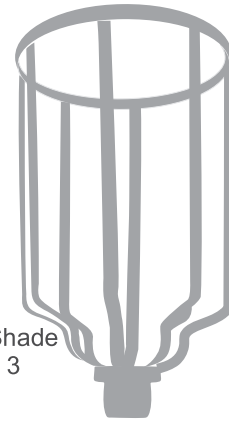


Glass Shade
Part 3

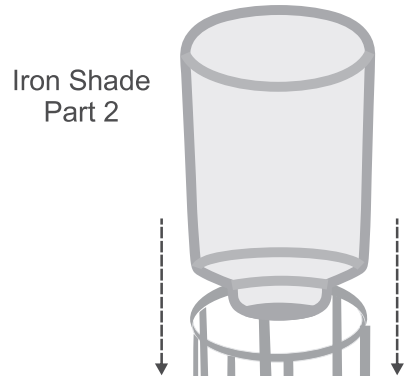


Iron Shade
Part 2

Iron Shade
Part 3

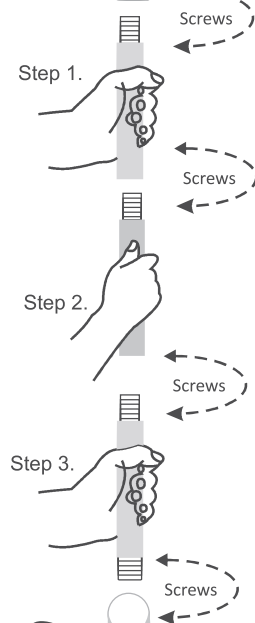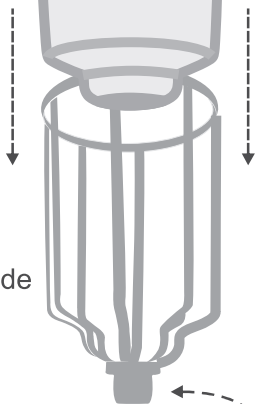

Final Pc.

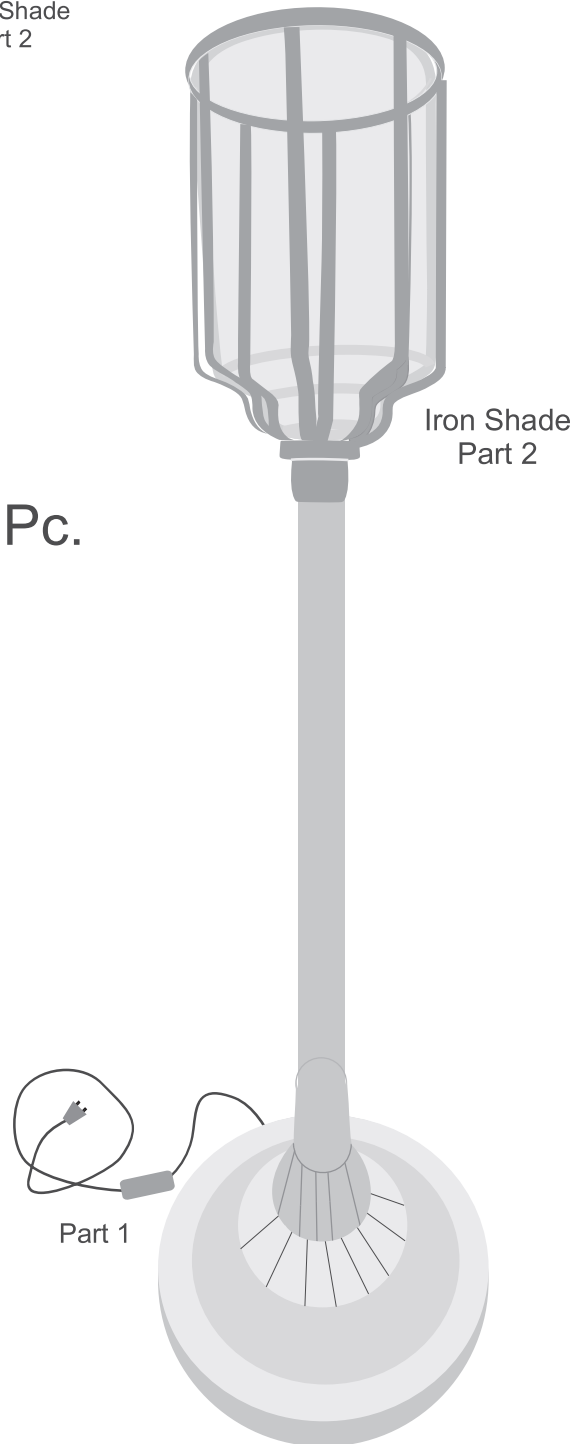



your **global source** for **unique lighting + home decor**

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.
THIS LAMP SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLY.
MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE:
SHADE, ASSEMBLY, (3) POLES
AND BASE. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT
SURFACE.

ASSEMBLE THE LAMP

1. CAREFULLY ORGANIZE AND PLACE ALL PARTS ON A SMOOTH, FLAT
SURFACE. LINE UP ALL OF THE PARTS ACCORDING TO THE ASSEMBLY DIAGRAM.

2. SCREW LOWER POLE TO TOP OF BASE.

3. SCREW MIDDLE POLE TO TOP OF POLE.

4. SCREW UPPER POLE TO TOP OF MIDDLE POLE.

5. SCREW SOCKET ASSEMBLY TO TOP OF UPPER POLE.

6. PLACE SHADE ONTO HOLDER & SCREW SOCKET RING

7. INSTALL A 150 WATT MAXIMUM MEDIUM BASE 3-WAY TYPE "A" BULB
(NOT INCLUDED) INTO SOCKET.

8. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

BULB REPLACEMENT

1. BEFORE REPLACING THE BULB, BE SURE THAT THE SHADE AND BULB
ARE COOL AND LAMP IS UNPLUGGED.

2. UNSCREW EXISTING BULB FROM SOCKET AND REPLACE WITH A NEW
BULB. PLUG POWER SUPPLY CORD BACK INTO OUTLET.

TROUBLE SHOOTING

1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE OUTLET. MAKE
SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE POWER OUTLET.

2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET. CHECK THE
BULB FOR A BROKEN FILAMENT. REPLACE BULB IF NECESSARY, PLUG IN
LAMP AND TURN IT ON.


3. IF THE LAMP STILL DOES NOT LIGHT, PLEASE CONTACT YOUR
DISTRIBUTOR OR PLACE OF PURCHASE.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER
THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC
SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF
THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF
IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE
WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED DO
NOT ALTER THE PLUG.

E26 Type A.60W X 1 (Not included)
E26 CFL 13W X 1 (Not included)

INSTRUCTIONS

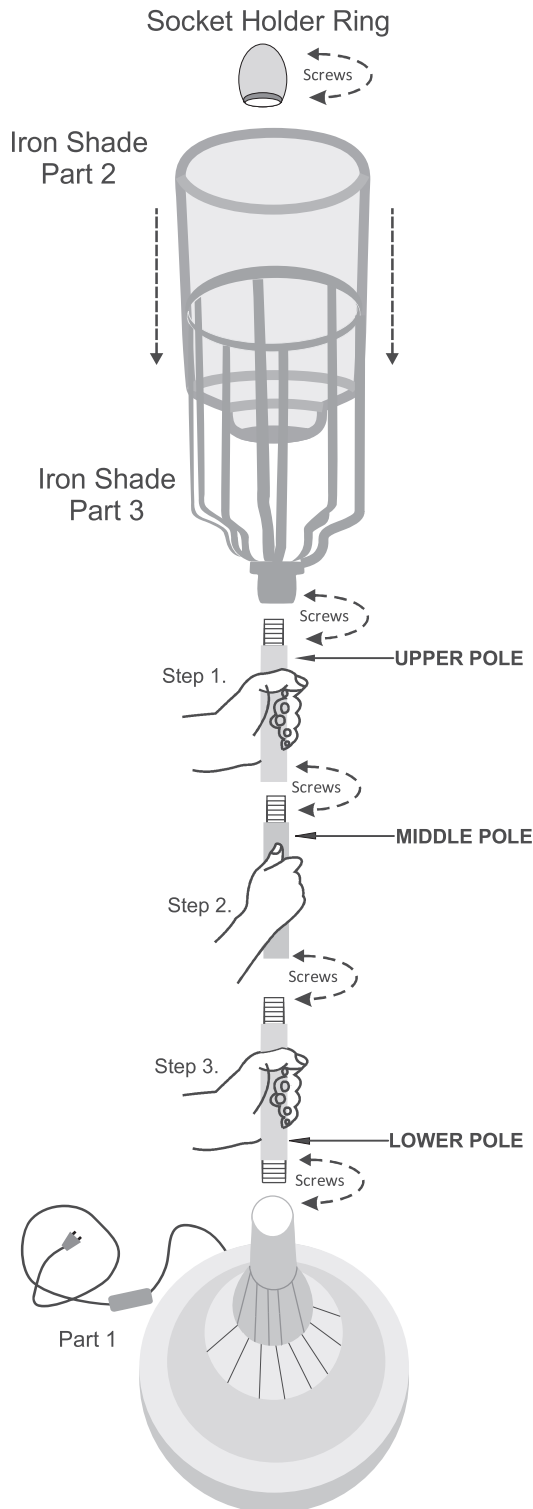

MADE IN INDIA

riverofgoods.com

