 
 




Sideboard

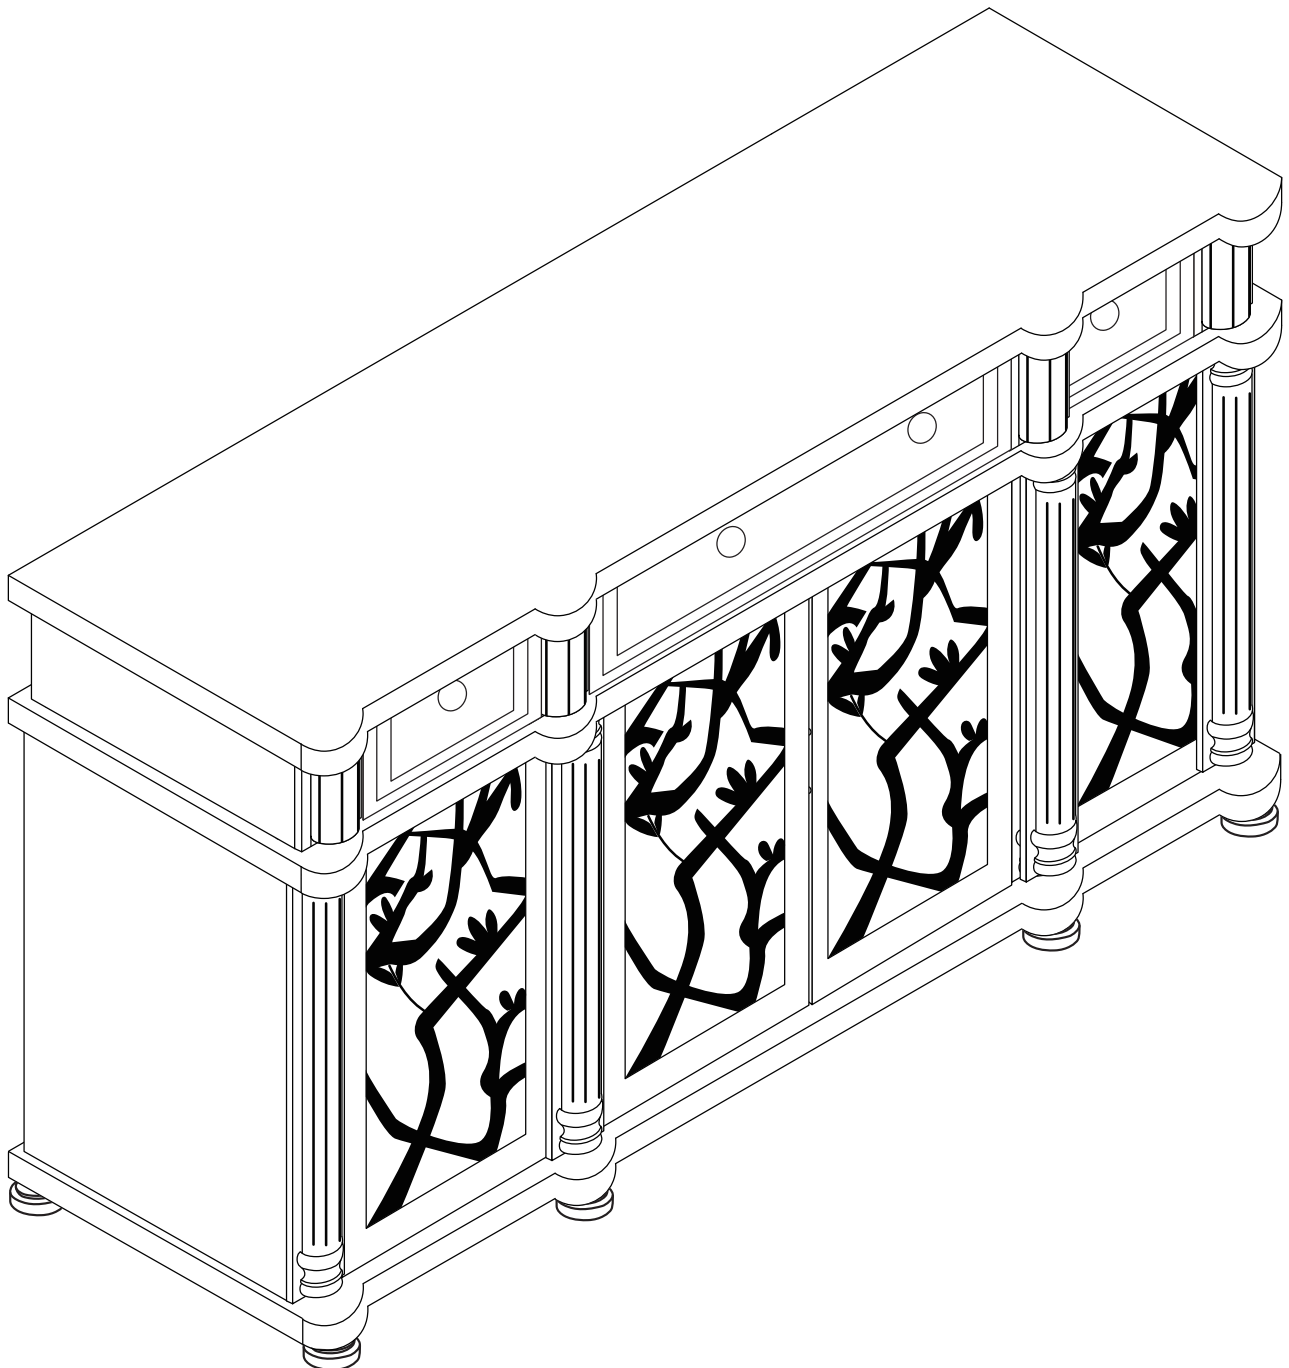

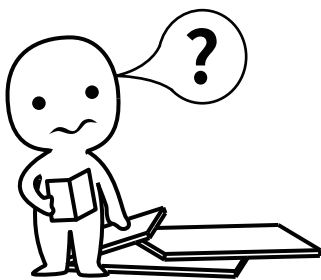


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

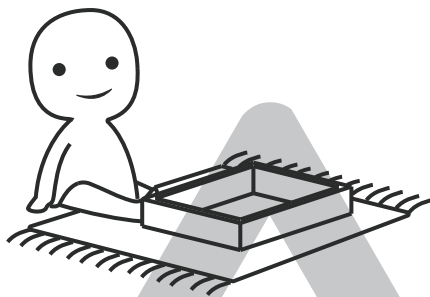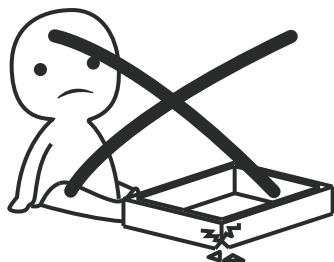



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

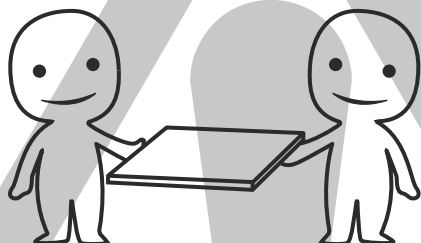

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

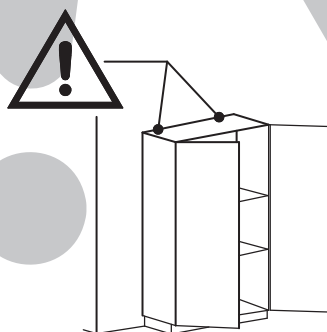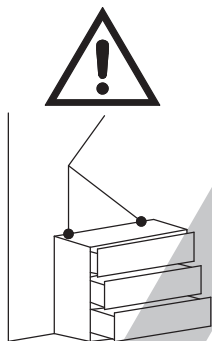

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.













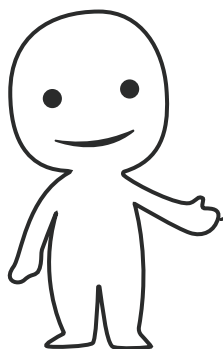












Please prepare the following tools

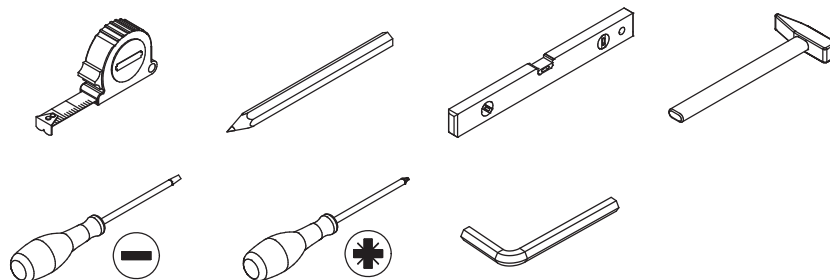 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 62 Ø 6 x 35 mm	B x 64 Ø 3 x 12 mm	C x 62 Ø 15 x 12 mm	D x 16 Ø 8 x 30 mm
E x 6 Ø 6 x 40 mm	F x 12 Ø 4 x 16 mm	G x 4 Ø 24 x 20 mm	H x 6 Ø 8 x 50 mm
J x 8 40 mm	K x 12 Ø 5 x 10 mm	L x 4 40 x 15 x 12 mm	M x 12 Ø 3.5x25 mm
N x 4 40 x 12 mm	P x 4 10 x 95 mm	Q x 1	

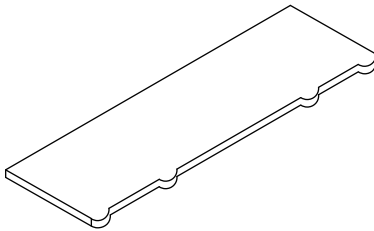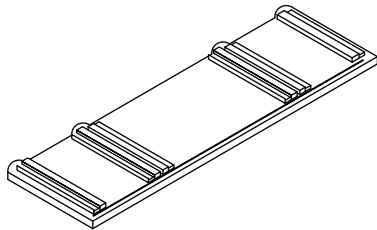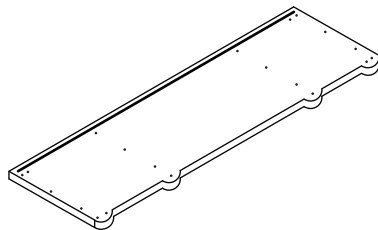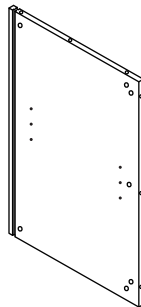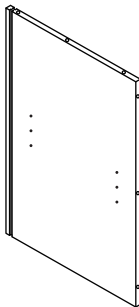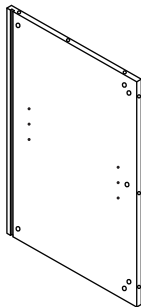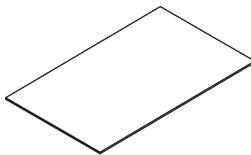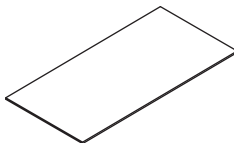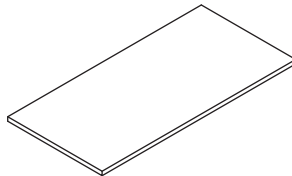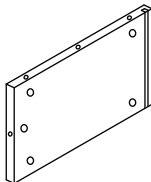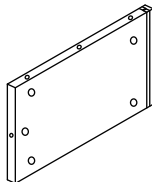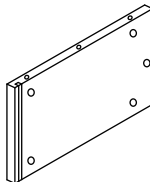             											
1	1 PC	2	1 PC	3	1 PC						
											
4	1 PC	5	1 PCS	6	1 PC	7	1 PC				
											
8	2 PCS	9	2 PCS	10	1 PCS	11	2 PCS				
											
12	1 PCS	13	2 PCS	14	1 PCS	15	1 PCS				
											
16	2 PCS	17	1 PCS	18	1 PCS	19	2 PCS	20	1 PCS	21	1 PCS

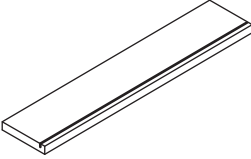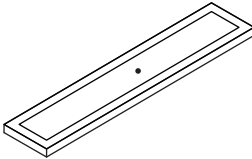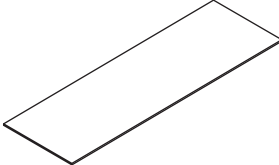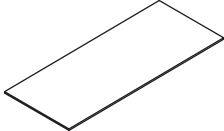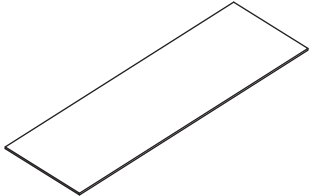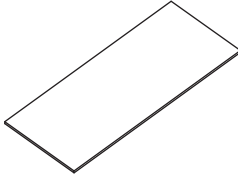          
							
22	1 PCS	23	1 PCS	24	2 PCS	25	2 PCS
							
26	2 PCS	27	2 PCS	28	1 PCS	29	2 PCS
							
30	3 PCS	31	3 PCS	32	6 PCS	33	1 PCS
							
34	2 PCS						

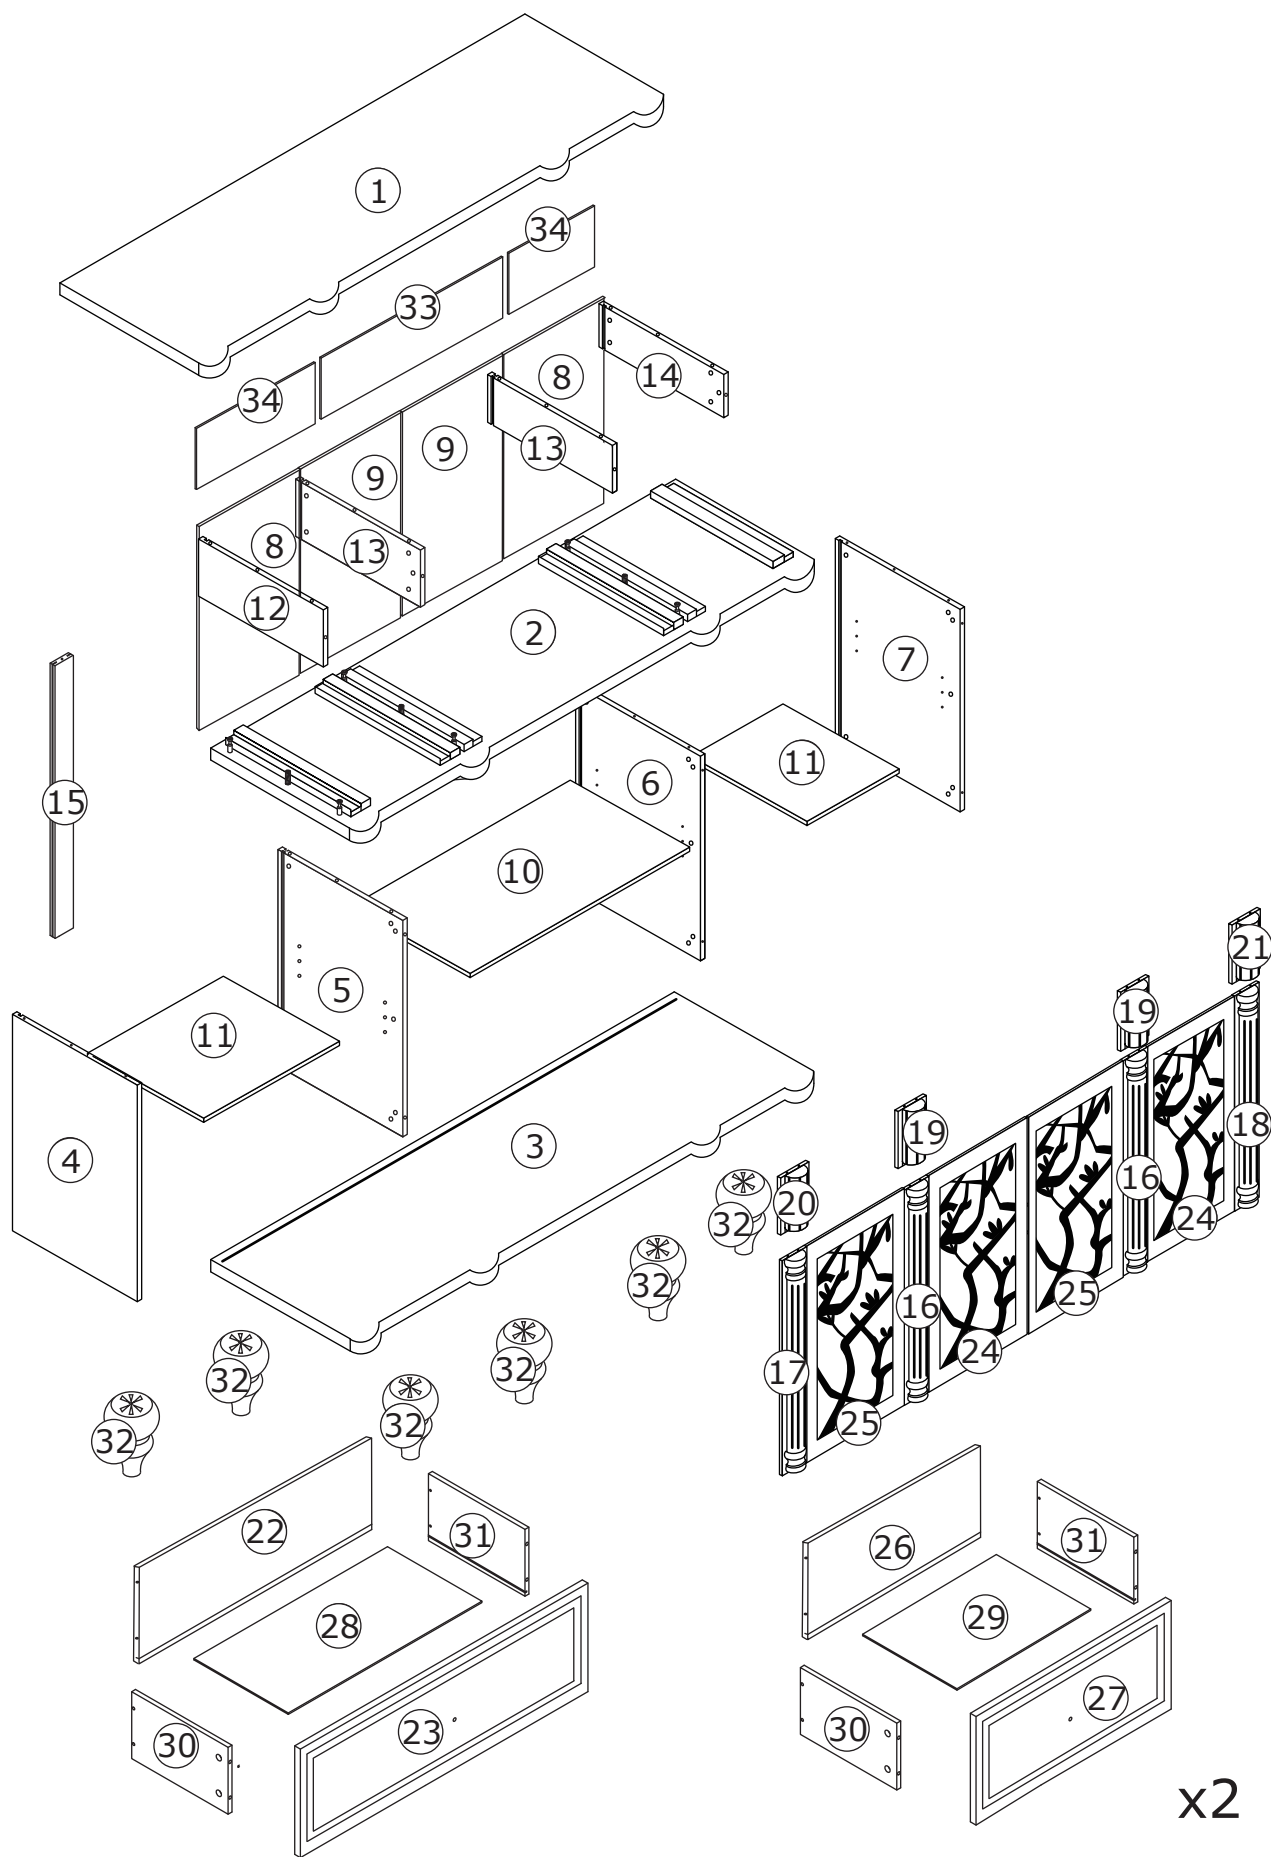 




1

E x 6  Ø 6 x 40 mm	Q x 1 	
---	--	--


 
Fix No.32 legs to No.3 plate with screw(E) as shown.

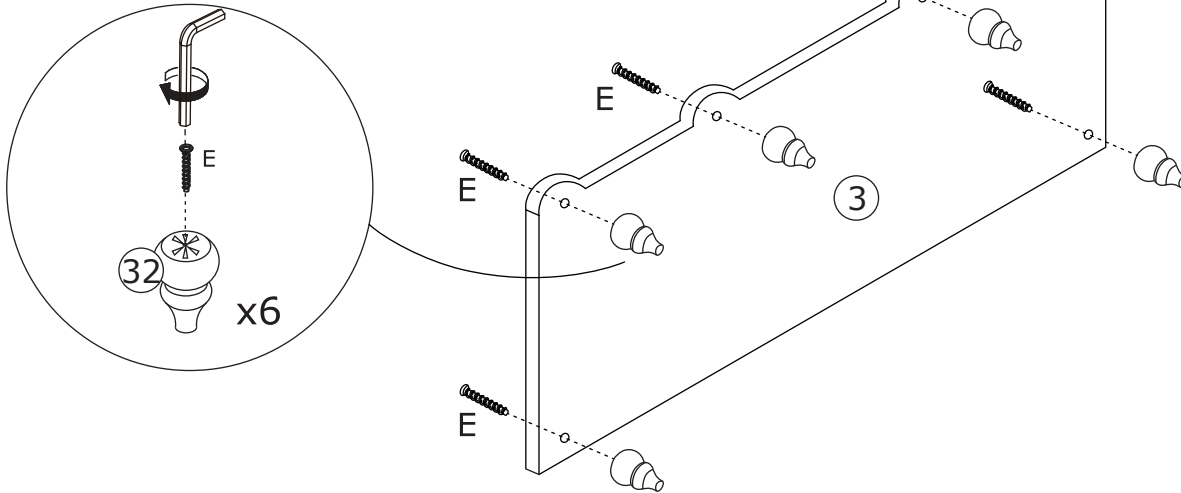

2

   B x 24  Ø 3 x 12 mm	J x 8  40 mm	A x 12  Ø 6 x 35 mm	
---	--	---	--

 
 
Fix part(J) to No.16 and No.17 plate with screw(B) as shown.

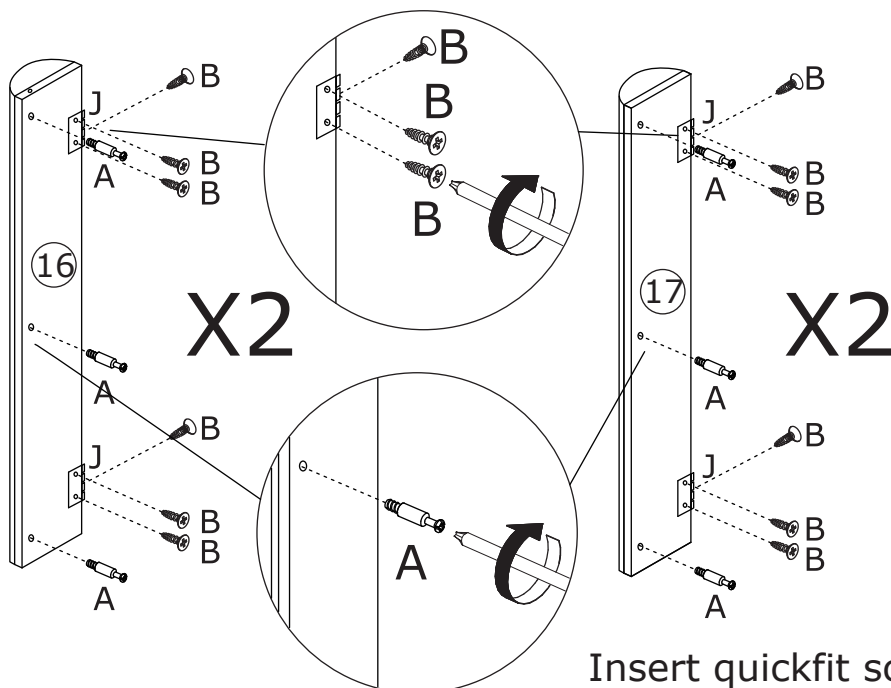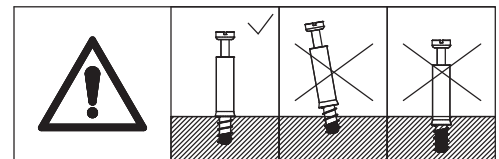




Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

Insert quickfit screw(A) into corresponding holes in No.16 and No.17 plate with a screwdriver as shown.

  3

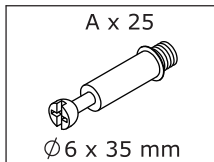

   Insert quickfit screw(A) into corresponding holes in No.1,No.2 and No.3 plate with a screwdriver as shown.

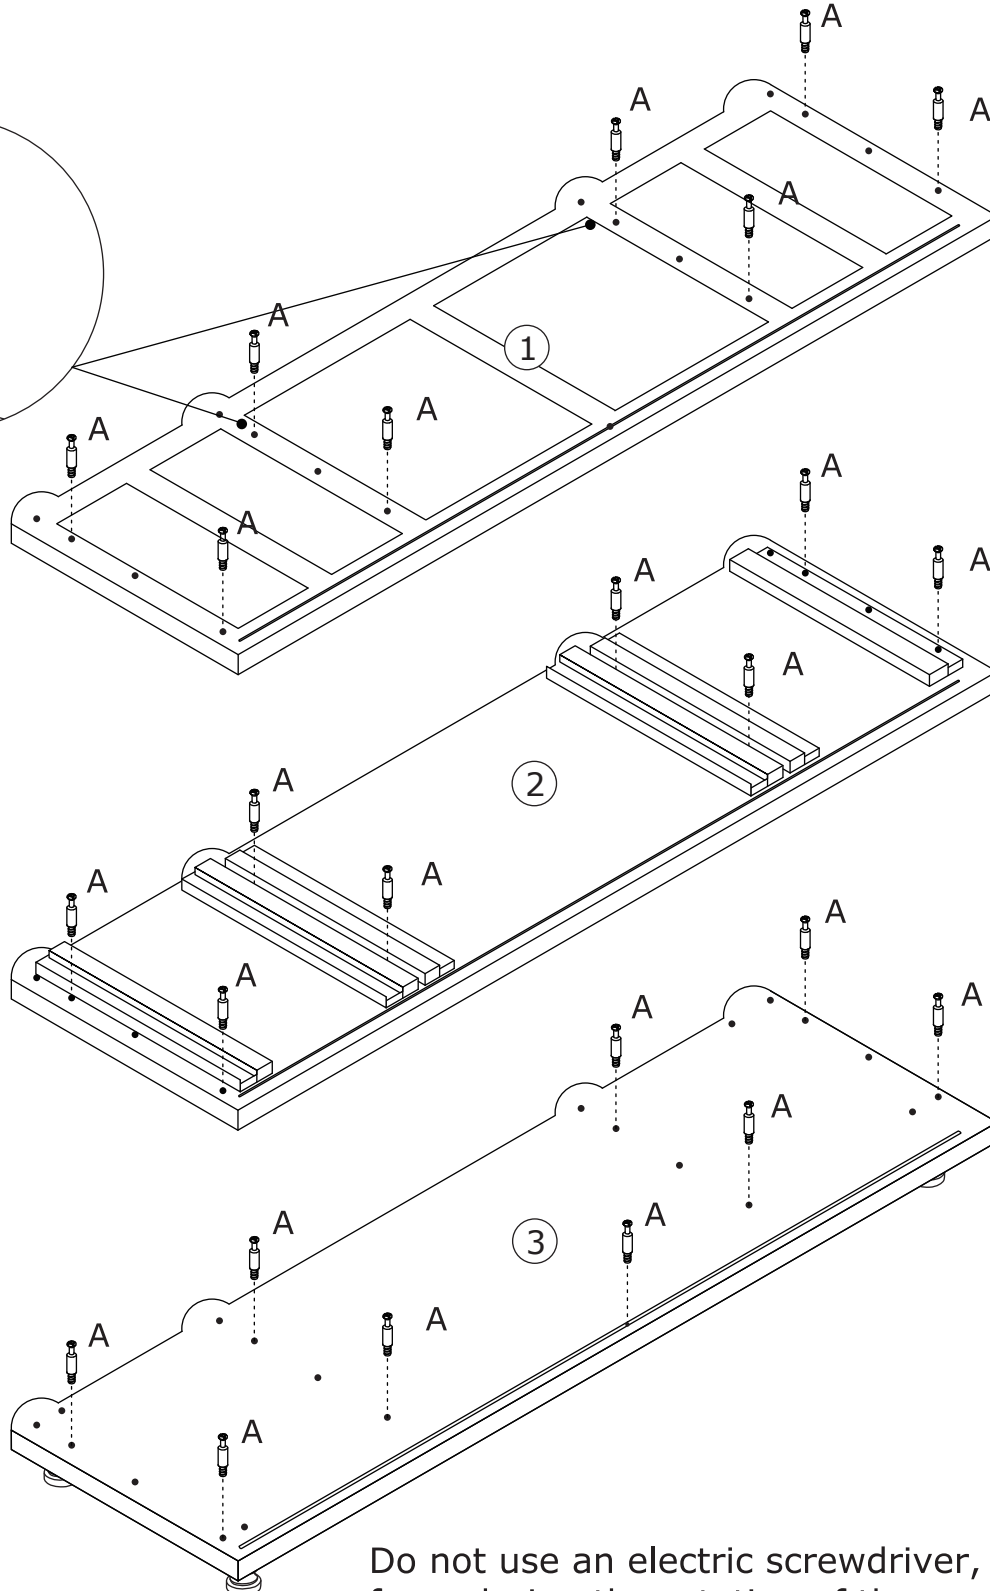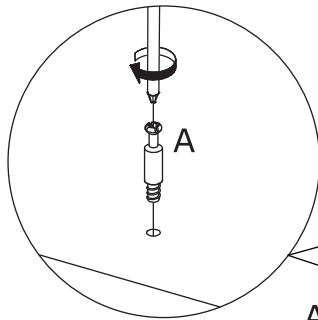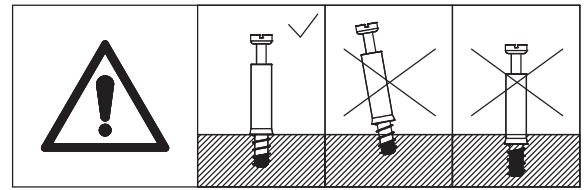

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

4

D x 6

 


Ø8 x 30 mm


C x 12




Ø15 x 12 mm



 Attach No.17 plate to No.4;
No.16 plate to No.5 and
No.6; No.18 plate to No.7,
then turn cam lock(C)
clockwise to tighten as
shown.

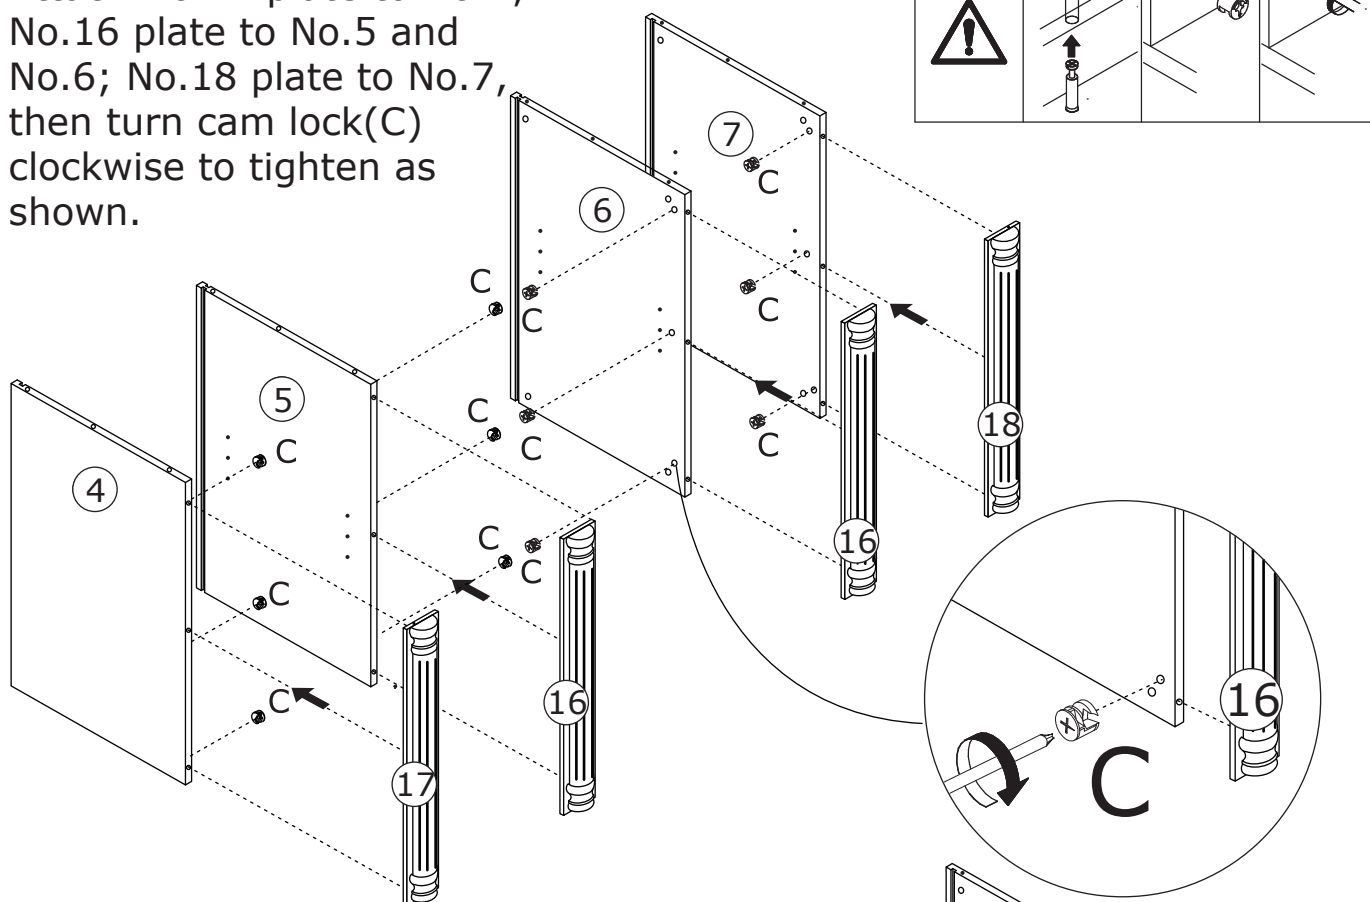

 Attach the 4 components to No.3
plate with wooden dowel (D) as
shown.

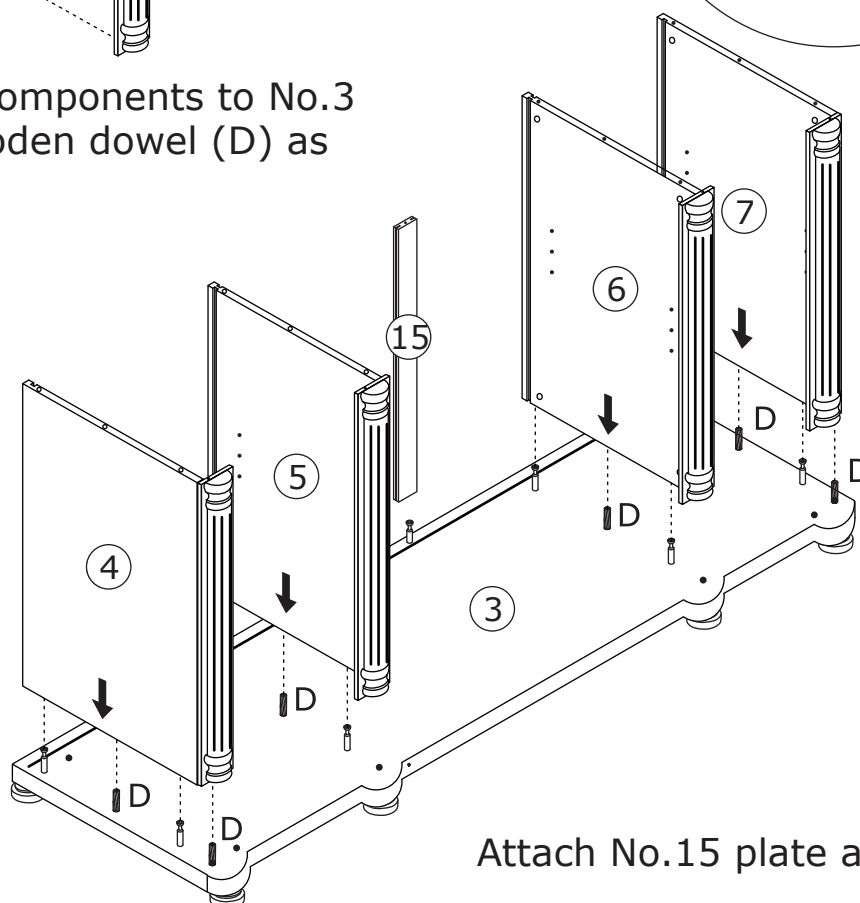

Attach No.15 plate as well.

5

C x 9

 


Ø15 x 12 mm


K x 12





Ø5 x 10 mm



 
Slide No.8 and No.9 plate into available slots as shown.

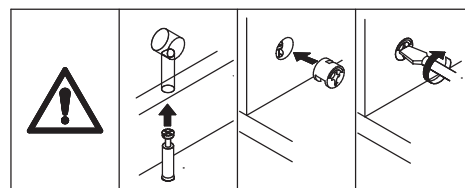

  Insert cam locks(C) into No.4, No.5, No.6, No.7 and No.15 plate, then turn clockwise to tighten as shown.


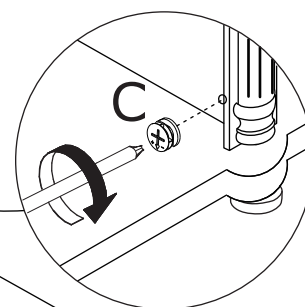
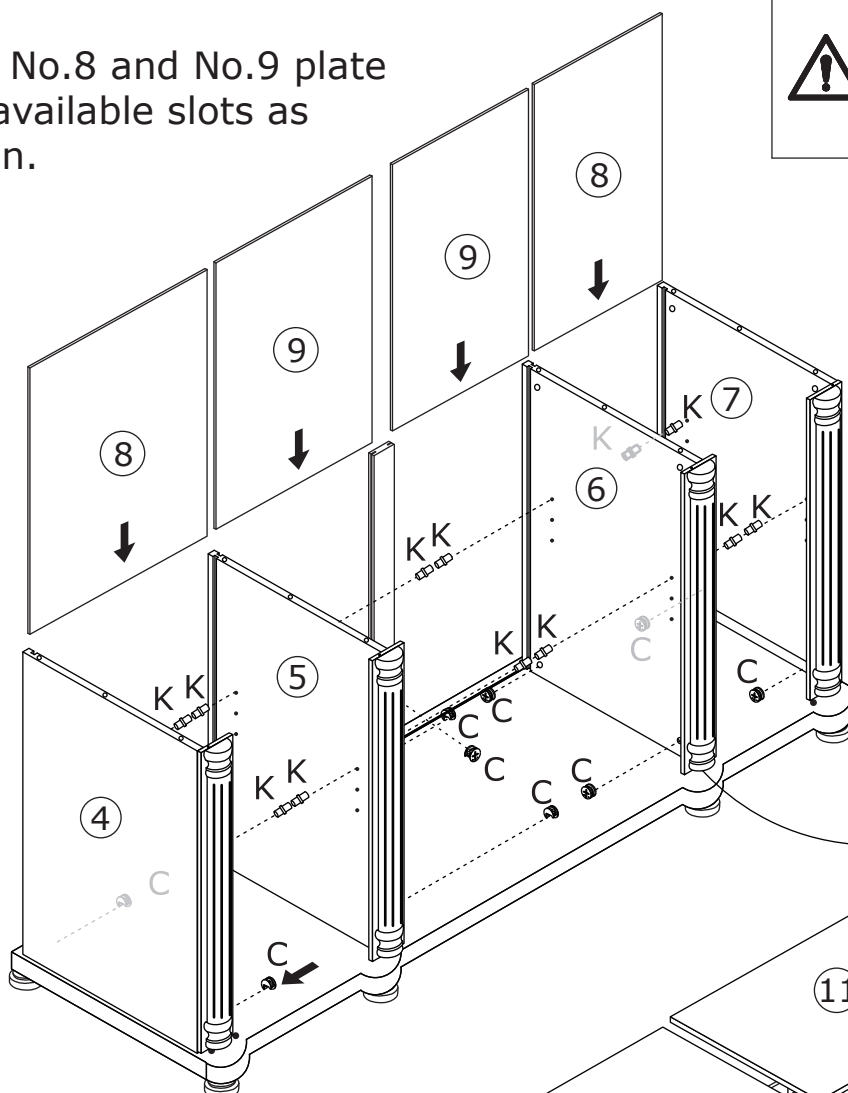





 
Insert part(K) to No.4, No.5, No.6 and No.7 plate as shown.

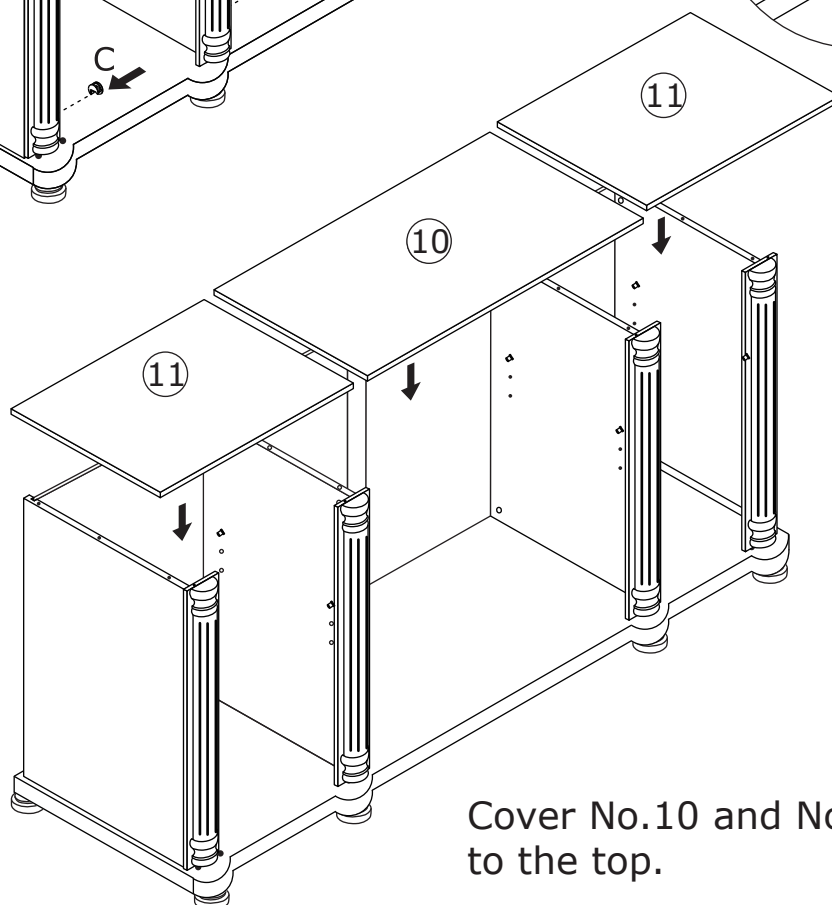



Cover No.10 and No.11 plate to the top.

   6

A x 13  Ø6 x 35 mm	B x 8  Ø3 x 12 mm	L x 4  40 x 15 x 12 mm	C x 4  Ø15 x 12 mm	
---	--	---	--	---

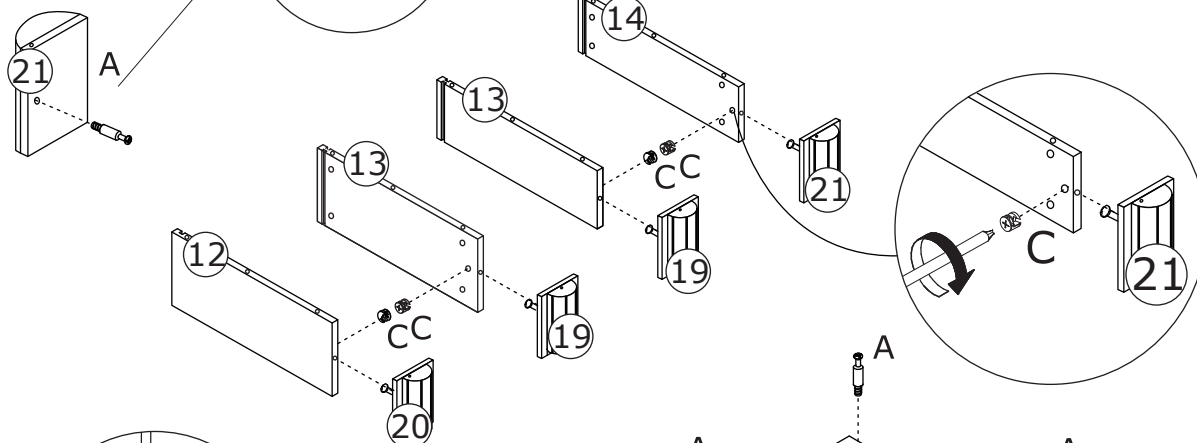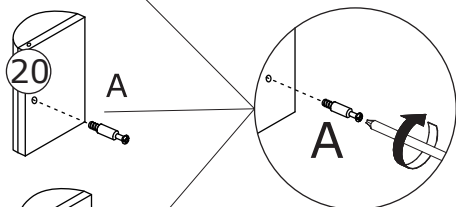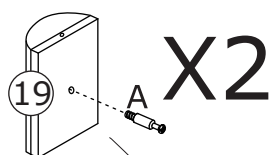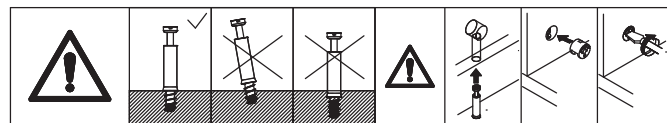    

  Attach No.19 plate to No.13; No.20 plate to No.12; No.21 plate to No.14, then turn cam lock(C) clockwise to tighten as shown.

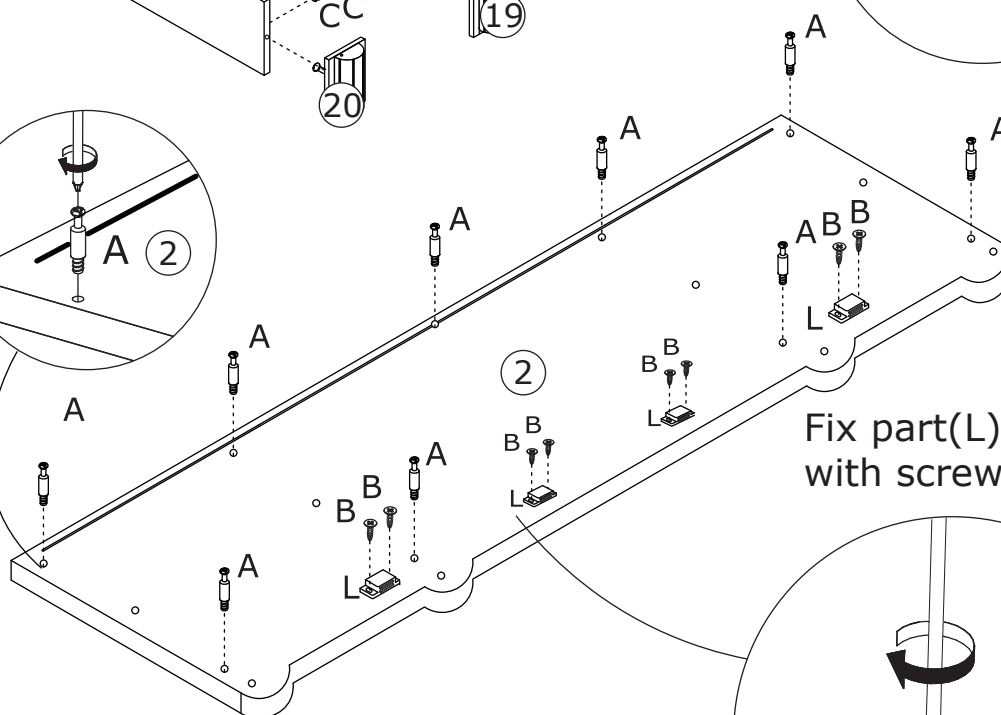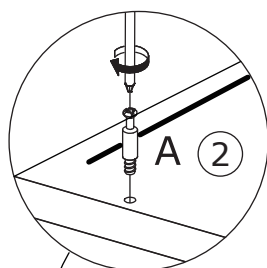


Fix part(L) to No.2 plate with screw(B) as shown.

Insert quickfit screw(A) into corresponding holes in No.19, No.20 and No.2 plate with a screwdriver as shown.



Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

7



D x 2  Ø8 x 30 mm	H x 6  Ø8 x 50 mm	C x 9  Ø15 x 12 mm
--	--	---

 

  Knock wooden dowel(D)
into No.2 plate at first.

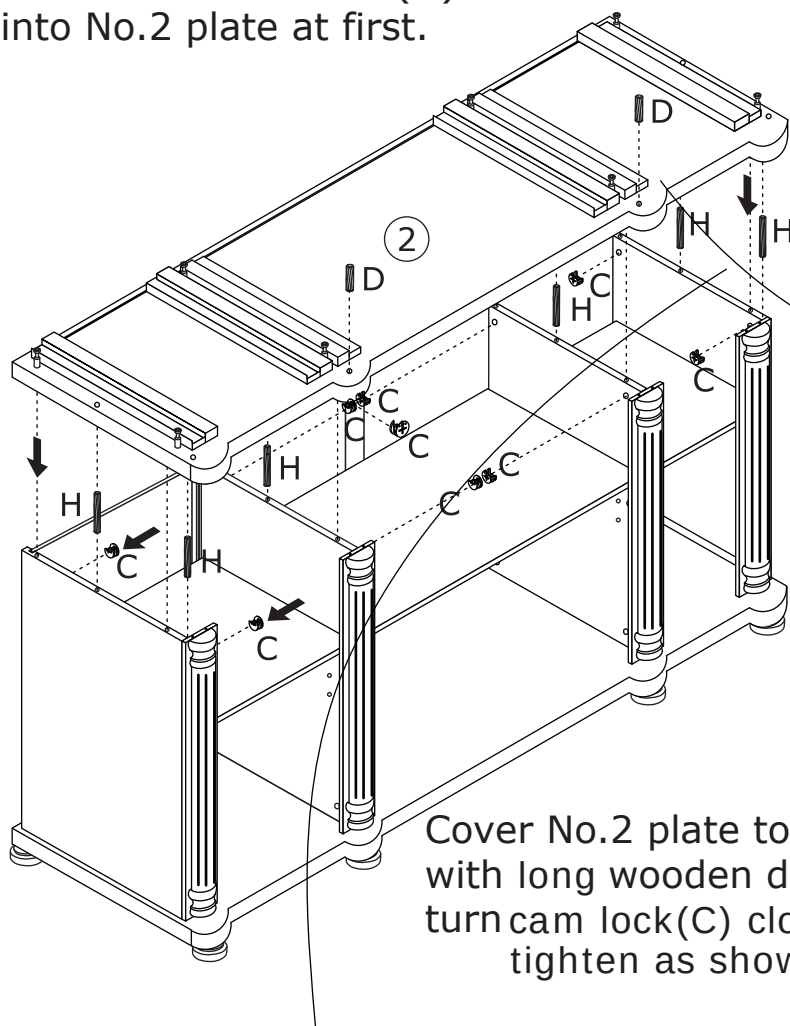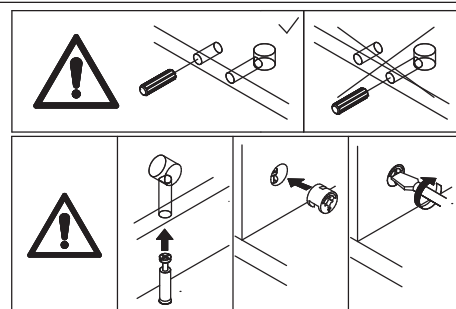

  
Cover No.2 plate to the component
with long wooden dowel(H) and
turn cam lock(C) clockwise to
tighten as shown.

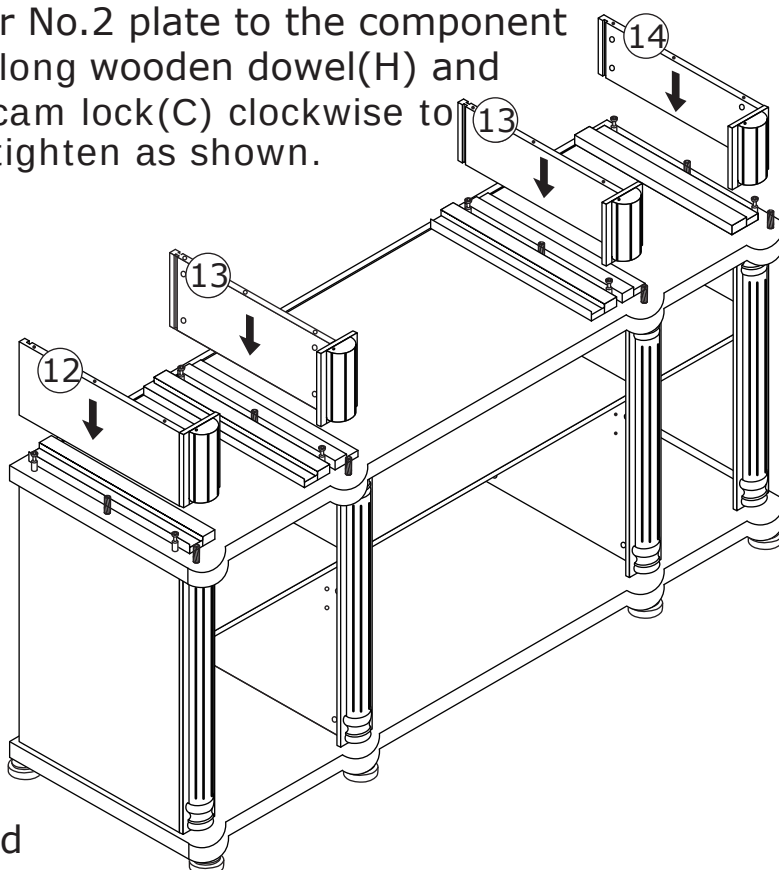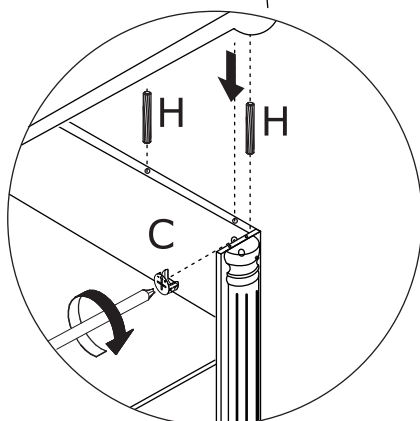


Attach No.12, No.13(x2) and
No.14 plate to No.2 as shown.

8



 
D x 8

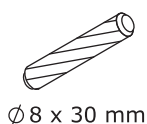


C x 16

 

   
Slide No.33 and No.34 into available slots as shown.

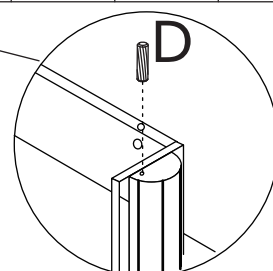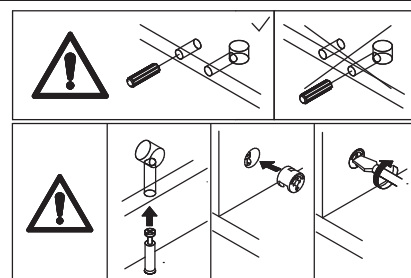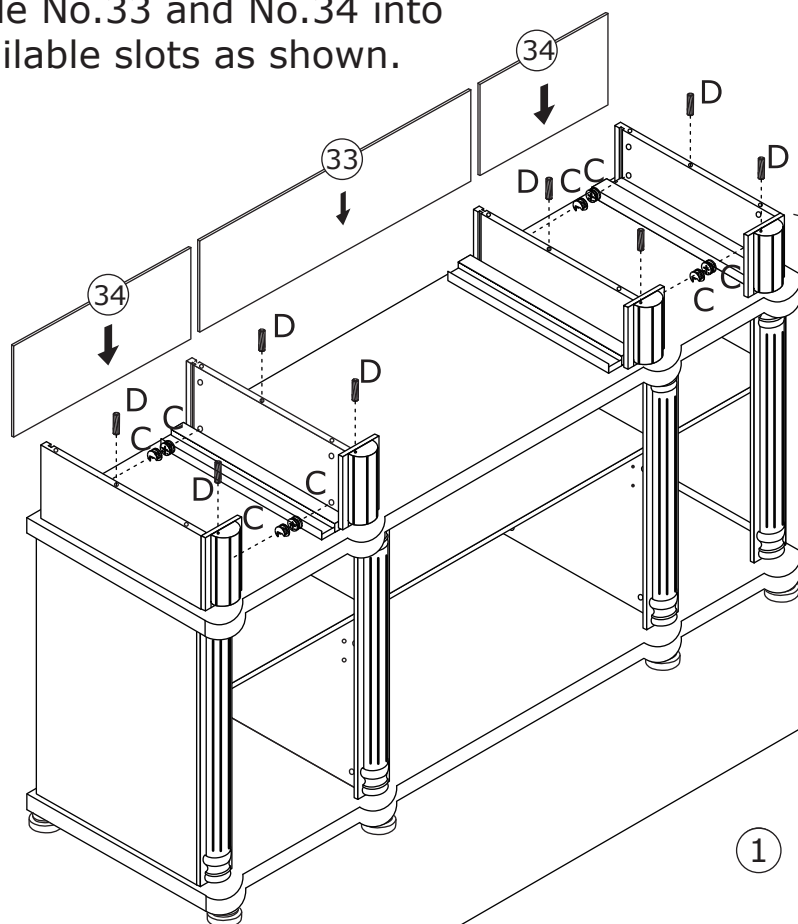

 
Knock wooden dowel(D) into No.12, No.13(x2) and No.14 plate at first.

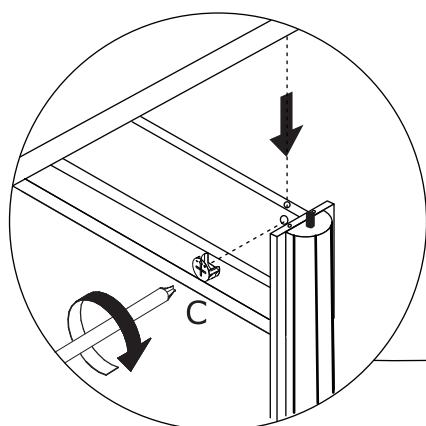

 
Then cover No.1 plate to the top, turn cam lock(C) clockwise to tighten as shown.

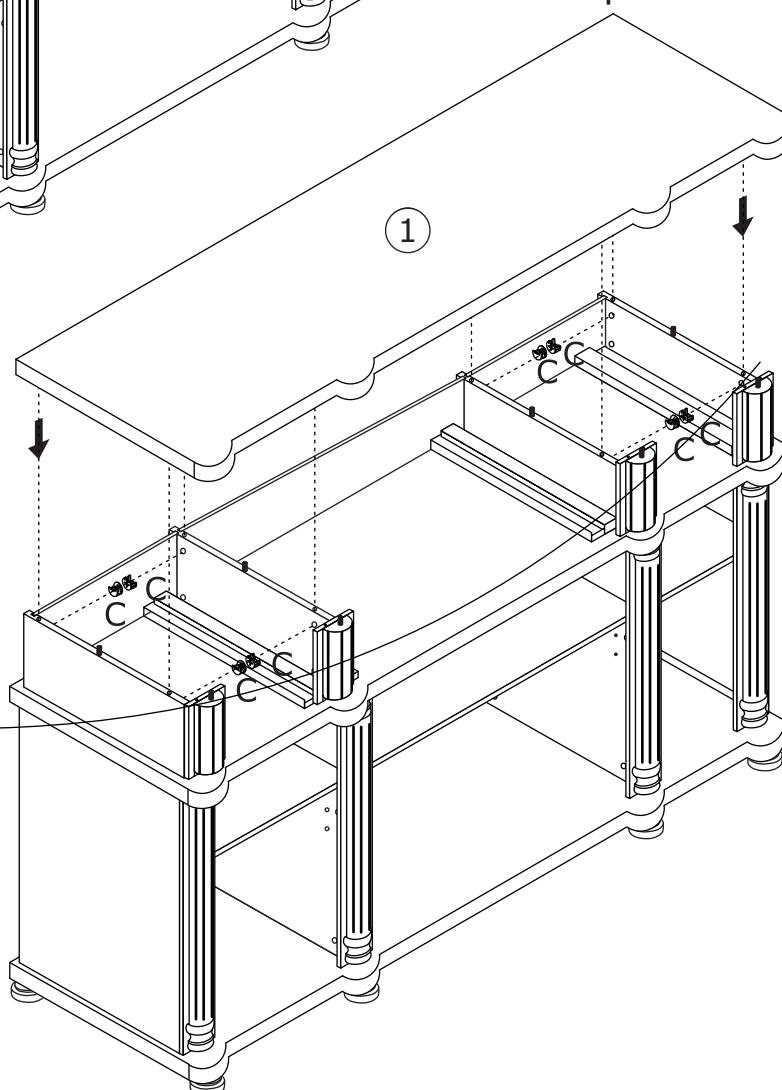


9

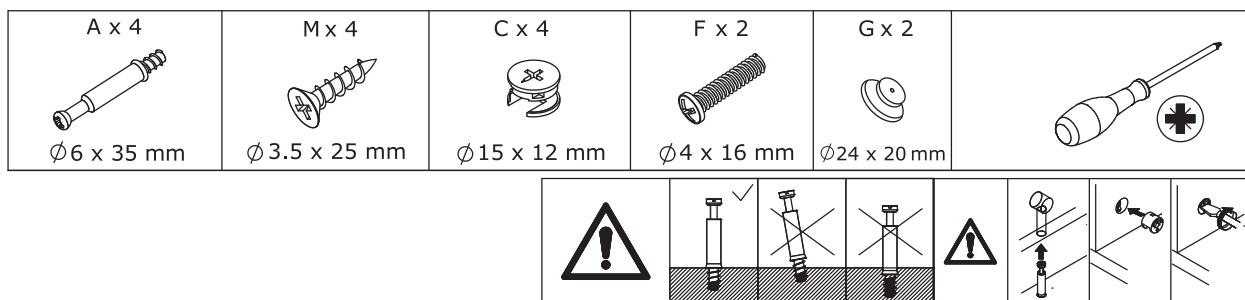 

 Connect No.30 and No.31 plate with No.22 using screw(M).

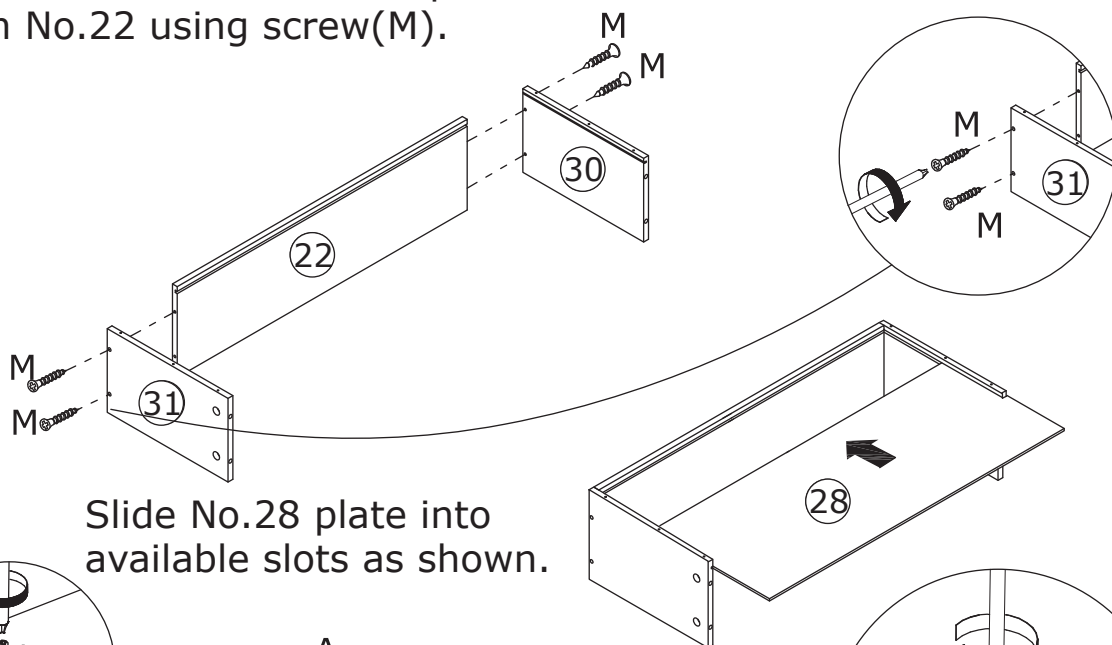


 Slide No.28 plate into available slots as shown.

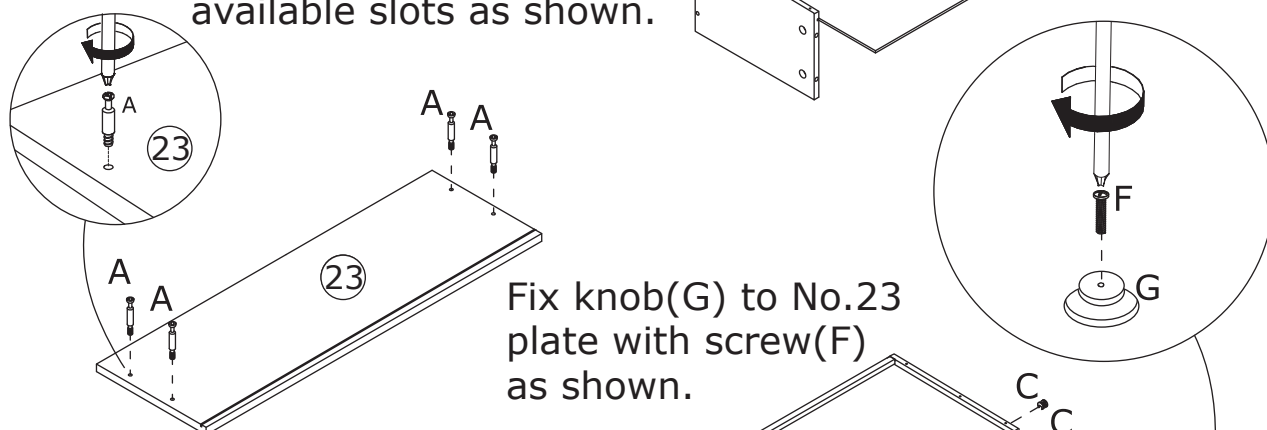

Insert quickfit screw(A) into No.23 plate with a screwdriver as shown.

 
Fix knob(G) to No.23 plate with screw(F) as shown.

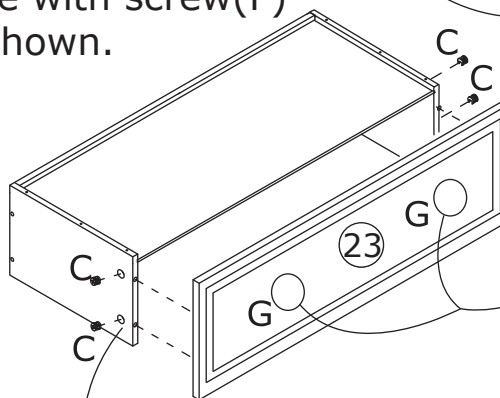



Attach No.23 plate to the drawer component and turn cam lock(C) clockwise to tighten as shown.

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack


 
10

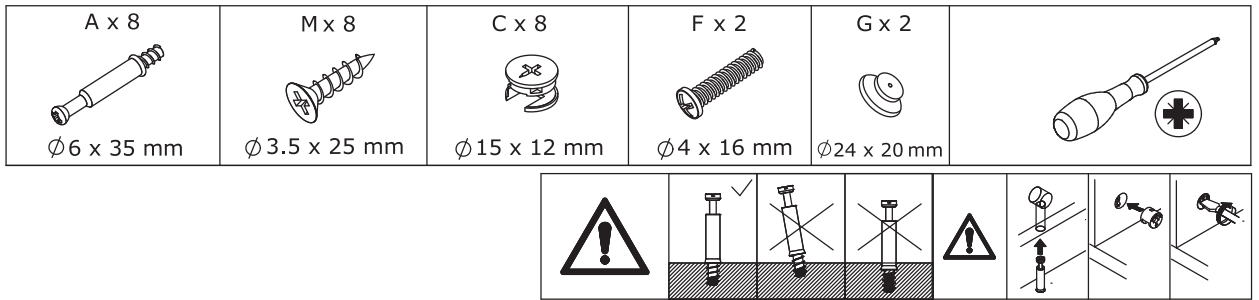

  Connect No.30 and No.31 plate with No.26 using screw(M).

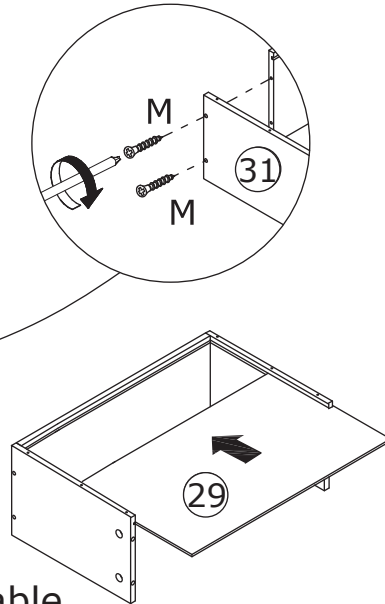
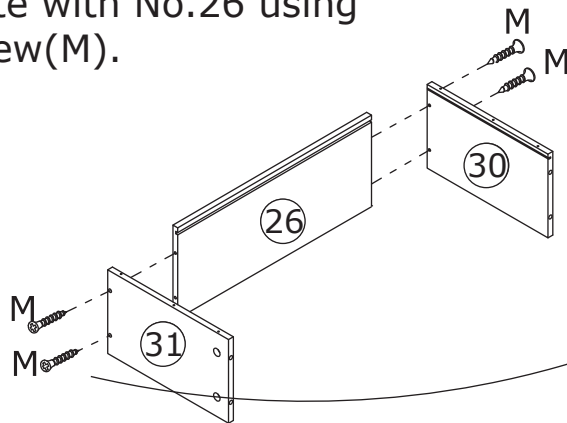


  Slide No.29 plate into available slots as shown.

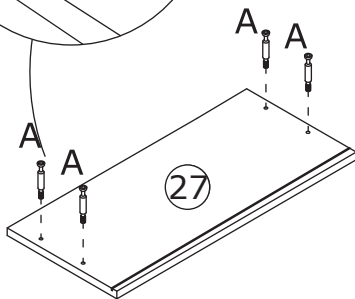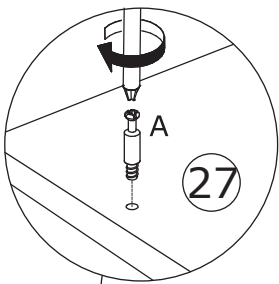


Insert quickfit screw(A) into No.27 plate with a screwdriver as shown.

  Fix knob(G) to No.27 plate with screw(F) as shown.

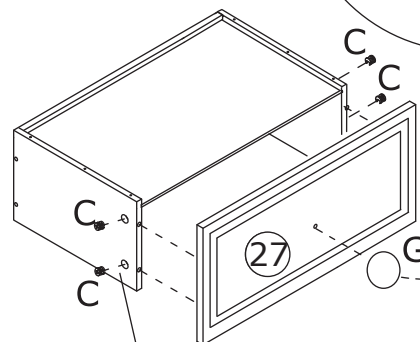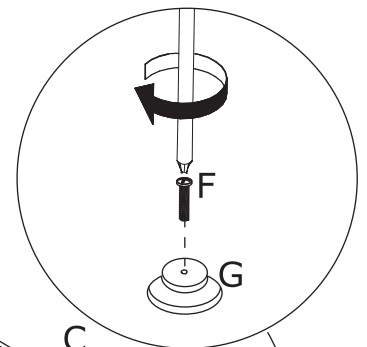

 Attach No.27 plate to the drawer component and turn cam lock(C) clockwise to tighten as shown.

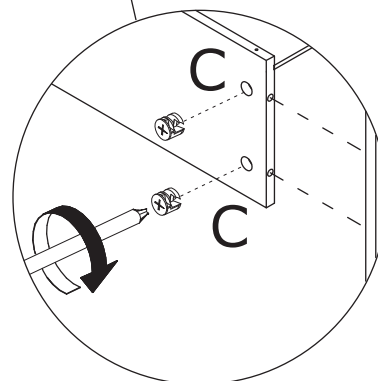

x2

Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack 15/17

11

 
B x 32






F x 8




N x 4




P x 4

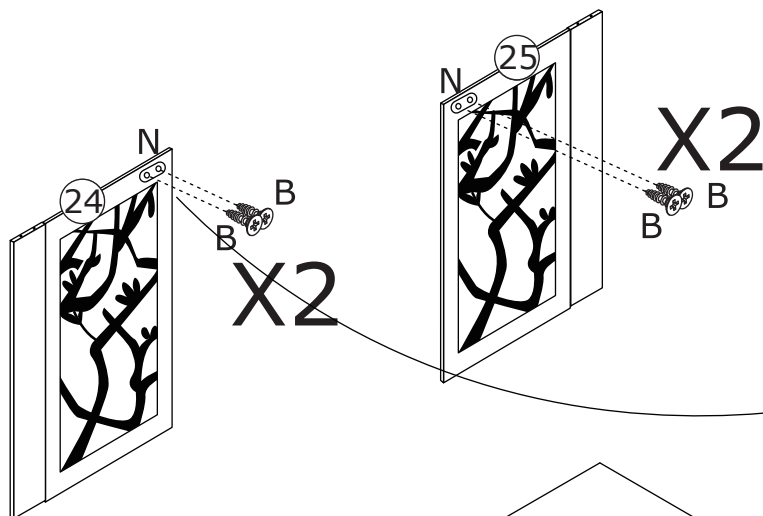   

 
Fix part(N) to No.24 and No.25 plate with screw(B) as shown.

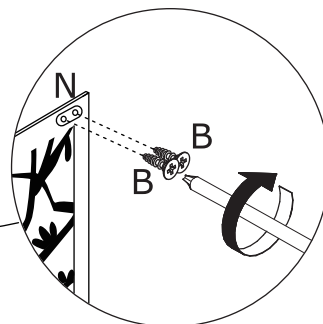

 Please don't use an electric screwdriver or use force to rotate, may cause crack.

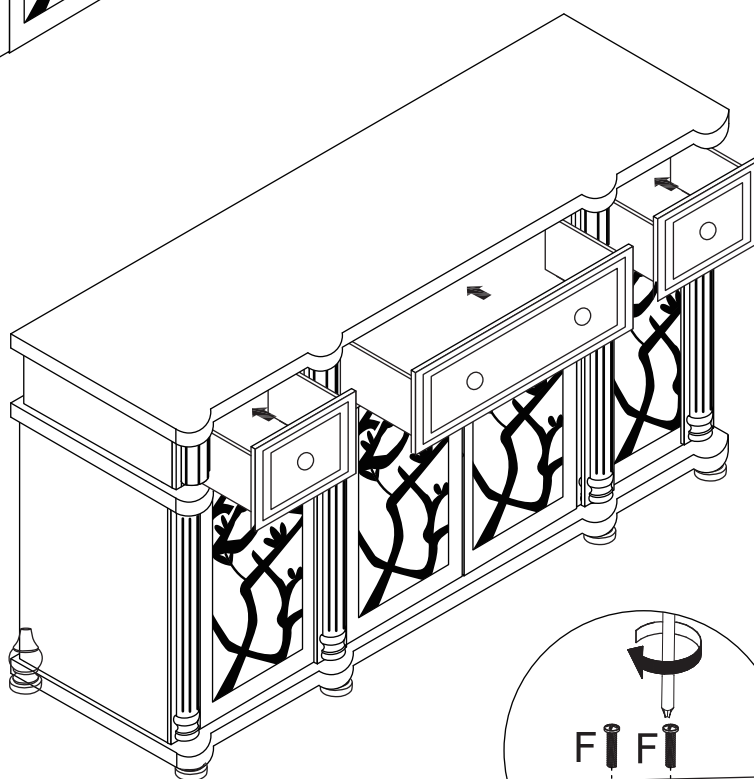

 
Fix handle(P) to No.24 and No.25 plate with screw(F) as shown.

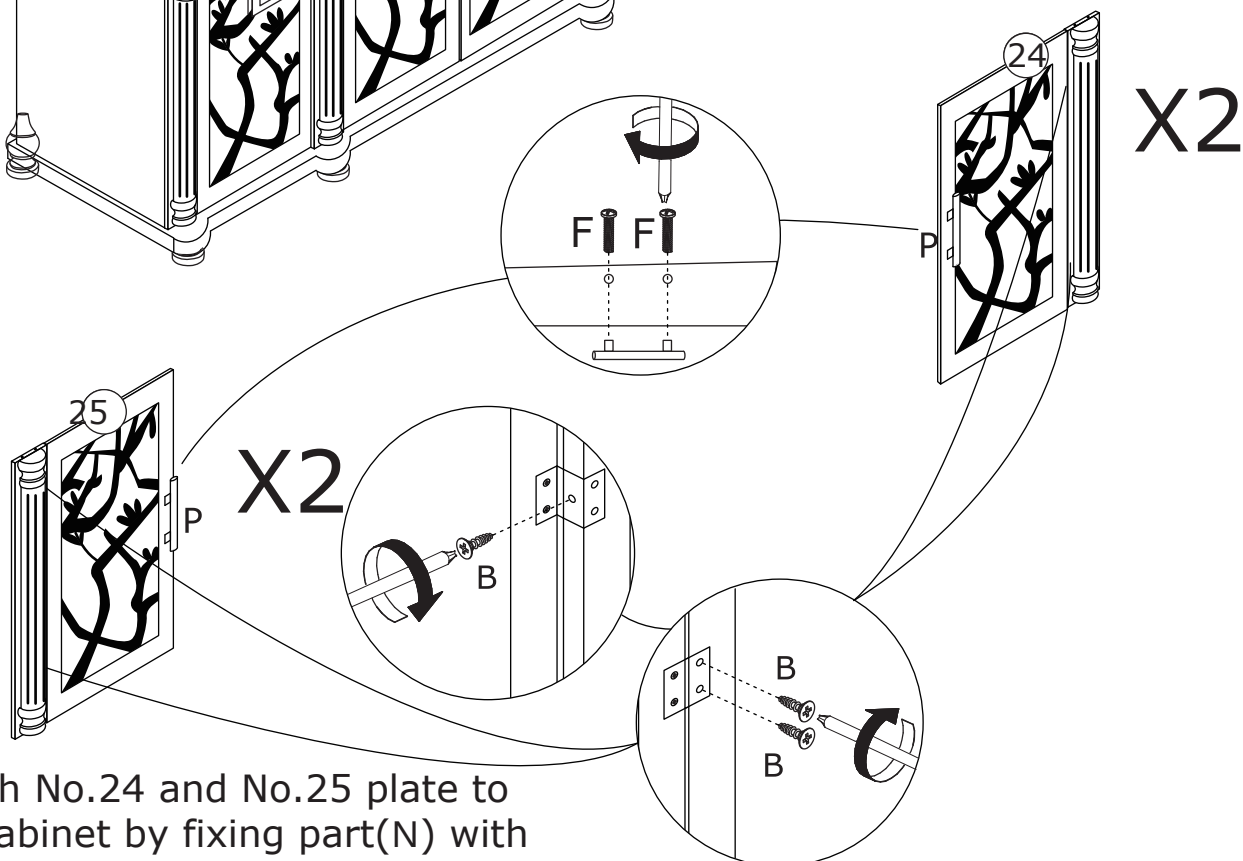

Attach No.24 and No.25 plate to the cabinet by fixing part(N) with screw(B) as shown.

12

 Align rails, slide all drawers.

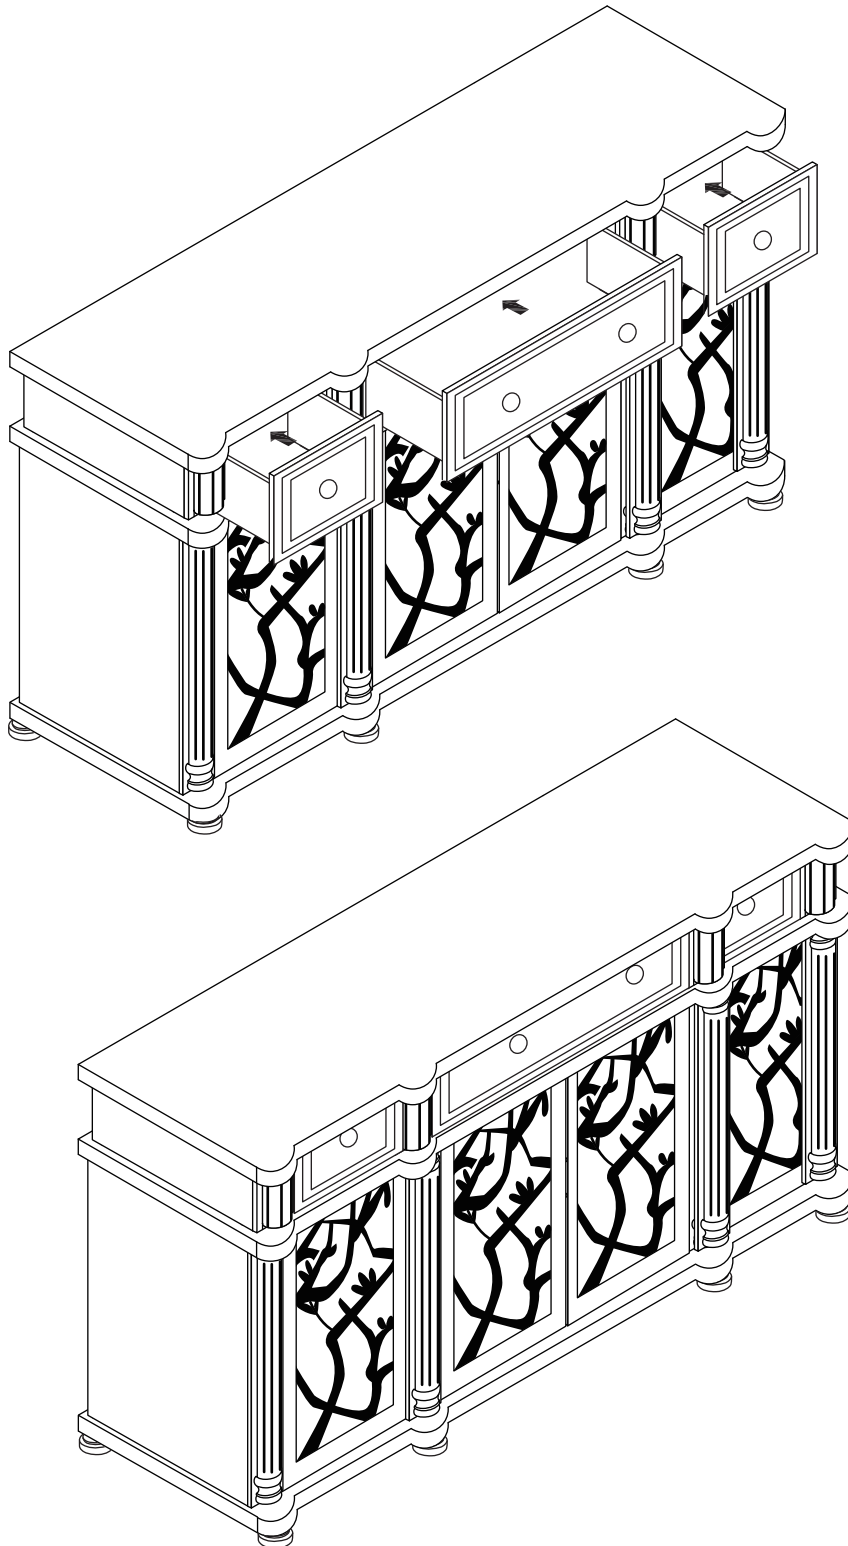

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.