

2-IN-1 GRIND & BREW  
COFFEE MAKER

# INSTRUCTION MANUAL



Model No.:CM1025AO-UL  
Item No.:CM8025-BLACK-CS

Thank you for purchasing this product! If you have any question about the product such as missing parts, damaged products, product assembling and operation, etc., please contact us via customer service phone: 213-4467172 or 661-4358826.


# IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against fire, electric shock and injury to persons, do not immerse cord or plug in water or other liquid.
5. Not allow children to use without supervision.
6. Unplug before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Overfilling can also cause scalding.
10. Only ever use the coffee maker for grinding roasted coffee beans. Never use it for other granular food.
11. Do not let cord hang over edge of table or counter, or touch hot surface.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not use a cracked container or a container having a loose or weakened handle.
14. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless with supervision or instruction concerning use of the appliances by a person responsible for their safety.


15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not use appliance for other use instead of intended use
17. Avoid touching moving parts, as the blade is sharp.
18. Never use warm or hot water to fill the water tank. Use cold water only.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar application scenarios such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
21. Save this instruction manual

# Unit Constructions

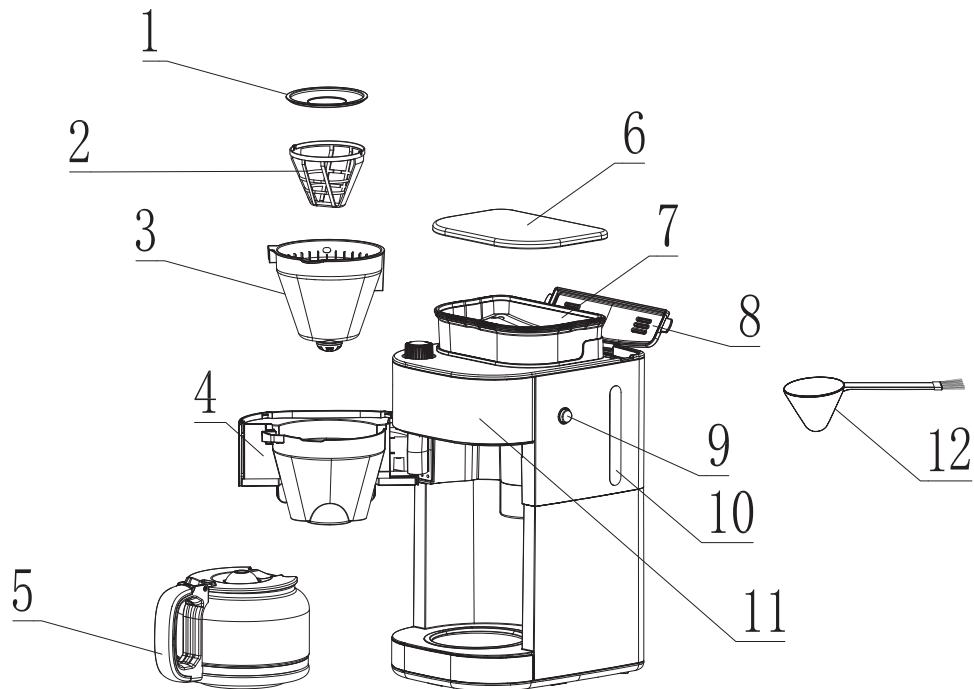

- |                  |                    |
|------------------|--------------------|
| ① Funnel cover   | ⑦ Bean box         |
| ② Filter         | ⑧ Water tank cover |
| ③ Funnel ASM     | ⑨ Funnel press key |
| ④ Funnel support | ⑩ Water gauge      |
| ⑤ Carafe         | ⑪ Control panel    |
| ⑥ Bean box cover | ⑫ spoon            |

## CONTROL PANEL

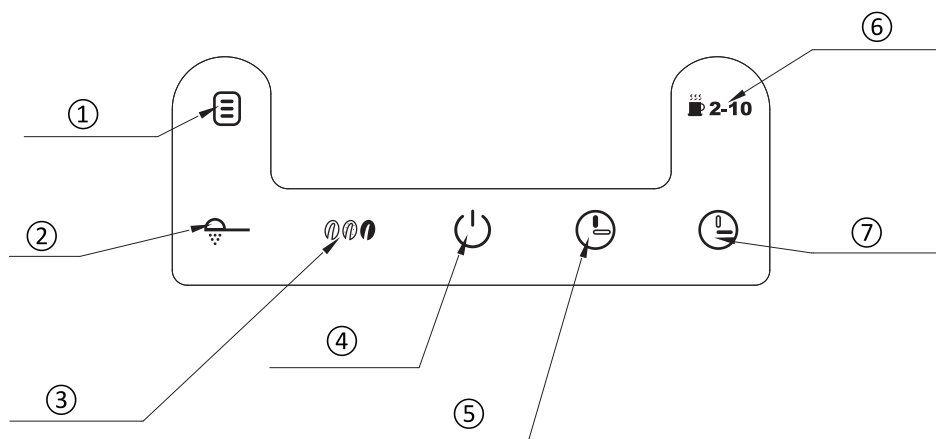

- |                         |                     |
|-------------------------|---------------------|
| ① Appointment Setting   | ⑤ Hour Setting      |
| ② Ground coffee         | ⑥ Selection of cups |
| ③ Concentration setting | ⑦ Minute Setting    |
| ④ ON/OFF                |                     |

# BEFORE THE FIRST USE

## 1. Remove Packaging

Ensure all packaging has been removed.

## 2. Inspect whether all the accessories are complete and the product is damaged.

## 3. Position Machine

Ensure the machine is always positioned on a dry, stable, flat and horizontal counter top.

## 4. Wash the accessories in warm water.

## 5. Prime the Machine

Note: These priming steps must be completed prior to first use.

### A. Fill Water Tank

Open the water tank cover and fill enough pure water (recommended) in advance then close it.

Note: Do not fill the water tank past the 10 cup mark of water level indicators shown on water gauge. Doing so could cause carafe to overflow.

### B. Place the Coffee Carafe on the Warming Plate.

Do not place coffee and filter paper, insert the Power Plug into a 120V AC power outlet & switch the power on.

C. Press the "☺" button to start, after all of the water has passed through, press the "☺" button to exit the Keep Warm Function.

D. Empty the carafe. Repeat the above steps for 2-3 times.

# OPERATION INSTRUCTION

## MAKE DRIP COFFEE WITH COFFEE BEANS

### Tips for Perfect Coffee

A great coffee is about achieving the perfect balance between sweetness, acidity, and bitterness. The flavor of your coffee will depend on many factors, such as bean requirement, roast degree of coffee beans, and so on.

Experiment by adjusting these 8 factors just at a time to achieve the taste of your preference.

### Bean Requirements

- a. Add an appropriate amount of coffee beans, no more than 200g each time, because the coffee beans will become wet overnight. After adding the coffee beans, close the bean box cover and press down hard to prevent water from entering the bean box.
- b. We recommend quality beans with a 'Roasted On' date stamped on the packaging, rather than a 'Best Before' or 'Use By' date. Buy in small batches to reduce the storage time. Coffee beans are best consumed between 5–20 days after the 'Roasted On' date. Stale coffee may pour too quickly and taste bitter and watery.
- c. Do not fill the bean container with frozen or covered beans, moisture will seep into the burr and feed through.
- d. Do not add any liquid flavorings or syrups to the beans.

### Roast Degree of Coffee Beans

We recommend medium-roast coffee beans as this machine is not suitable for deep-roasted beans. Dark, greasy beans can leave some greasy residue in the burrs and feeder channels. The oil residue can cause the ground coffee to stick in the feeder passage and clog. Over time, this slows down the flow of ground coffee. The amount of ground coffee beans is controlled by the selection of coffee cups for

grinding time. Therefore, it will not grind all the beans at one time. If it continues to develop, the ground beans will not reach the required fineness, and eventually, the motor will get stuck and cannot rotate, resulting in burnout.

### Grind Size

The built-in grinder comes with different grinding degree settings of powder sizes. Set the grind size that you need. Turn the regulator anticlockwise to go coarser and clockwise to go finer. If you want to adjust the grind size setting, there are some notes listed below you need to be aware of:

- a. When you want to adjust to a coarser setting, just rotate the Grind Regulator directly before grinding.
- b. When you want to adjust to a finer setting.

Situation 1 : If there are no coffee beans inside the grinder, you can rotate the Grind Regulator directly to achieve your setting.


Situation 2 : If there are coffee beans inside the grinder, you cannot rotate the Grind Regulator forcibly, otherwise, grinder damage may occur. In this case, you can grind all the coffee beans inside the grinder and then adjust the grind setting.

### Suitable Ground Coffee Capacity

The maximum capacity for ground coffee is 70g of coffee powder.

Exceeding that amount may cause overflow if the coffee is too finely ground.

### Powder Dose


- a. 7g or 1 spoon of powder for 1 cup of coffee is recommended, but you may adjust according to personal taste.
- b. Can brew up to 10 cups of coffee. Set the powder amount (2, 4, 6, 8, or 10 cups) by pressing the  **2-10** button according to your need (The default value is 10 cups). Use the supplied Measuring Spoon for this purpose. Refer to the following table for the required amount:

Number of cups	Number of scoops
2	1½ - 2
4	3 - 4
6	4½ - 6
8	6 - 8
10	8 - 10

### Water Amount

- a. The cup markings on the carafe are the same as that on the water tank. The amount of water added should be the same as the amount of powder cup you choose, such as you added 2 cups of water if you add 2 spoons of powder. If you pour more water than the number of cups you choose, it will cause the coffee to become weak (because the machine will brew all the water in the tank)
- b. If you have set a strong flavor but the coffee tastes weak. We suggest you add less amount of water and more powder. (e.g. select



 **2-10** Button for 4 cups but add 2 cups of water, the flavor will be stronger).

c. The coffee you get would be less than the water you pour in as some water had been absorbed by the coffee powder.

Notice:

- 1) Never pour hot water, milk, coffee powder or tea into water tank.
- 2) Please don't fill the water tank exceed "MAX" indicated on water gauge.

### Use Carafe


Always make sure that the carafe is transported in an upright position. If you turn the carafe on its side or upside down with its lid closed, hot coffee may escape. When the water content of the coffee carafe is large, be sure to press the edge of the lid with your thumb and pour the water at the correct angle.




### Enjoy Your Coffee

For a better taste, please enjoy the coffee within 1 hour.

# OPERATION INSTRUCTION




## MAKE DRIP COFFEE WITH COFFEE BEANS

1. Put your desired amount of water into the carafe according to its marking, then open the water tank cover and pour the water in.
2. Open the bean box cover and wipe the box with a dry cloth to make sure it is dry inside.
3. Put proper coffee beans (not more than 200g) into Coffee Bean Box, then cover its lid. To avoid the coffee beans turning moist, we suggest not placing too many coffee beans in Coffee Bean Box.
4. Replace and firmly press down the lid to prevent beans from spilling out from the bean box.
5. Press Funnel Press Key once and rotate the funnel support to the left, ensuring the filter is inside of the Funnel Support.
- 6 . Turn the funnel support to the right until it is locked.
- 7 . Insert the Power Plug into a 120V AC power outlet.
- 8 . According to added water volume, press the  **2-10** Button to select the required amount of coffee cups.
- 9 . Set the grind regulator to the required grind size.
  - Turn the regulator anticlockwise to grind the coffee coarser.
  - Turn the regulator clockwise to grind the coffee finer.

10. Press the  button to select coffee concentration. There are 3 levels of strength, and the default level is .
11. Place the coffee carafe on the warming plate.
12. Press the "⏻" Button to start making coffee, the display will show the photo of  when the brewing process begins. Wait for about 3 seconds, the grinder will start grinding.
13. Buzzer will sound 3 times to notice you when the coffee is done.
14. When finished brewing, if you do not unplug the power cord from the power outlet, coffee in the carafe can be warmed on the warming plate for up to 120 minutes.

## **MAKE DRIP COFFEE WITH COFFEE POWDER DIRECTLY**

1. Put your desired amount of water into the carafe according to its marking, then open the water tank cover and pour the water in.
2. Don't exceed the "MAX" line of the water tank, and also do not add too little water.
3. Take out the Coffee Carafe.
4. Press Funnel Press Key once and rotate the funnel support to the left, ensuring the filter is inside of the Funnel Support.
5. Make sure the tube of the filter assembly aligns with groove of the swing-out filter basket.

6. Add your desired coffee powder into the filter but not past the max line.
7. Turn the Funnel Support to the right until it is locked.
8. Insert the Power Plug into a 120V AC power outlet.
9. Place the coffee carafe on the warming plate.
10. Press the  button once, the red  indicator will be illuminated, then press the "☺" button once, the display will show the  then the coffee maker will brew directly.
11. Buzzer will sound 3 times to notice you when the coffee is done.
12. Press the edge of the lid with your thumb and pour the coffee at the correct angle.
13. When finished brewing, if you do not unplug the power cord from the power outlet, coffee in the carafe can be warmed on the warming plate for up to 120 minutes.

Notice: Cleaning after every use guarantees the flavors of your coffee, refer to "CLEANING AND MAINTENANCE " as shown on Page 13.





Notice:



- 1 - Do not place parts of the body under the drip stop while the machine is in operation.
- 2 - Do not open the Swing-out Filter Basket while the machine is brewing coffee, otherwise, the steam will wet the powder at the powder outlet which possibly damages the grinding system.







3 - While the coffee is brewing you can remove the carafe to pour a cup or two. The drip stop will close automatically. To avoid any overflow, replace the carafe within 30 seconds.

4 - If the coffee drips onto the warming plate, it should be used a clean cloth to wipe off the coffee stain in time to avoid oxidation of the coffee erosion layer.



 
## **AUTOMATIC START FUNCTION**

1. Insert the Power Plug into a 120V AC power outlet.
2. The display only indicates  at first, press  once, all the buttons illuminate. The display will show "12:00" on the control panel, at the same time, the number will flash, then press  (Hour) and  (Minute) button to set current time.



Note: Number will flash until Pressing  (Hour) and  (Minute) button to set time, Automatic function cannot be available when number is flashing.

3. Long press  button until the time into timer mode (the number flashes again), setting the time of AUTOMATIC START you want through pressing  (Hour) and  (Minute) button.
4. Press  button again, the  will show on the display, the red  indicator will be illuminated, the appliance enters into automatic mode.

Note: the time cycle is 12 hours.

5. The coffee maker will start to brew at the preset time, the red indicator of  will go out and the  indicator will turn to red. If you want it to operate immediately, you just need to press  button, then the appliance will start to work automatically.

## **CANCEL THE PRESETTING PROGRA**

If the coffee maker is at the state of presetting ( the red indicator of  is on),but you want to cancel the automatic mode, you just need to press  button once,then the red indicator will go out, the automatic mode will be canceled.

## **CLEANING AND MAINTENANCE**

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or any other liquid.

### **Before Use**

- A. It is recommended to use pure water; Do not let other objects enter the water tank, and cover the lid in time after adding water;
- B. Please fill enough water in the water tank but do not past the 10 cup marking. Doing so can cause coffee to overflow from the carafe.

## **In use**

- A. Do not place parts of the body under the drip stop while the machine is in operation;
- B. Do not open the Swing-out Filter Basket, otherwise, the steam will wet the powder at the powder outlet and damage the grinding system;
- C. While the coffee is brewing you can remove the carafe to pour a cup or two. The drip stop will close automatically. To avoid any overflow, replace the carafe within 30 seconds.

## **After Use**

Please strictly follow the instructions and requirements below to clean the machine, otherwise, the flavors of your coffee will be affected or the lifespan of the machine will be shortened. Cleaning after every use guarantees the flavors of your coffee, for a cleaning guide, refer to the operation below.

## **At the End of the Day**

To make sure your machine operates efficiently, you must clean the machine after your last brew every day.

Step 1: Open the lid of the bean box.

Step 2: Empty the coffee beans as much as possible from the bean container with a spoon and put them into a jar.

Tips: If there are too many coffee beans, you can tilt the machine and use a spoon to empty the coffee beans in the bean container as much as possible, but remember to remove the Coffee Carafe, otherwise, it could be easily damaged.

Step 3: Press the ☺ Button to grind the remaining coffee beans, then press it again to stop when you hear the motor idling sound.

Step 4: Unplug the power cord or power off completely.

Step 5: Press the Funnel press key

Step 6: Open the Swing-out Filter Basket.

Step 7: Wipe the top of the Swing-out Filter Basket with a clean dry cloth and wipe the inside around. (Be careful not to touch the Warming Plate)

Step 8: Wipe the inside around.

Step 9: Take out the filter insert with drip stop together with the permanent filter and filter ring.

Step 10: Empty the coffee grounds out of the permanent filter into the household waste.

Step 11: Wash the accessories with clean water.

Step 12: Dry the filter insert with drip stop, permanent filter and filter ring

Step 13: Clean the Coffee Carafe and wipe it with a cloth.



Step 14: Install them back after cleaning

Step 15: Close the Swing-out Filter Basket lightly.

Step 16: Put the Coffee Carafe back in place. Notice: If the brewing time increases or the machine becomes noisier, this is a sure sign that the coffee machine needs to be descaled. **CLEANING MINERAL DEPOSITS**

1. Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1.

a. One coffee machine descaling tablet.




(coffee machine descaling tablets are available for purchase online or through major retailers.)

b. Liquid descaler.

c. White vinegar & warm water.

You can also use powder descalers or others to clean your machine as you like.

Descaling Solution for specific cleaning methods, please refer to the instructions provided by your descaler provider.

2. Press  button, the red  indicator will be illuminated, then press the  button once, the appliance will start to brew directly.

3. Rinse by operating the appliance with clean water at least 3 times

## TROUBLE SHOOTING

phenomenon	Cause analysis	resolution
Coffee maker not working	The power plug is not connected	Please check the power plug connection
	Damaged power cord	Please go to the relevant after-sales service center for replacement before use
	When the motor continues to grind coffee beans for a long time, the motor temperature rises, the motor protection device will automatically shut down the motor and stop the motor work	Unplug the power cord, stop working and wait until the temperature of the motor is reduced to the normal temperature point before operation and use
Odor in the water	This will happen when you use it for the first time	Fill the coffee machine with the right amount of water, not more than the water tank labeled "maximum" scale line position, boil all the water after pouring, the cycle of operation should be 3 times
Scale formation in the coffee machine	Caused by hard local water or calcium and magnesium carbonate in the water	Scale can be cleaned with acetic acid, citric acid and warm water
Won't grind	Because the coffee beans are damp or have been ground with other objects	This coffee maker is only suitable for grinding coffee beans, not for grinding other objects, it is recommended not to grind too damp coffee beans

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via:

**213-4467172 or 661-4358826**

**IMPORTANT**

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

**AVIS**

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

**IMPORTANTE**

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC  
750S. Valley View Avenue, San Bernardino, CA 92408  
Phone: 213-4467172 or 661-4358826

**8:30am-5:30pm P.S.T. Monday to Friday**

