



CEILING FAN INSTRUCTION MANUAL

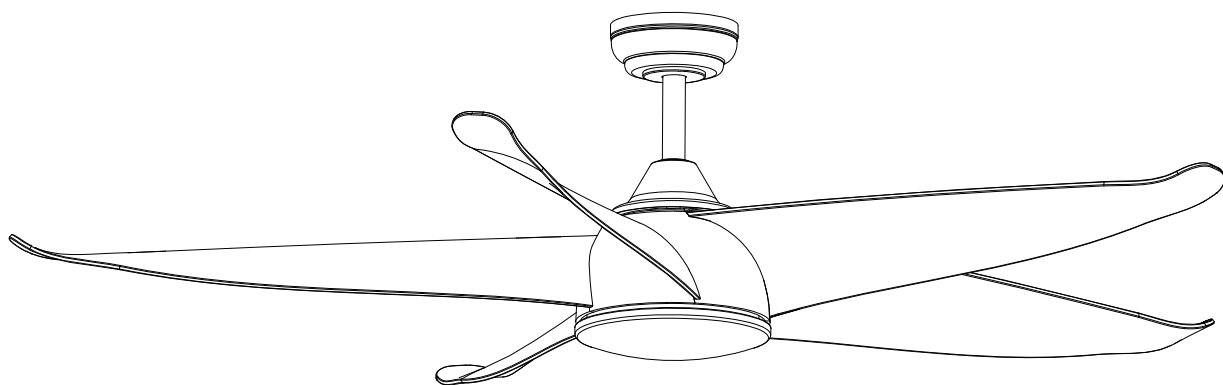


Parts list


Unpack your fan and check the contents. You should have the following items:

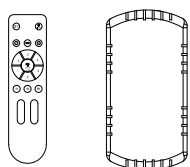


X1
Remote Control

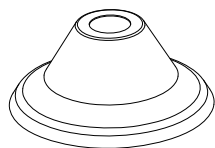


X1
Adapter cover

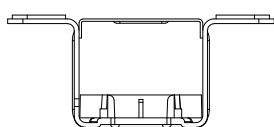

X1
Hanger

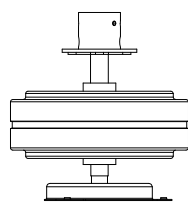

X1
Motor

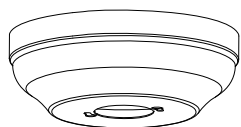


X1
Canopy




X1
Lamp Housing



X1
Decorative cover

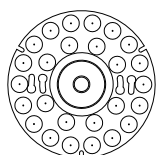


X1
LED

 


X1
Short downrod



X1
Long downrod

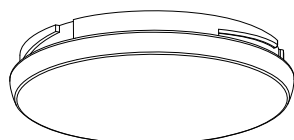

X1
Lampshade

 

X1 X2
Balancing Kit



 
X3 Wire Connector



X4 Wood Screw



X4 Washer



X2 Expansion screw



X11 Blade screw



X6 blade tapping screw

Installing Your Fan


SAFETY TIPS

READ AND SAVE THESE INSTRUCTION

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a) Use this unit only in the manner intended by the manufacturer. If you have question, contact the manufacturer.
- b) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked securely fasten a prominent warning device such as a tan to the service panel.
 - To Reduce The Risk Of Personal Injury. Do Not Bend The Blade Brackets When Installing The Brackets. Balancing The Blades, Or Cleaning The Fan. Do Not Insert Foreign Objects In Between Rotating Fan Blades.
 - To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To Outlet Box Marked 'Acceptable for Fan Support of 15.9 kg (35 lbs) or less' And Use Mounting Screws Provided With The Outlet Box.
 - To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.

Tools Required

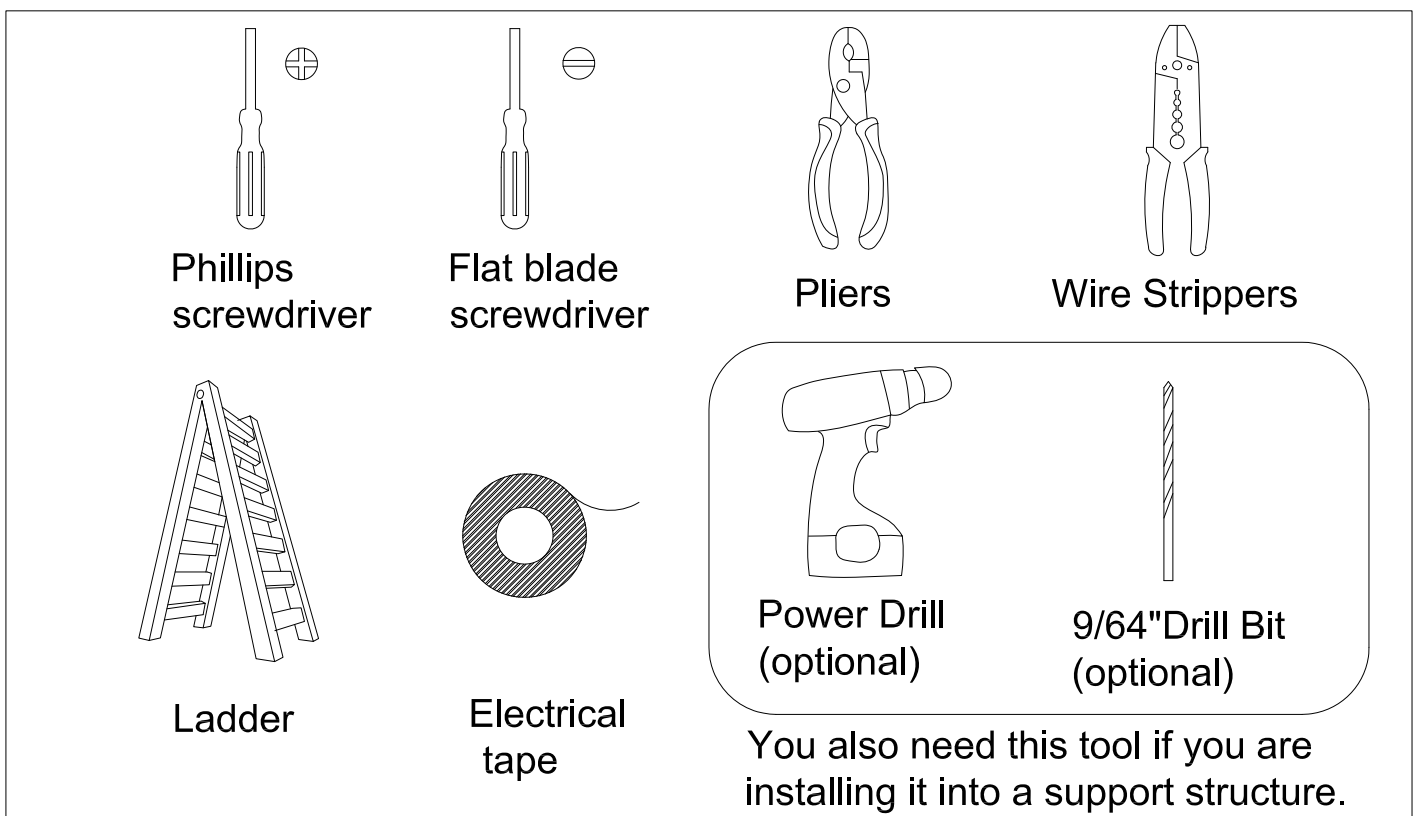

Installing Your Fan

1. Installing the Hanger




WARNING

To avoid the possibility of electric shock, before installing the fan, unplug the power supply and turn off the circuit breaker of the socket box associated with the wall switch position.

Option 1: Machine Screws

(The machine screws are the ones that came with your outlet box.)

Use machine screws (provided with outlet box) and washers when securing to existing ceiling fan-rated outlet box. Make sure it is securely installed and is acceptable for fan support of 15.9 kg (35 lbs) or less.

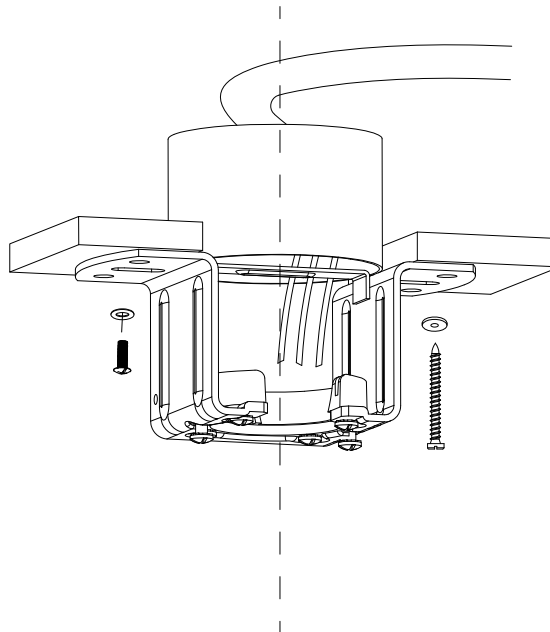


Option 2: Machine Screws


Use wood screws and washers (included) when securing to support structure with approved electrical outlet box. Drill 9/64" pilot holes in support structure to aid in securing hanger with hardware found in the hardware bag.

Option 3: Expansion screws

For the Concrete Ceiling: Mark the location for the ceiling fan first, then drill two holes in the ceiling to aid in securing hanger with two expansion screws provided, and secure the hanger to the building structure with two expansion screws provided, tighten the screws.

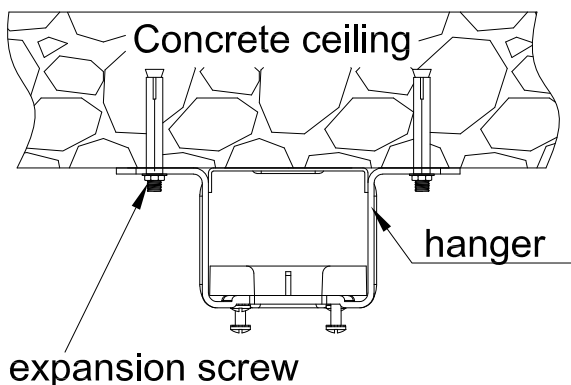

For angled ceilings

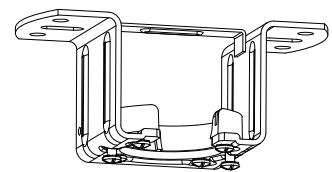


For angled ceilings, point opening toward peak.

The ceiling fan accessories in the packaging are only suitable for installation with a slope of less than 13 degrees.

Installing Your Fan


2.Installing the Blade

- 2.1, Attach blade to Motor using two blade screws.Repeat this step for each blade assembly.
- 2.2,Use 5 blade tapping screws to secure the blades.
- 2.3,Tighten all blade screws evenly and securely to ensure quiet, wobble free operation of the fan.

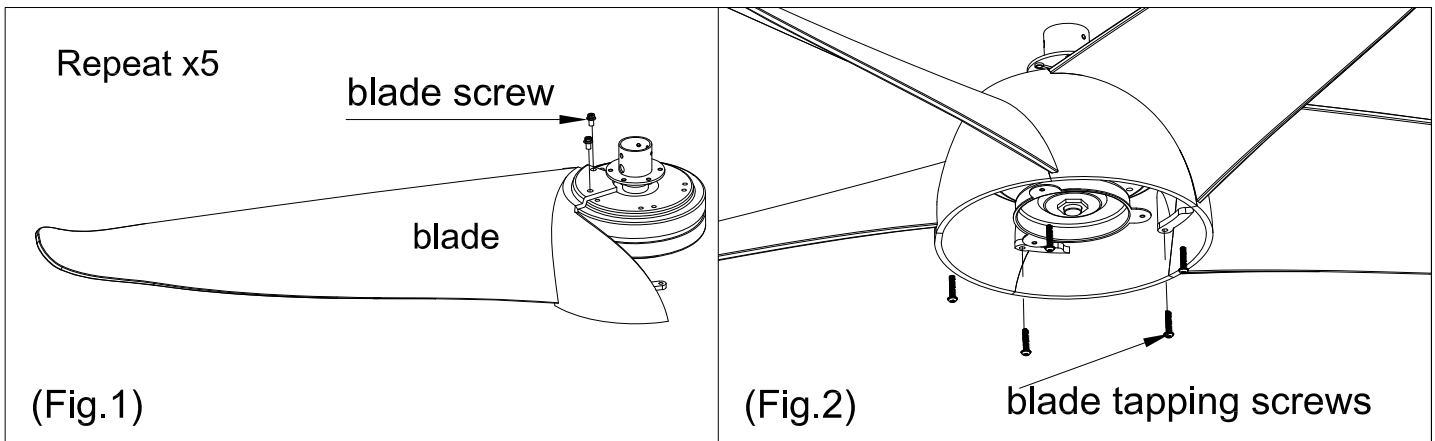

3.Installing the Downrod and Hanging the Fan



- 3.1,Take out the horizontal pin and R type bolt from downrod for use .
- 3.2,Thread the downrod through the canopy, decorative cover, and adapter cover, and thread the fan wire through the downrod. (Fig.3)
- 3.3,Put downrod into the connector of motor,place it at correct hole location, then insert the horizontal pin and R type bolt,and locked the two horizontal screws nearby.Then move the adapter cover to the top of motor. (Fig.3)

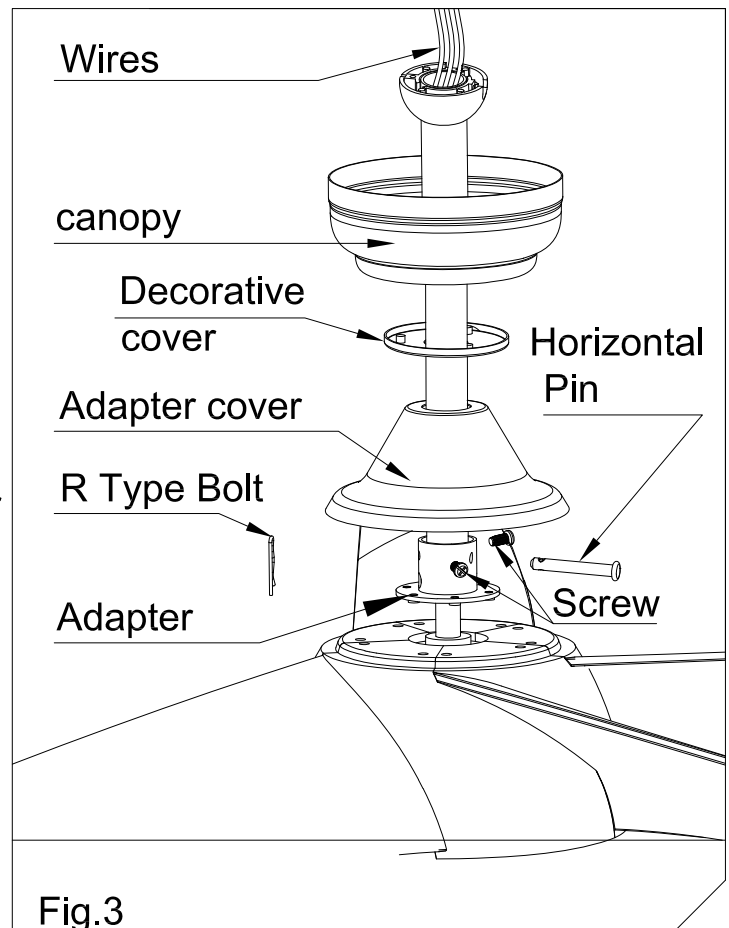

Installing Your Fan

3.3, The ceiling fan is hung on the hanger, with the hanger ball groove aligned with the hanger boss.

(Fig.4 and 5)

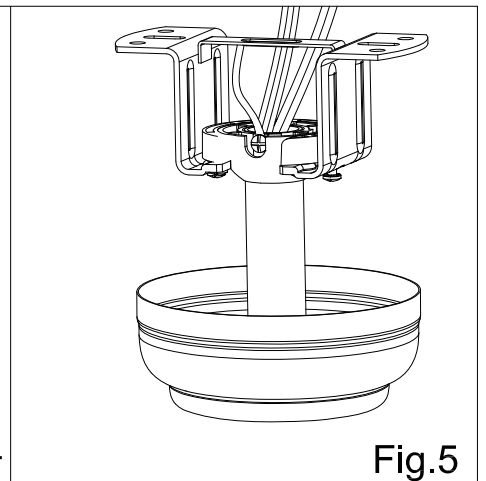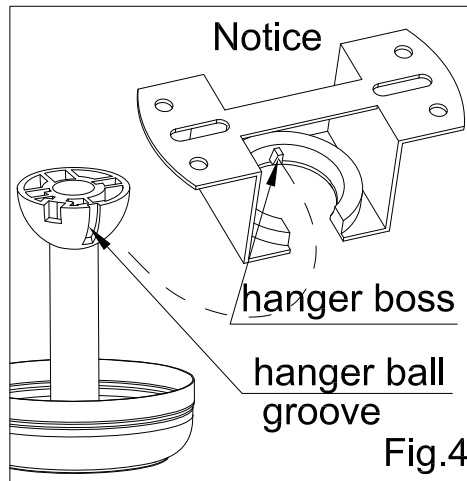

4. Assembling the Light Kit



4.1, Feed the wire through the center hole of the lamp base.

4.2, Fix the lamp base with screws. (Fig.6)

4.3, a) Connect the motor end LIGHT (L) to the LED end LIGHT (L) using a wiring cap. (Fig.7)


b) Connect the motor end LIGHT (N) to the LED end LIGHT (N) using a wiring cap. (Fig.7)

c) Attach the LED to the lamp base (with a magnet on the back of the LED)

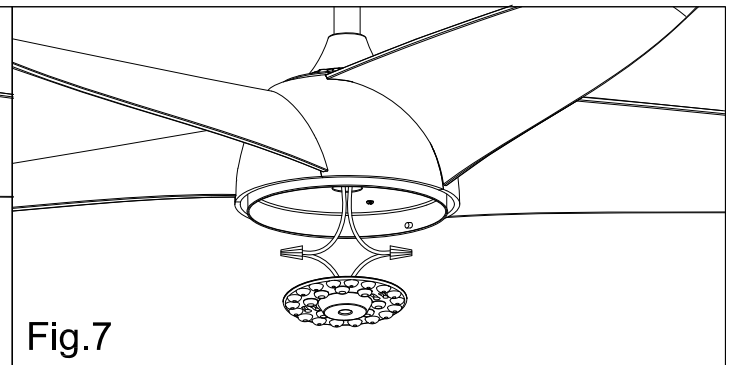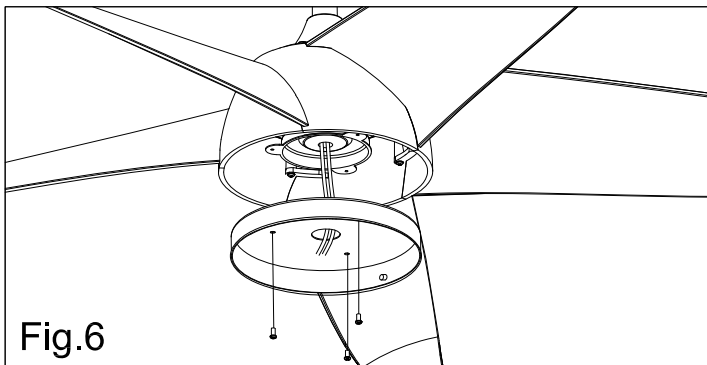

5. The lampshade installation


5.1, Install the lampshade to the lamp base by turning clockwise to lock it into place. (Fig.8 ① → ②)

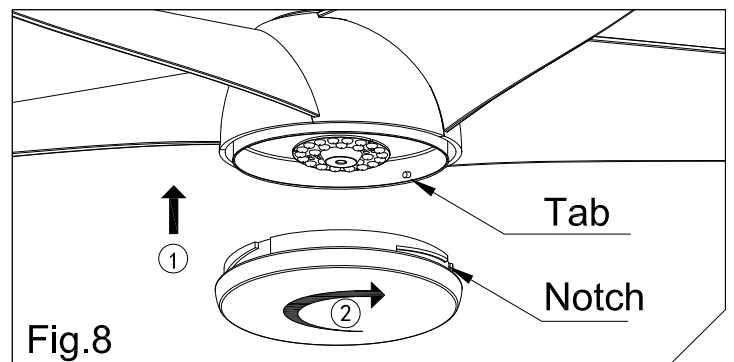

Installing Your Fan

6.The remove receiver installation

6.1, Put the Remote receiver in the hanger. (Figs. 9 and 10)

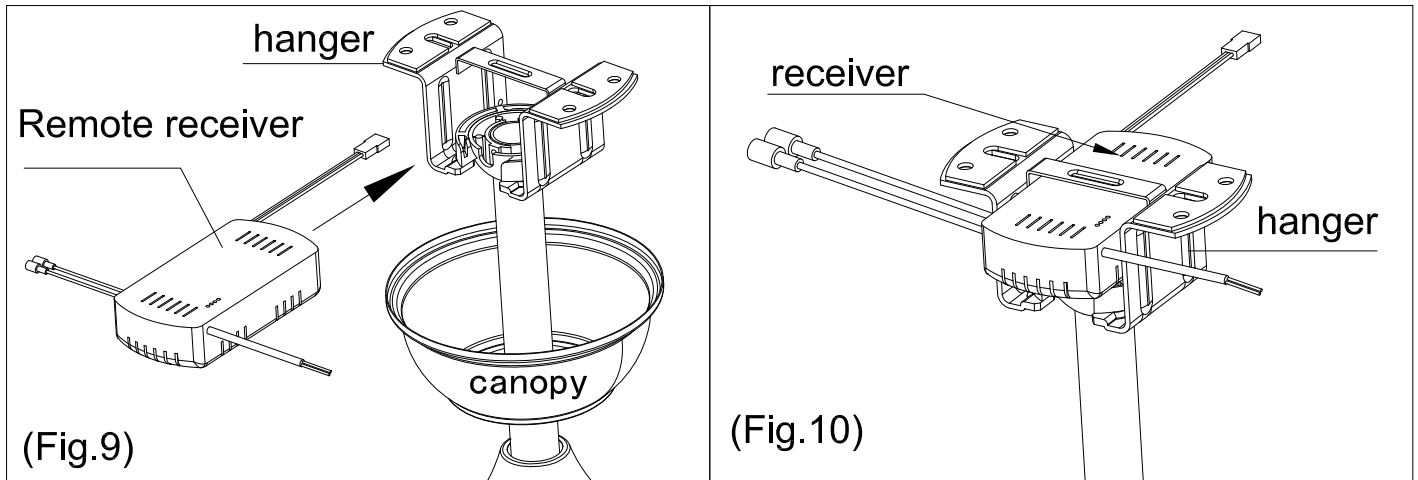


7.Wiring the Fan



WARNING

- All wiring must be in accordance with national and local electrical codes . If you are unfamiliar with wiring or in doubt, consult a qualified electrician.
- To reduce the risk of fire or injury do not use this product in conjunction with any variable(rheostat) wall control.

7.1,Wiring according to the wiring diagram. (Fig.11)

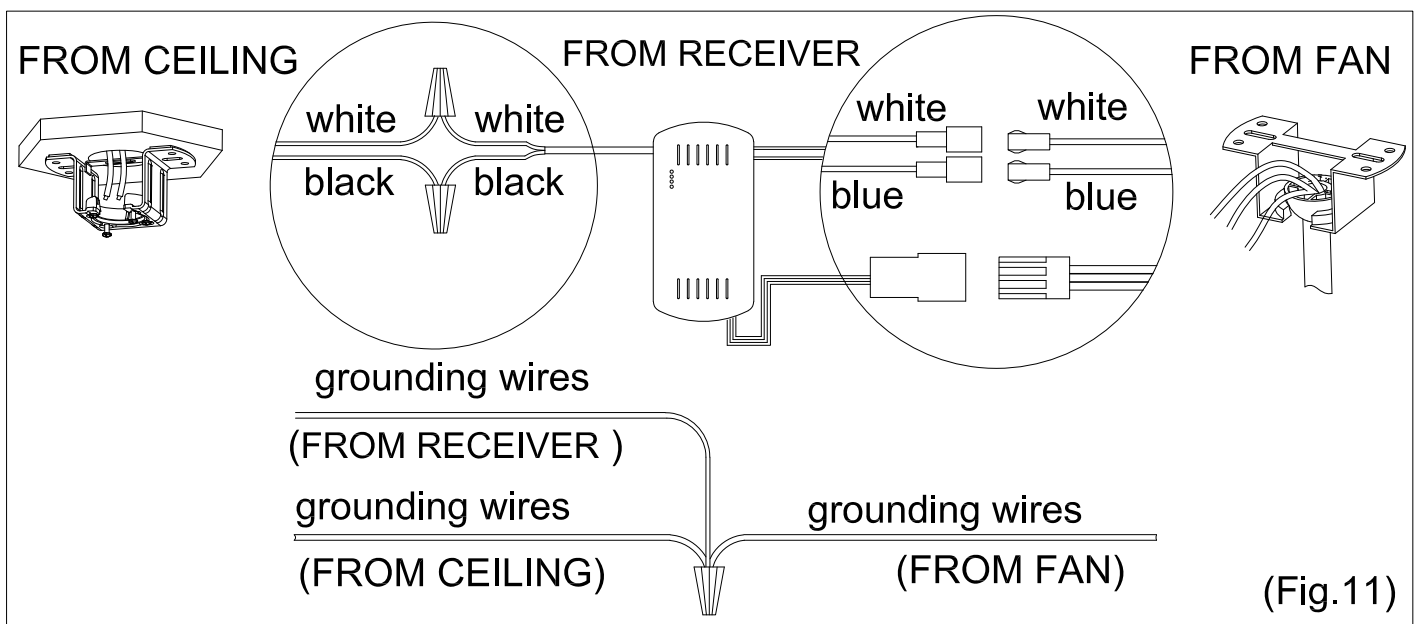

Installing Your Fan



Professional tips:

After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box. The splices after being made should be turned upward and pushed carefully up into the outlet box.

8.Attaching the Canopy


8.1, Slide the canopy up to the ceiling and attach it to the hanger with the screws provided. Tighten all screws securely. (Figs.14 and 15)

8.2, Move the decorative cover onto the canopy.
(the decorative cover comes with magnetism)

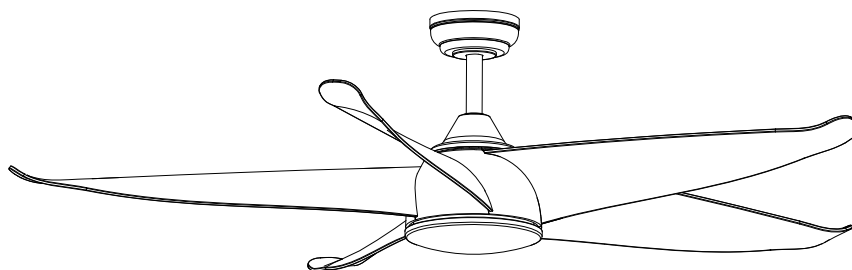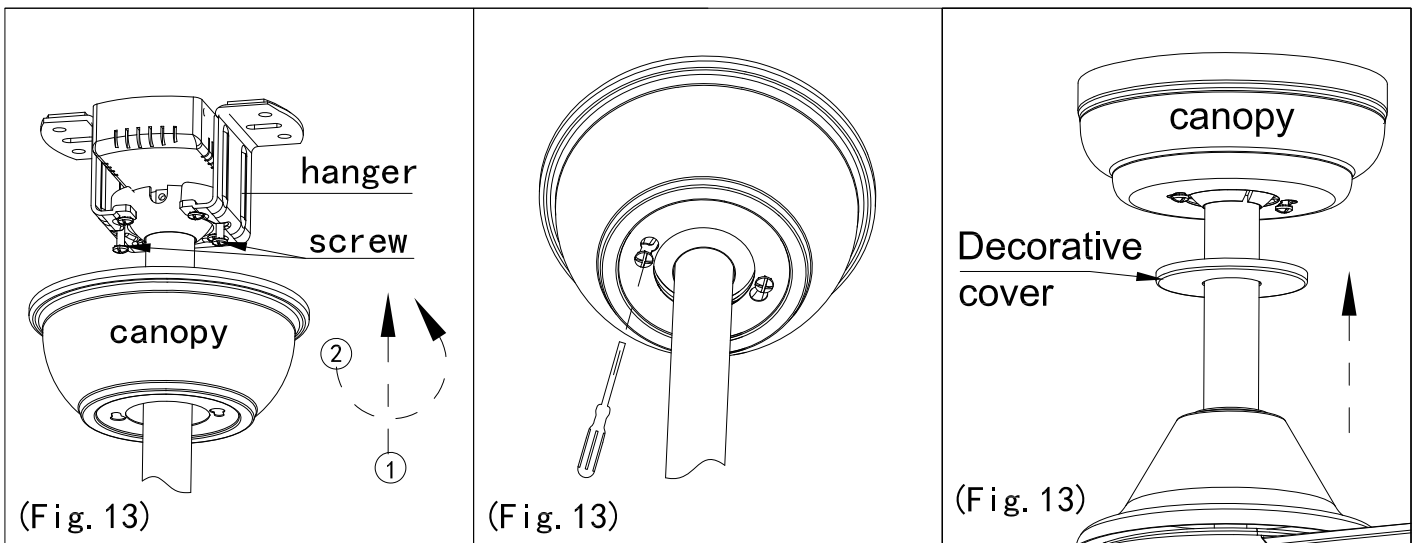

CONGRATULATIONS!
YOU HAVE COMPLETED THE INSTALLATION

Remote control Operation Guide

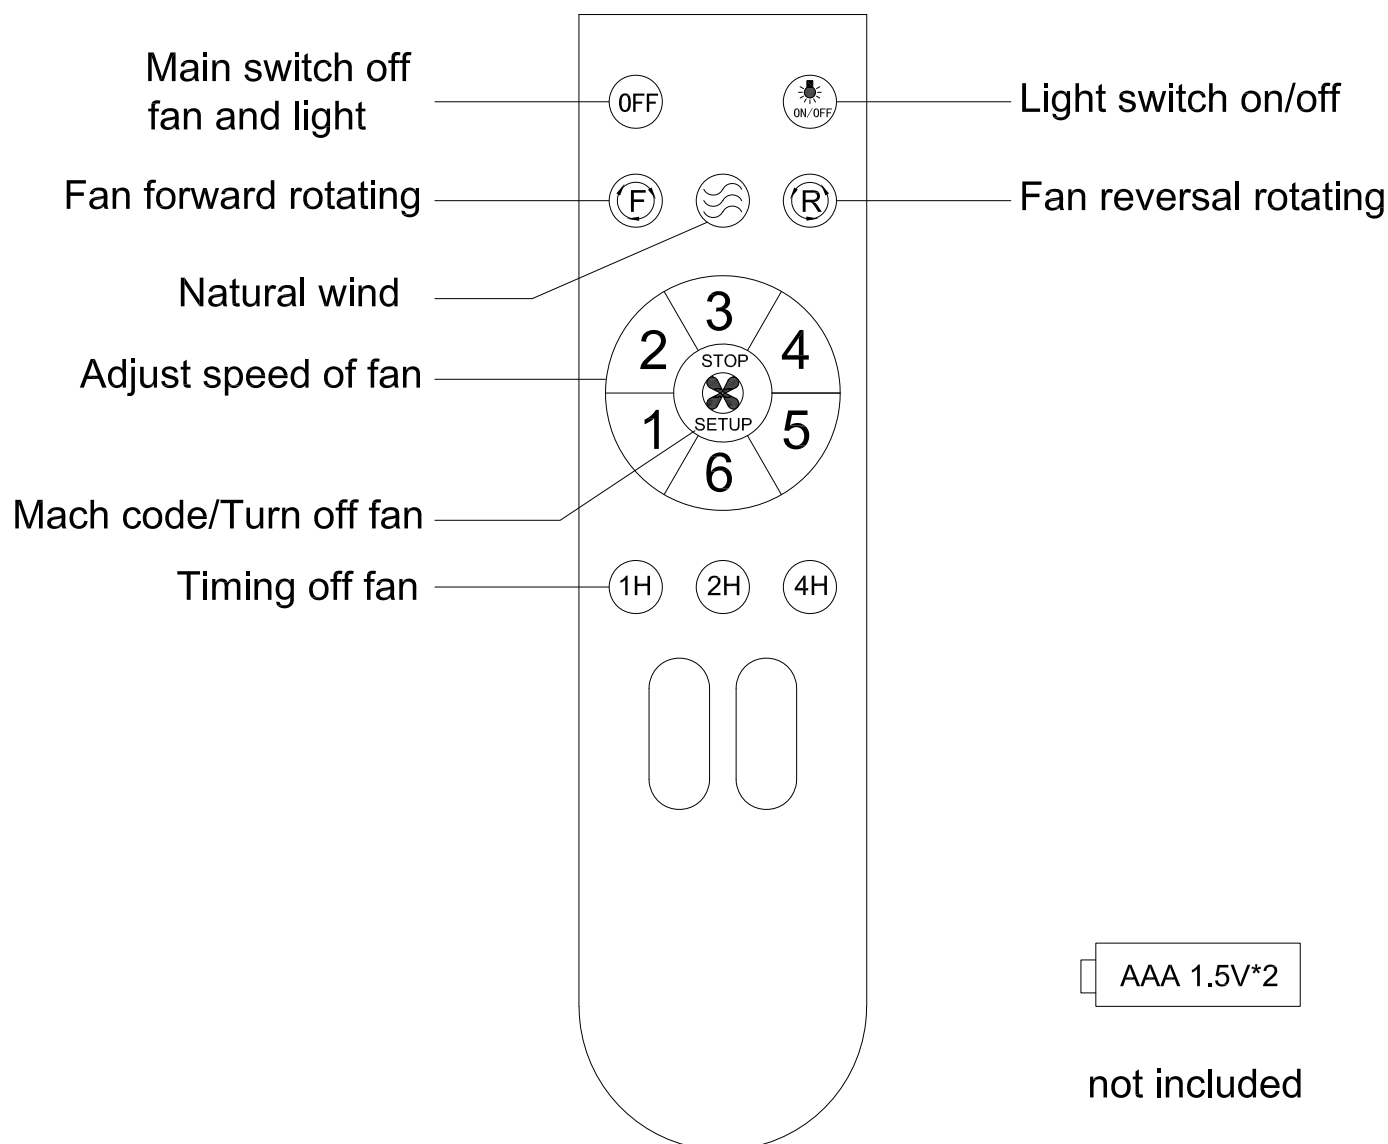

Remarks:

When the remote control cannot be used.

Turn on the power switch, press the "SETUP" key within 3 seconds, the receiver issued a "tick" two sounds, the pair code is successful. If not successful, turn off the power for a minute and repeat the above.

Warm tips:

Check the battery when the remote control is not effectively controlled.

Troubleshooting and Maintenance

Troubleshooting

Fan doesn't work

- Make sure power switch is on.
- Check the circuit breaker to ensure the power is turned on.
- Make sure the blades spin freely.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

Excessive swaying of the fan

- Make sure the blades are properly installed on the blade iron posts.
- Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.
- Use the provided balancing kit and instructions to balance the fan.

Noisy Operation

- Make sure the blades are properly installed.
- Check to see if any of the blades are cracked. If so, replace all of the blades.

Remote Control of Fan is Erratic

- Make sure the battery is installed correctly.
- Install a fresh battery.

WARNING

- If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.

The maintenance cycle and method of maintenance

- It is recommended to inspect the connecting components of the fan at least once a year, such as hangers, blade racks, and fan blades, to ensure that their connections are still safe and reliable.
- Regularly clean the ceiling fan to maintain a clean and bright surface. When removing surface dust, please use a soft brush or cloth to avoid damaging the surface. When removing oil or sediment, a slightly damp cloth can be used to wipe it off, and do not rinse it with water.