

## Installation Instructions for Filter RHACF631T

1. Turn range hood power off. Remove outer filters from range hood.



2. Place filter on both sides of motor carriage (the three extending prongs on side of motor carriage will insert into the filter).



3. Once attached turn filter counter clockwise to secure in place.  
Replace outer filters.