
4 SLICE TOASTER



4 SLICE TOASTER

Model Number: T-33AU

Read this booklet thoroughly before using and saving
it for future reference

SAFETY INSTRUCTIONS

Read carefully and save for future use!

 **Warning:** The safety measures and instructions, contained in this manual, do not include all conditions and situations possible. The user must understand that common sense, caution and care are factors that cannot be integrated into any product.

Therefore, these factors shall be ensured by the user/s using and operating this appliance. We are not liable for damages caused during shipping, by incorrect use, voltage fluctuation or the modification or adjustment of any part of the appliance.

To protect against a risk of fire or electric shock, basic precautions shall be taken while using electrical appliances, including the following:

1. Make sure the voltage in your outlet corresponds to the voltage provided on the appliance label and that the socket is properly grounded. The outlet must be installed in accordance with applicable electrical codes according to EN.
2. Do not operate toaster with a damaged cord. All repairs including cord replacements shall be performed by a professional service centre! Do not remove protective covers of the appliance, risk of electric shock!
3. Protect the appliance against direct contact with water and other liquids, to prevent potential electric shock.
4. Do not leave the toaster running unattended. Avoid touching the metal parts or hot surfaces when using the appliance. Touch only the switches of the "On", buttons and the control knob to avoid burns.
5. Leaving the toaster cord connected to outlet unattended is not recommended. Disconnect the cord from the electrical outlet prior to performing maintenance. Do not pull the cord from the outlet by yanking the cord. Unplug the cord from the outlet by grasping the plug.
6. Do not use the toaster outdoors or in moist environments. Do not touch the cord or toaster with wet hands. Risk of electric shock.
7. Close supervision is necessary for operating the toaster near children!
8. Do not allow the cord to touch hot surfaces or lead the cord over sharp edges.
9. Bread products inside the toaster can catch re. Do not use the appliance near or under in flammable objects (for example around curtains). The temperature of surfaces near the operating appliance can be hotter than usual. Place the toaster out of reach of other objects to ensure sufficient air circulation needed for its proper operation. Do not cover the toasting slots.
10. Do not insert oversized bread slices or irregularly sliced bread which could jam the toaster mechanism. Should the bread become stuck in the toaster, do not use metal kitchen utensils (spoon, knife...), which could cause a short circuit, to remove the bread.
11. Be careful not to scratch or otherwise damage the metal covers with solid objects, or not to hit the appliance on a sharp edge.
12. Keep the toaster away from hot surfaces and sources of heat (for example, hot plates).
13. Placing slices of bread directly on the toaster cover or slot can lead to damaging

the toaster! Do not toast bread that can melt (with topping) or leak into the toaster and do not toast small pieces of bread or heels as this can cause damage or fire.


14. The toaster cannot be used if tilted or turned on its side.
15. Do not put your fingers or any metal objects into the toaster slots.
16. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have been instructed to use the appliance in a safe way and understand the potential dangers. Cleaning and maintenance operations performed by the user shall not be carried out by children, if they are not older than 8 years and under supervision. Children under the age of 8 shall keep away from the appliance and its power supply. Children shall not play with the appliance.
17. Use the appliance only in accordance with the instructions given in this manual. This toaster is intended for domestic use only. The manufacturer is not liable for damages caused by the improper use of this appliance.
18. Do not immerse the appliance in water and do not clean it under running water.
19. Do not connect the appliance to electrical outlets with remote switch or remotely controlled timer.

DANGER for children: Children must not play with the packaging material. Do not let children play with the plastic bags. Risk of suffocation.

Do not immerse in water!

KNOW YOUR TOASTER

1. Main Body
2. Crumb Tray
3. Toasting Slots
4. Toast Lever
5. LED Display
6. Browning Control
7. Cancel Button
8. Reheat Button
9. Defrost Button

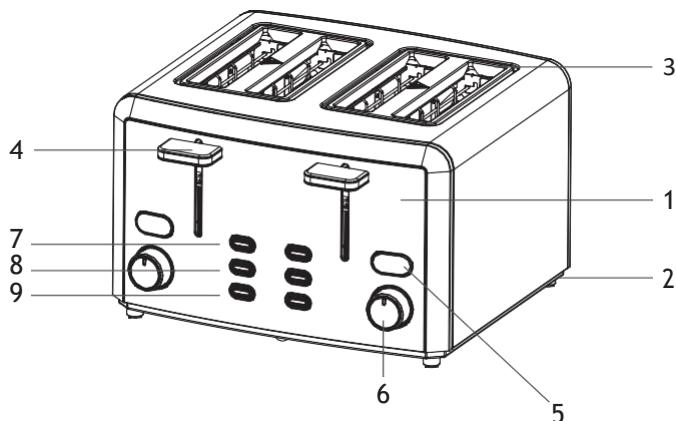

USING INSTRUCTIONS

The first use of the appliance can be accompanied by a slight odour or smoke. The odour can be caused by greases that became stuck to the heating unit during production and are now brining. Before you use the appliance for the first time, we advise you to let the appliance complete at least 4 to 5 toasting cycles without slices of bread (sufficient room ventilation should be secured throughout this interval).

1. After plugging the device into the outlet, turn the control and select the desired browning setting. You can choose up to 6 various browning settings: 1 = lightly toasted to 6 = darkly toasted. It is recommended to set level 3 for the first use.
2. Insert a slice of bread and push the "Toast Lever" all the way down so that the slice of bread is inside the toaster. The slice of bread is automatically centered inside the toaster.
3. To adjust the browning setting during toasting, move the browning setting slide to another setting. (Display will also show the chosen browning setting and its countdown working time.) Adjusting the browning setting does not change the duration of toasting bread. The toaster automatically switches off after the time set has lapsed. The slices of bread pop up from the toaster.
4. For toasting frozen bread taken directly from the freezer, insert the bread into the toasting slot and select the desired browning setting. (Display will also show the chosen browning setting and its countdown working time.) Push down the toaster lever and then press the Defrost button. The Defrost indicator light will

go on.

5. For reheating bread that was already toasted once before, insert the bread into the toasting slot and select the desired browning setting. (Display will also show the chosen browning setting and its countdown working time.) Push down the toaster lever and then press the Reheat button. The Reheat indicator light will go on.
6. The Cancel button can be used at any time during the toasting process, e.g. if the bread is too dark or if the toasting process fails.

CLEANING AND STORING

Unplug the appliance and let it cool down before cleaning. Slide the crumb tray out of the appliance and empty it. Clean the crumb tray regularly, use a scratch brush to remove burnt crumbs. Clean the outer surface of the toaster with a damp cloth. Do not use sharp objects or abrasive cleaning agents to clean the toaster. Do not immerse the toaster into water or use a dish washer to clean the appliance.

After cleaning, store it in its box in a clean, dry place. Never store it if it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

TECHNICAL DATA

Nominal voltage:	120 V~ 60 Hz
Nominal input power:	1400W

ENVIRONMENT FRIENDLY DISPOSAL

You can help to protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical Equipment to an appropriate waste disposal center



WARRANTY POLICY

The warranty policy is applicable to:

- (1) The product is free of defects in materials and workmanship by manufacturer.
- (2) This product is being correctly use according to our user manual.

Limitations:

- (1) Product misuse, abuse, negligence, accident, repairs, alterations, or lack of maintenance.
- (2) Our warranty policy is limited to purchase made from us. If you purchase from a different retailer, please contact them directly. Unauthorized reselling of products is prohibited.
- (3) Warranty-related shipping costs can only be covered in the country of purchase. If the product is take outside the country of purchase, any shipping costs will be the buyer's responsibility.

Friendly reminder: When contacting us for help, be sure to provide the Order ID for a fast solution.

Exclusions:

The warranty will not apply if damage is caused by any of the following:

- (1) Damage to the product due to misuse, mishandling and abuse.
- (2) Product not assembled or installed according to manufacturer's instruction.
- (3) Repairs by unauthorized persons or service centers with unauthorized spare parts.
- (4) Failure to provide reasonable and necessary maintenance.
- (5) Improper power supply such as low voltage, defective household wiring or inadequate fuses.
- (6) Accident, alteration, misuse or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions, such as extreme temperatures.
- (7) Damage in transit or when moving the appliance.
- (8) Use of force or damage caused by external influences.
- (9) Store improper things.
- (10) Normal wear and tear.
- (11) Cosmetic damage, including scratches, dents, chips, or other damage to the finish of your product, unless such damage results from defects in materials or workmanship and is reported to us within 30 days from the date of purchase.
- (12) Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc. In addition consequential damage and incidental damages, such as damage to person or property are not covered under this warranty.
- (13) Partially or completely dismantled appliances

