



### Measurement Guide – GenTent Universal Kit

- This model can fit open frame generators with perimeters between 76" – 104".
- Perimeter = (Length x 2) + (Width x 2) (not including handles or wheels)


### How to measure your generators perimeter for a GenTent?

Measure the length of your generator as well as your width.

**Example Generator: (Length) 23.2" (Width) 17.7"**

Length 23.2" x 2 = 46.4" Width 17.7" x 2 = 35.4"

Perimeter total: 46.4" + 35.4" = 81.8"

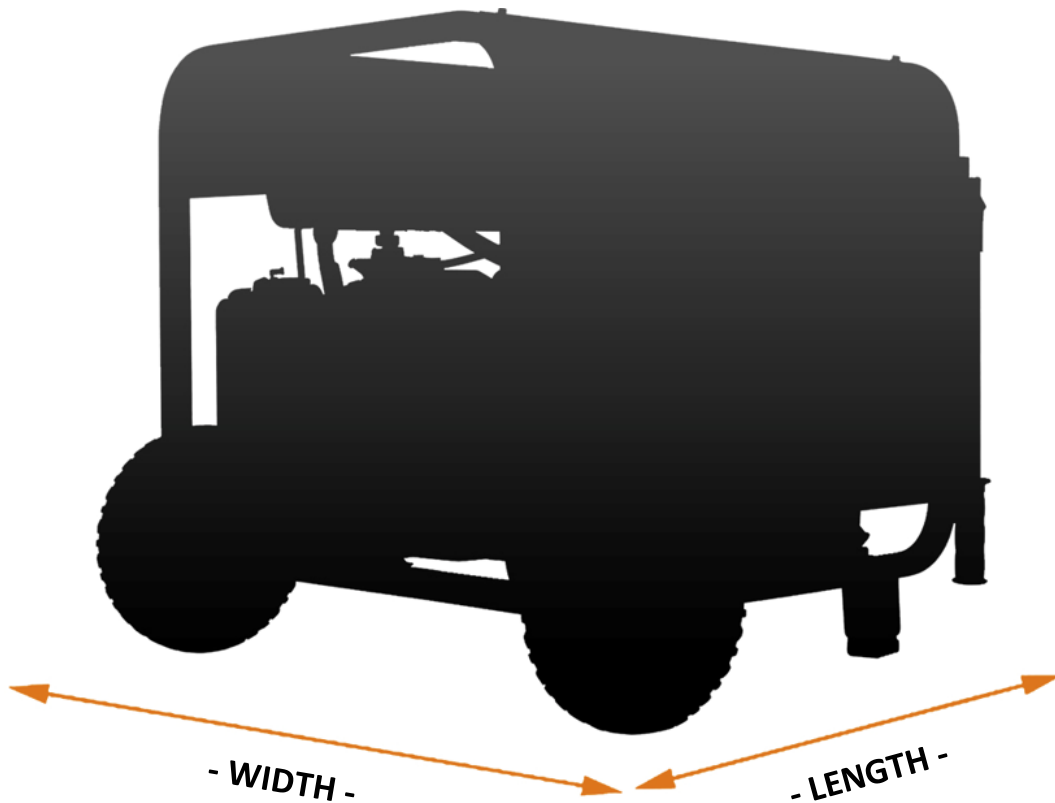

### Questions fitting your GenTent Running Cover?

Do not hesitate to contact us; we are here to help!

e. [customercare@gentent.com](mailto:customercare@gentent.com)

p. 781.334.8368