 


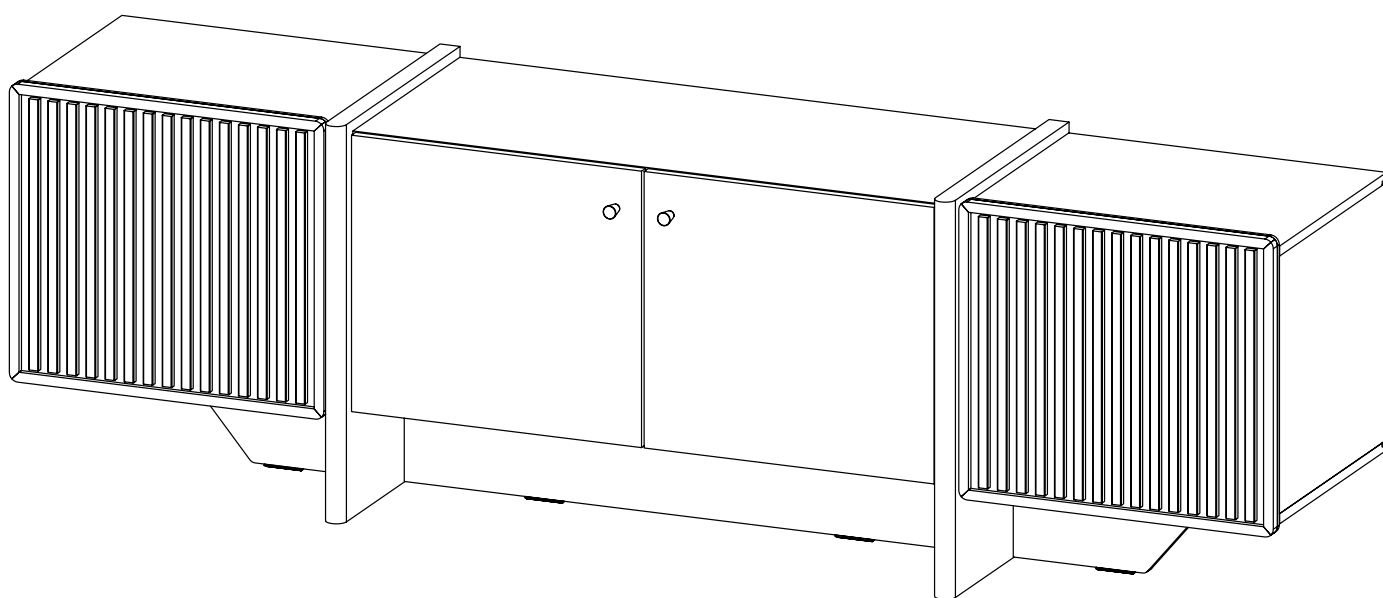

ASSEMBLY INSTRUCTIONS

TV Stand

EEI-7851 / V0.06.19.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

 
 
 
Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x33
B		Cam Lock Ø15 mm	x33
C		Wood Dowel Ø8 x 30 mm	x44
D		Screw M4 x 20 mm	x2
E		Floor Glide	x8
F		Handle	x2
G		Screw M4.5 x 12.5 mm	x48
H		Screw Cap Ø15 mm	x6
I		Screw M7 x 50 mm	x6
J		Wedge	x14
K		Screw M3.5 x 15.5 mm	x14
L		JCN Nut + Screw	x4
M		Cable Hole Cover	x4
HGL4		Hand Grip + Allen Key	1 SET
HS26A		Hinge	x4
HS35C		Hinge	x4

WHAT YOU NEED:



 
Phillips



Phillips Head Screwdriver



 Flat




Flat Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 22

 
All parts are numbered with a sticker according to this list.

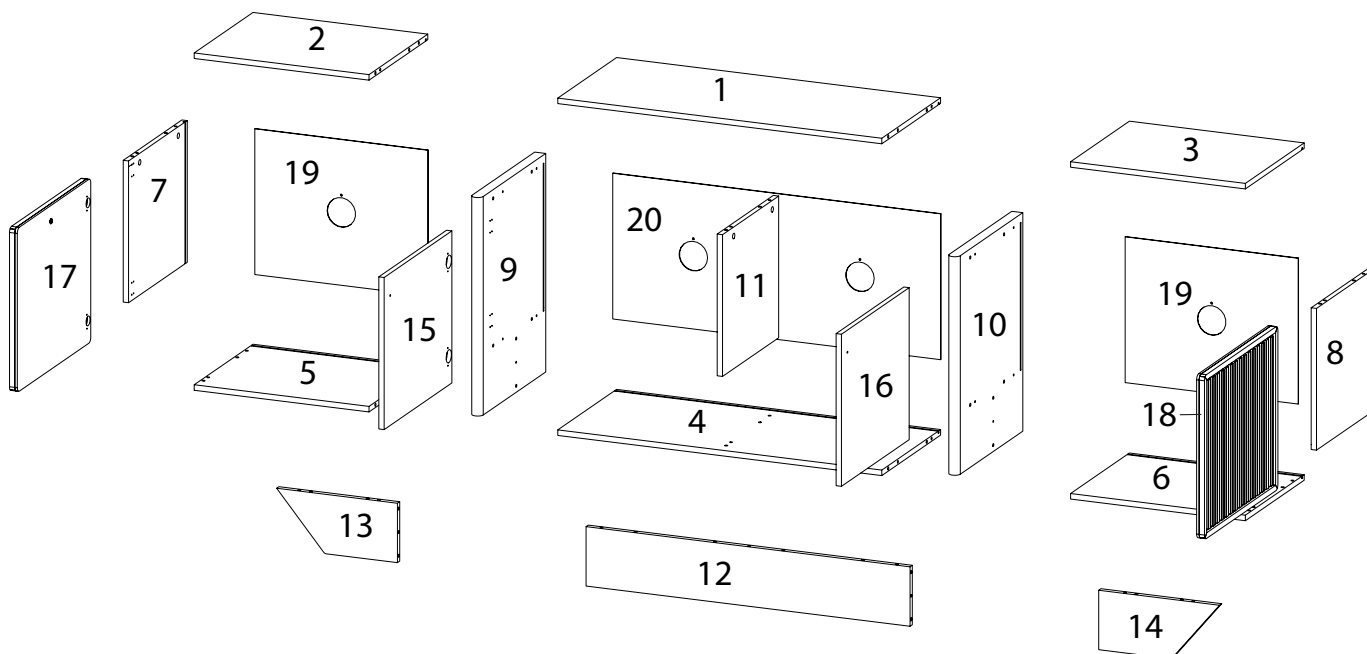


1	Top Board 1	x1	8	Side Board Right	x1	15	Door 1	x1
2	Top Board 2	x1	9	Center Board 1	x1	16	Door 2	x1
3	Top Board 3	x1	10	Center Board 2	x1	17	Frame Door 1	x1
4	Bottom Board 1	x1	11	Center Board 3	x1	18	Frame Door 2	x1
5	Bottom Board 2	x1	12	Bottom Skirt 1	x1	19	Back Board 1	x2
6	Bottom Board 3	x1	13	Bottom Skirt 2	x1	20	Back Board 2	x1
7	Side Board Left	x1	14	Bottom Skirt 3	x1			

HARDWARE

 
HGL4 Hand Grip + Allen Key

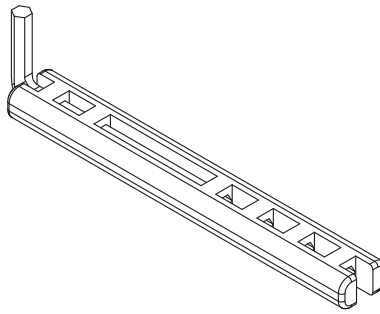

POSITION 1

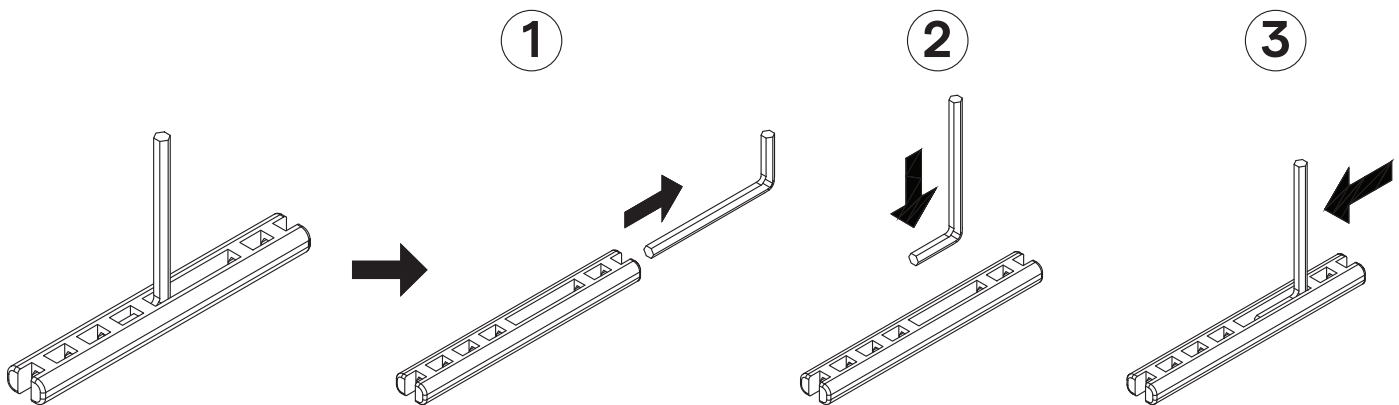 

POSITION 2

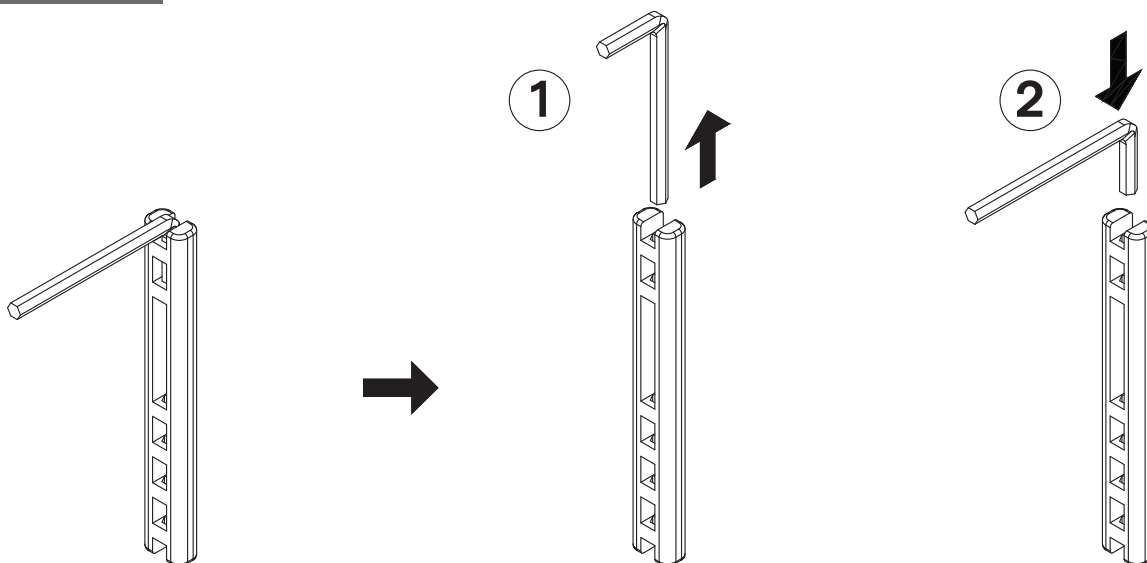 

HARDWARE

 
- Ⓐ Cam Bolt Ø6 x 35 mm x2
 Ⓒ Wood Dowel Ø8 x 30 mm x8

COMPONENTS

- ① Top Board 1 x1
 ⑪ Center Board 3 x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board 1 (1), then tighten using screwdriver.

1.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Top Board 1 (1) and Center Board 3 (11). Position as shown.

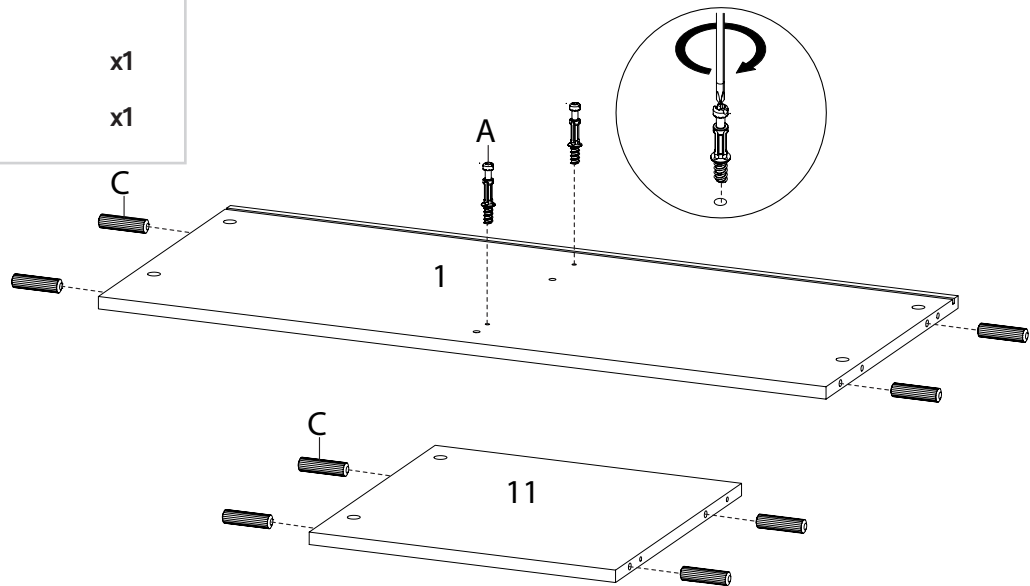

STEP 02


HARDWARE

- Ⓑ Cam Lock Ø15 mm x2
 Ⓗ Screw Cap Ø15 mm x2

COMPONENTS

- ① Top Board 1 x1
 ⑪ Center Board 3 x1

 2.1 Attach Center Board 3 (11) to Top Board 1 (1), secure with Cam Lock Ø15 mm (B), and tighten using a screwdriver. Then install Screw Cap Ø15 mm (H) over the Cam Locks on Center Board 3 (11). Position as shown.

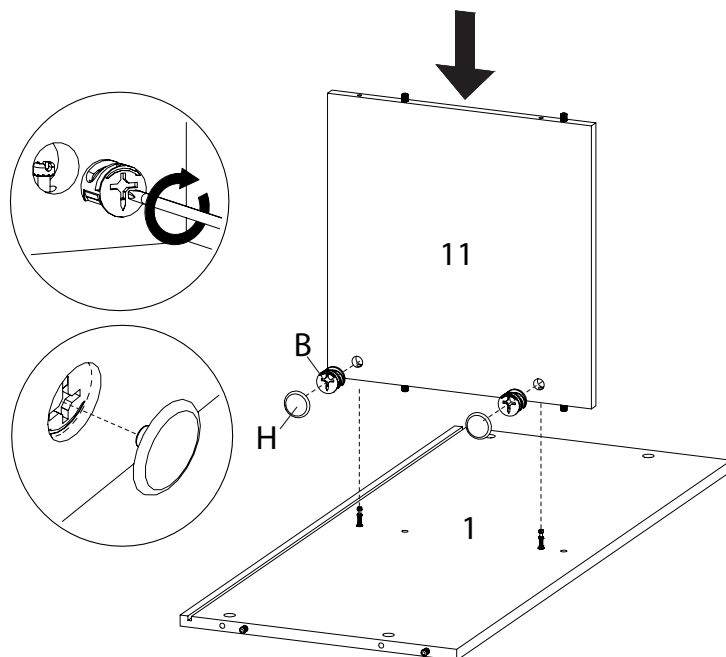

HARDWARE

 
- A** Cam Bolt Ø6 x 35 mm x3
C Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 4** Bottom Board 1 x1
12 Bottom Skirt 1 x1

3.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Board 1 (4), and tighten using a screwdriver, then insert Wood Dowel Ø8 x 30 mm (C).

3.2 Insert Wood Dowel Ø8 x 30 mm (C) into Bottom Skirt 1 (12). Position as shown.

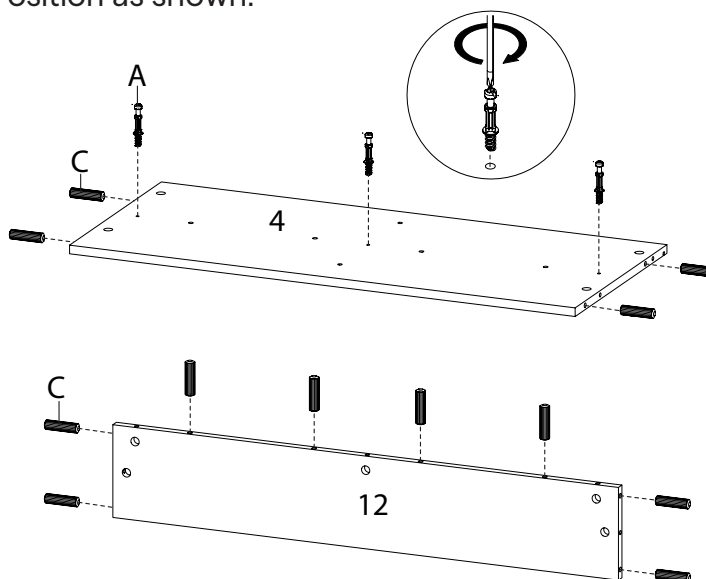

STEP 04


HARDWARE

- I** Screw M7 x 50 mm x2
HGL4 Hand Grip + Allen Key x1

COMPONENTS

- 4** Bottom Board 1 x1

 4.1 Attach Bottom Board 1 (4) to Center Board 3 (11), secure with Screw M7 x 50 mm (I), then tighten using Hand Grip + Allen Key (HGL4). Position as shown.

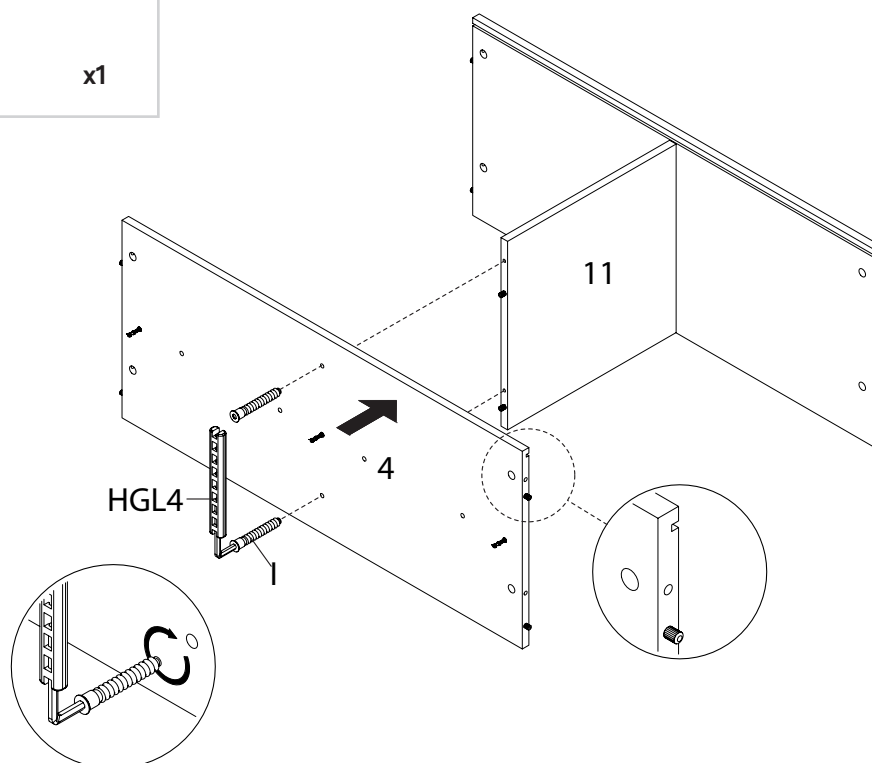


HARDWARE

B Cam Lock Ø15 mm x3

COMPONENTS

12 Bottom Skirt 1 x1

 5.1 Attach Bottom Skirt 1 (12) to Bottom Board 1 (4), secure with Cam Lock Ø15 mm (B), then tighten using a screwdriver. Position as shown.

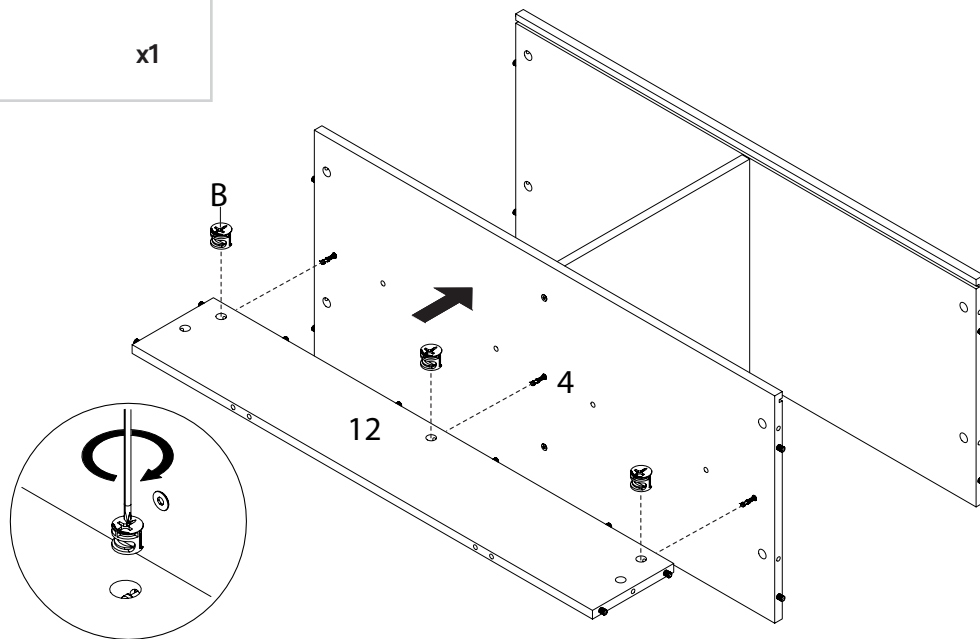

STEP 06

HARDWARE

A Cam Bolt Ø6 x 35 mm x5

G Screw M4.5 x 12.5 mm x8

 
HS35C Hinge x2

COMPONENTS

9 Center Board 1 x1

6.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Center Board 1 (9), then tighten using a screwdriver.

6.2 Separate the hinge from mounting plate by pressing the release lever on the back of the hinge, as shown in the detail view. Install the mounting plates onto Center Board 1 (9) using Screws M4.5 x 12.5 mm (G), then tighten with a screwdriver. Position as shown.

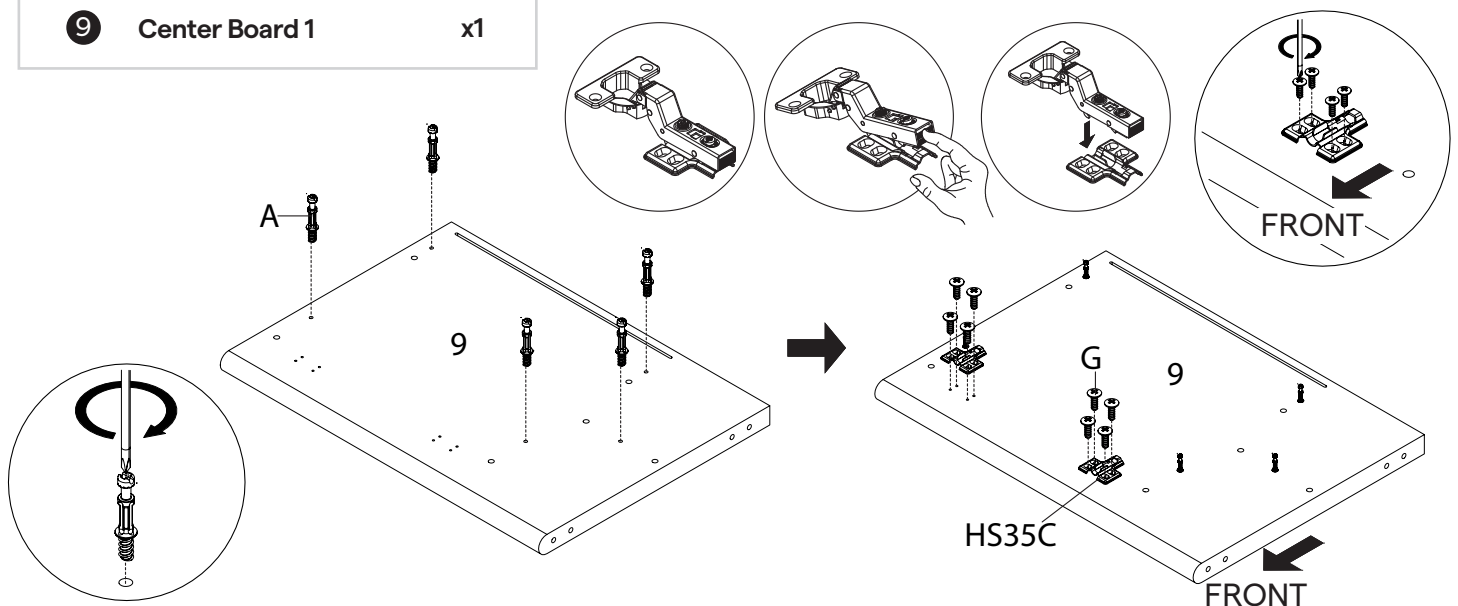

HARDWARE

A Cam Bolt Ø6 x 35 mm x5

G Screw M4.5 x 12.5 mm x8

 
HS35C Hinge x2

COMPONENTS

10 Center Board 2 x1

7.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Center Board 2 (10), then tighten using a screwdriver.

7.2 Separate the hinge from mounting plate by pressing the release lever on the back of the hinge, as shown in the detail view. Install the mounting plates onto Center Board 2 (10) using Screws M4.5 x 12.5 mm (G), then tighten with a screwdriver. Position as shown.

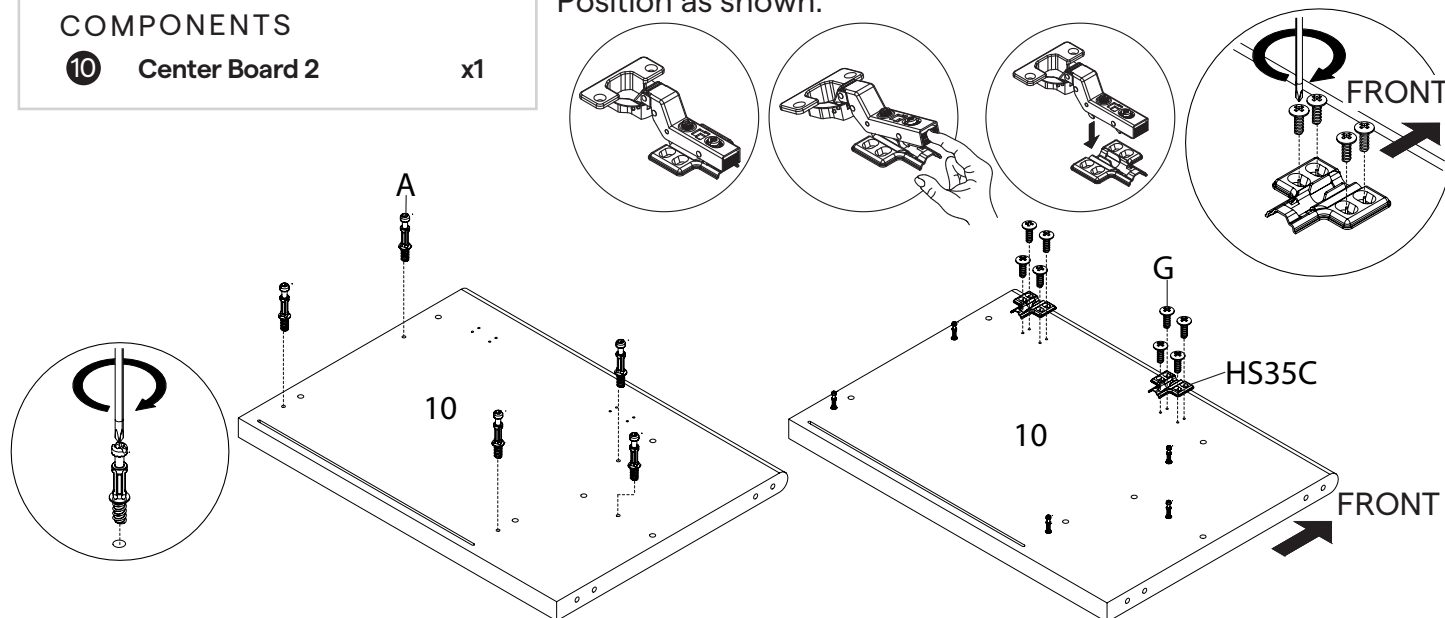

STEP 08


HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS

9 Center Board 1 x1

 
8.1 Attach assembled component from step 5 to Center Board 1 (9), secure with Cam Lock Ø15 mm (B), then tighten using a screwdriver. Position as shown.

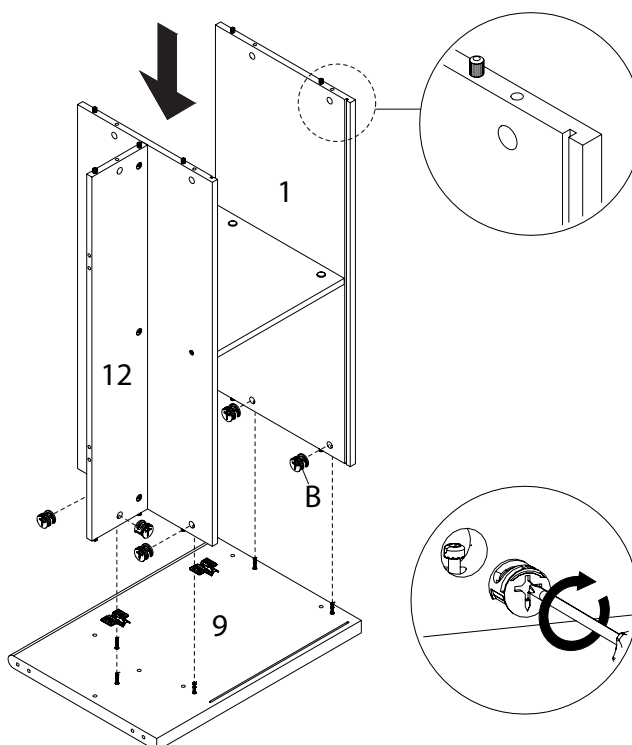

COMPONENTS

20 Back Board 2 x1

 9.1 Insert Back Board 2 (20) into Center Board 1 (9). Ensure the small hole is oriented correctly as shown in the detail view below. Position as shown.

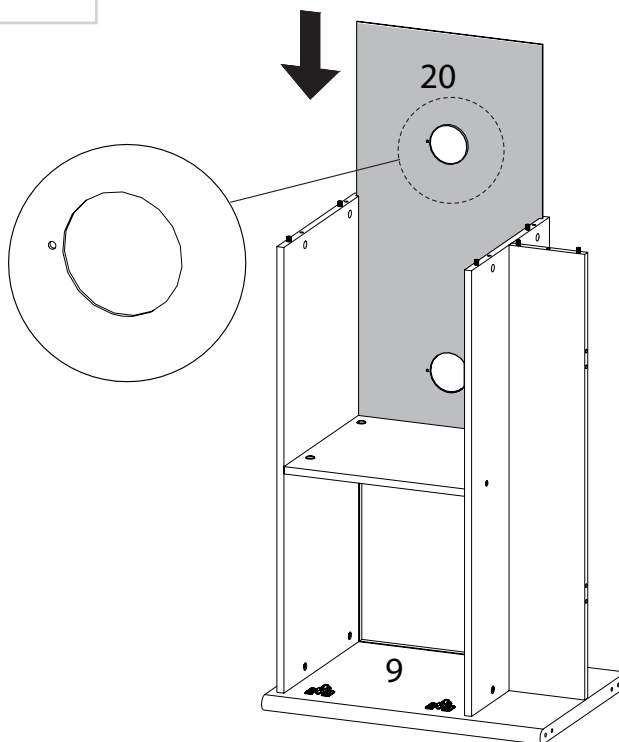

STEP 10


HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS

10 Center Board 2 x1

 
10.1 Attach Center Board 2 (10) to assembled componen from previous step, secure with Cam Lock Ø15 mm (B), then tighten using a screwdriver. Position as shown.

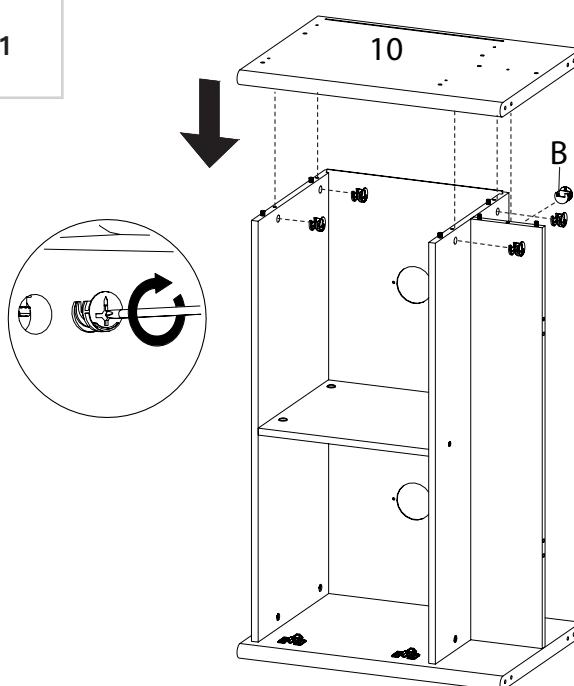

HARDWARE

E Floor Glide x6

 11.1 Attach Floor Glide (E) to Center Boards and Bottom Skirt. Position as shown.

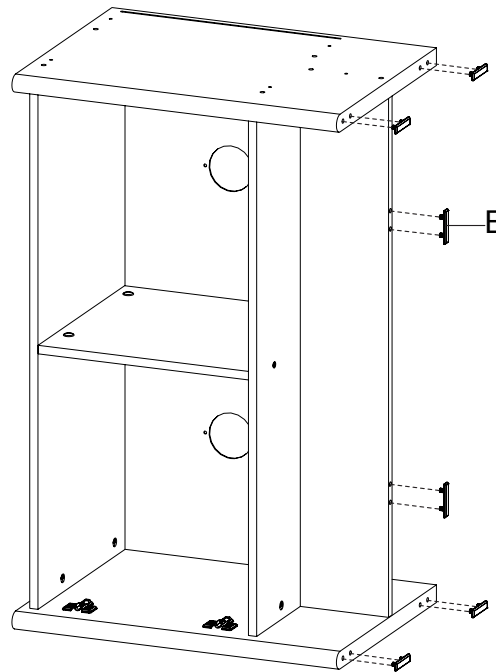

STEP 12

HARDWARE

A Cam Bolt Ø6 x 35 mm x4

C Wood Dowel Ø8 x 30 mm x12

E Floor Glide x2

COMPONENTS

5 Bottom Board 2 x1

 
6 Bottom Board 3 x1

13 Bottom Skirt 2 x1

14 Bottom Skirt 3 x1

12.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Board 2 (5) and Bottom Board 3 (6), and tighten using a screwdriver. Then Insert Wood Dowel Ø8 x 30 mm (C). Position as shown.

12.2 Insert Wood Dowel Ø8 x 30 mm (C) and Floor Glide (E) into Bottom Skirt 2 (13) and Bottom Skirt 3 (14)). Position as shown.

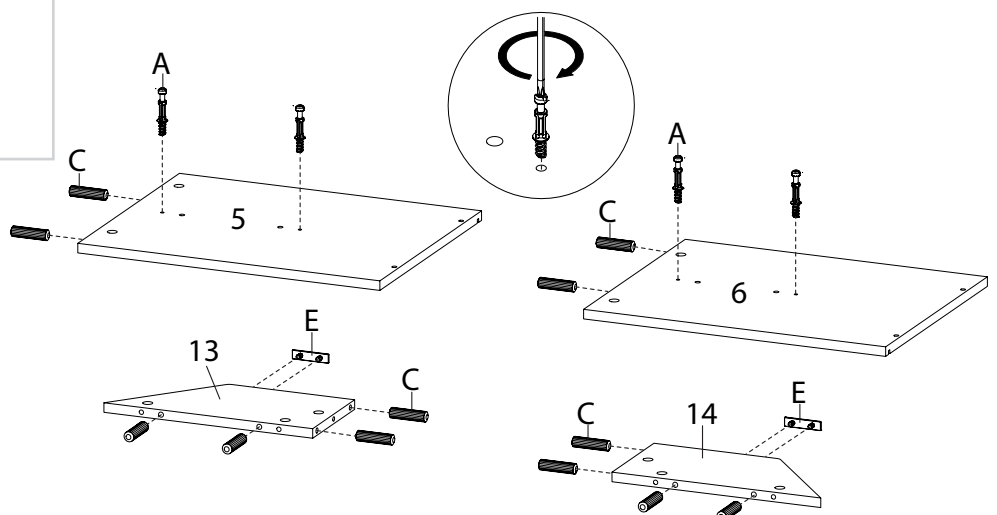

HARDWARE


B Cam Lock Ø15 mm x2

COMPONENTS

5 Bottom Board 2 x1

13 Bottom Skirt 2 x1

 13.1 Attach Bottom Skirt 2 (13) to Bottom Board 2 (5), secure with Cam Lock Ø15 mm (B), then tighten using a screwdriver. Position as shown.

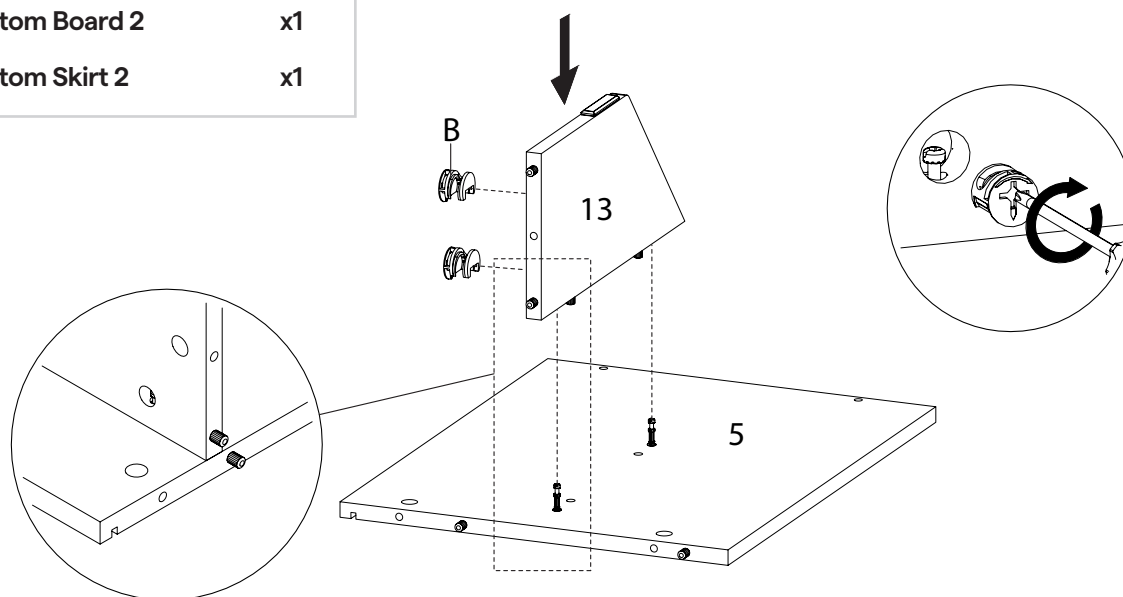

STEP 14

HARDWARE


B Cam Lock Ø15 mm x2

COMPONENTS

6 Bottom Board 3 x1

14 Bottom Skirt 3 x1

 14.1 Attach Bottom Skirt 3 (14) to Bottom Board 3 (6), secure with Cam Lock Ø15 mm (B), then tighten using a screwdriver. Position as shown.

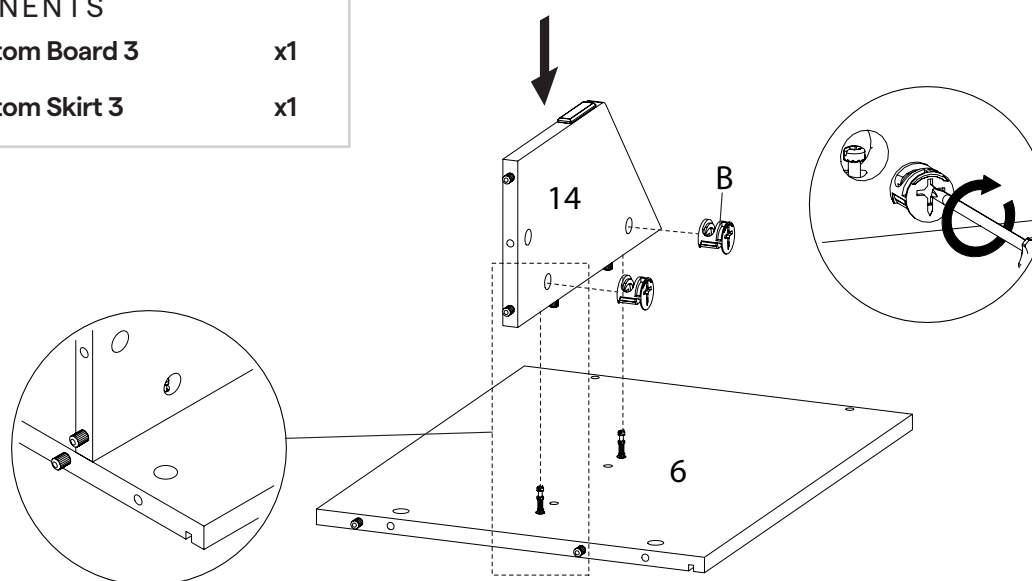

HARDWARE

 
C Wood Dowel Ø8 x 30 mm x8

COMPONENTS

7 Side Board Left x1

8 Side Board Right x1

15.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Side Board Left (7) and Side Board Right (8). Position as shown.

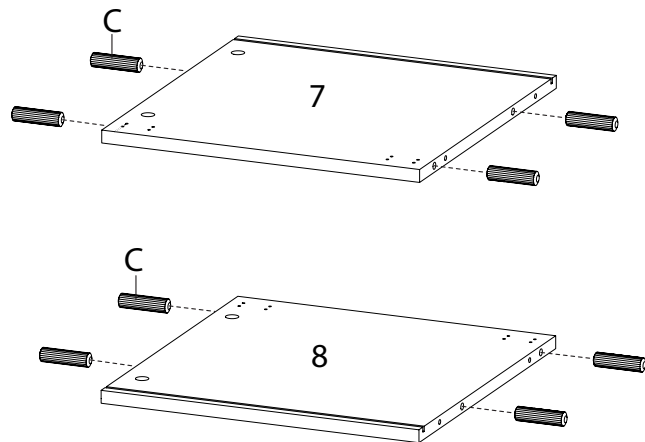

STEP 16

HARDWARE

I Screw M7 x 50 mm x4

HGL4 Hand Grip + Allen Key x1


COMPONENTS

7 Side Board Left x1

8 Side Board Right x1

16.1 Attach Side Board Left (7) to Bottom Board 2 (5), secure with Screw M7 x 50 mm (I), then tighten using Hand Grip + Allen Key (HGL4).

 16.2 Attach Side Board Right (8) to Bottom Board 3 (6), secure with Screw M7 x 50 mm (I), then tighten using Hand Grip + Allen Key (HGL4). Position as shown.

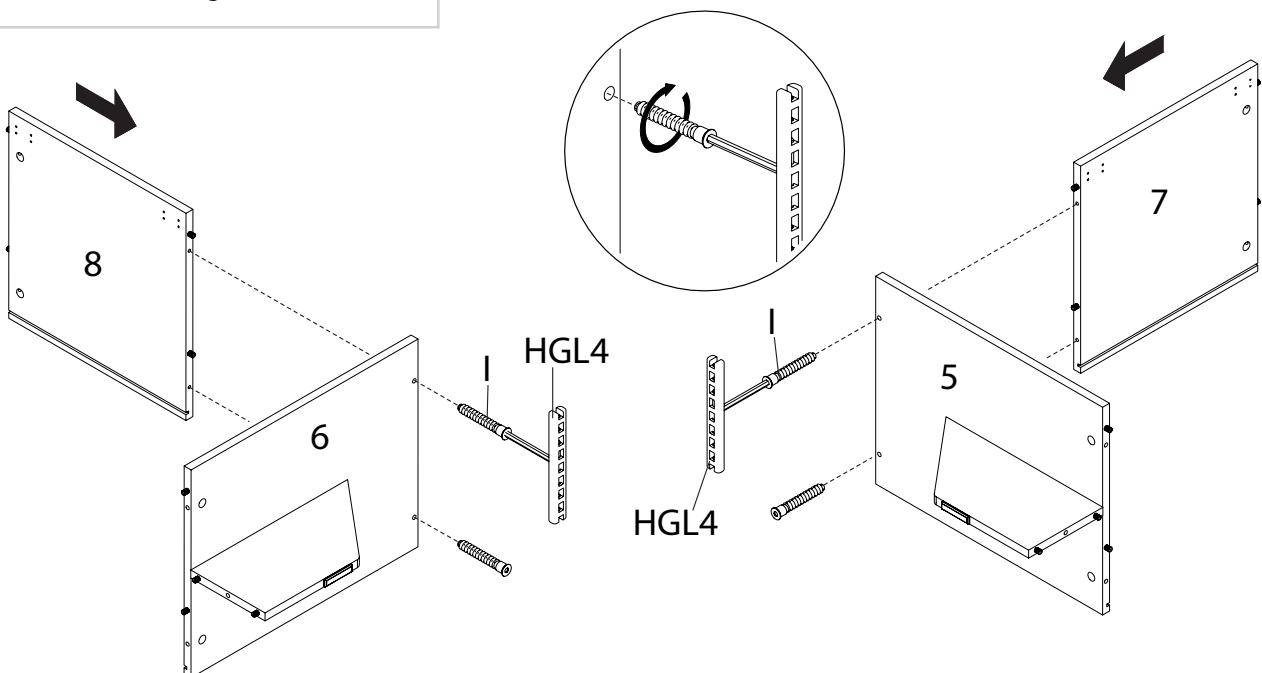


HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
C Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- 2** Top Board 2 x1
3 Top Board 3 x1

 17.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board 2 (2) and Top Board 3 (3), tighten using a screwdriver. Then Insert Wood Dowel Ø8 x 30 mm (C). Position as Shown.

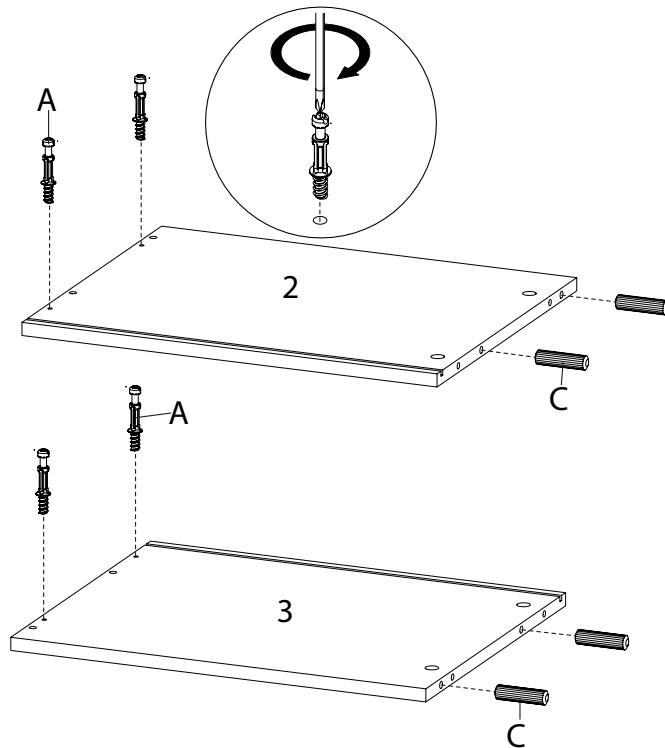

STEP 18

HARDWARE




- B** Cam Lock Ø15 mm x4
H Screw Cap Ø15 mm x4

COMPONENTS

- 2** Top Board 2 x1
3 Top Board 3 x1

18.1 Attach Top Board 2 (2) to Side Board Left (7), secure with Cam Lock Ø15 mm (B), and tighten using a screwdriver. Then install Screw Cap Ø15 mm (H) over the Cam Locks on Side Board Left.

   
18.2 Attach Top Board 3 (3) to Side Board Right (8), secure with Cam Lock Ø15 mm (B), and tighten using a screwdriver. Then install Screw Cap Ø15 mm (H) over the Cam Locks on Side Board Right.

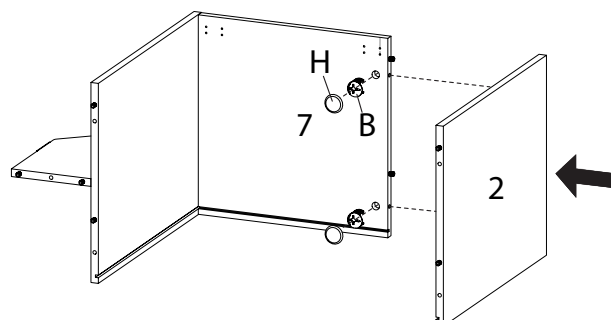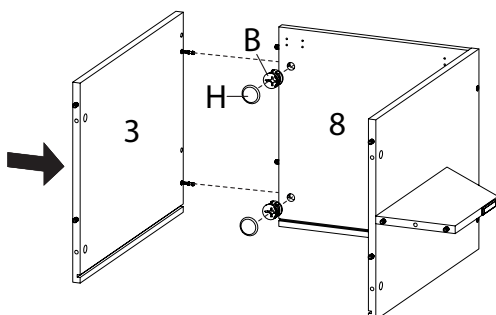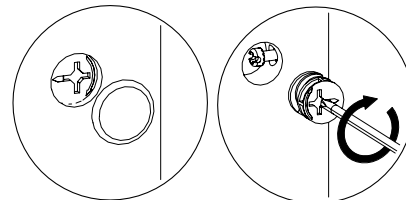

COMPONENTS

19 Back Board 1 x2

 19.1 Insert Back Board 1 (19) into Side Boards. Ensure the small hole is oriented correctly as shown in the detail view below. Position as shown.

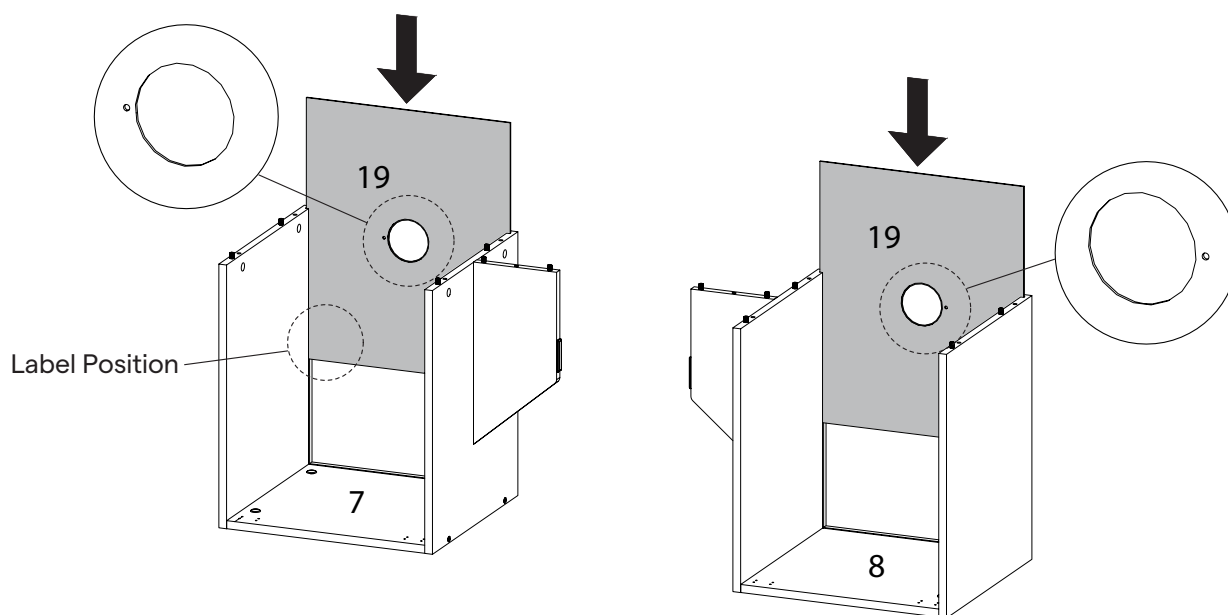


STEP 20

HARDWARE

A Cam Bolt Ø6 x 35 mm x5

 
20.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Center Board 1 (9), then tighten using a screwdriver. Position as shown.

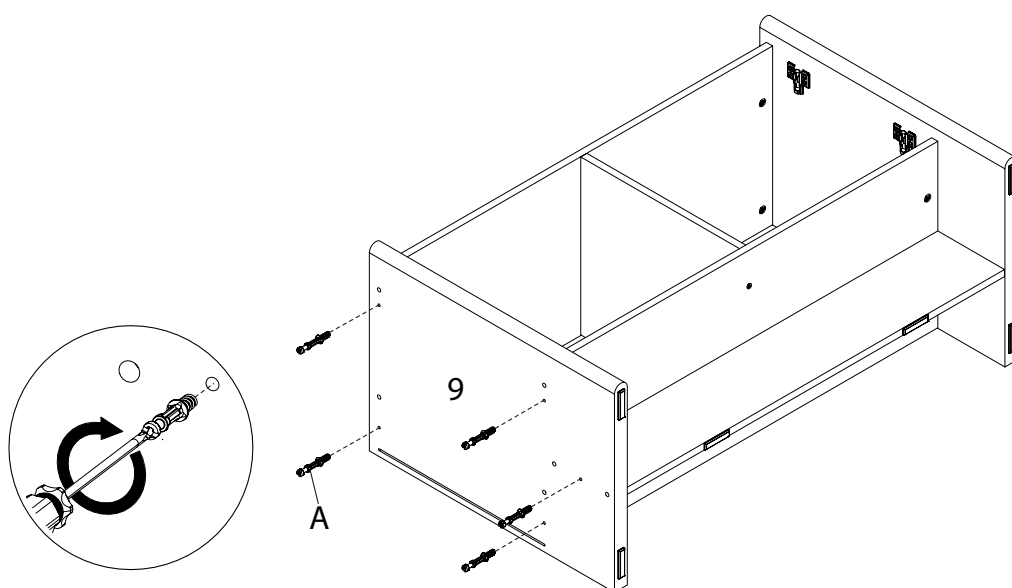

HARDWARE

A Cam Bolt Ø6 x 35 mm x5

 21.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Center Board 2 (10), then tighten using a screwdriver. Position as shown.

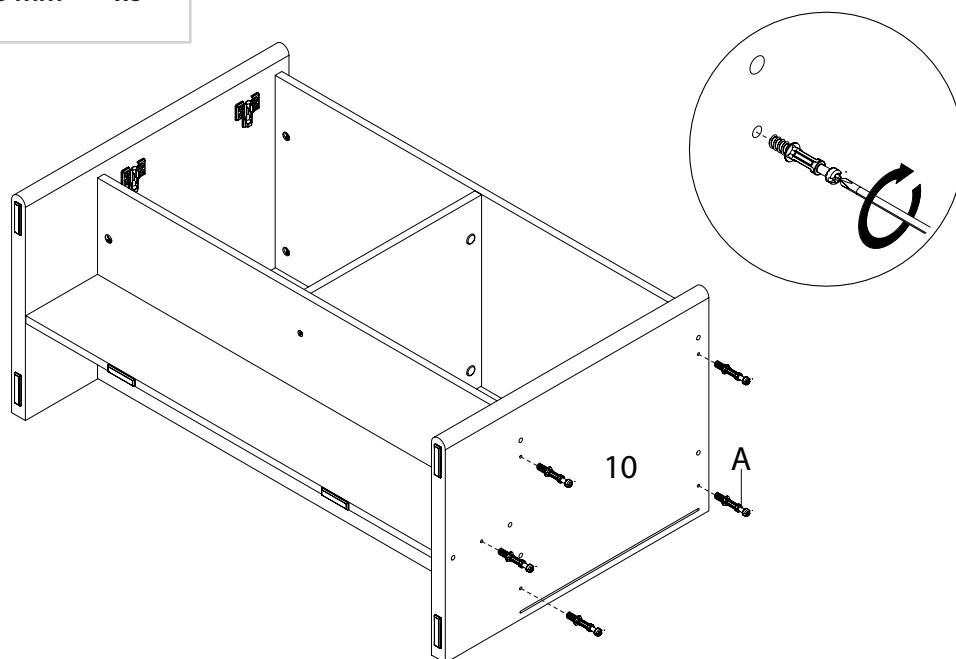


STEP 22

HARDWARE

B Cam Lock Ø15 mm x4

 
22.1 Attach the pre-assembled Top Board 2 (2) to the Center Board 1 (9), Secure with Cam Locks Ø15 mm (B) then tighten with a screwdriver. Position as shown.

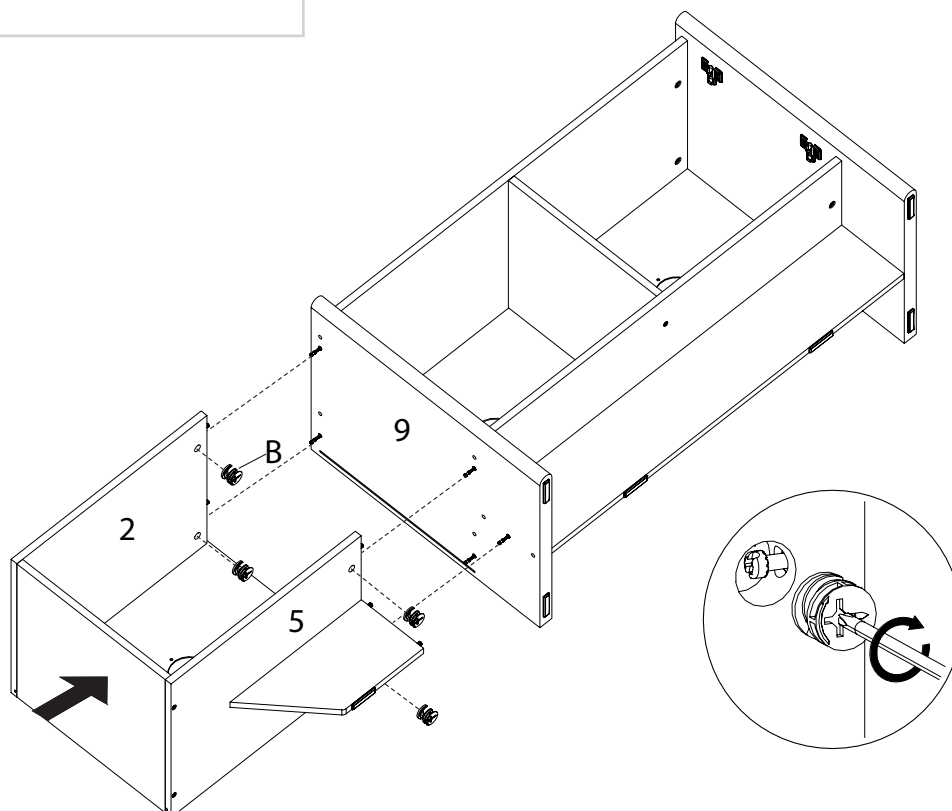

HARDWARE

(B) Cam Lock Ø15 mm x4

 23.1 Attach the pre-assembled Top Board 3 (3) to the Center Board 2 (10), Secure with Cam Locks Ø15 mm (B) then tighten with a screwdriver. Position as shown.

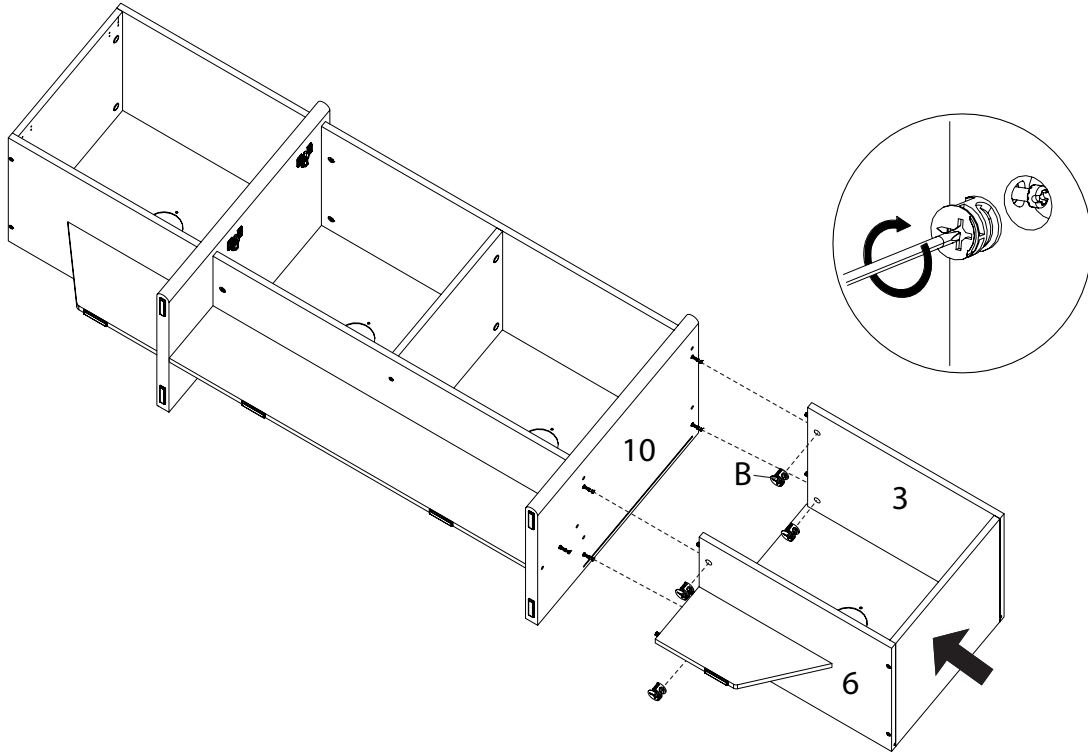




STEP 24

HARDWARE

(L) JCN Nut + Screw x4

(M) Cable Hole Cover x4

   24.1 Install Cable Hole Cover (M) to Back Boards, secure with JCN Nut + Screw (L), then tighten using a screwdriver. Position as shown.

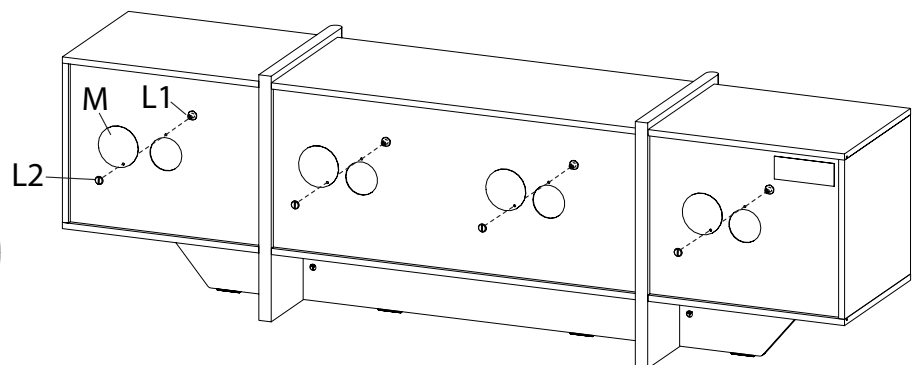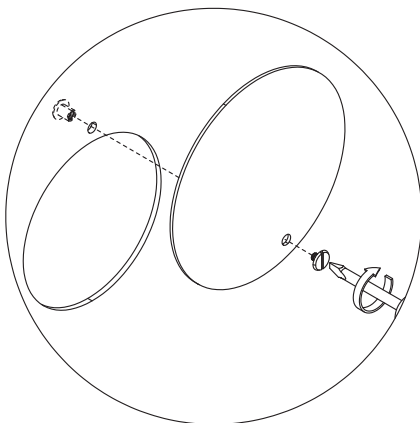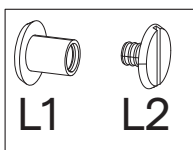

HARDWARE

G Screw M4.5 x 12.5 mm x8

 
HS35C Hinge x4

COMPONENTS

15 Door 1 x1

16 Door 2 x1

25.1 Instal Hinge (HS35C) to Door 1 (15) and Door 2 (16), secure with Screw M4.5 x 12.5 mm (G), then tighten using screwdriver. Position as shown.

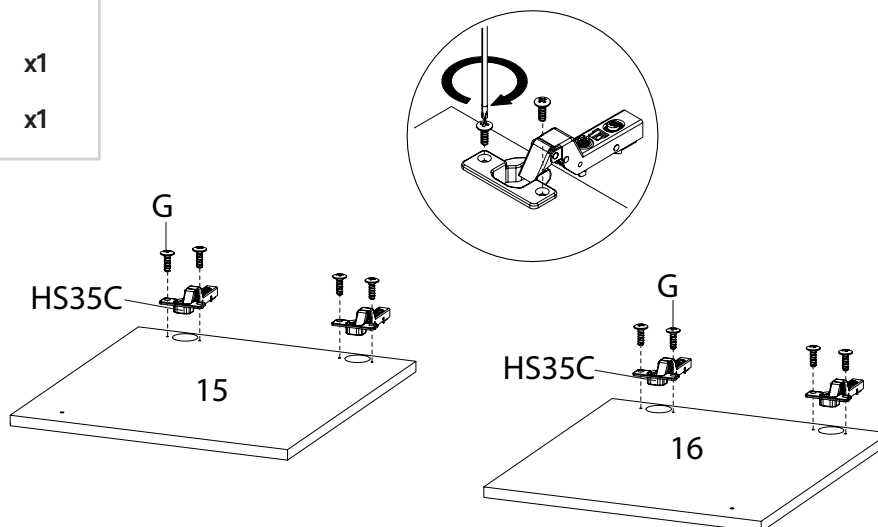

STEP 26

HARDWARE

D Screw M4 x 20 mm x2

F Handle x2

 
 
COMPONENTS

15 Door 1 x1

16 Door 2 x1

26.1 Install Door 1 (15) to Center Board Left and Door 2 (16) to Center Board Right. Follow the details in the picture. Please see the last page for further guidance on how to adjust the hinges. Position them as shown.

26.2 Install the Handle (F) into the Door 1 (15) and Door 2 (16), secure with Screw M4 x 20 mm (D), then tighten screw using a screwdriver. Position as shown.

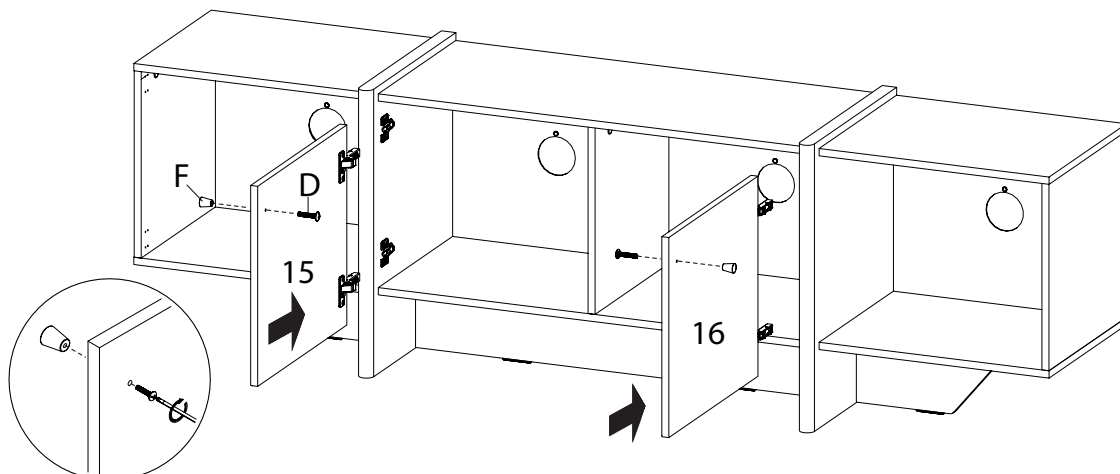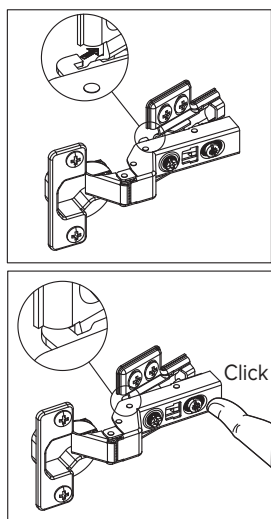

HARDWARE

G Screw M4.5 x 12.5 mm x8

 
HS26A Hinge x4

COMPONENTS

17 Frame Door 1 x1

18 Frame Door 2 x1

27.1 Install Hinge (HS26A) to Frame Door 1 (17) and Frame Door 2 (18), secure with Screw M4.5 x 12.5 mm (G), then tighten using a screwdriver. Position as shown.

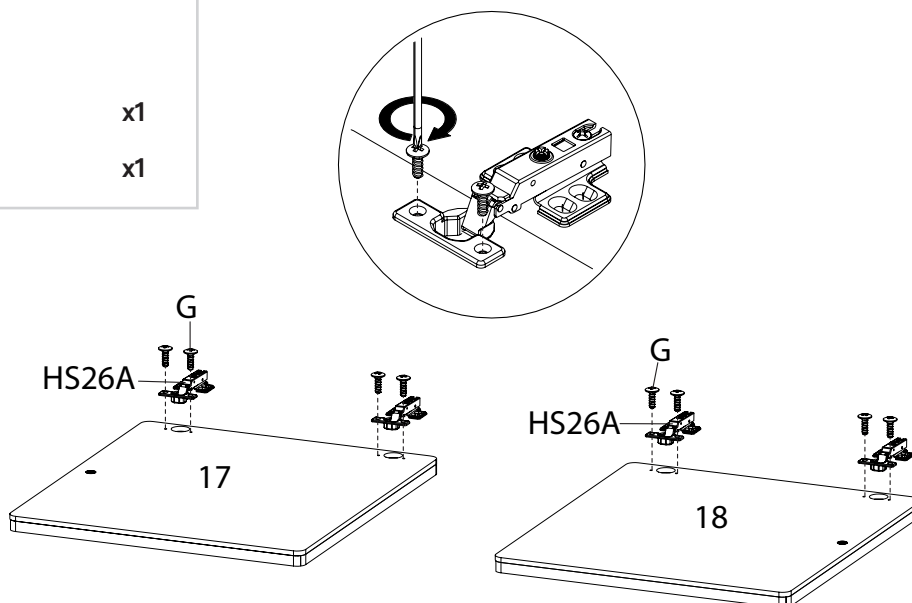

STEP 28

HARDWARE

 
G Screw M4.5 x 12.5 mm x16

COMPONENTS

17 Frame Door 1 x1

18 Frame Door 2 x1

28.1 Install Frame Door 1 (17) and Frame Door 2 (18) to Side Boards, secure with Screw M4.5 x 12.5 mm (G), then tighten using a screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown.


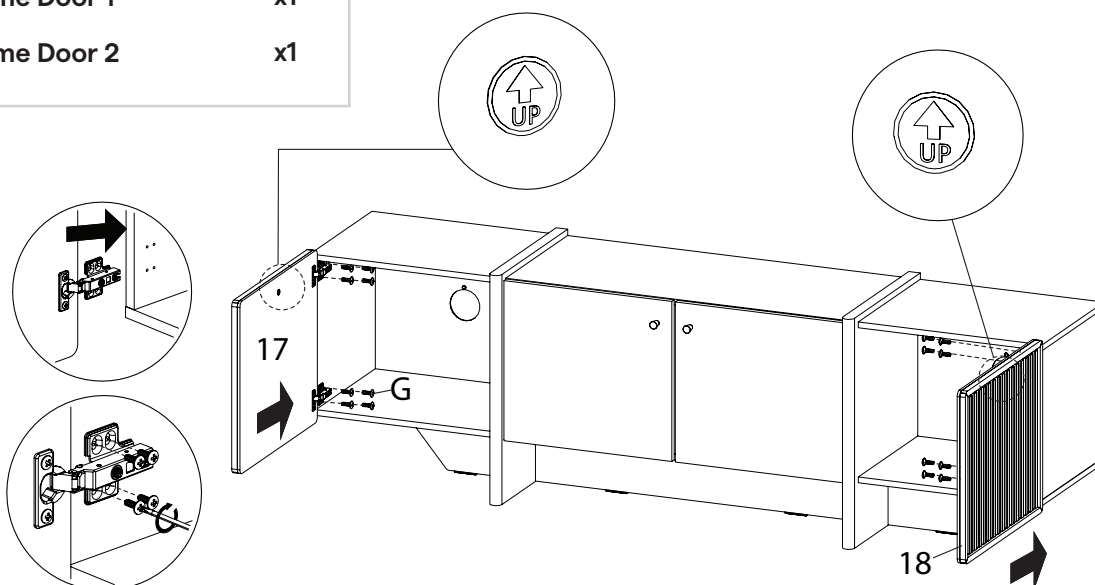


HARDWARE

B	Cam Lock Ø15 mm	x2
J	Wedge	x14
K	Screw M3.5 x 15.5 mm	x14


29.1 Insert Cam Lock Ø15 mm (B) to Bottom Skirt 2 (13) and Bottom Skirt 3 (14) then tighten using a screwdriver.

  29.2 Use the Wedge (J) and Screw M3.5 x 15.5 mm (K) to tighten the back of the TV Stand using screwdriver. Before securing the wedges (J), ensure that the top board and bottom board are aligned at a 90° angle against the TV Stand.

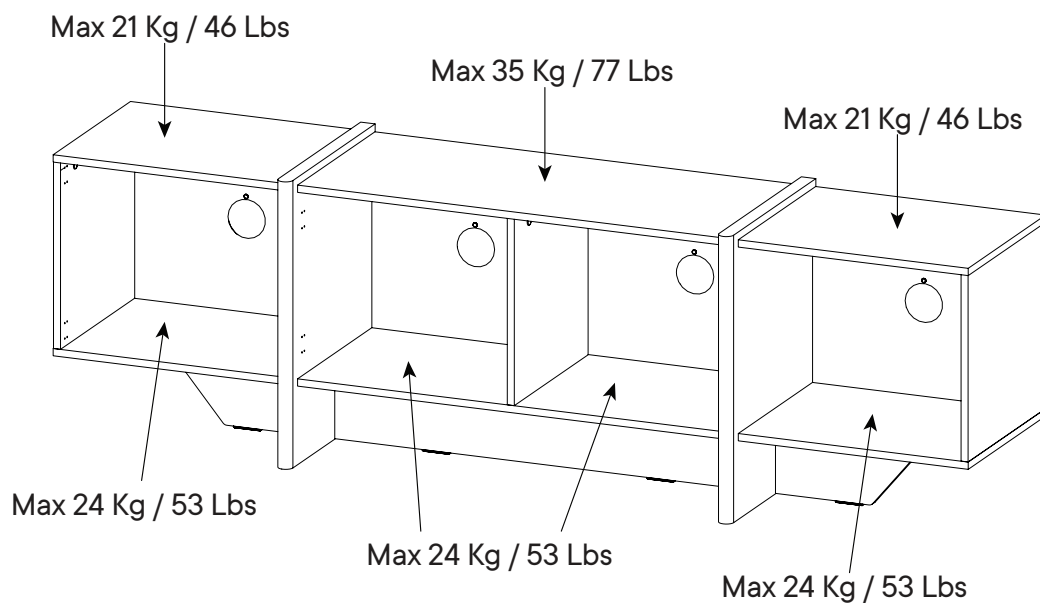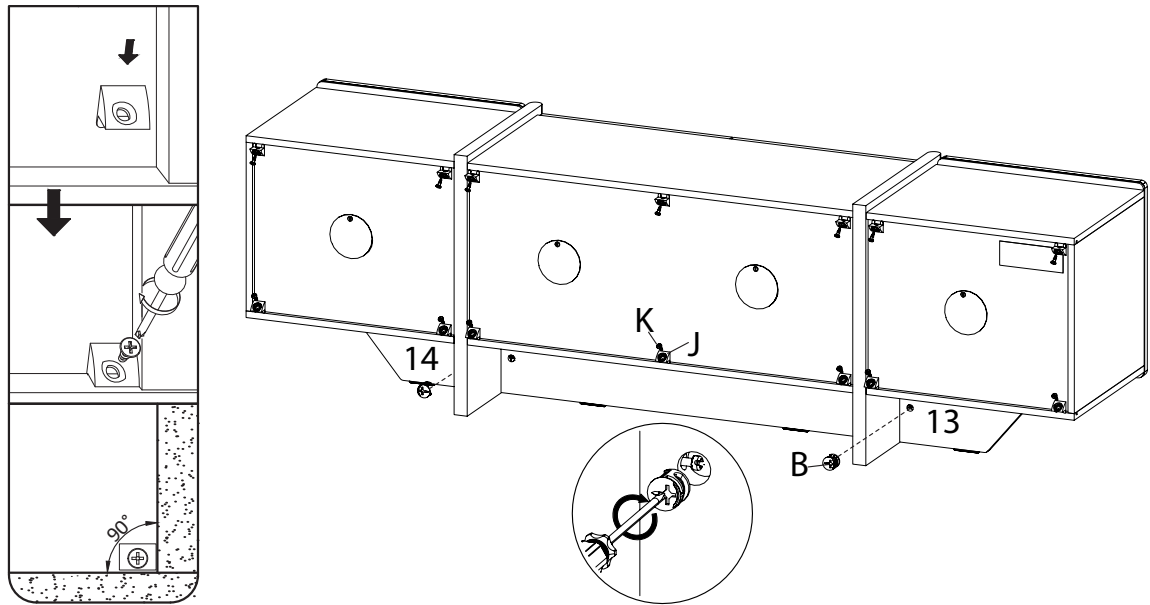

Great job!

 TV Stand assembly is complete

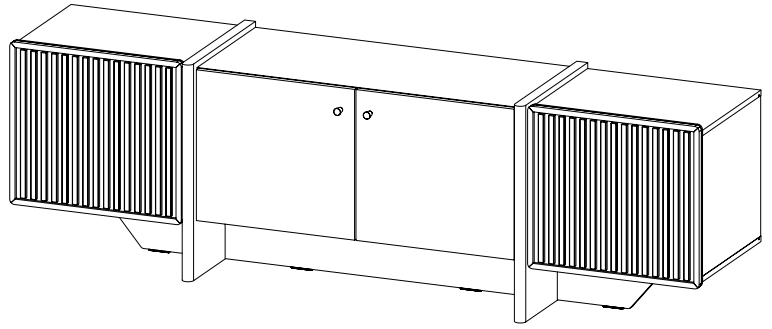

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

 
 
Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

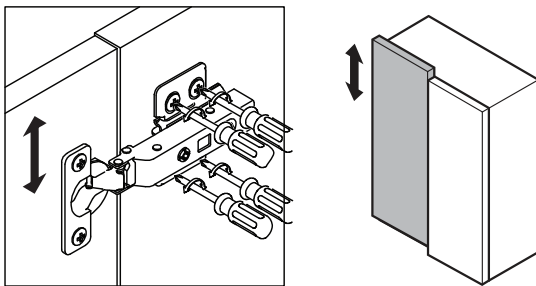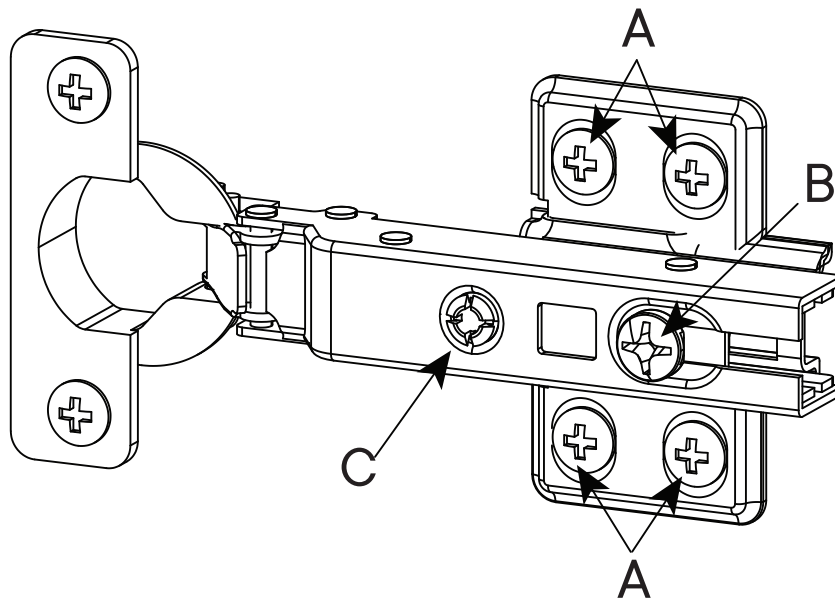


To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

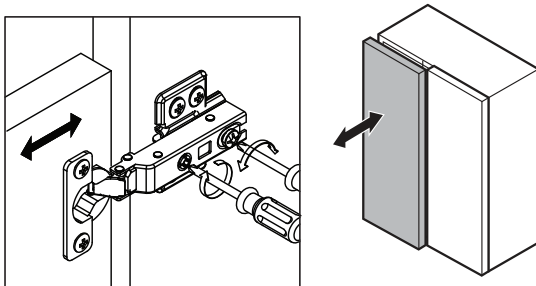

To adjust depth.



 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

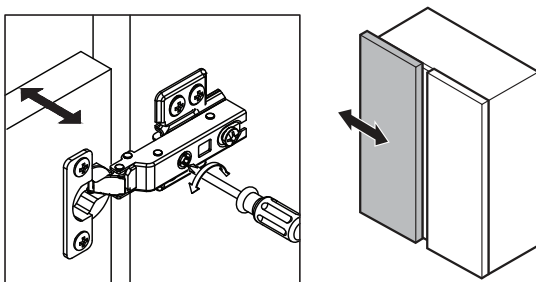

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

   Cabinet Door Alignment

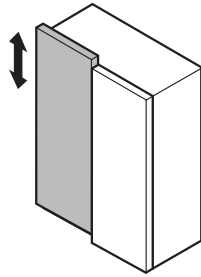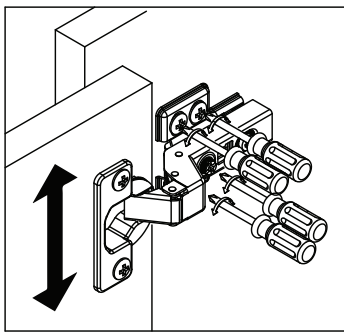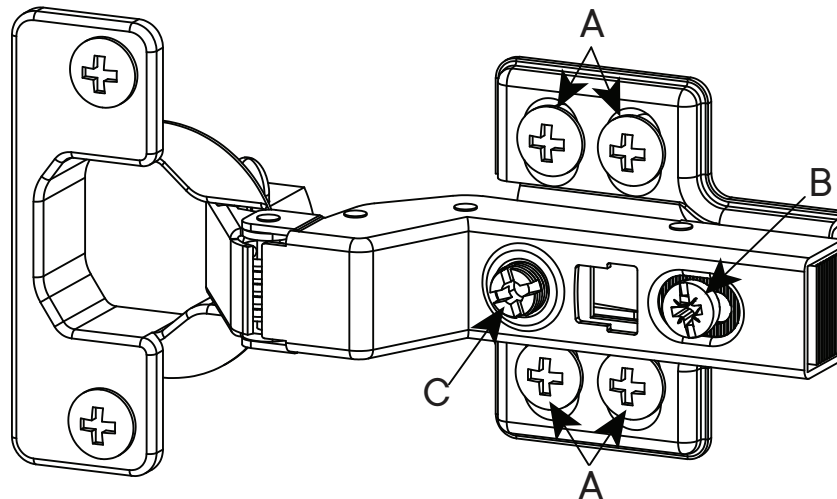



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

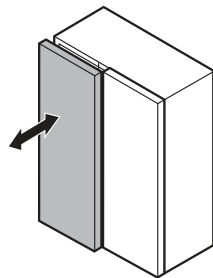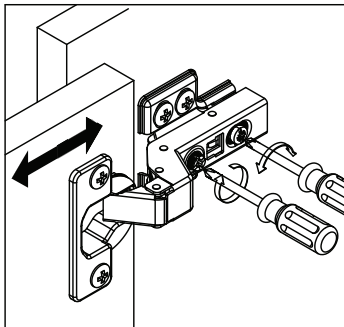

To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

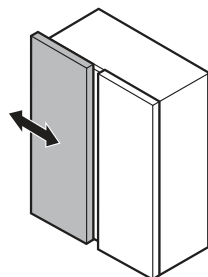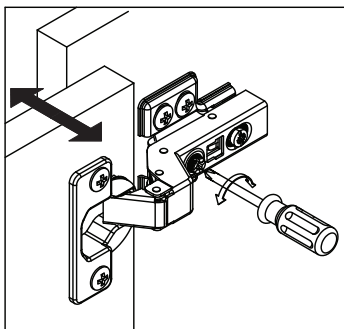

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.