

Mojo II



INSTRUCTION MANUAL WARRANTY CERTIFICATE

© 2019 Minka Lighting Inc. Manual design and all elements of manual design are protected by U.S. Federal and/or State Law, including Patent, Trademark and/or Copyright laws.



The Minka-Aire® warranty is for one (1) year from the date of purchase from an authorized Minka-Aire® dealer. This warranty is only valid to the original purchaser or user against all defects in material and workmanship (light bulbs excluded) for one (1) full year. Additionally, Minka-Aire® warrants the motor only for the lifetime of the Minka Aire ceiling fan (excluding wall controls and electrical components), to the original purchaser or user.

- * The warranty is voided with the use of any non- Minka-Aire®electrical devices, e.g., wall controls or electrical dimmer switches, etc...
- * The warranty is void once the original purchaser or user ceases to own the fan or the fan is moved from its original point of installation.
- * The warranty is void with the use of any hanger bracket (non-Minka Aire or non-fan specific) other than the hanger bracket supplied & installed with this specific fan.

Warranty Service Information

To obtain warranty service during the warranty period, the purchaser should return the fan with the sales receipt to the original place of purchase. The authorized Minka-Aire® dealer, at its sole discretion, will either repair or replace the fan after verifying the legitimacy of the warranty claim. Replacement is subject to availability of the same model. If the model is unavailable it will be replaced by one of equal value. This is a limited warranty; the original purchaser or user is responsible for the cost of removal and reinstallation of repaired or replacement product.

To obtain the name of the Minka-Aire® authorized dealer nearest you call the Minka-Aire® customer care department at 1-800-307-3267, or contact Minka-Aire® through www.minkagroup.net and select FAQ to answer any questions or if you require additional assistance submit the question form found there.

Date Purchased ______ Store Purchased _____ Model Number ___F533L Serial Number ____

CONTENTS

SAFETY RULES	1	INSTALLING THE LIGHT KIT ASSEMBLY	7
PACKAGE CONTENTS	2	INSTALLING THE GLASS SHADE & LIGHT BULB	8
INSTALLING THE MOUNTING BRACKET	3	OPERATING YOUR FAN	9
ELECTRICAL CONNECTIONS	4	CARE OF YOUR FAN	10
FINISHING THE INSTALLATION	5	TROUBLESHOOTING	11
BLADE INSTALLATION	6	SPECIFICATIONS	12







1 SAFETY RULES

- 1. Before you begin installing the fan, shut power off the circuit breaker of the fuse box.
- 2. Be cautious! Read all instructions and safety information before installing your new fan. Review accompanying assembly diagrams.

 3. Make sure that all electrical connections comply with local codes, ordinance, or National Electrical Codes, ANSI/NFPA 70. Hire a qualified electrician or consult a do-it-your self wiring handbook if you are unfamiliar with installing electrical wiring.
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor and 18 inches from the top of the blades to the wall.
- 5. If you are mounting the fan to a ceiling fan outlet box, use a U.L Listed metal octagonal outlet box marked "Acceptable For Fan Support". Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 pounds). Do not use a plastic box.
- 6. Caution: To reduce the risk of injury use only the screws provided with the outlet box in conjunction with the lock washers provided with the fan.
- 7. If you are mounting the fan to a joist, make sure it is able to support the moving weight of the fan (at least 50 pounds).
- 8. After you install the fan, make sure that all mounting components are secured to prevent the fan from falling.
- 9. Do not insert anything into the fan blades while the fan is operating.
- 10. To operate the reverse function on this fan, press the reverse button while the fan isn't running.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which can not be built into this product. These factors must be supplied by the person(s) installing, caring for and operating the unit.

NOTE: READ AND SAVE ALL INSTRUCTIONS!

WARNING

WARNING
TO REDUCE THE RISK OF FIRE,ELECTRIC SHOCK OR OTHER PERSONAL INJURY, MOUNT FAN ONLY TO A U.L LISTED OUTLET BOX OR SUPPORTING
SYSTEM MARKED ACCEPTABLE FOR FAN SUPPORT AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX IN CONJUCTION WITH THE
LOCK WASHERS PROVIDED WITH THE FAN. MOST OUTLET BOXS COMMONLY USED FOR FAN SUPPORT OF LIGHTING FIXTURES ARE NOT
ACCEPTABLE FOR FAN SUPPORT AND NEED TO BE REPLACED. CONSULT A QUALIFIDE ELECTRICIAN IF IN DOUBT.

TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE HOLDERS WHILE INSTALLING BALANCING THE BLADES OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

TO REDUCE THE RISK OF FIRE OR ELECTRONIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE .


PACKAGE CONTENTS

Unpack your fan and check the contents. You should have the following items:

- 1. Fan blades(4) 2. Blade holders (4)
- 3. Mounting bracket
- 4. Fan motor assembly
- 5. Motor housing 6. Light kit assembly
- 7. 4W E12 LED bulbs(3)
- 8. Glass shade
- 9. Extra cap 10. Extra finial
- 10. Extra finial 11. Balancing kit

A. Mounting hardware: Wire nuts(3) #8x3/4" Machine screws (2) #10x1.5" Wood screws (2) Star washers (2) Metal washers (2) Lock washers (2) B. Blade attachment hardware: 3/16"x8mm Screws(13) Fiber washers (13) C. Blade holder attachment hardware: 1/4"x12.7mm screws with lock washers(9)

D. Pull chain fobs (2)

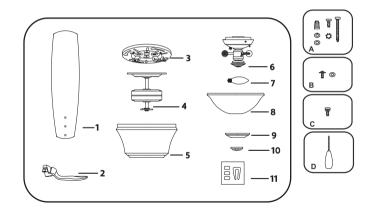

INSTALLING THE MOUNTING BRACKET


Tools Required: Phillips screw driver; slotted screw driver; step-ladder; wire cutters; electrical tape.

WARNING: All of the parts, hardware and components have been provided for your safety and the proper installation of your new ceiling fan. The use of other parts, hardware or components not supplied by Minka Aire® with the fan will void the Minka Aire® Warranty.

REMEMBER To turn off the power. Follow the steps below to hang your fan properly.

Step 1. Attach the mounting bracket to the outlet box with two screws and washers provided with the outlet box. Make sure the bracket is tight and secured. (Fig. 1)

Step 2. Lift fan into position by hanging the motor assembly onto the hook from the ceiling mounting bracket allowing it to hang freely. (Fig. 1)

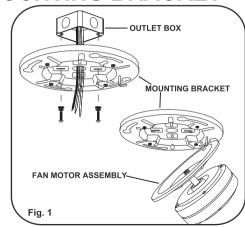

4

ELECTRICAL CONNECTIONS

REMEMBER to shut the power off at the circuit breaker or fuse

Follow the steps below to connect the fan to your house supply wires. Use the wire nuts supplied with your fan. Secure the wire nuts by wrapping the connection with electrical tape.


Step 1. Connect the black (hot) wire from the ceiling to the black and the blue wires from the fan. Connect the white (Neutral) wire from the ceiling to the white wire from the fan. (Fig 2) Step 2. If your outlet has a ground wire (Green or Bare Copper) connect


Step 2. If your outlet has a ground wire (Green or Bare Copper) conn the fan ground wires ((from hanger ball and hanger bracket) to it; otherwise connect the fan ground wire wires from the hanger ball and hanger bracket together. (Fig. 2)

Step 3. Figure 3 & 4 Illustrate the wiring connections using optional wall unit. (Available at your Minka-Aire® Retailer.)
NOTE: If a light kit is not included with your fan, one can be purchased

at your Minka-Aire®Retailer.

FAN CONTROLLED BY PULL CHAIN, LIGHT KIT CONTROLLED BY PULL CHAIN. HOUSE WIRE SUPPLY WHITE (NEUTRAL)-II-II -GREEN (GROUND) BLACK (HOT)-CEILING - WHITE (NEUTRAL) BLACK (MOTOR) GROUND WIRE EXISTS. Fig. 2

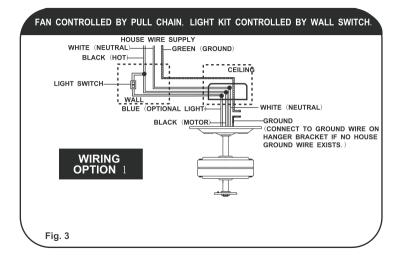

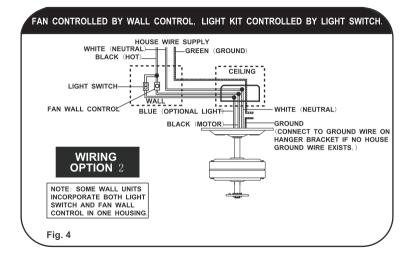

FINISHING THE INSTALLATION

Step 1. Remove one of the four screws on the mounting bracket and loosen, but do not remove, the other three screws.


Step 2. Remove the motor assembly from the J hook.


Step 3. Lift and place the key holes on the mounting plate over the three screws previously loosened on the mounting bracket and turn the mounting plate until it locks in place and no longer turns. (FIG. 5)

Step 4. Secure by tightening the three screws previously loosened and the screw previously removed.

Step 5. Align the four large screwheads pre-locked on the fan housing to the key holes of the mounting bracket.

Step 6. Turn the fan housing at the right side and twist the screwheads to the end of the slotted holes until they lock in place and no longer turn. WARNING: Ensure you complete this step correctly and follow all steps. Failure to correctly follow this step might cause the fan to fall.

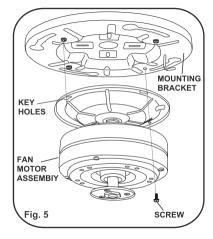

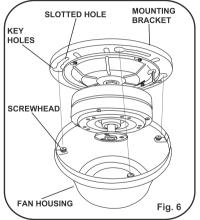



BLADE INSTALLATION

THE FOLLOWING OPERATION MUST BE ACCOMPLISHED BEFORE INSTALLING THE SWITCH CUP.

Step 1.Attach the fan blade to the blade holder using the screws and fiber washers provided. Tighten screws securely. Repeat process for remaining blades.(Fig.7)

Step 2. Rotate the motor so that the screw holes in motor are aligned with the holes in blade holder and secure with proper screws. Repeat process for the other blade holders. (Fig. 8)

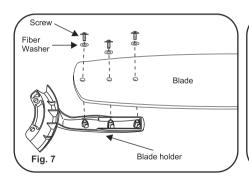

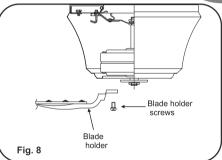


7

INSTALLING THE LIGHT KIT ASSEMBLY

- Step1. Remove the light kit plate from the light kit assembly by removing three screws from the rim of the light kit plate and reserve the screws.
- Step2.Remove 1 of 3 screws from the mounting ring and loosen the other 2 screws.(Do not remove.) (Fig.9)
- Step3. Place the key holes from the light kit plate over the 2 screws previously loosened from the mounting ring, turn light kit plate until it locks in place at the narrow section of the key holes. Secure by tightening the 2 screws previously loosened and the one previously removed. (Fig. 9)
- Step4. While holding the light kit assembly under your fan, firmly snap the wire connection plugs together. (Fig. 9)
- Step5.Align the holes in the light kit assembly with the holes in the light kit plate.

 Tighten the three screws removed in step1.(Fig. 9)

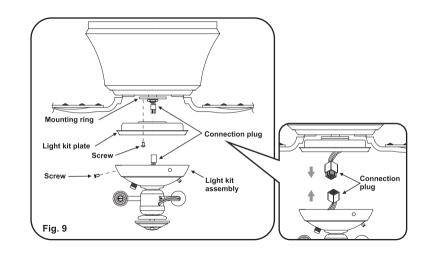


INSTALLING THE GLASS SHADE & LIGHT BULB

WARNING: Shut of the power supply before removing or replacing lamp. If you accidentally come into contact, wipe thoroughly with a clean, lint-free,cotton cloth. Use light bulb in accordance with the fan's specification. TO REDUCE THE RISK OF FIRE DO NOT EXCEED MAXIMUM WATTAGE RATING.

Step1. Install 3*4W E12 LED bulbs (included) into socket.(Fig.10)

Step 2. Remove the rubber washer, metal washer, metal nut, metal cup and finial from the light kit assembly. Place glass shade over the light kit stem, secure with the rubber washer, metal washer, metal nut, metal cap and finial. Do not over tighten. (Fig. 10)


Step 3. Attach the pull chain fob to the chain on the light kit assembly.

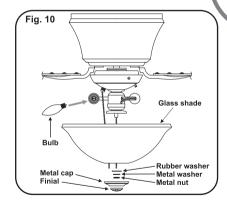

Remarked: the fan is provided extra cap and finial, which can be used when the fan is installed with univeral remote control(Not Provided)

a) Before install the univeral remote control(Not Provided), please make sure the fan speed pull chain control is set to "high speed"and the light pull chain control is set to " on" status. b)Cut off the unnecessary length of pull chain.

c) Remove the original cap and finial with hole and replace the extra cap and finial without hole.

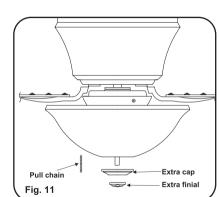

OPERATING YOUR FAN

Restore power to ceiling fan and test for proper operation.

Speed settings for warm or cool weather depend on factors such as the room size. Ceiling height, number of fans, etc.

The Reverse switch is located on the switch cup. Slide the switch to the Left for warm weather operation. Slide the switch to the Right for cool weather operation.

NOTE: Wait for fan to stop before changing the setting of the slide switch.

Warm weather - (Forward)


A downward airflow creates a cooling effect as shown in Fig. 12. This allows you to set your air conditioner on a warmer setting without affecting your comfort.

Cool weather - (Reverse)

An upward airflow moves warm air off the ceiling area as shown in Fig. 13. This allows you to set your heating unit on a cooler setting without affecting your comfort.

The fan pull chain controls the fan speed as follows: 1st pull - High, 2nd pull - Med, 3rd pull - Low and 4th pull - Off.

The light kit pull chain controls the light kit in "ON" or "OFF".

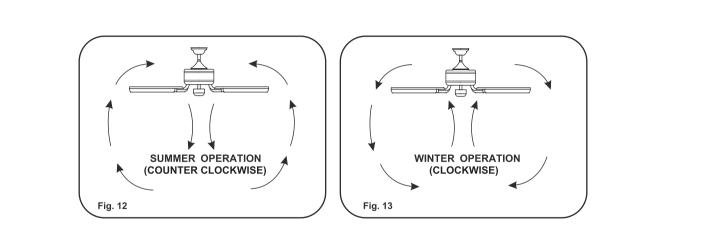

10

CARE OF YOUR FAN

4. There is no need to oil your fan. The motor has permanently lubricated bearings.
5. If your fan is provided with glass shades, clean with lukewarm soapy water and a soft cloth or sponge. DO NOT IMMERSE GLASS SHADES IN HOT WATER. DO NOT PUT GLASS SHADES INTO AN AUTOMATIC DISHWASHER.

WARNING
MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PAEL BOX
BEORE YOU ATTEMPT ANY REPAIRS. REFER TO THE
SECTION ELECTRICAL CONECTIONS.

Here are some suggestions to help maintain your fan.

1.Because of the fan's natural movement some connections may become loose. Check the support connections, brackets and blade attachment twice a year. Make sure they are secure.(It is not necessary to remove fan from the ceiling).

2.Clean your fan periodically to help maintain its new appearance over the years. Use only a soft brush or lint free cloth to avoid scratching the finish. Plated finishes are sealed with lacquer to minimize discoloration or tarnishing.

Do not use water when cleaning, this could damage the motor, wood blades or possibly cause an electrical shock.

3.Use a lint free lightly damp cloth or duster to remove dust from the blades.

TROUBLESHOOTING

SYMPTOM
Fan will not start

SOLUTION

- Check to make sure the wall switch is turned on.
- Check circuit fuses or breakers.
- Caution! Make sure the power is turned off before performing the following steps.

SYMPTOM

Fan Sounds Noisy

SOLUTION

- Allow a 24 hour "break in "period. Most noises associated with a new fan will go away during this time.
- Make sure the screws that attach the fan blade holder to the motor hub is tight.
- Make sure outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
- Make sure hanger bracket is secure to the outlet box, screws are tight.

NOTE: All blade sets are grouped by weight. Because wood and plastic blades vary in density, the fan may wobble even though blades are matched.
 Make sure outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
 Make sure hanger bracket is secure to the outlet box, screws are tight.
 If a Balancing kit is provided follow the instructions included with the balancing kit to help correct any excessive wobble.

SYMPTOM Fan Wobble SOLUTION

SPECIFICATIONS


These are typical readings. Your actual fan may vary. They do not include amps and wattage used by the light (s).

For any additional information about your Minka Aire Ceiling fan, please write to:

Fan Size	Speed	Volts	Amps	Watts	RPM	N.W.	G.W.	C.F.
52″	Low	120	0.26	14.39 64.92	73	8.28	9.95	2.41
52	High	120	0.55	64.92	158	kgs	kgs	



PERFORMANCE AND ENERGY INFORMATION

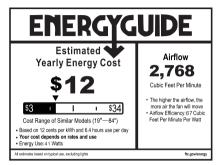

FAN SPEED	AIRFLOW (CFM)*	POWER USE (watts)	AIRFLOW EFFICIENCY (CFM/watt)
Low	933	14.39	64
High	3504	64.92	53

Ceiling fan airflow is measured in cubic feet per minute (CFM). Power use is measured in watts. To maximize energy savings:

- Choose a fan with high airflow efficiency (CFM/watt).
- Use ENERGY STAR®-labeled lighting in your fan.
- · Remember to switch off your fan when you leave the room.
- * Measured according to the ENERGY STAR® approved Solid State test method

