 


Instruction Manual

Tower Fan

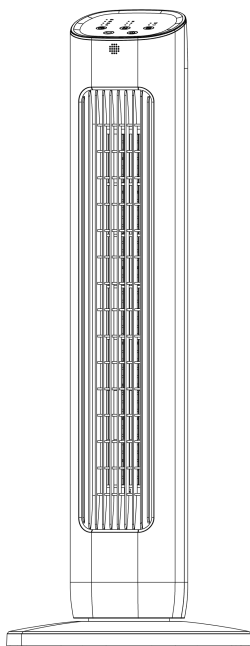

Model No.:NDTFT21RB

Please read this manual carefully before operating this product.
Keep this manual for further reference.

Part 1 IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be obeyed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electric shock, or personal injuries:

1. This fan is for household use only.
2. Before first use, check whether your voltage corresponds to the product nameplate requirements.
3. For safety reasons, please check the status of the power cord and plug before use.
4. When not in use, be sure to turn off the fan and unplug it from the power socket.
5. Be careful when using this equipment near children.
6. Do not run the power cord under carpets, and do not cover the cord with throw rugs. Do not put cord under furniture or appliances. Arrange cord away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged cord or plug. Discard the fan or return it to an authorized service facility for examination and repair.
8. If the fan's power supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid potential safety hazards.
9. Use the fan in well-ventilated areas. Place the fan at least 8 inches from any walls to ensure the proper air flow during use. The fan cannot be located directly under or close to the curtain.
10. Do not obstruct the airflow with any objects or place anything in the opening of the fan.
11. Do not use the fan in areas where curtains may be sucked in.
12. Only place the fan on a hard, flat, dry floor.

13. Do not use the product in extreme temperatures, humidity, or dusty environments.
14. Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the cord inside to cause damage.
16. When the fan is oscillating, do not touch the fan manually to avoid damage.
17. Be sure to turn off the power supply before unplugging the power cord from the power outlet to avoid short circuit, fire, or electric shock.
18. Do not twist or pull the power cord out.
19. In order to avoid the danger of electric shock, do not unplug the fan when your hands are wet.
20. Children under 8 years old should not operate the fan.
21. This appliance is not suitable for people (including children) with reduced physical/sensory/mental abilities or people who lack experience and knowledge. Unless the above-mentioned people are supervised or instructed by a person who is responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Ensure that the fan is switched off and unplugged from the power supply before removing the guard.
24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
25. Please unplug or disconnect the appliance from the power supply before the repair work is carried out.
26. This product has overload protection (fuse). A blown fuse indicates an overload or short circuit. If the fuse is blown, unplug the product from the socket. Replace the fuse (select the appropriate fuse rating according to the product label) by following the user maintenance instructions and checking the product. If the replacement fuse is blown, there may be a short circuit, and the

product should be discarded or returned to an authorized service facility for examination/repair.

Warning:

This appliance has a polarized plug (one blade is wider than the other). In order to reduce the risk of electric shock, the plug can only be inserted into the electrical outlet/receptacle one way. If the plug cannot be fully inserted into the power outlet, reverse the plug. If it is still not suitable, please contact a qualified electrician. Do not attempt to destroy this safety function alone.

To Change the fuse

The following should ONLY be conducted by qualified professionals:

1. Grasp the plug and remove it from the electric receptacle. Do not unplug by pulling on the cord.
2. As shown in the figure below, slide the fuse access cover on the top of the plug towards the blade and open the fuse cover.
3. Remove the fuse carefully. Push the fuse from the other side or turn the fuse holder upside down to remove fuse.



4. Fire risk. Replace the fuse only with a 5-amp 125-volt fuse.
5. Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
6. Fire risk. Do not replace the polarized plug as it has a safety device that should not be removed.

Discard the product if its polarized plug is damaged.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical **Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep them away from children. **DO NOT** dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025.
- e) Battery nominal voltage: 3.0 Vdc
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 F), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands, or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

SAVE THESE INSTRUCTIONS


Part 2 Brief introduction

This tower fan is equipped with multiple functions, such as 3 speeds, 2 modes, 85-degree oscillation, 15-hour timer, and remote control. With the above functions, our tower fan can provide a cool, healthy, and luxurious lifestyle.

Part 3 Specification

MODEL NO.	RATED	POWER
NDTFT21RB	120V, 60Hz	50W

 Part 4 Structure and parts

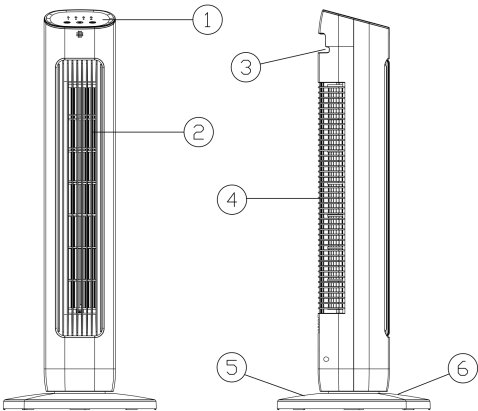


Parts list	
Description	Quantity
Remote Control	1
Instruction Manual	1
Base	2
Screw (ST4*12mm)	6


1. Control panel
2. Air outlet
3. Remote control storage
4. Air inlet
5. Base A
6. Base B

Part 5 Installation

  
1. Take out the two bases from the gift box. Connect them together. Then fasten two bases by 2 pcs ST4*12mm screws.(As shown below)

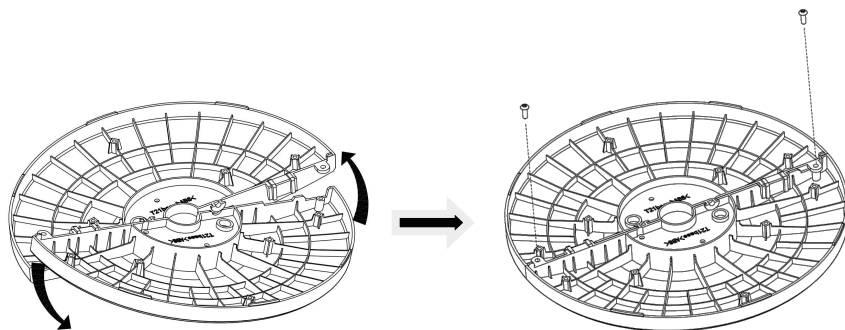

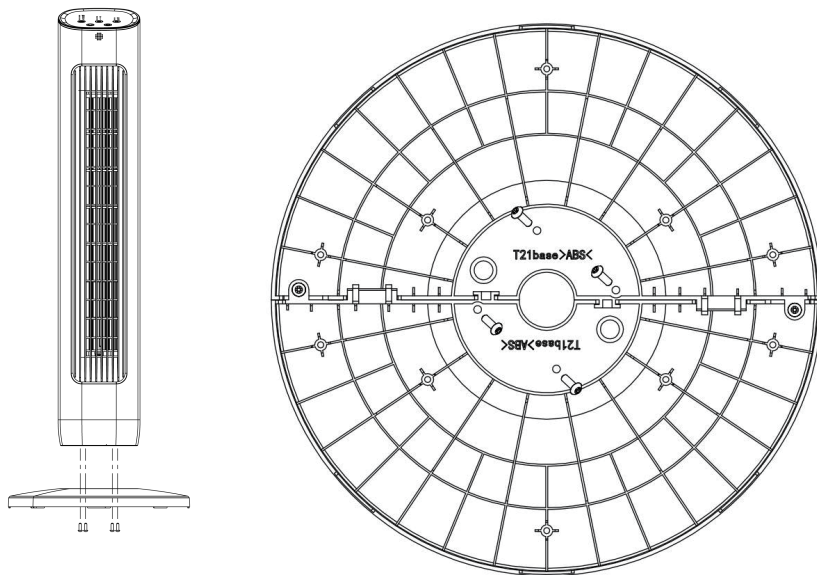

 2. Connect the fan body to the base with 4 pcs ST4*12mm screws (As shown below).



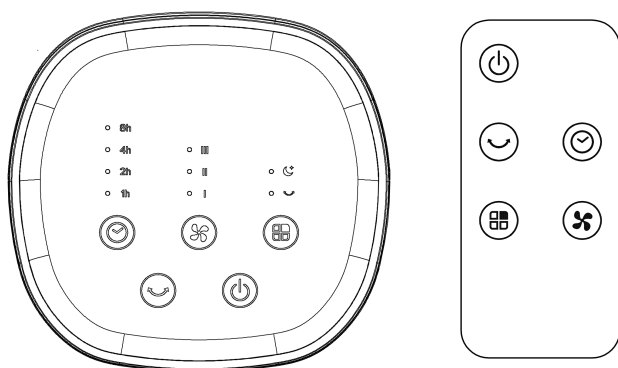

Part 6 Function




1.  is the power button



2.  is the oscillation button

3.  is the fan mode button


4.  is the timer button

5.  is the fan speed button



1. ON/OFF

Press  on the remote control or control panel to turn the fan ON/OFF. Press once, the fan will start operation. Press  button again to stop the fan.



2. Mode

The model has two modes: Normal/ Sleeping. When you turn on the fan, the default mode is Normal wind mode. If you want to change the mode, please press  on the remote control or the control panel, and the mode will change to the sleep mode.


Sleep wind mode:

The Sleep light indicator  will display when this mode is selected, the fan will run into the Min normal wind and the buzzer will be turned off immediately. 5 seconds after the cessation of the manual operation, the light will dim and then go out. If you want to change the wind speed, just Press  on the remote control or control panel to choose wind speed to choose the wind speed ranging from 1-3. In this mode, the wind speed will be reduced by one level every half an hour, and the level 1 wind speed will be maintained until it is turned off.


3. Oscillation

Press  button on the remote control or control panel, and the fan will oscillate from the left to the right automatically. Press  button on the remote control or control panel again to stop oscillating.

4. Timer

Press  on the remote control or control panel to select the timer you want, every push will add 1H. The timer ranges from 1 to 15 hours.

5. Wind Speed

Press  on the remote control or control panel to choose wind speed, the wind speed ranges from 1-3.

Part 7 Maintenance and Storage

1. Always remove the plug from the socket-outlet and allow the fan to stop before cleaning it.
2. Clean the external surfaces of the fan with a soft damp cloth (not dripping wet cloth).
3. When the unit is not in use, make sure that it is unplugged from the wall socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.
4. In case of malfunction or doubt, do not try to repair the fan by yourself; otherwise it may result in a fire hazard or electric shock.

WARNING:

Do not immerse the fan in water.

Do not use any cleaning chemicals such as detergent and abrasive.

Do not allow the interior to get wet as this could cause dangerous consequences.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, product damage, product assembly and operation etc., please contact us via customer service phone:

213-4467172

IMPORTANT

Simply call our customer service department for any consulting:

213-4467172

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY
SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE
GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio
al cliente en caso de tener preguntas o inquietudes:

213-4467172

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO
BAJO GARANTÍA.

ROWAN ELECTRIC APPLIANCE LLC

213-4467172