


INSTALLATION INSTRUCTIONS


Dimensions and Clearances

The rangetop may be installed flush to the rear wall. You may install a non-combustible material on the rear wall above the cooktop and up to the vent hood. It is not necessary to install non-combustible materials behind the rangetop below the counter top height.

The minimum distance from the side of the rangetop above the counter top to combustible sidewalls must be at least 10 inches.

INSTALLATION INSTRUCTIONS

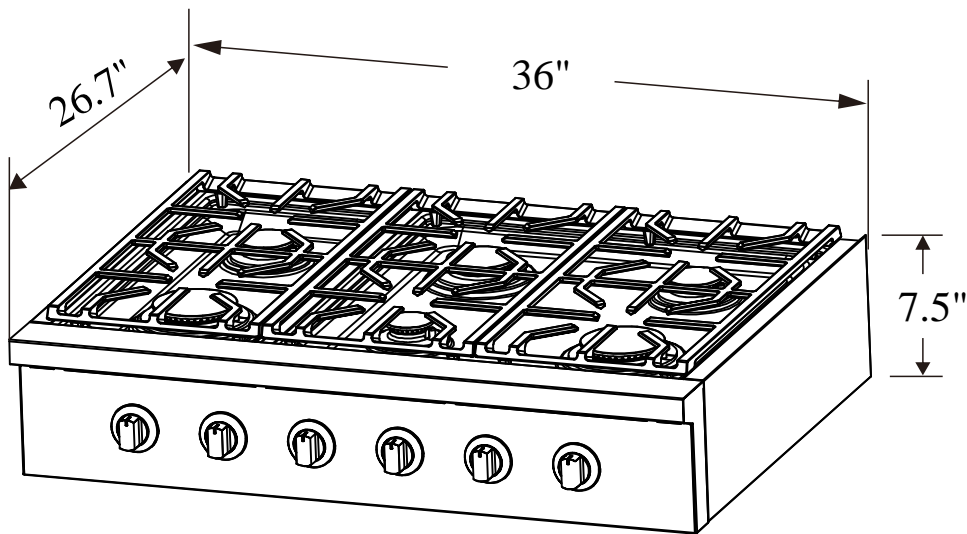


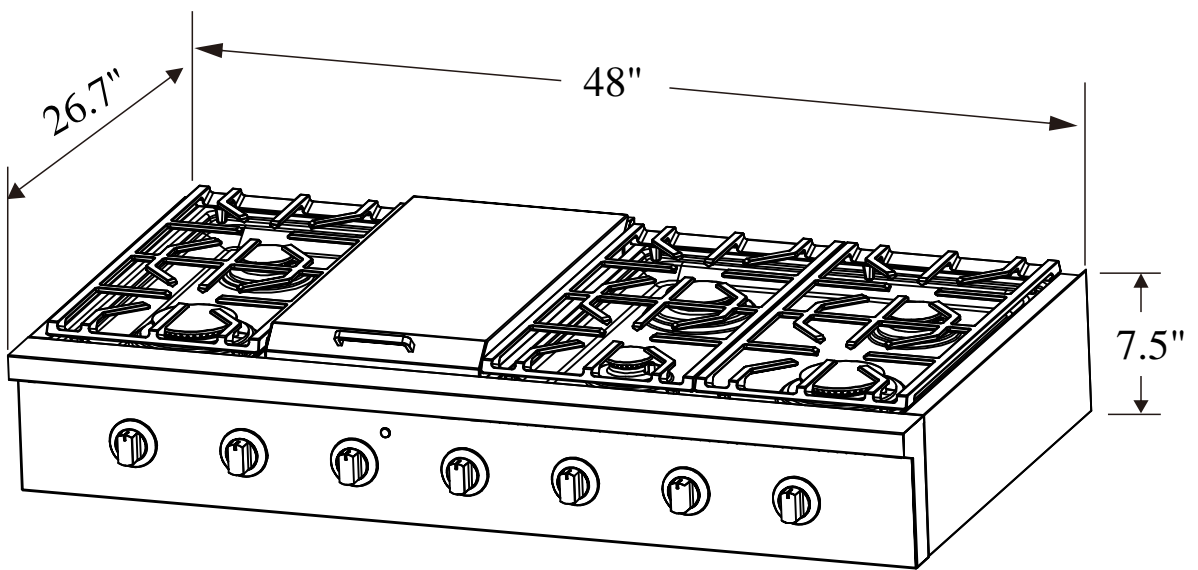


Installation

Dimensions and Clearances

Cabinet tolerances $\pm 1/16"$ (± 1.6 mm) unless otherwise noted.

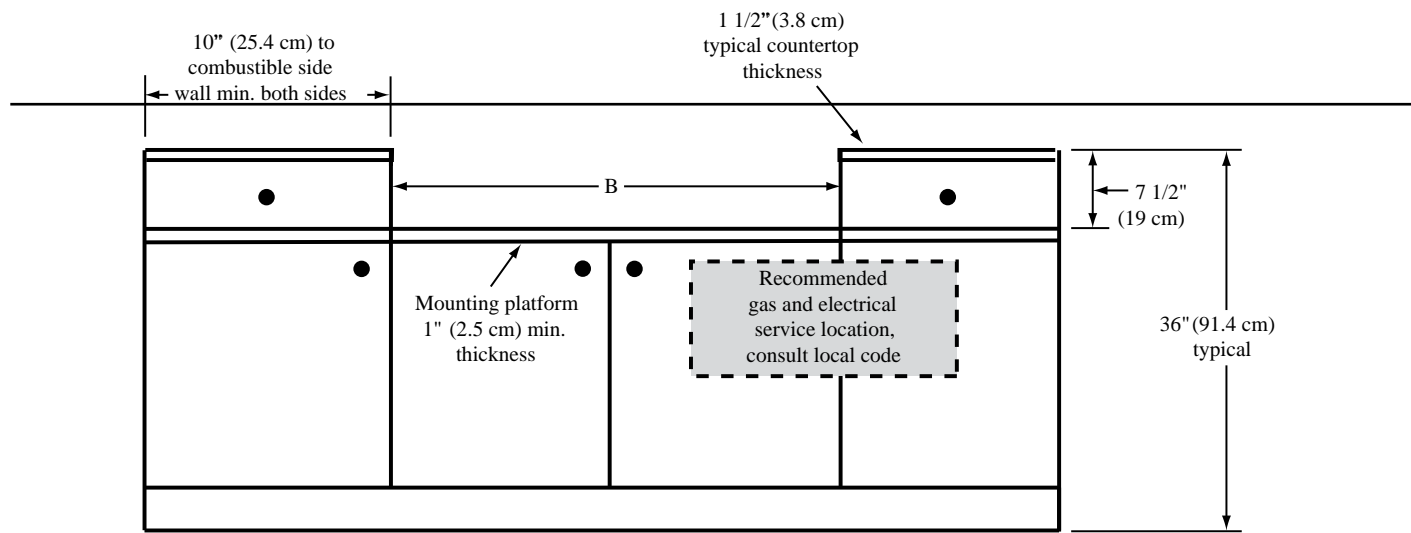

Cabinet/Countertop Dimensions - Front View

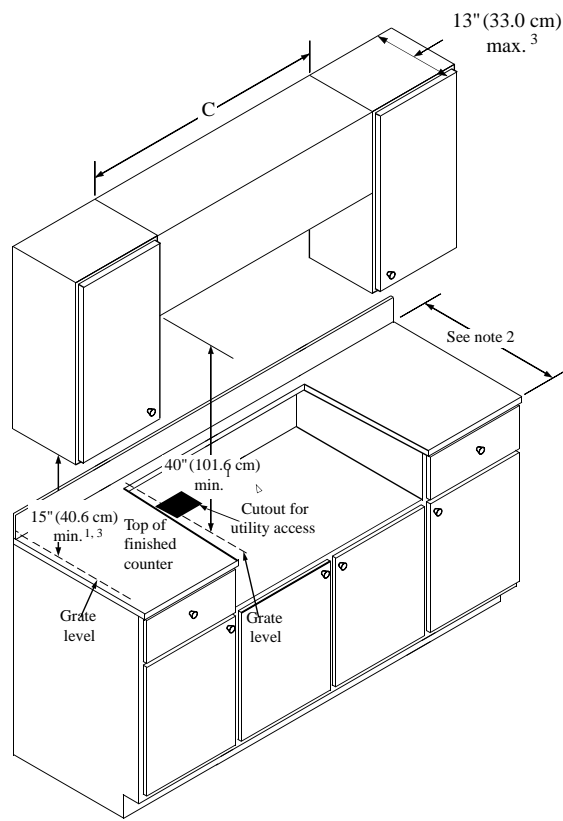


Cabinet/Countertop Dimensions - ISO View


B	C
36" (91.4 cm)	36" (91.4 cm) * 42" (106.7 cm) **
48" (121.9 cm)	48" (121.9 cm) * 54" (137.2 cm) **
* Minimum	** Recommended

- ¹ Vertical to combustable surface from rangetop grate level; if installing an overhead vent hood, also check the hood specifications for minimum required clearances.
- ² See Cabinet/Countertop Dimensions - Top View
- ³ This specification not applicable for cabinets more than a horizontal distance of 10" (25.4 cm) from the


Cabinet tolerances $\pm 1/16"$ (± 1.6 mm) unless otherwise noted.

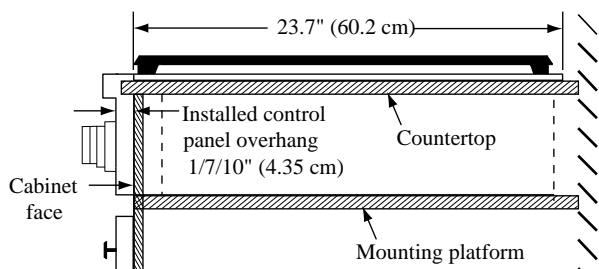

Installed Rangetop - Side View

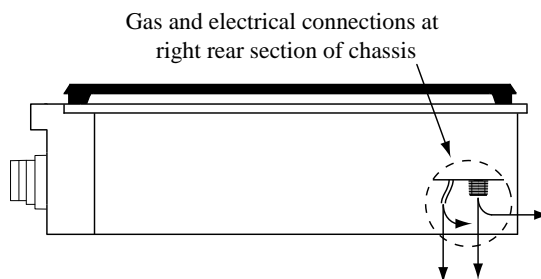

Gas connection and power cord may be routed through bottom or back of chassis

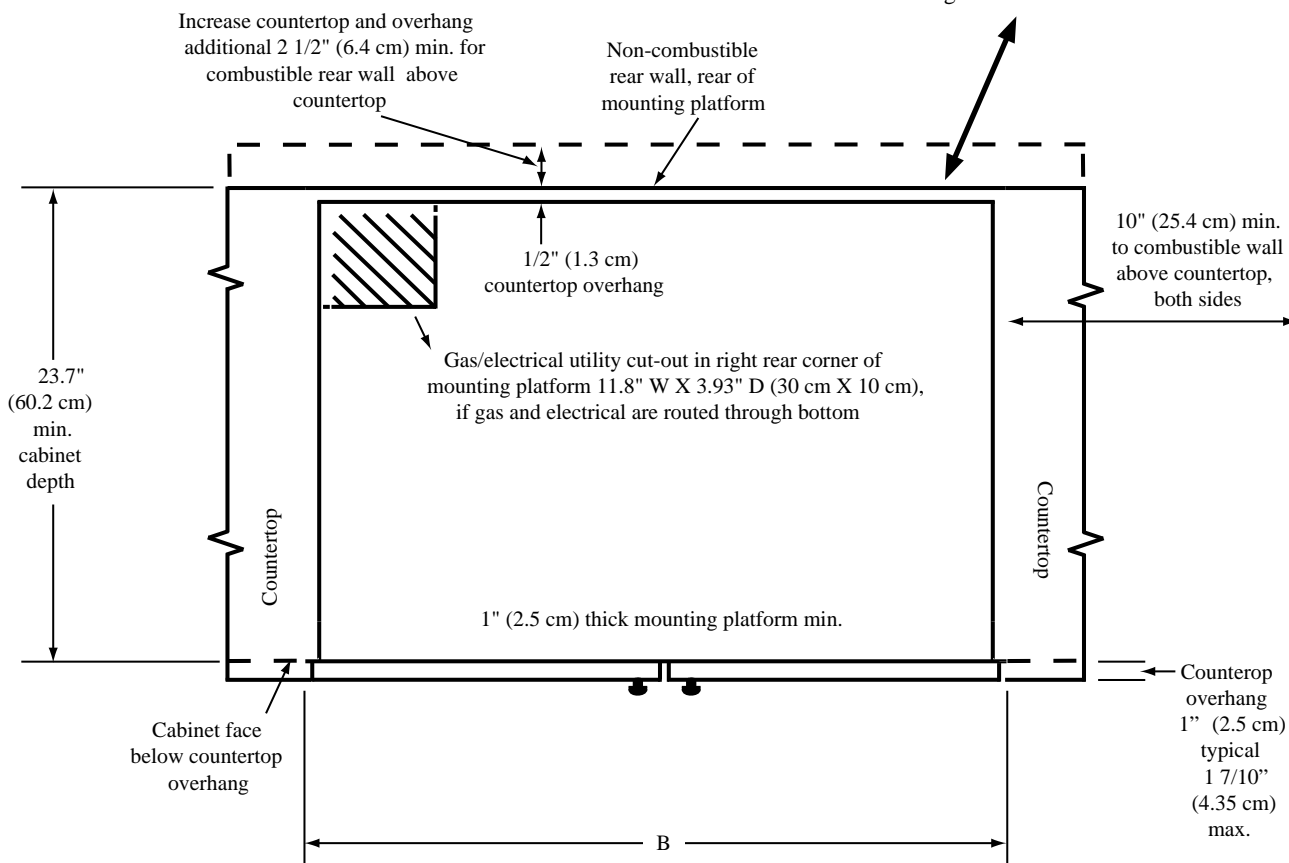

IMPORTANT: Use only the downdraft vent models specified.