

Figure 1: To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.



## Flip Flop Bookcase - HCBCF2822 1 CARTON: HCBCF2822

Organize your parts and hardware. You will need (1) people and a Phillips head screwdriver. Hardware :

A: Cam Pins(4) • B: Cam Locks(4) • C: Dowel Rods(2) • D: Allen Key • E: Inserts(4) • F: Glue



**STEP 2:** Fold out the legs and flip down the shelves on the Bookcase Shell(G). Place 4 Cam Locks(B) in the Bookcase Shell with the arrow on the locks facing up.



STEP 1: Insert some Glue(F) then 2 Dowel Rods(C) into the Bookcase Top(H) in the holes marked (a). Place 4 Inserts(E) in location (b). Screw 4 Cam Pins(A) into the Inserts(E).

**STEP 3 :** Attach Bookcase Top(H) to the Bookcase Shell(G) by inserting cam pins into locks and locking them tight using Allen Key(D). (see fig 1)



## **IMPORTANT NOTICE:**

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Check to be sure that you have all parts and hardware.

Remove all wrapping materials, including staples & packing straps before you start to assemble.

Do not tighten all screws/bolts until completely assembled.

Keep all hardware parts out of reach of children.