

styleselections®

 
Style Selections® is a registered trademark of LF, LLC. All rights reserved.

ELECTRIC FIREPLACE WITH MEDIA MANTEL

MODEL #88294/26MM20243-C278

Français p. 18

Español p. 35

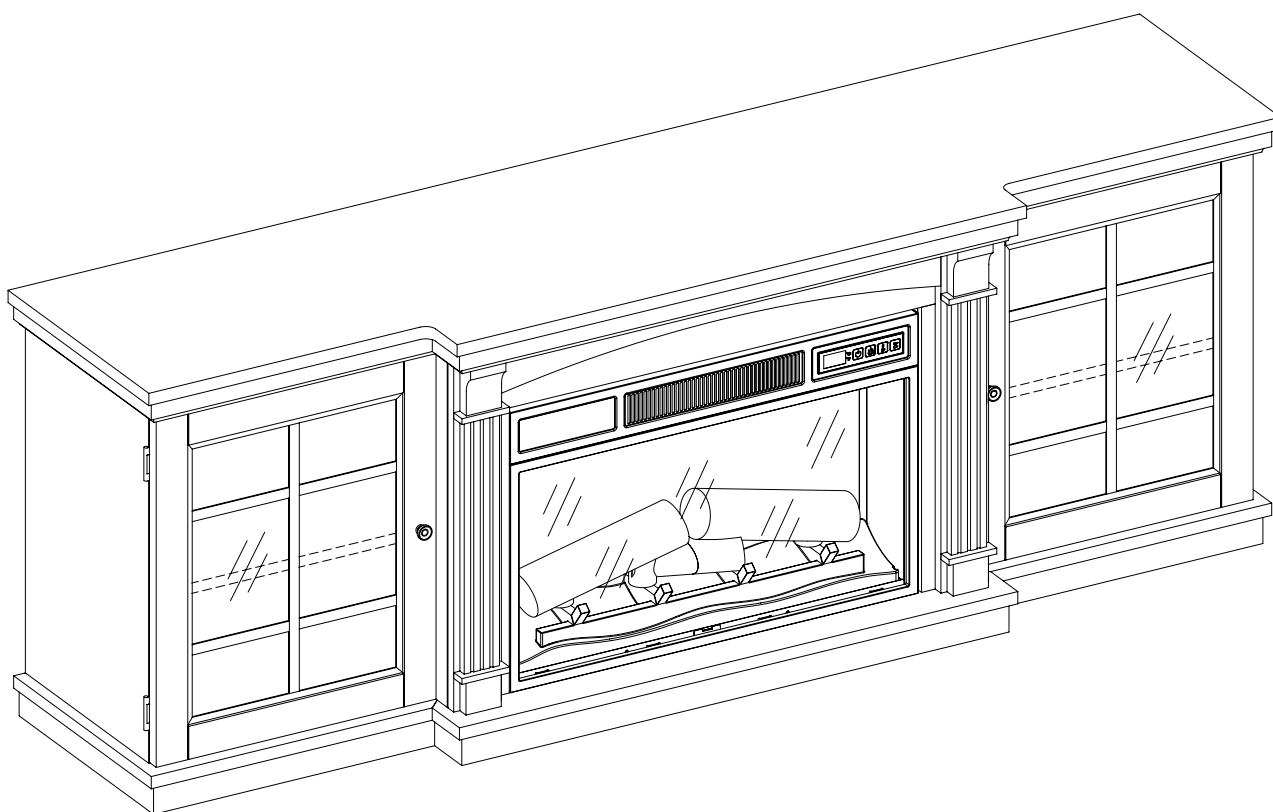

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

TABLE OF CONTENTS

Product Specifications 2

Safety Information 3

Package Contents 6

Hardware Contents..... 7

Preparation 8

Assembly Instructions..... 8

Operating Instructions 13

Care and Maintenance 14

Troubleshooting..... 15

Warranty 16

Replacement Parts List 17

PRODUCT SPECIFICATIONS

VOLTAGE	120VAC, 60 Hz
AMPS	12.5 Amps
WATTS	1,500 Watts

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

DANGER:

- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never place this appliance where it may fall into a bathtub or other water container.

WARNING:

- Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given proper instructions or are being supervised carefully.
- Do not swallow batteries. Seek emergency care if batteries are ingested.
- Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electrical shock or personal injury.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the appliance.

CAUTION:

 
- High temperatures may be generated under certain abnormal conditions. Do not partially or fully cover or obstruct the front of this heater.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This heater includes a visual alarm to warn when parts of the heater are getting excessively hot. If the alarm flashes, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures.

DO NOT OPERATE THE HEATER WITH THE ALARM FLASHING!

- In order to avoid overheating, do not cover the heater.
- Do not use outdoors.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where opening may become blocked.
- This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. This fireplace should not be used as a drying rack for clothing. Christmas stockings or decorations should not be hung in the area of it.

! SAFETY INFORMATION

- To disconnect this appliance, turn controls to the off position, then remove plug from outlet.
- Connect to properly grounded outlets only. This heater is for use on 120 volts. Do not use 2-prong adapters. Never use with an extension cord or relocatable power tap (outlet/power strip).

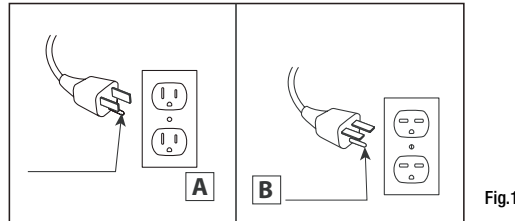

- This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadian Electrical Code. For U.S.A. installations, follow local codes and the National Electrical Code, ANSI/NFPA NO.70.
- Make sure the power is turned off before proceeding. Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes. If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed.
- Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.
- Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.
- During any service of this appliance, the power to the unit must be turned off. First turn the main power switch to the OFF position, then remove the electrical plug from the wall outlet.
- Never leave the heater operating unattended. Extreme caution is necessary if unsupervised children or invalids are nearby.
- Always unplug this appliance when not in use.
- Do not operate any heater with a damaged cord or plug or after the appliance malfunctions, or if it has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon Zinc), or rechargeable (NiCd, NiMH, etc.) batteries.

SAFETY INFORMATION

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product
- Non-rechargeable batteries are not to be recharged.

SAVE THESE INSTRUCTIONS.



Cold-climate installation: It is mandatory the outer walls be insulated to conform to applicable insulation codes.

ELECTRICAL CONNECTION

A 15-Amp, 120-volt, 60 Hz circuit with a properly grounded outlet is required. Preferably, the fireplace will be on a dedicated circuit as other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the heater is in operation. The unit comes standard with 6 ft. three-wire cord, exiting from the rear of the fireplace.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.


PACKAGE CONTENTS

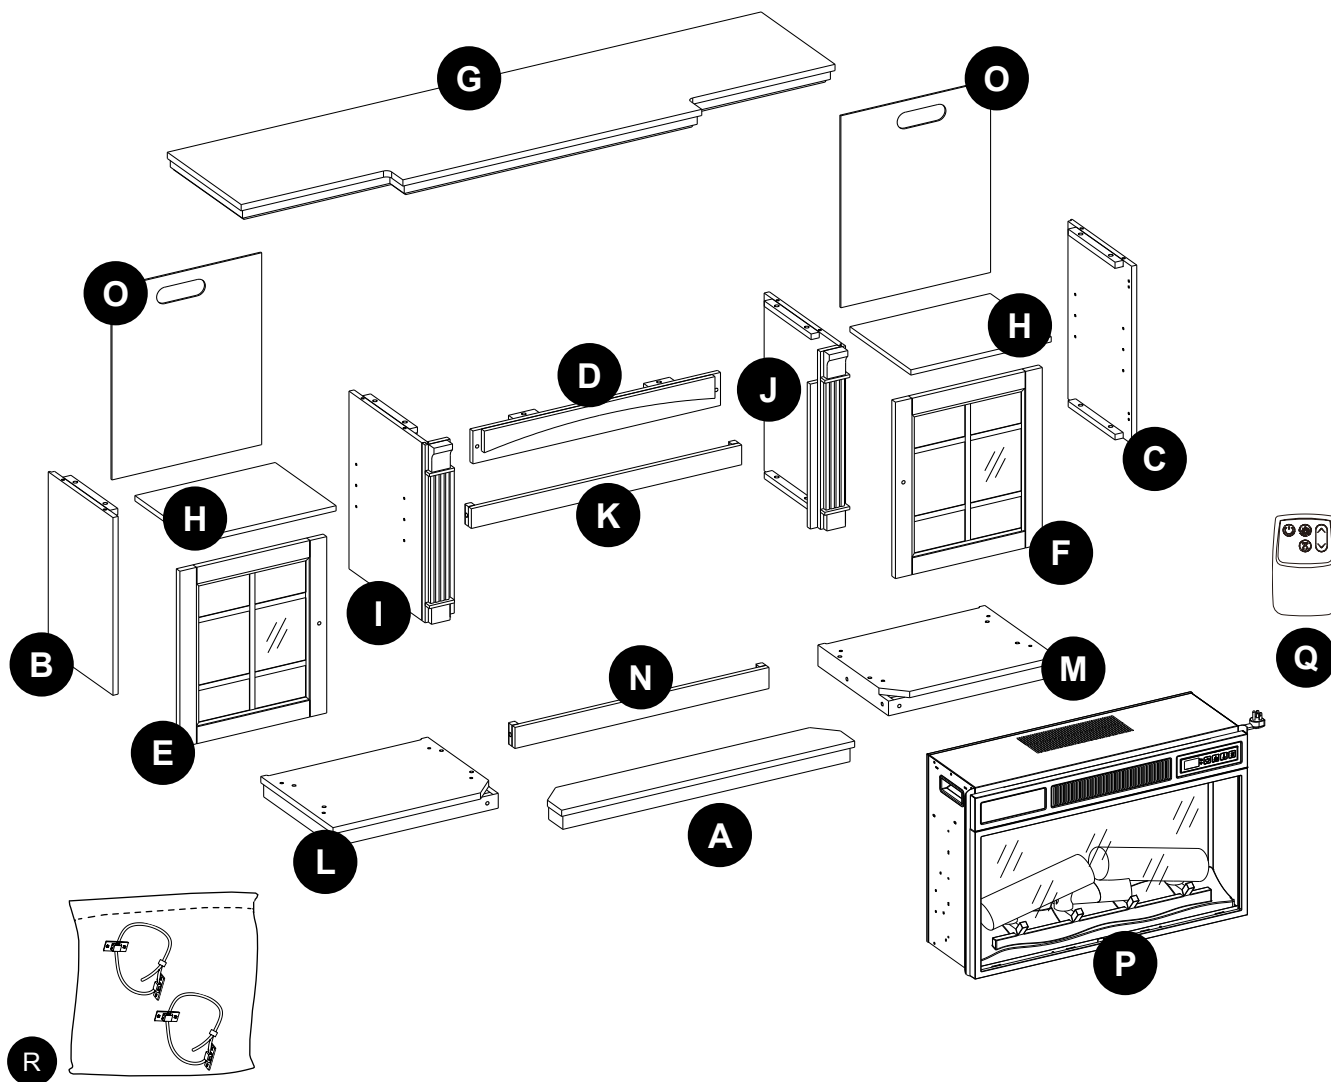

PART	DESCRIPTION	QUANTITY
A	Front Base	1
B	Left Side Panel	1
C	Right Side Panel	1
D	Center Front Panel	1
E	Left Door	1
F	Right Door	1
G	Mantel Top	1
H	Wood Shelf	2
I	Left Partition	1
J	Right Partition	1
K	Insert Support Bar	1
L	Left Base	1
M	Right Base	1
N	Lower Insert Support Bar	1
O	Rear Panel	2
P	Insert	1
Q	Remote	1
R	Tipping Restraint Hardware Pack	1

HARDWARE CONTENTS (shown actual size)

 AA




Bolt
Qty: 28

BB




Washer
Qty: 28

 CC




Wood Dowel
Qty: 16

 DD




Truss Head
Screw
Qty: 28

 EE

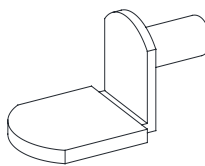


Shelf Pin
Qty: 8

 FF

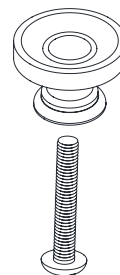


Door Pull
(Not to scale)
Qty: 2

 GG




Screw
Qty: 16

 HH

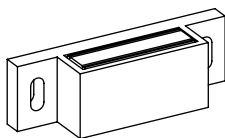


Magnetic Spring
Catch
(Not to scale)
Qty: 2

 II



Catch Screw
Qty: 4

 JJ



Hinge
(Not to scale)
Qty: 4

KK



Touch-up Pen
(Not to scale)
Qty: 1

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. To protect the product from possible scratches, please assemble the parts on a scratch-free surface.

 
Estimated Assembly Time: 60 minutes

Tools Required for Assembly (not included): Phillips screwdriver, scissors and utility knife.


ASSEMBLY INSTRUCTIONS

CAUTION: Hand tighten all connections; do not use a drill.


1. Push the left base (L) and right base (M) snug to the front base (A) and lower insert support bar (N). Secure using bolts (AA) and washers (BB).

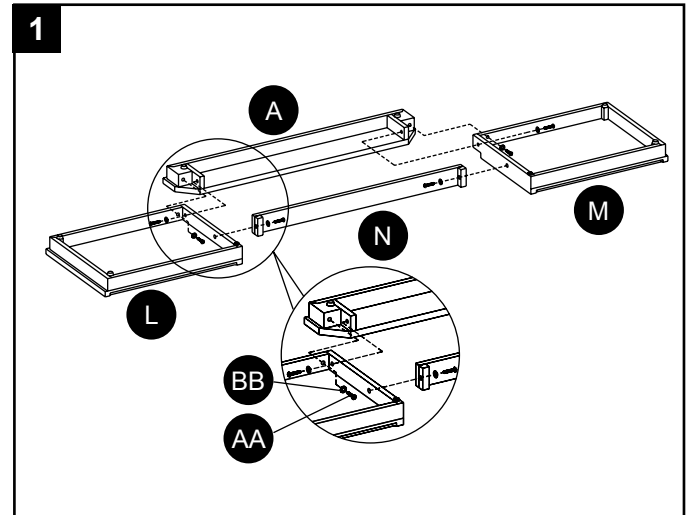


2. Attach the magnetic spring catch (HH) to the left partition (I) and right partition (J) using catch screws (II) and tighten.

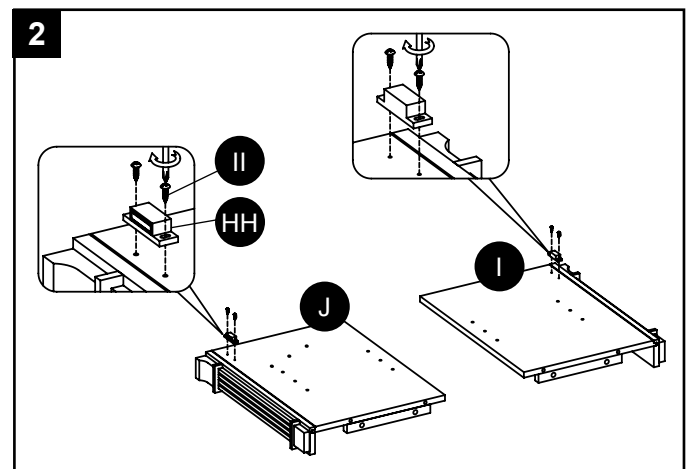 


 
3. Insert wood dowels (CC) into assembly where shown, then attach left side panel (B), left partition (I), right partition (J) and right side panel (C). Secure using bolts (AA) and washers (BB).

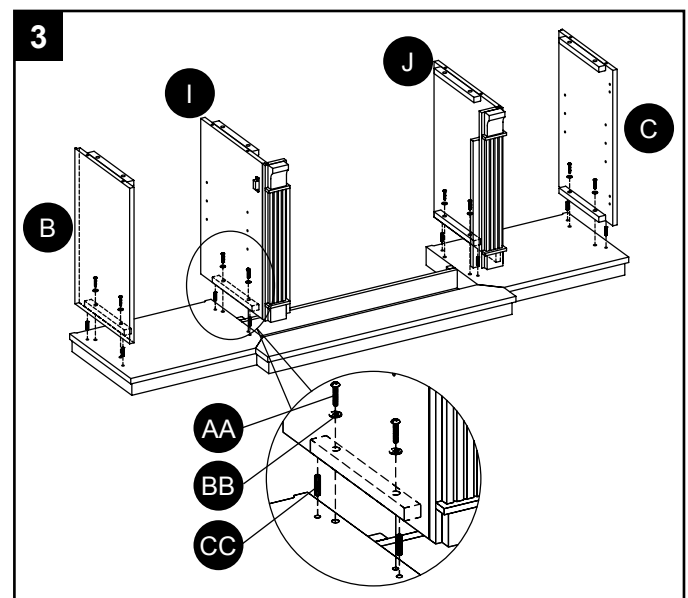


Hardware Used

 AA	Bolt		x 6
BB	Washer		x 6

  Hardware Used


HH	Magnetic Spring Catch		x 2
II	Catch Screw		x 4

 
Hardware Used

AA	Bolt		x 8
BB	Washer		x 8
CC	Wood Dowel		x 8

4. Attach center front panel (D) between left partition (I) and right partition (J) using bolts (AA) and washers (BB).

 Hardware Used


AA	Bolt		x 2
BB	Washer		x 2

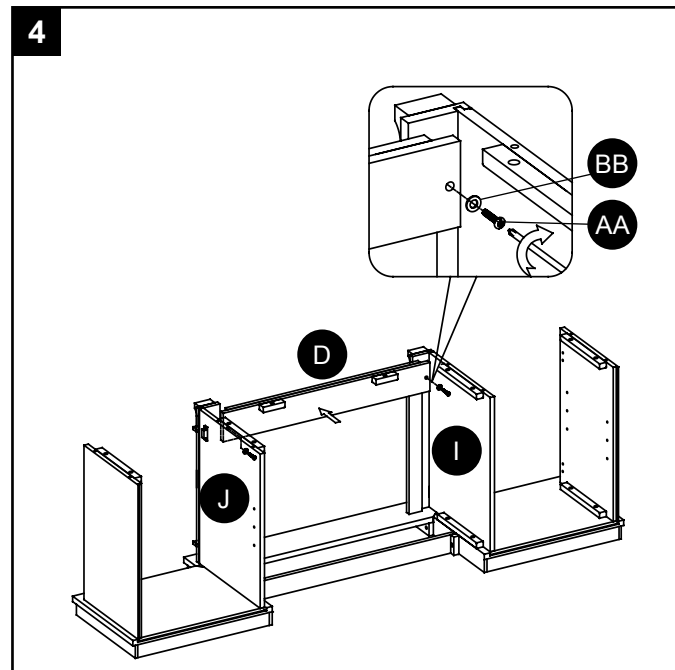 


5. Insert wood dowels into assembly where shown, then attach mantel top (G). Secure from underneath using bolts (AA) and washers (BB).

Then, before proceeding to the next step, go back with a Phillips screwdriver (not included) and ensure all connections are tight.

 
Hardware Used


AA	Bolt		x 10
BB	Washer		x 10
CC	Wood Dowel		x 8

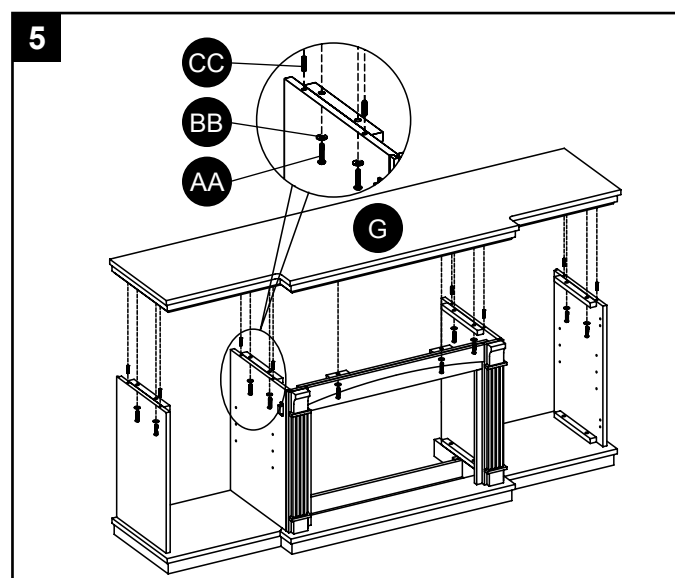 

6. Attach the rear panels (O) to the back of the assembly using truss head screws (DD) through the pre-drilled holes on the panels.


 
Hardware Used


DD	Truss Head Screw		x 28
----	------------------	---	------

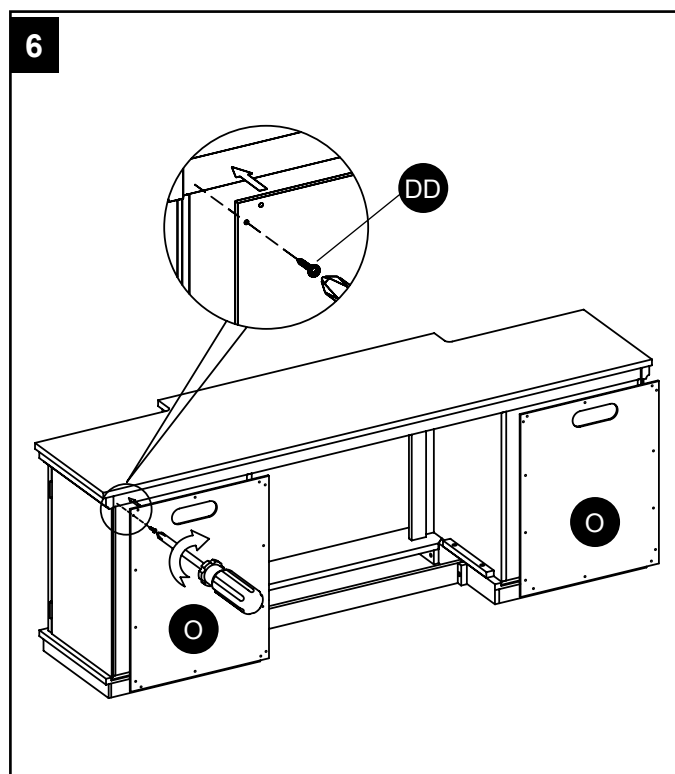 

7. Attach the hinges (JJ) to the left door (E) and right door (F) using screws (GG) and tighten securely.

  Hardware Used


GG	Screw		x 8
JJ	Hinge		x 4

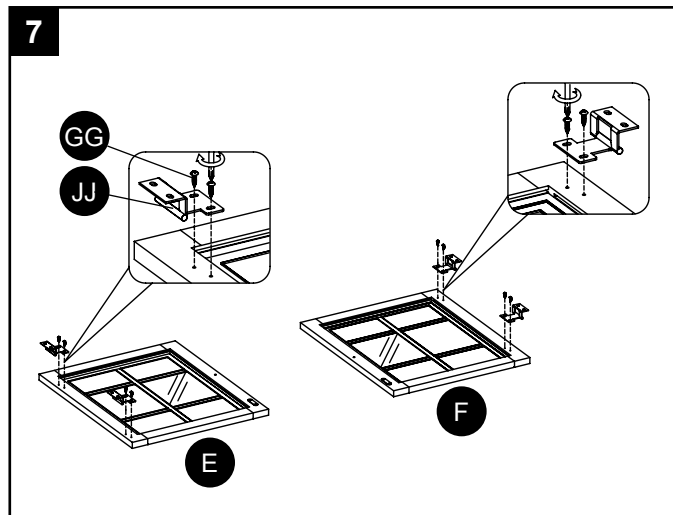 


8. Attach right door (F) to right side panel (C) through hinges (JJ) using screws (GG). Tighten with Phillips screwdriver. Then, remove the preassembled bolt from a door pull (FF) and install door pull (FF) to right door (F) using the bolt.

Repeat this step for left door (E).

 Hardware Used


FF	Door Pull		x 2
GG	Screw		x 8

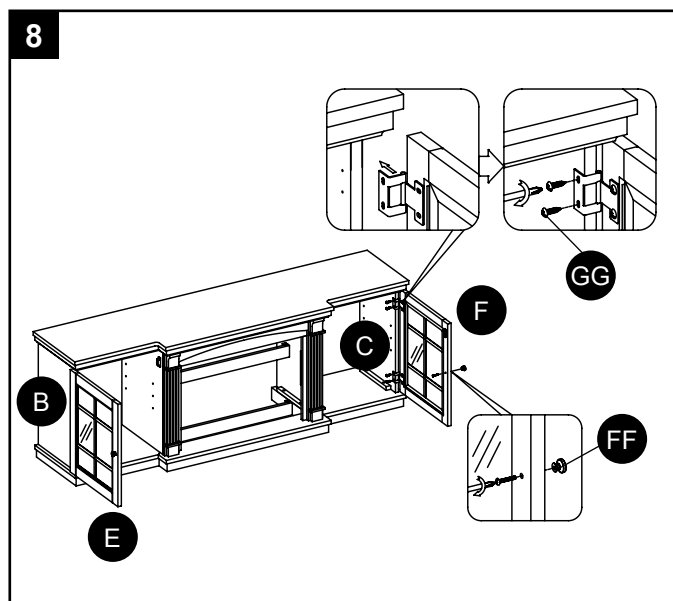 


9. Choose desired height of wood shelf (H) and place the four shelf pins (EE) into the corresponding holes. Insert wood shelf (H) on top of the shelf pins (EE).

Repeat as desired for the other wood shelf (H).

 Hardware Used


EE	Shelf Pin		x 8
----	-----------	---	-----

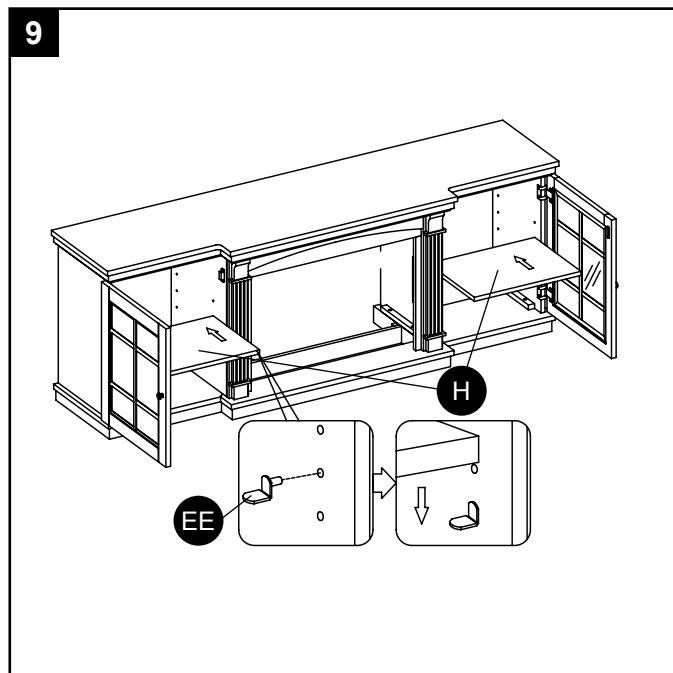 



WARNING: Be sure to read all safety information prior to installing the insert (P). Insert (P) should be installed in the fireplace as close to the final position as possible; two people are recommended for this step.

10. Lift insert (P) carefully into the back of the unit and center in the insert opening. Do not drag insert (P) across front base (A) as it may scratch the unit. Connect the insert support bar (K) to the left partition (I) and right partition (J) using bolts (AA) and washers (BB).

 Hardware Used

AA	Bolt		x 2
BB	Washer		x 2

  11. Assembly is now complete. With the help of another person, move the unit to its final location and use the preassembled levelers as needed to ensure the unit's stability.

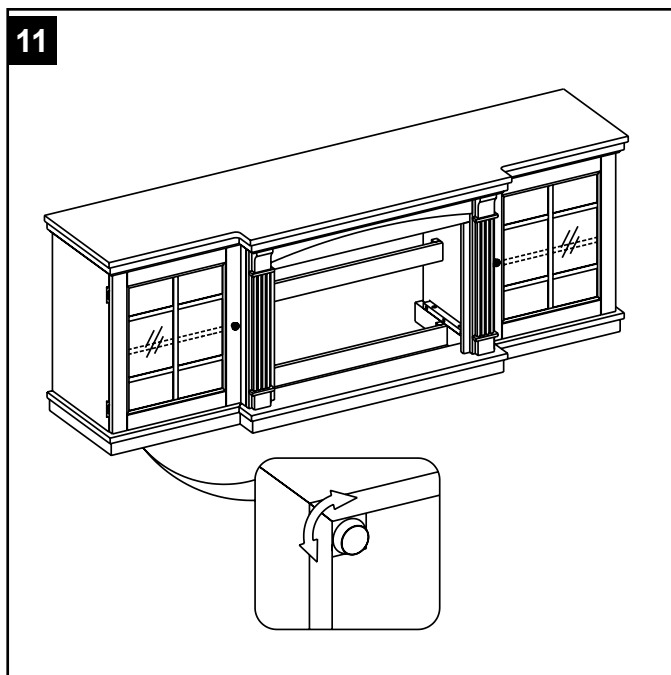
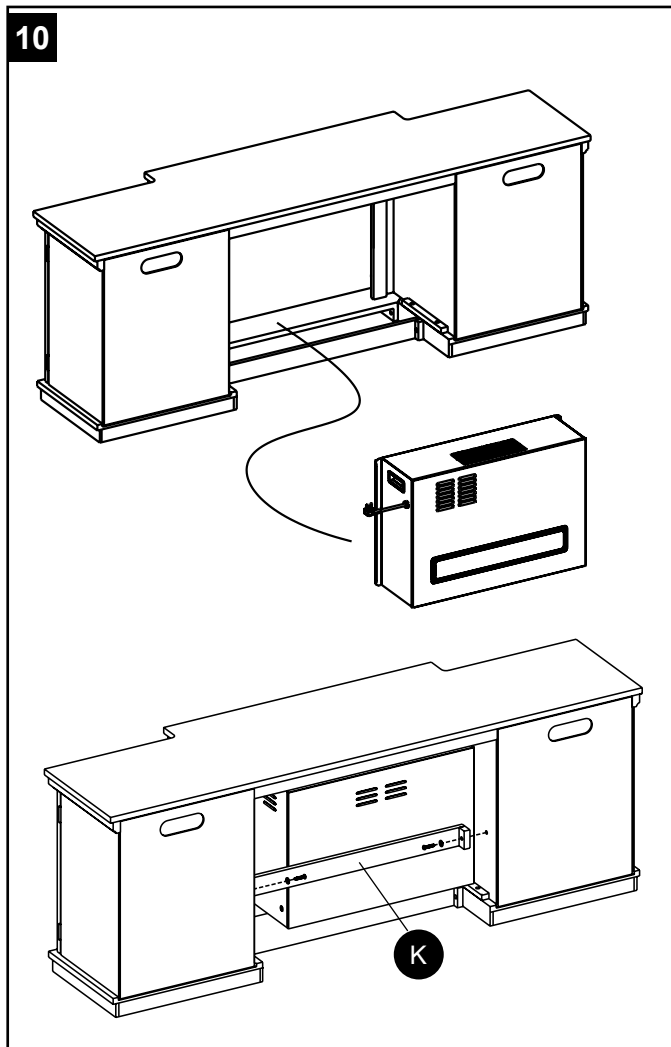


12. **WARNING:** Installing the tipping restraint hardware will help prevent accidents and/or damage to the unit. It is highly recommended you complete this step.

To secure the item to the wall, find and mark a stud closest to the edge of the left side of the mantel. Attach the wall anchor from the tipping restraint hardware pack (R) at the marked locations using 2 of the screws from the pack. Attach the unit anchor to the mantel top (G) using the remaining 2 screws so it aligns with the wall anchor. Then, detach the cable of the anchor tether provided in the tipping restraint hardware pack (R) from the connection and thread the cable through the anchors. Re-attach the cable to the connection, but do NOT tighten yet.


Repeat the above steps on the right side of the unit, then pull both anchor tethers to secure the item to the wall.

  12

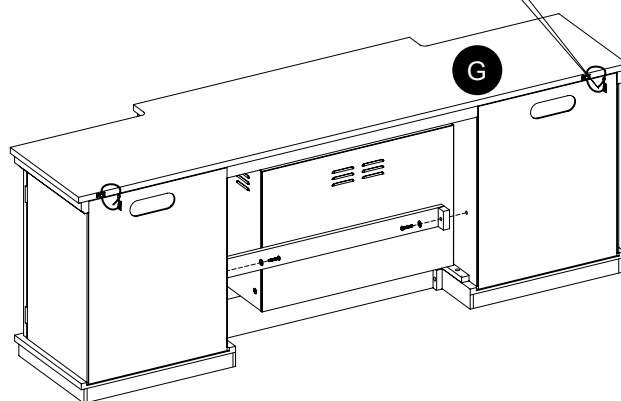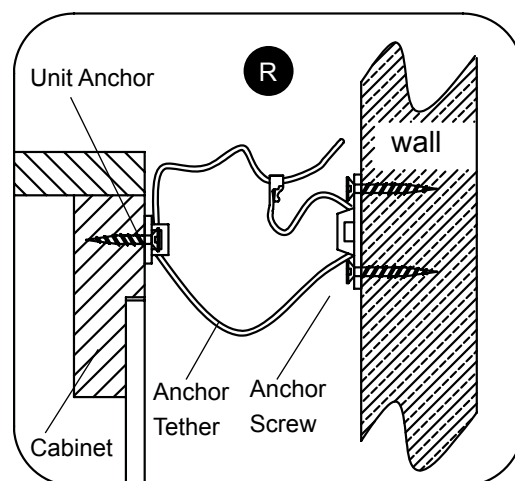


OPERATING INSTRUCTIONS

 The heater can be operated by either the remote control or the control panel.

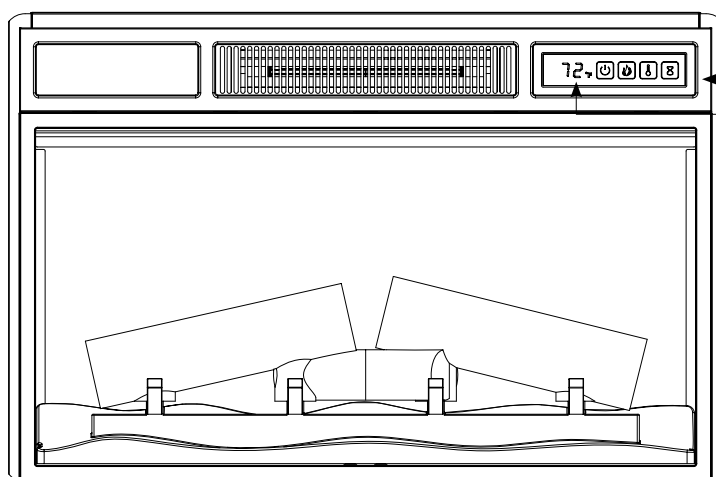

Front View of Insert (P)

 Control Panel
Display

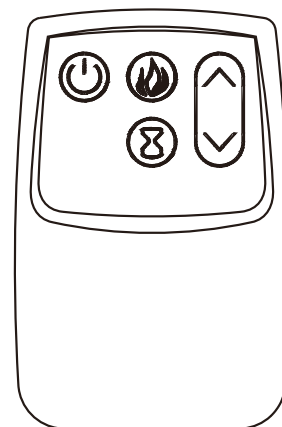

Remote (Q)

FUNCTION	ICON	DESCRIPTION
POWER		Use the POWER button to turn on or off the fireplace from the remote or control panel. Note: Holding the POWER button on the control panel for 10 seconds will disable the heater function. To re-enable the heater, press and hold the POWER button for another 10 seconds.
FLAME		There are 6 brightness levels that can be selected. Settings F6 - F4 are for a amber-only colored only color flame effect. F6 is maximum brightness, F5 medium and F4 low. Settings F3 - F1 have a blue glow at the bottom of the flame effect. F3 is maximum brightness, F2 medium and F1 low.
HEATER		The fireplace contains a fan forced wire element heater. The thermostat setting range is 62°F - 82°F or continuously ON. The thermostat is adjustable by 2°F increments. The up and down buttons “^v” on the remote will increase/decrease temperature setting. The button on the control panel scrolls through specific temperature settings. To change between Fahrenheit and Celsius, press and hold the heater button on the control panel for 3 seconds.
TIMER		Pressing the timer button will cycle through the timer settings: 30 minutes, 1 Hour, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H and OFF.