

INSTALLATION INSTRUCTIONS

Item#P5520-726A-L P5521-726A-L (Rev. 05/27/2023)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARATION

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off power at the circuit breaker and remove the old fixture including the mounting hardware.

MOUNTING THE FIXTURE (Fig. 1)

3. Attach mounting plate (A) to outlet box (not included) using mounting screws (B) (Size: #8-32N*1"L) as shown in Fig. 1. Noted: The side of mounting plate (A) marked "GND" must face out.
4. Secure fixture loop (E) tightly onto all threads of fixture body.
5. Determine the desired hanging height and use a pair of proper chain pliers to remove and discard the excess chain. Ensure that you do not remove quick link (D) at both ends of chain (C).
6. Open one quick link (D) and attach it to fixture loop (E) then close quick link (D).
7. Open another quick link (D) and attach it to the ceiling loop of canopy (F) and then close the quick link (D).
8. Carefully lace the fixture's wires through the chain. Feed the fixture's wires through the ceiling loop and canopy (F). Pull until taut.

CONNECTION THE WIRES (Fig. 2)

9. Connect electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw provided.
10. Tuck wires are connected neatly into the outlet box.

FINISHING THE INSTALLATION (Fig. 1)

11. Align canopy (F) over mounting plate (A) and secure with screws (G)

Your installation is now complete. Return power to the outlet box and test the fixture.


Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Dimmable with ELV and/or LED compatible wall dimmer switch.

Fig. 1


Set # A-020-123A

- Mounting plate
- Ground Screw
- Mounting Screw *2

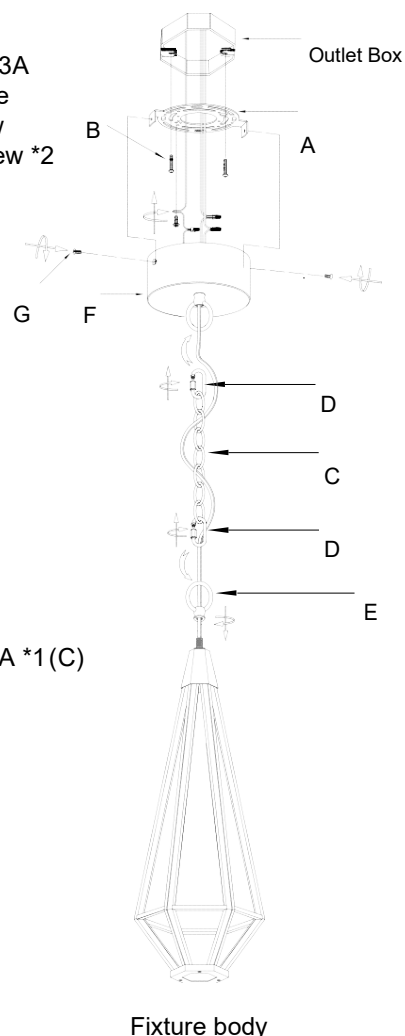

Chain #
HCH2172-695A *1 (C)

Fig.2

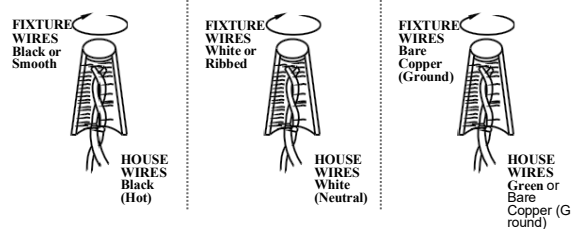

IMPORTANT: THE FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.



Notice: It is important to use proper chain pliers (not included). To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in diagram.



american
lighting
association