 
 
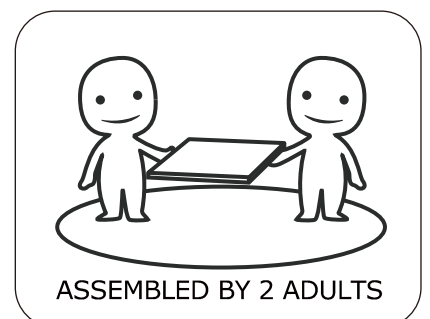 




Hall Tree

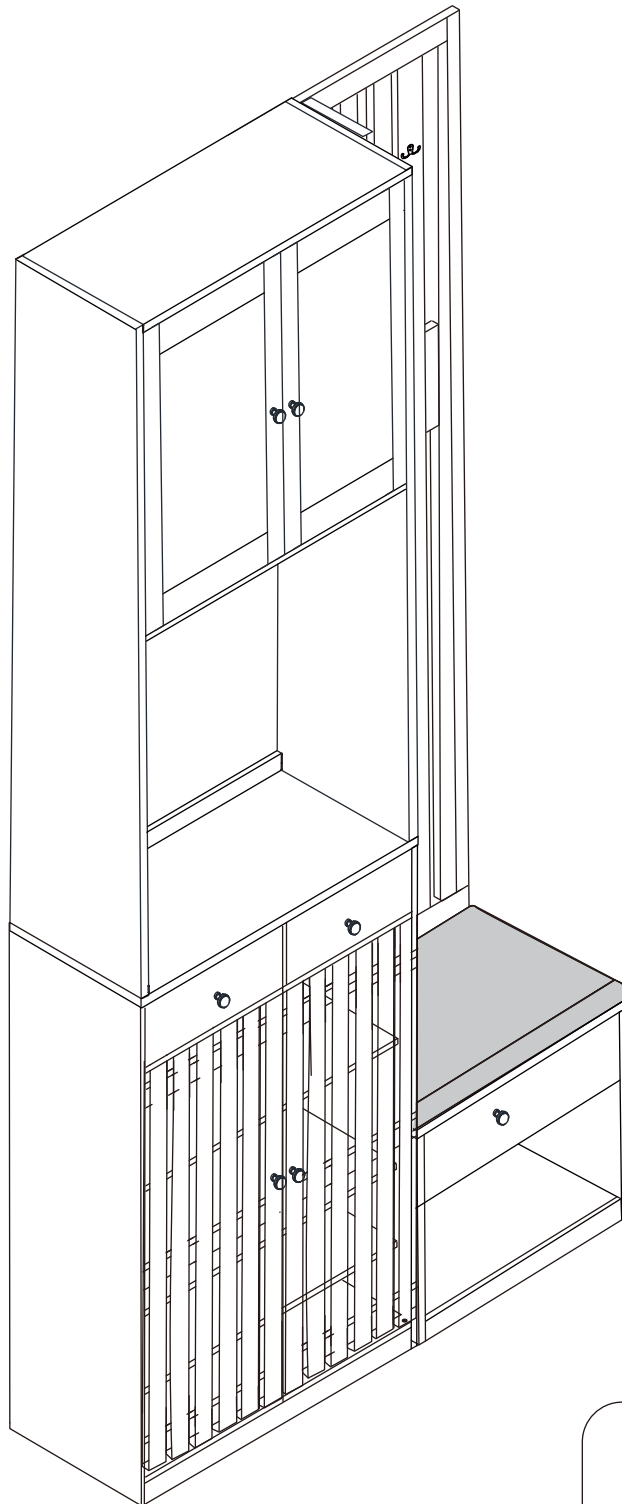

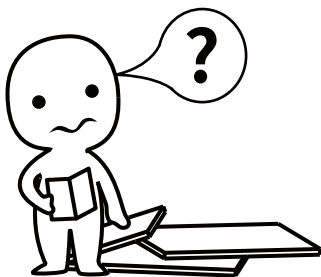


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

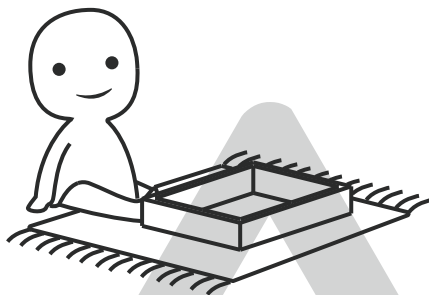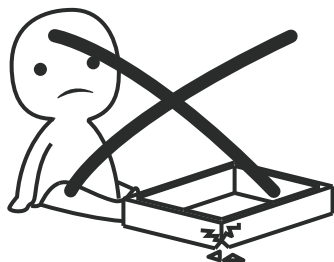



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

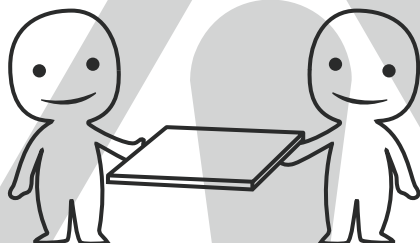

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

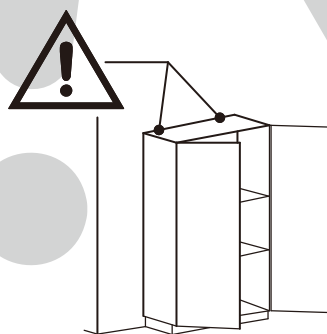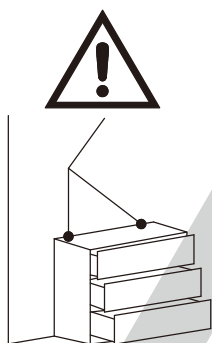

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

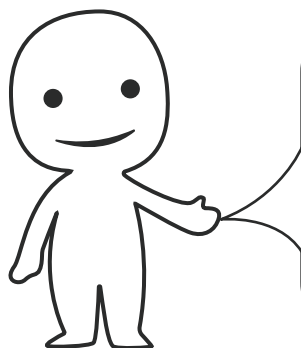


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 76+5 Ø6 x 35 mm	B x 76+5 Ø15 x 11 mm	C x 50+4 Ø8 x 30 mm	D x 3 L=300 mm	E x 50+4 Ø3 x 12 mm
F x 7 Ø4 x 22 mm	G x 8	H x 12	J x 16+1	K x 76+5
L x 6	M x 12+1 Ø4 x 30 mm	P x 1 Ø3.5 x 14 mm x2	Q x 48+4 Ø3.5 x 14 mm	R x 5 Ø4 x 20 mm
S x 3	T x 3			


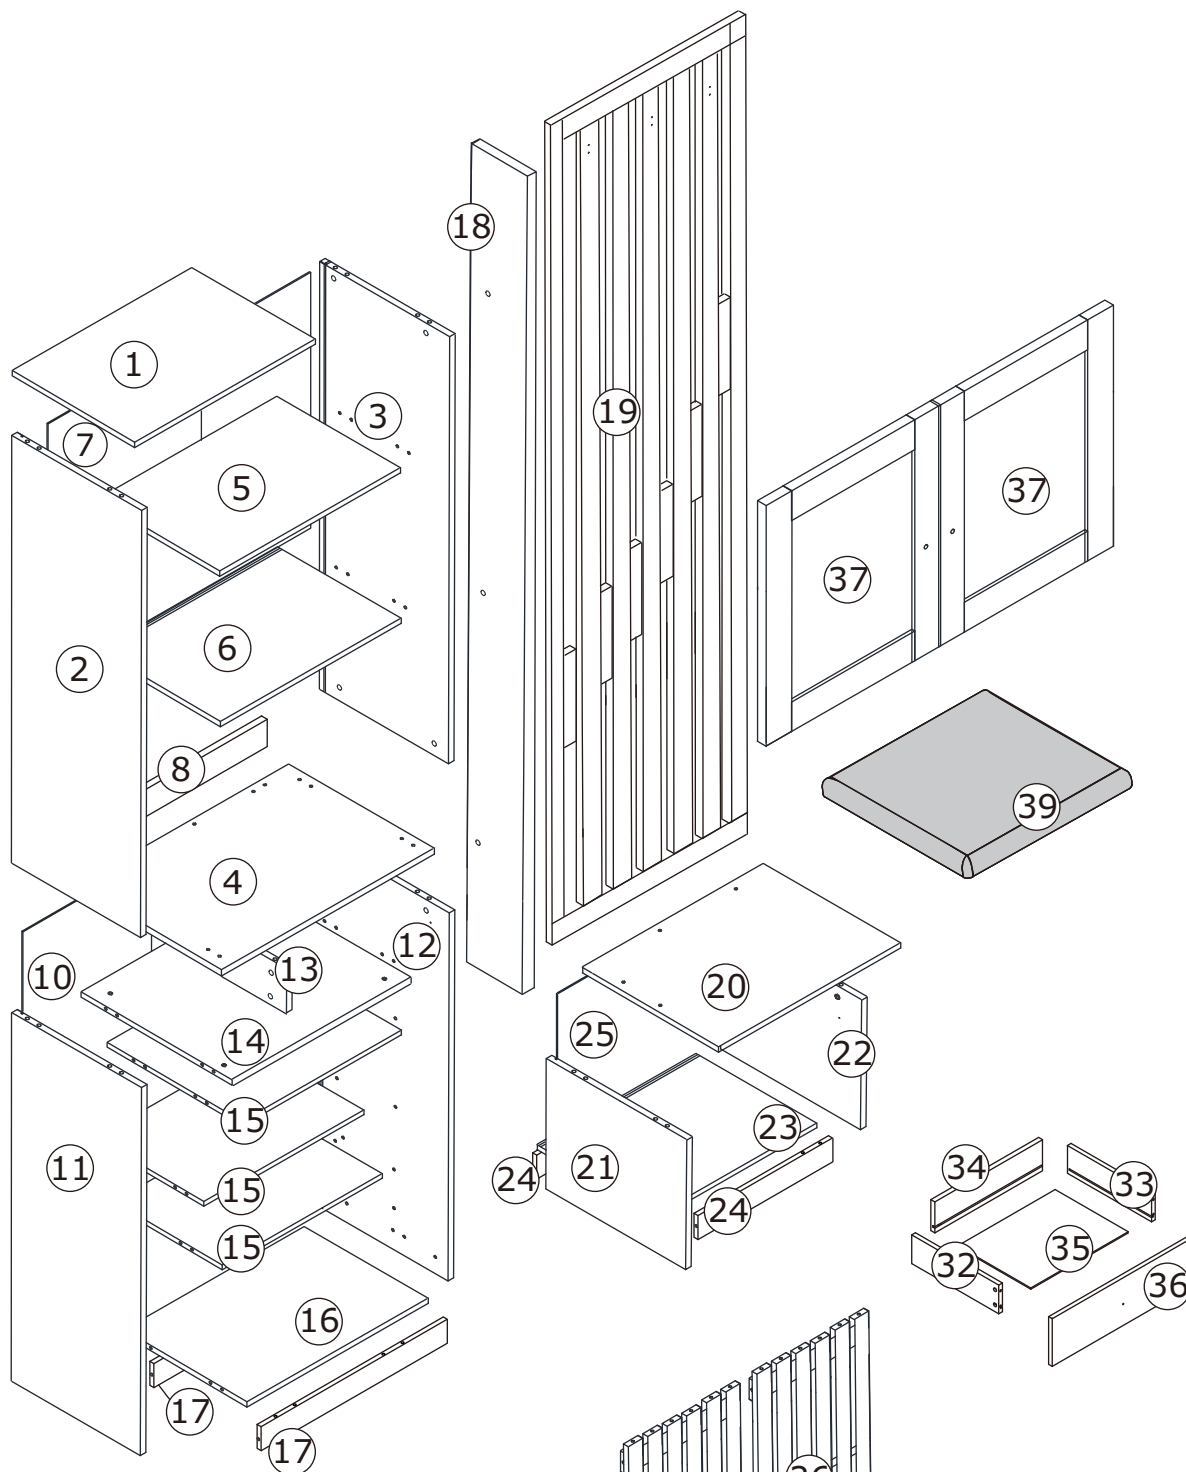 


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

  
This is a permanent label.
Do not remove!

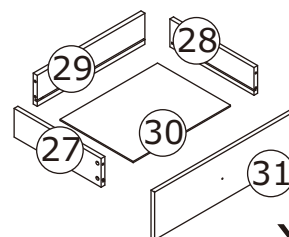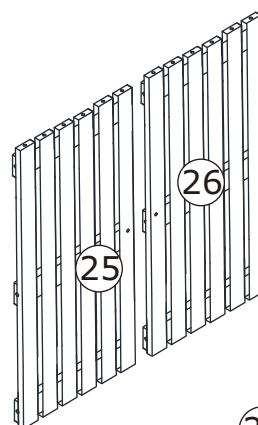

x2

1

 A x 4



Ø6 x 35 mm

 
 
 
C x 4



Ø8 x 30 mm



Screw eccentric rod(A) and insert wooden dowel(C) into board 16 at first.

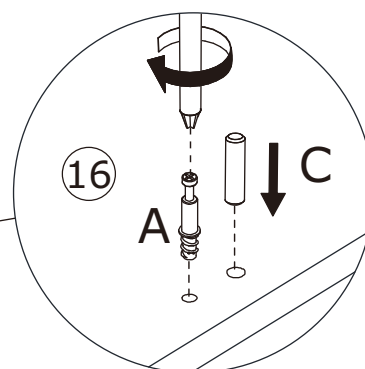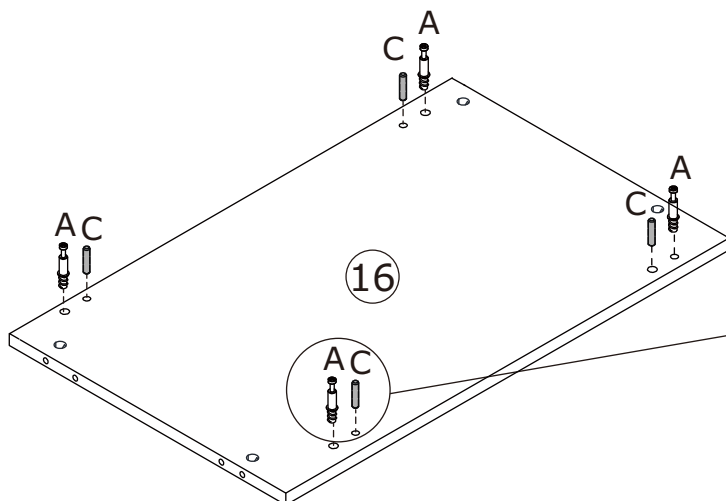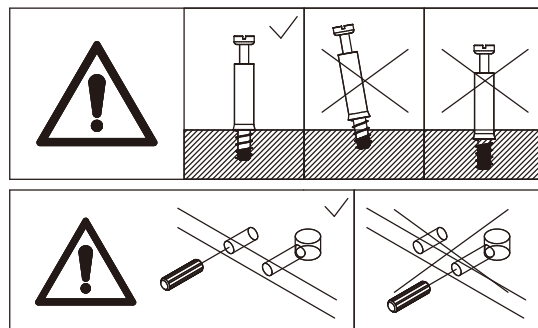

2

 
 
 
B x 4





Ø15 x 11 mm









Attach board 17 to board 16, add cam lock(B) into board 17 and turn clockwise to tighten as shown.

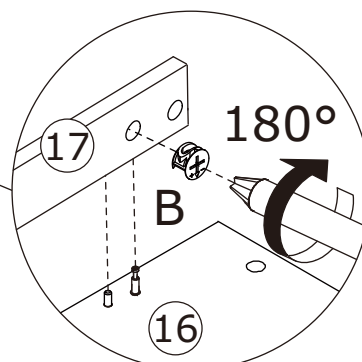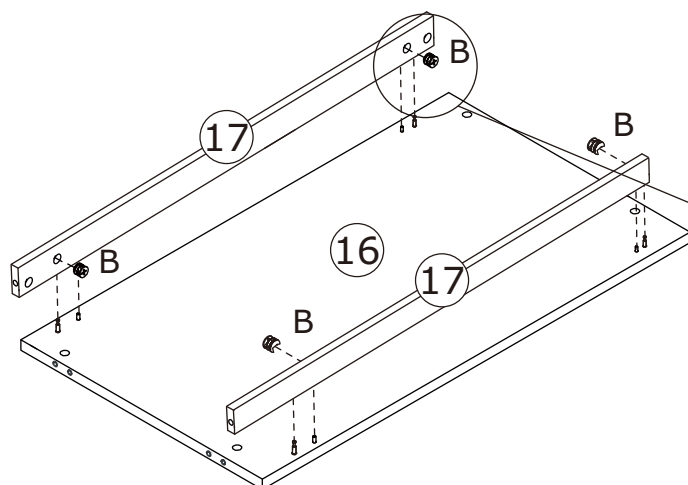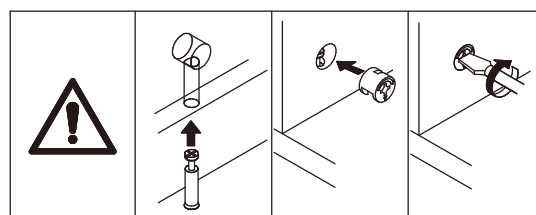



3

  A x 6  Ø6 x 35 mm	C x 4  Ø8 x 30 mm	D x 1  L=300 mm	E x 2  Ø3 x 12 mm	
--	--	--	---	---

  
 
 
 
 
Fix rail(D) to board 11 with screw(E) as shown. Screw eccentric rod(A) and insert wooden dowel(C) into board 16 at first.

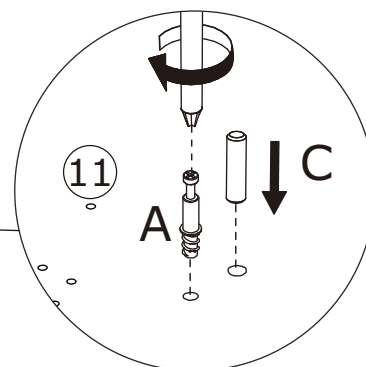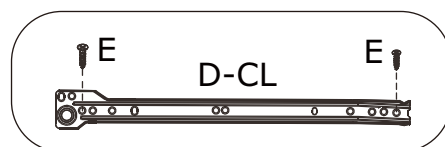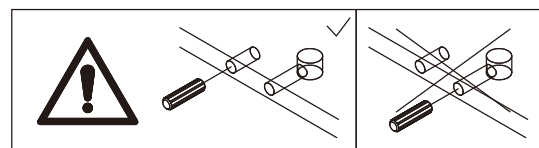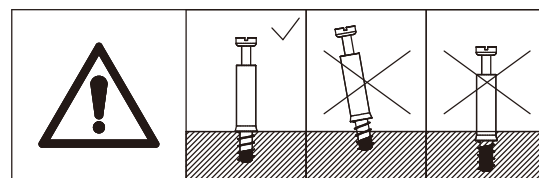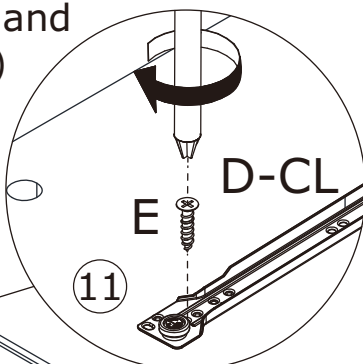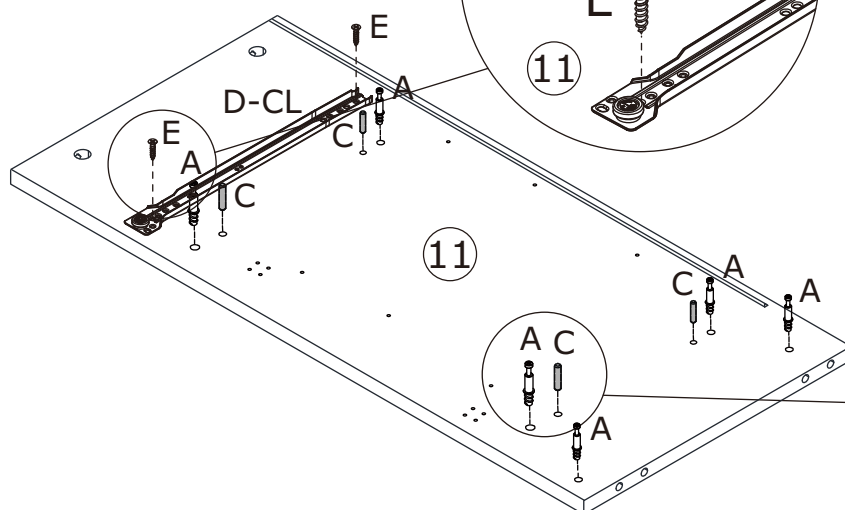

4

  
A x 6  Ø6 x 35 mm	C x 4  Ø8 x 30 mm	D x 1  L=300 mm	E x 2  Ø3 x 12 mm	
--	--	--	---	---

     Fix rail(D) to board 12 with screw(E) as shown. Screw eccentric rod(A) and insert wooden dowel(C) into board 12 at first.

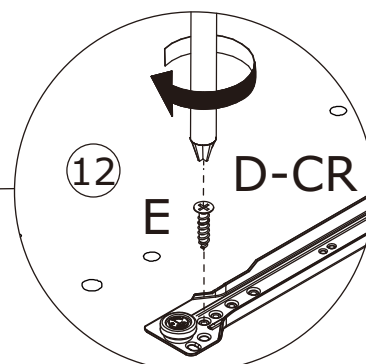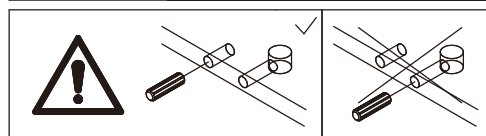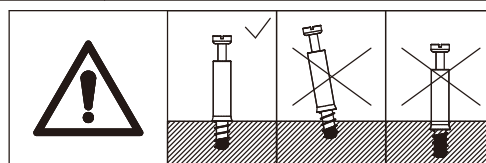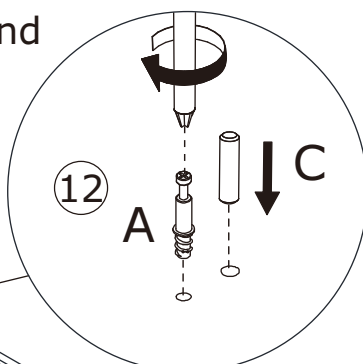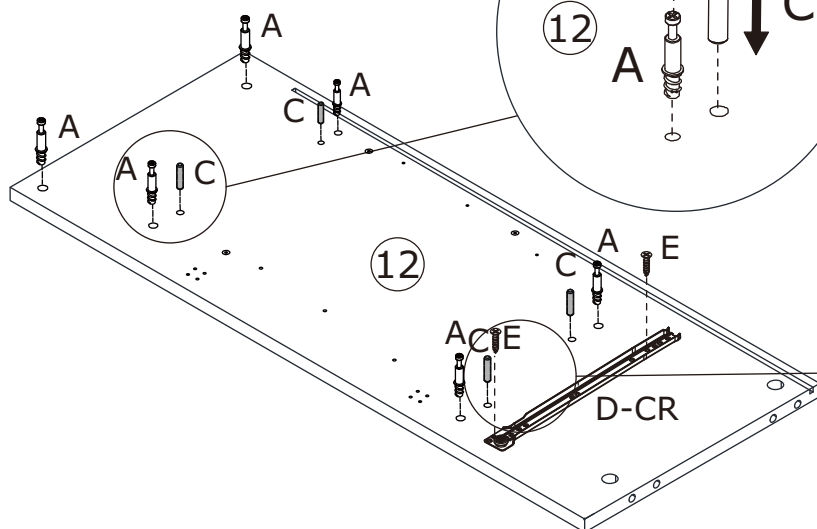


5


 
A x 6



Ø 6 x 35 mm

 


  Screw eccentric rod(A) and insert wooden dowel(C) into board 4 at first.

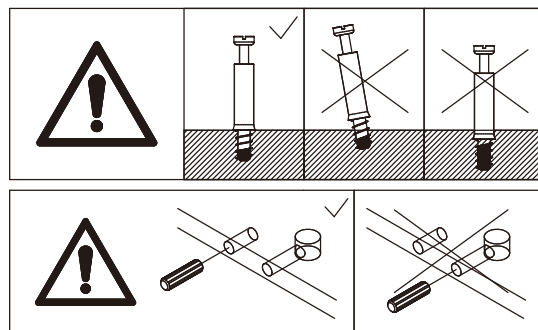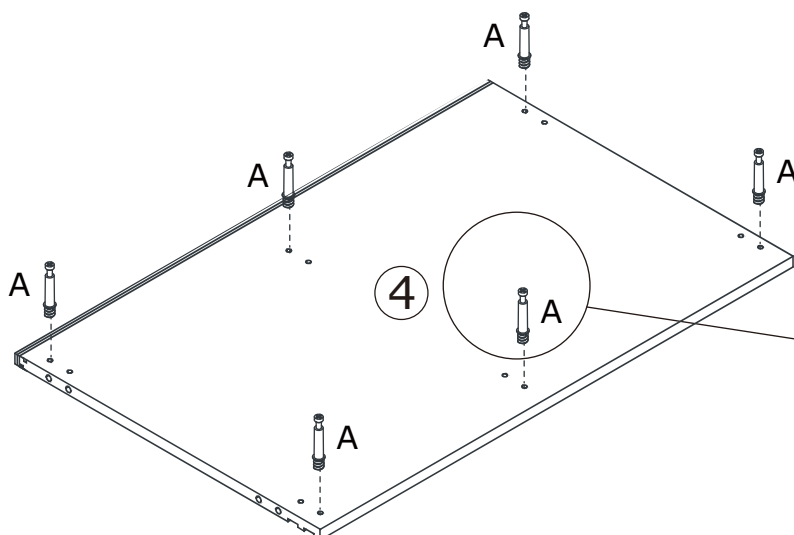

6

 A x 2




Ø 6 x 35 mm



C x 2



 Ø 8 x 30 mm




  Screw eccentric rod(A) and insert wooden dowel(C) into board 14 at first.

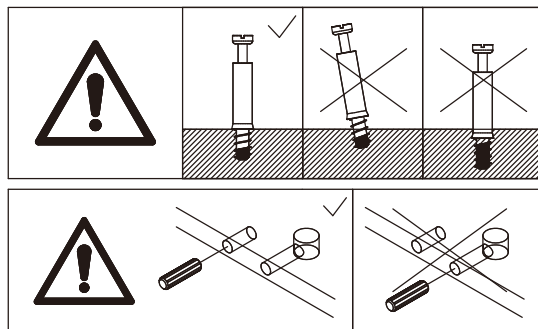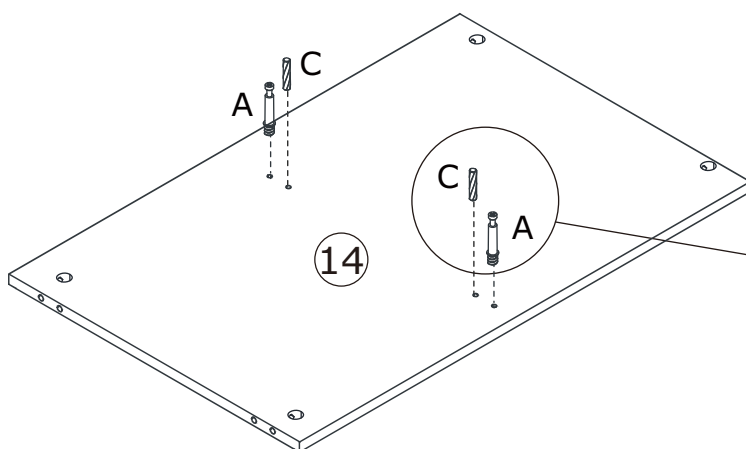

7

 
S x 2





E x 4



 Ø 3 x 12 mm



  Fix part(S) to board 14 with screw(E) as shown.

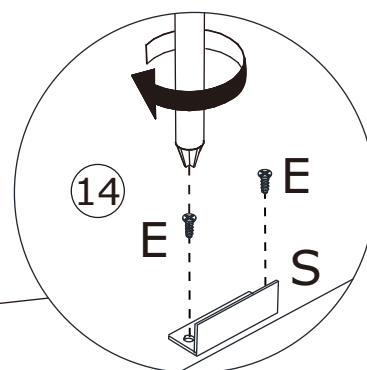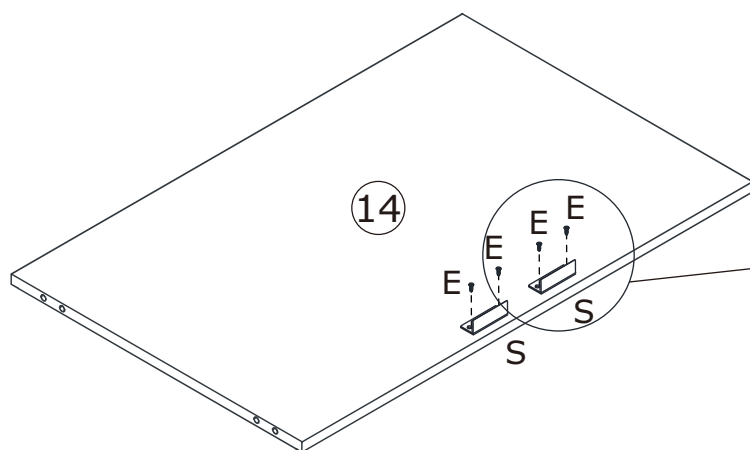

8

 
 
 
B x 2



Ø 15 x 11 mm




Attach board 13 to board 14, add cam lock(B) into board 13 and turn clockwise to tighten as shown.

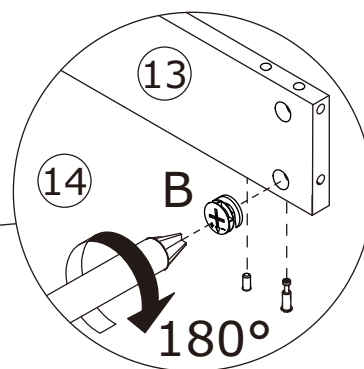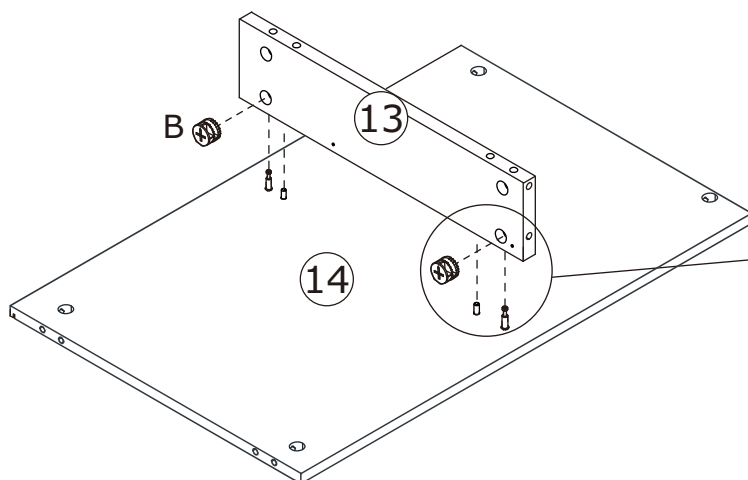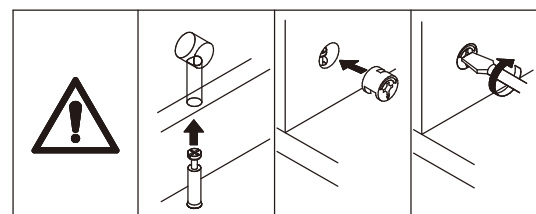



9

B x 6

  Ø 15 x 11 mm



  
Attach board 14, 16 and 17 to board 11, add cam lock(B) into board 14, 16, 17 and turn clockwise to tighten as shown.

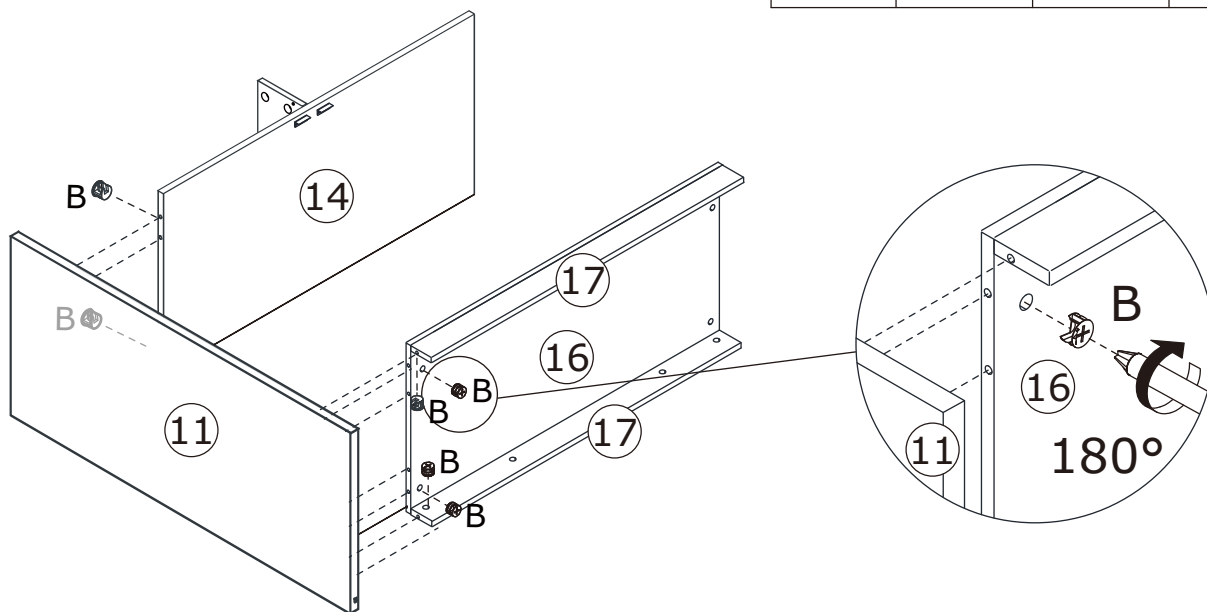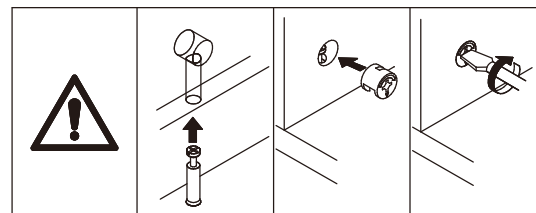



10


B x 6





 
 Ø 15 x 11 mm



   Attach board 12 to board 14, 16 and 17, add cam lock(B) into board 14, 16, 17 and turn clockwise to tighten as shown.

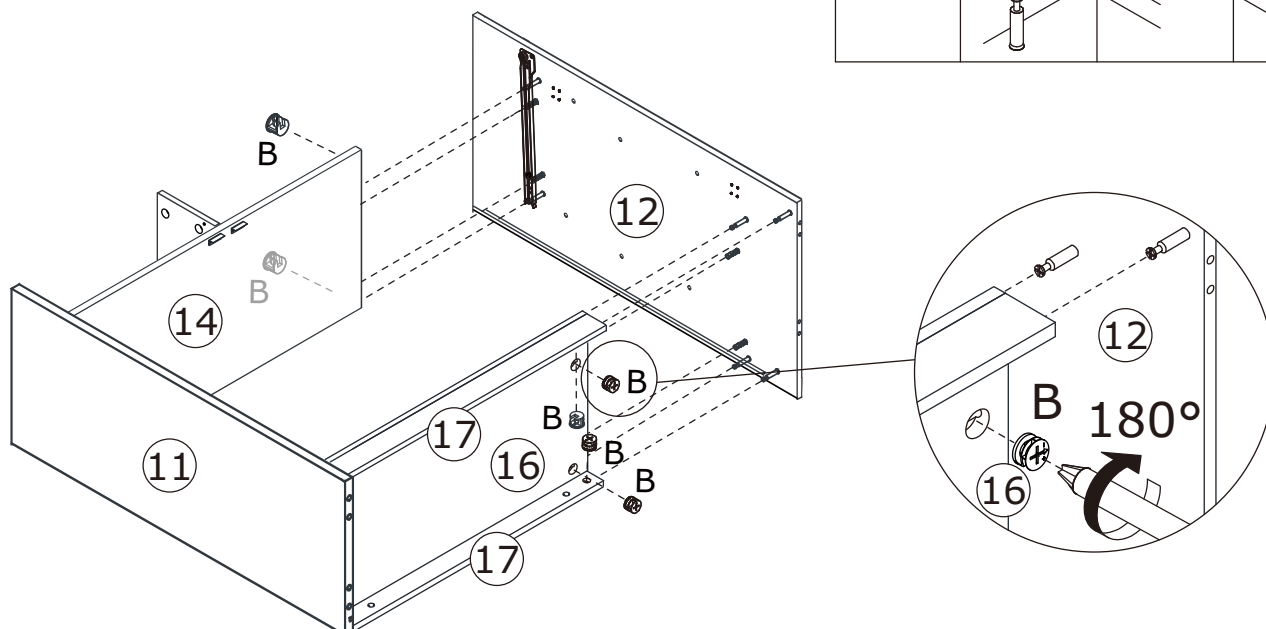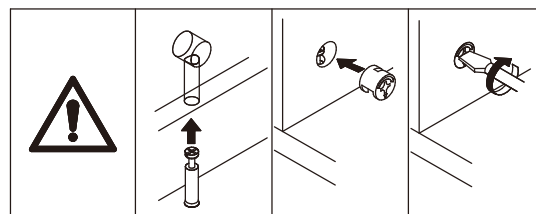


11	C x 6  Ø8 x 30 mm	D x 1  L=300 mm	E x 4  Ø3 x 12 mm	
---------------	--	--	--	---

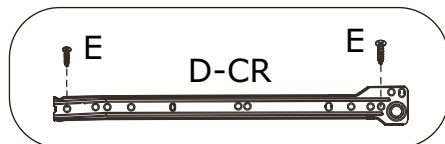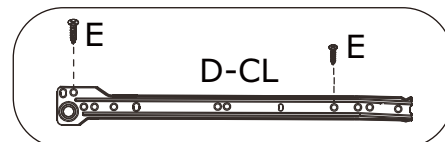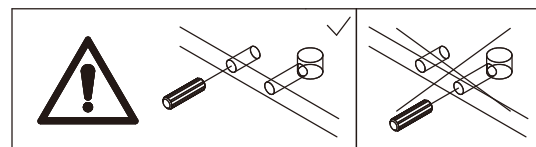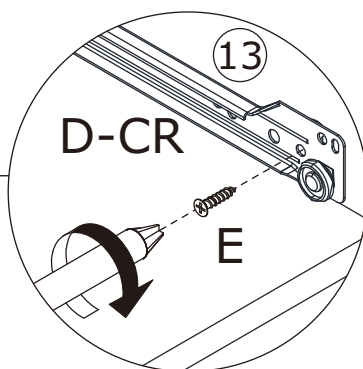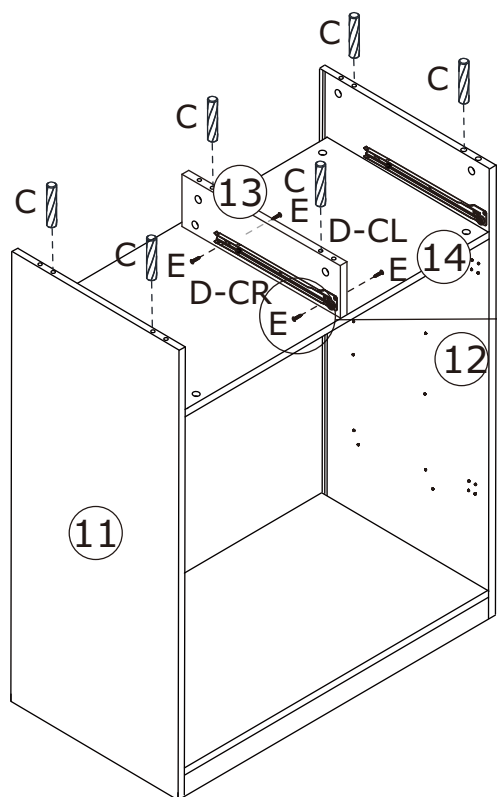     

Fix rail(D) to board 13
with screw(E) as shown.
Insert wooden dowel(C) into
board 11, 12 and 13 at first.

12




 
Insert back board 10 along
available grooves as shown.

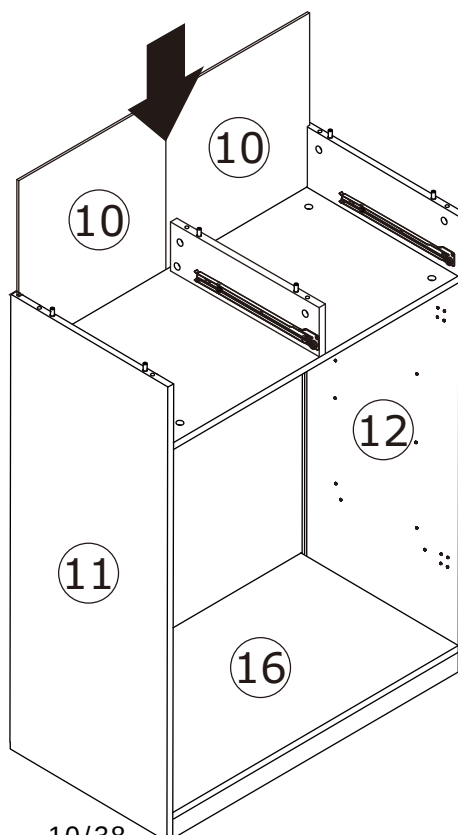

13

B x 6

    
 Ø 15 x 11 mm

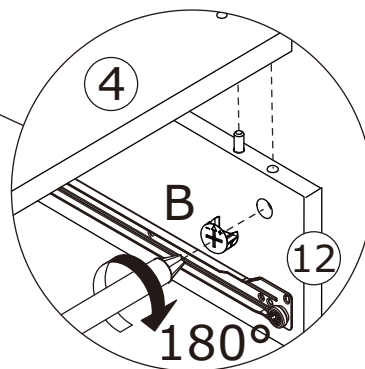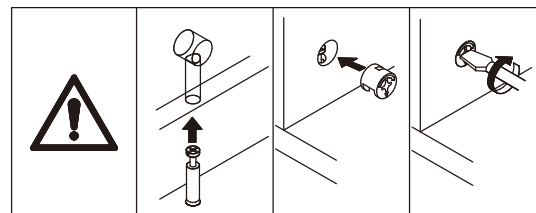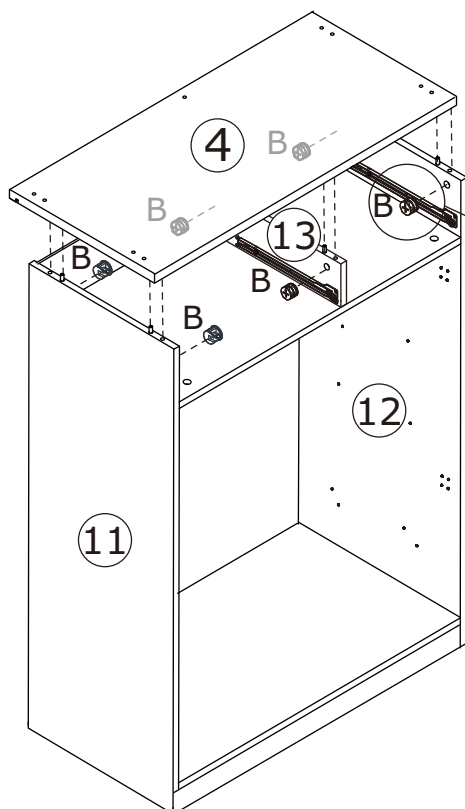


Attach board 4 to board 11, 13 and 12, add cam lock(B) into board 11, 12, 13 and turn clockwise to tighten as shown.

14

 H x 12

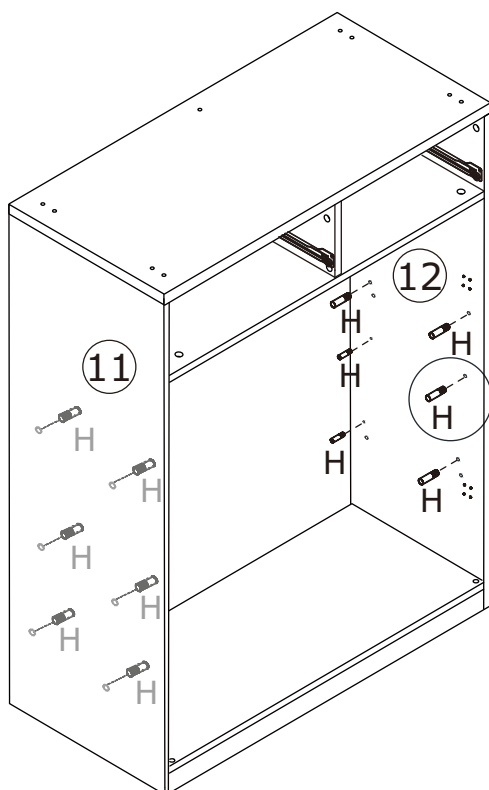


 
Rotate layer pin(H) into board 11 and 12 as shown.

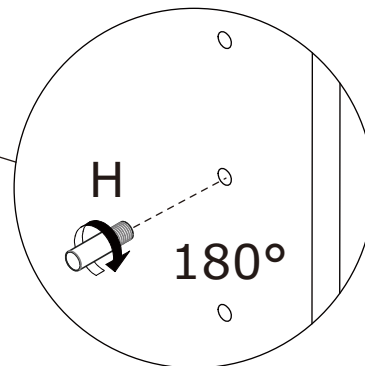

15

 A x 5







Ø6 x 35 mm

C x 4



    Ø8 x 30 mm

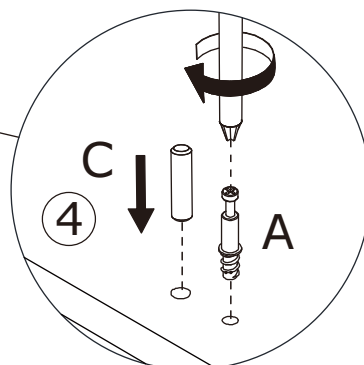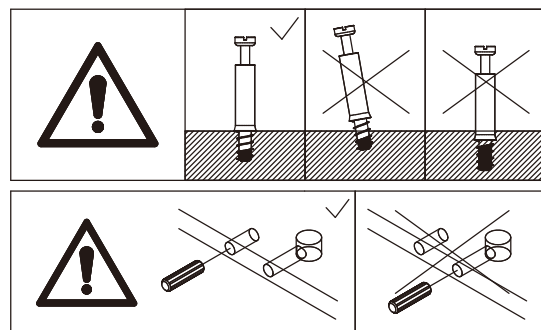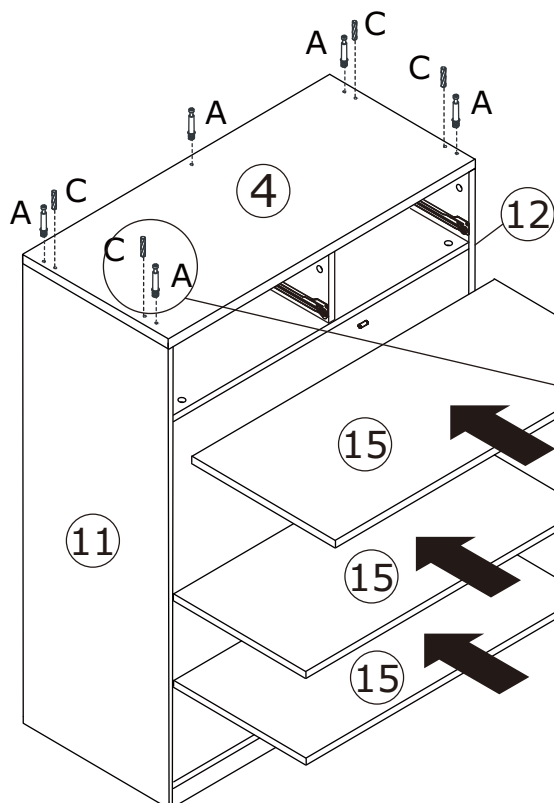

Place shelf board 15 in as shown. Screw eccentric rod(A) and insert wooden dowel(C) into board 4 at first.

16

G x 2



F x 1



Ø4 x 22 mm

 
 
 
Q x 4



Ø3.5 x 14 mm




Fix hinge(G) to board 25 with screw(Q), fix knob(F) as shown.

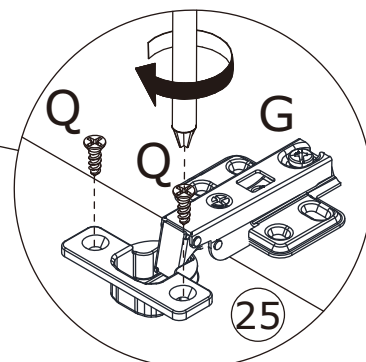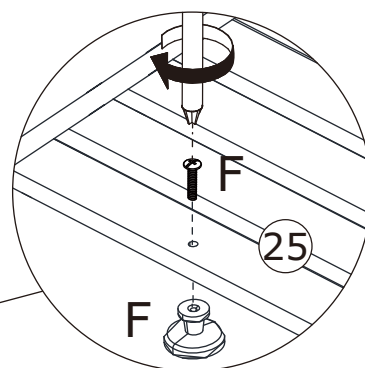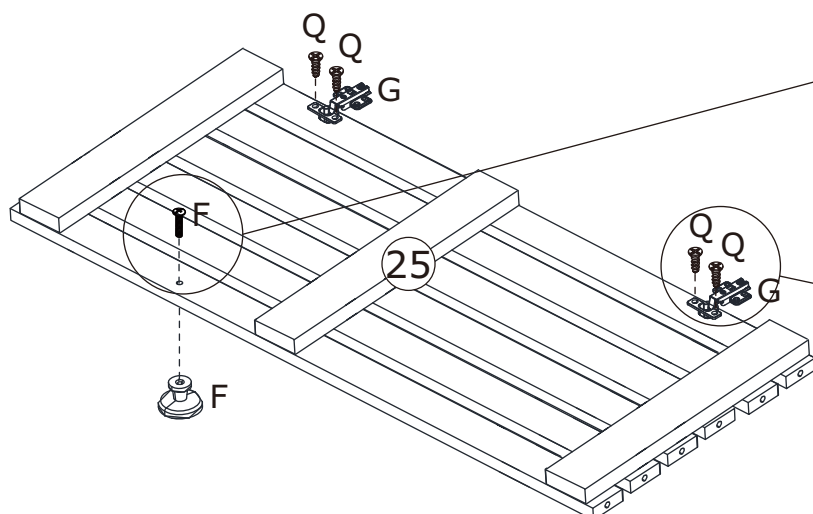

17

 G x 2



F x 1

 


Ø4 x 22 mm




Q x 4



Ø3.5 x 14 mm



   Fix hinge(G) to board 26 with screw(Q), fix knob(F) as shown.

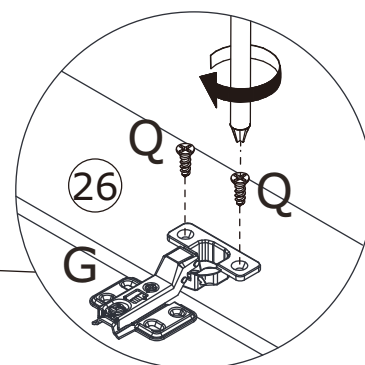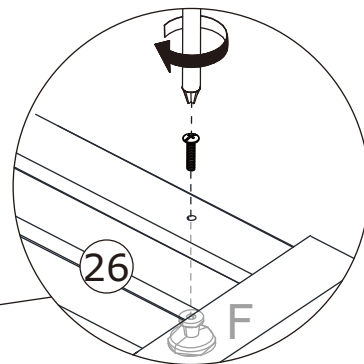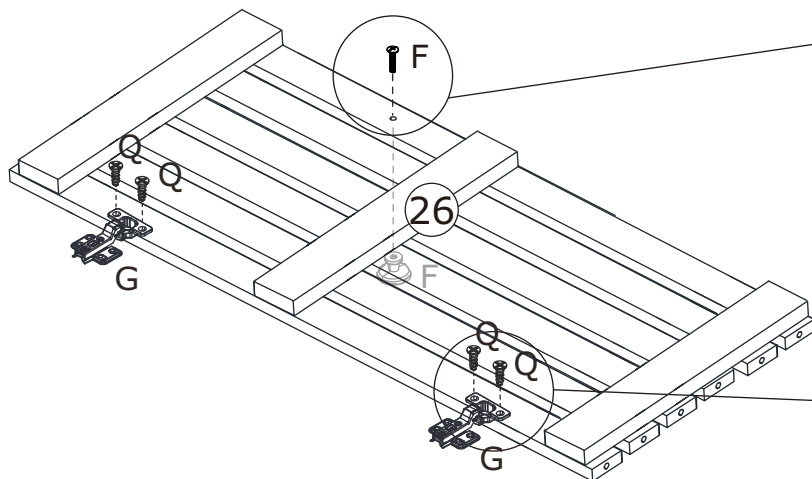


18



Q x 16



 Ø3.5 x 14 mm



  Assemble door panel 25 and 26 to board 11 and 12 by fixing hinge with screw(Q) as shown.

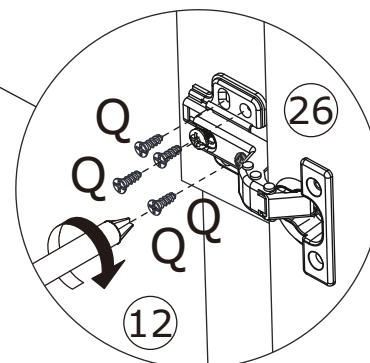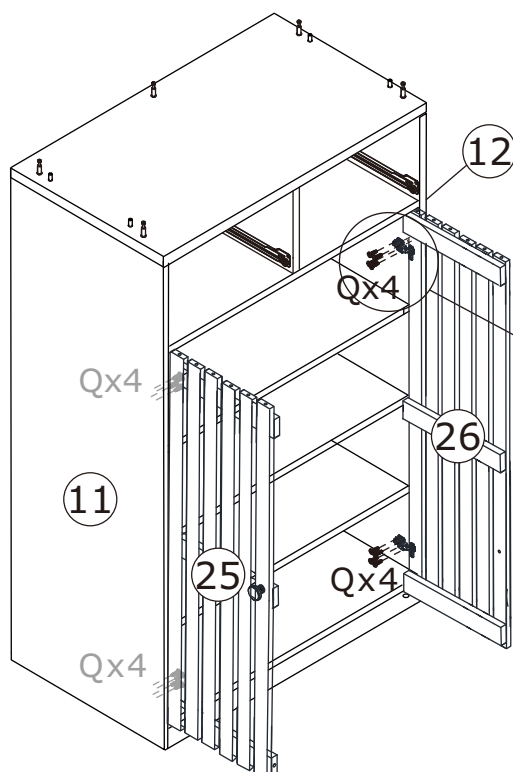

19

A x 8

 
 


Ø6 x 35 mm



F x 2



Ø4 x 22 mm

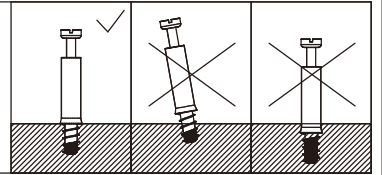

  Screw eccentric rod(A) into board 31, fix knob(F) as shown.

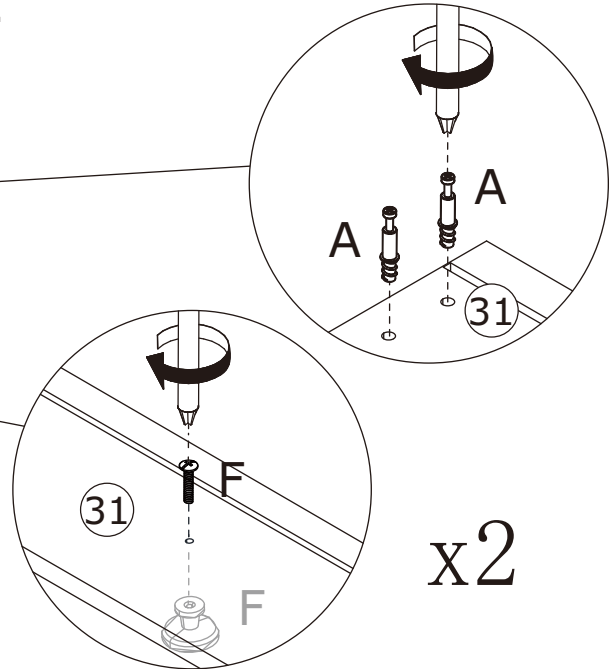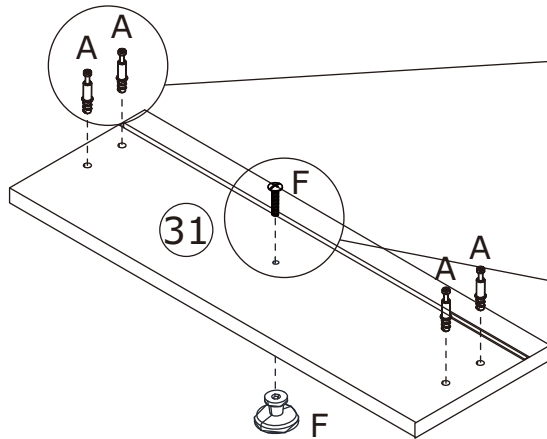


20



M x 8



 Ø4 x 30 mm




  Fix board 27 and 28 to board 29 with screw(M) as shown.

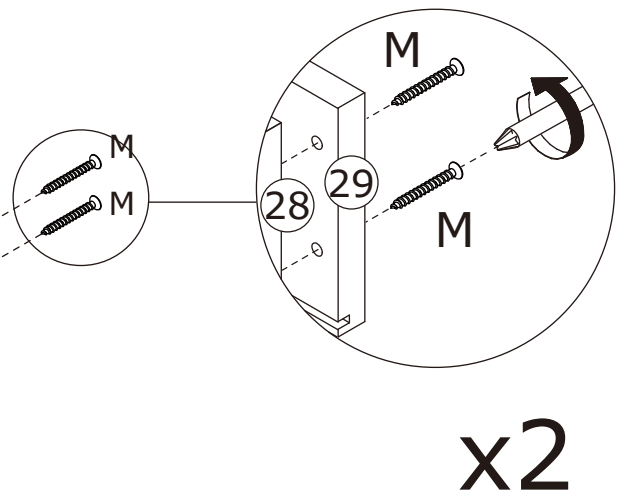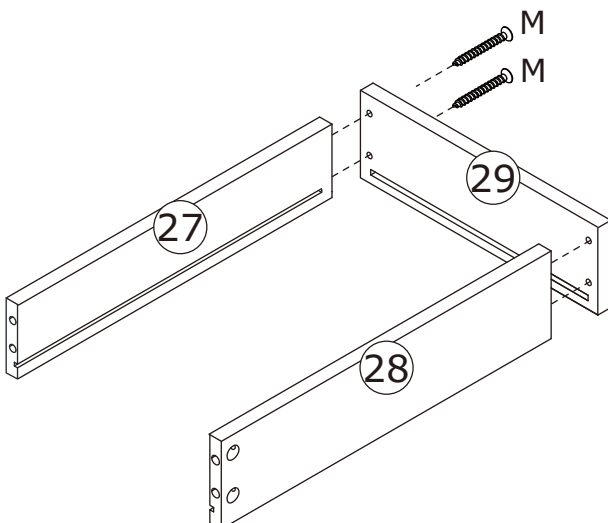

21

 Insert bottom board 30 along available grooves as shown.

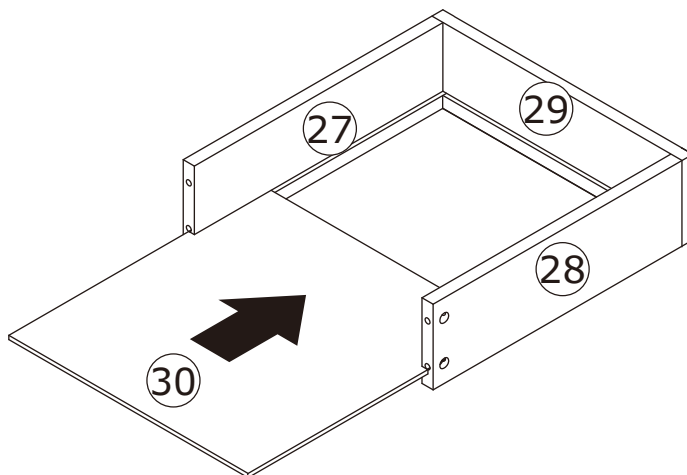


x2

22




B x 8



 Ø 15 x 11 mm



   Attach board 31 to board 27 and 28, add cam lock(B) and turn clockwise to tighten as shown.

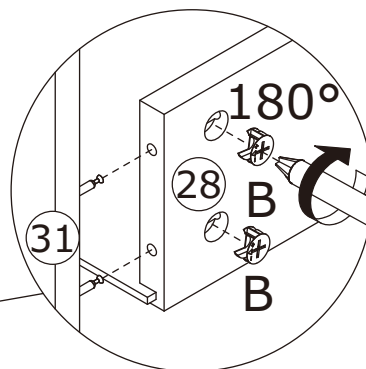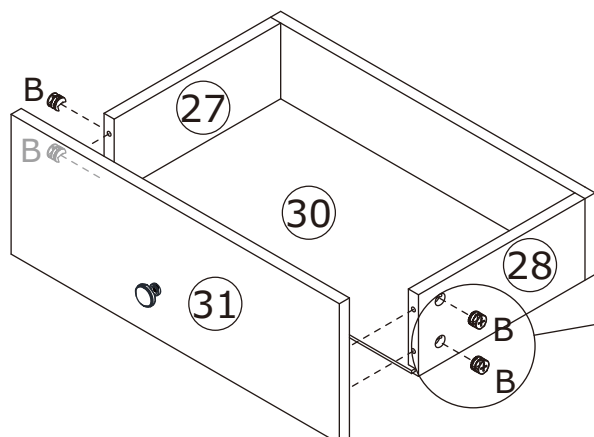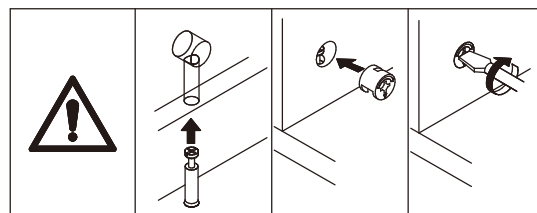

x2

23

D x 2



L=300 mm

 
 
 
 
E x 8



Ø 3 x 12 mm






Fix runner(D-DL) and (D-DR) to board 27 and 28 with screw(E) as shown.

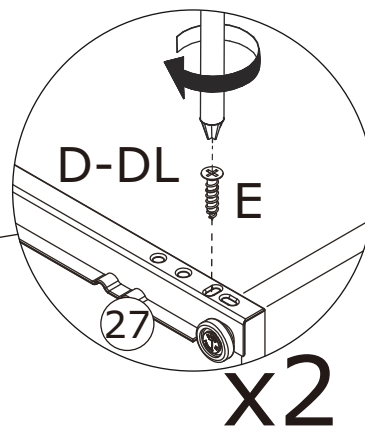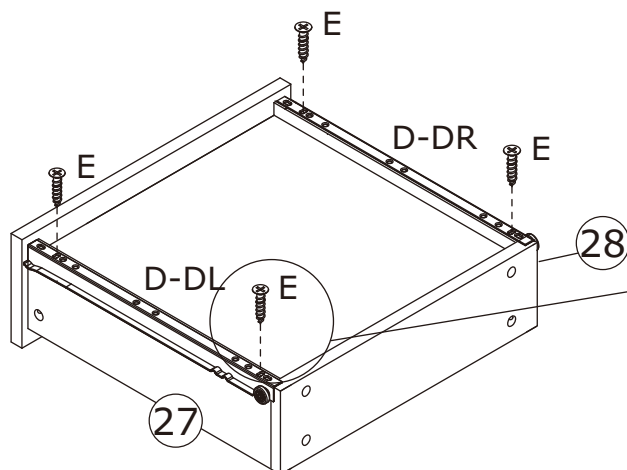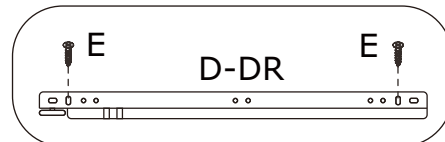
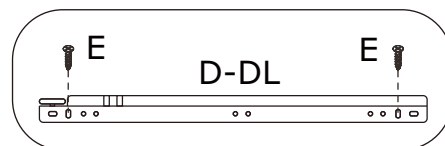


24

 
 
 
Align rails, insert drawers.

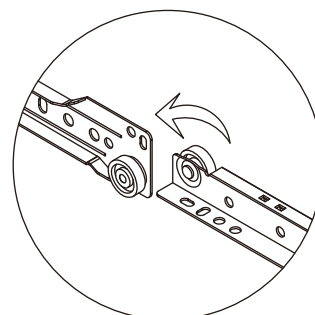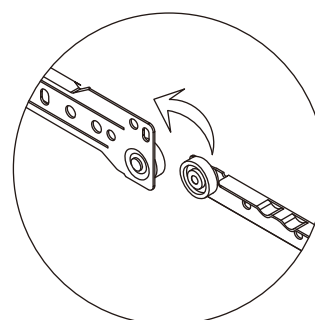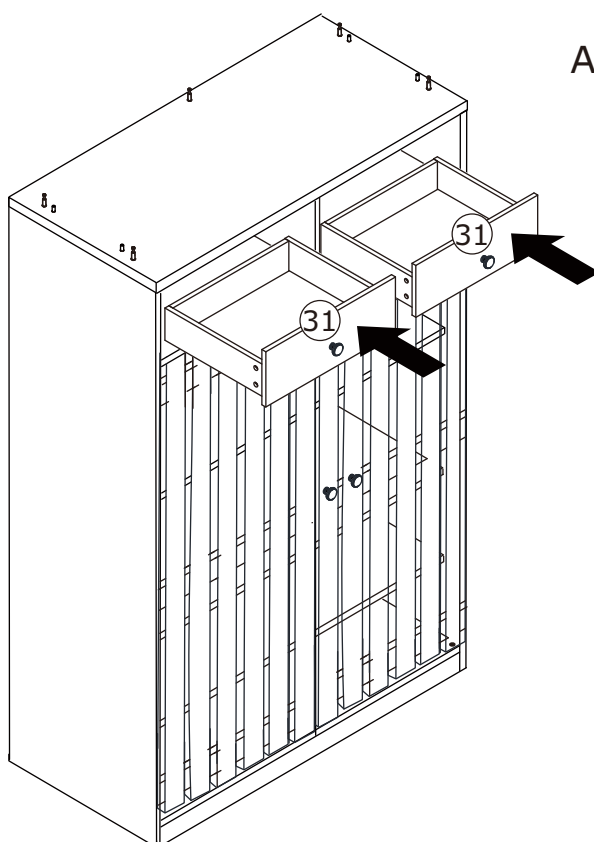



25

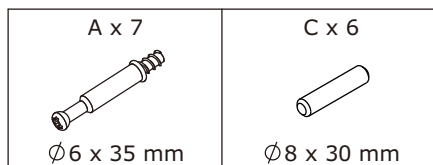  

 
 
 
Screw eccentric rod(A) and insert wooden dowel(C) into board 2 at first.

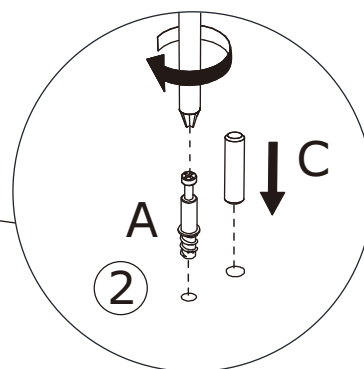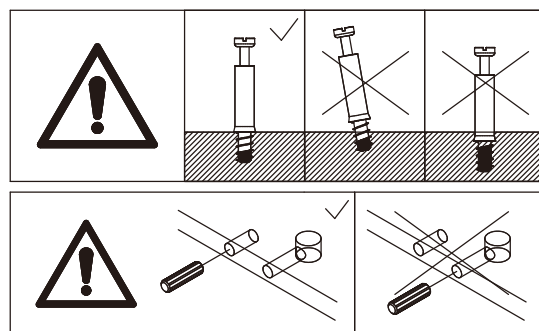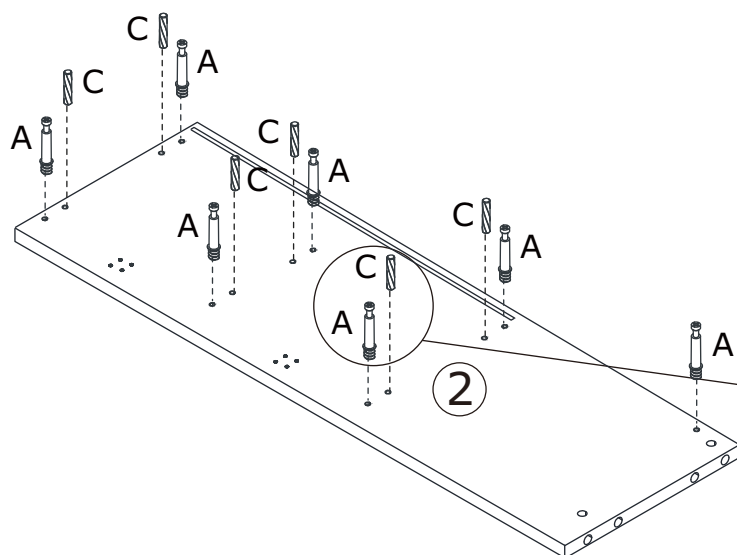

26

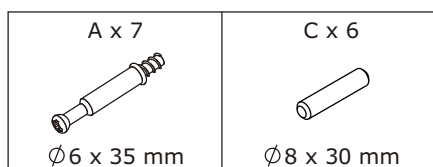  


   Screw eccentric rod(A) and insert wooden dowel(C) into board 3 at first.

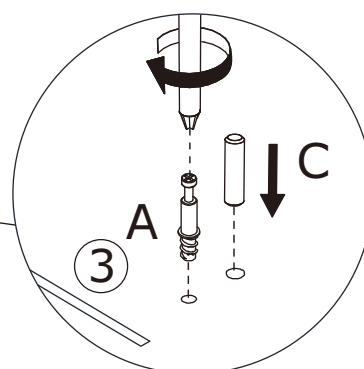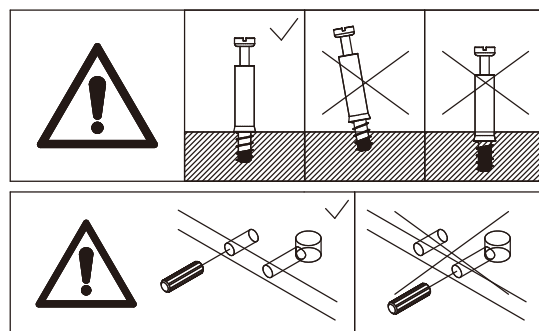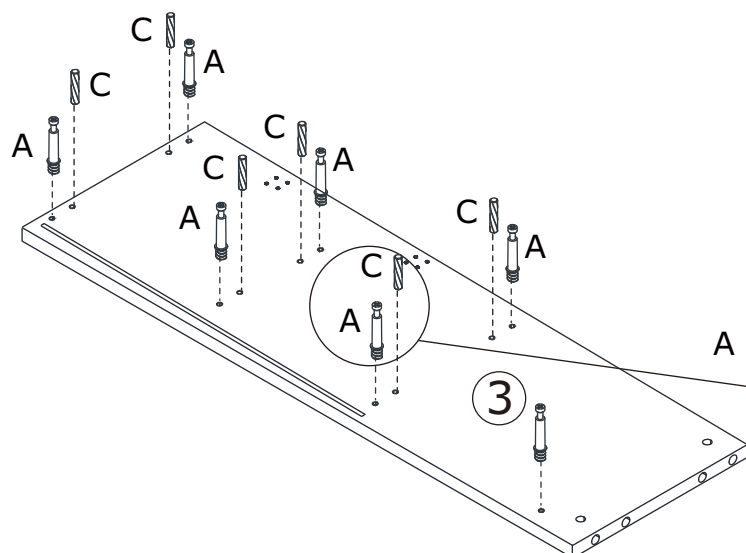

27

 S x 1



E x 2



Ø3 x 12 mm

 
P x 1




P x 2



Ø 3.5x14 mm



 Fix part(P) at first.
Fix part(S) to board 1
with screw(E) as shown.

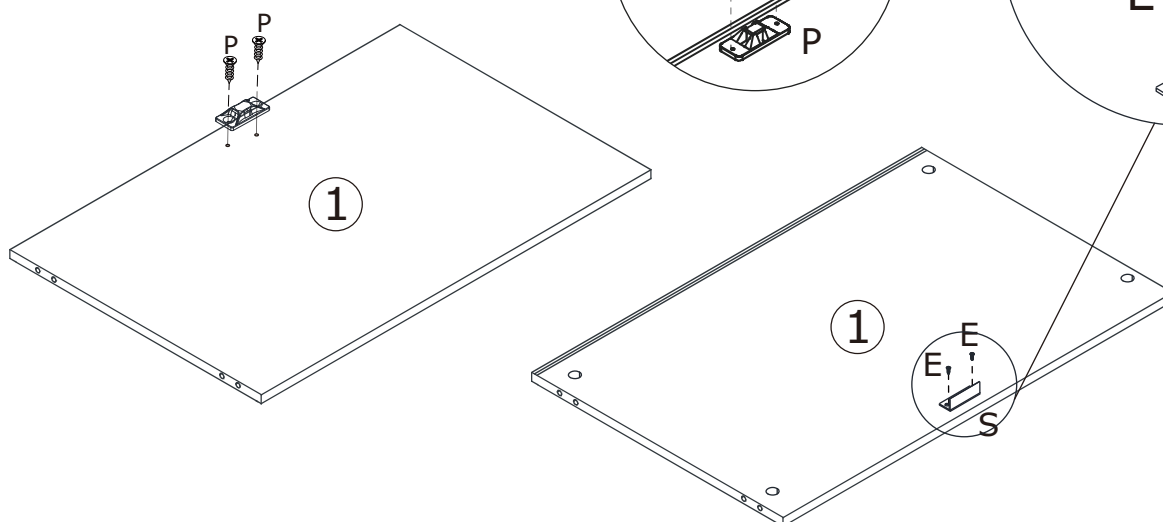

28

 
 
B x 7




Ø15 x 11 mm



Attach board 1, 5, 6 and 8 to board 2, add
cam lock(B) into board 1, 5, 6, 8 and turn
clockwise to tighten as shown.

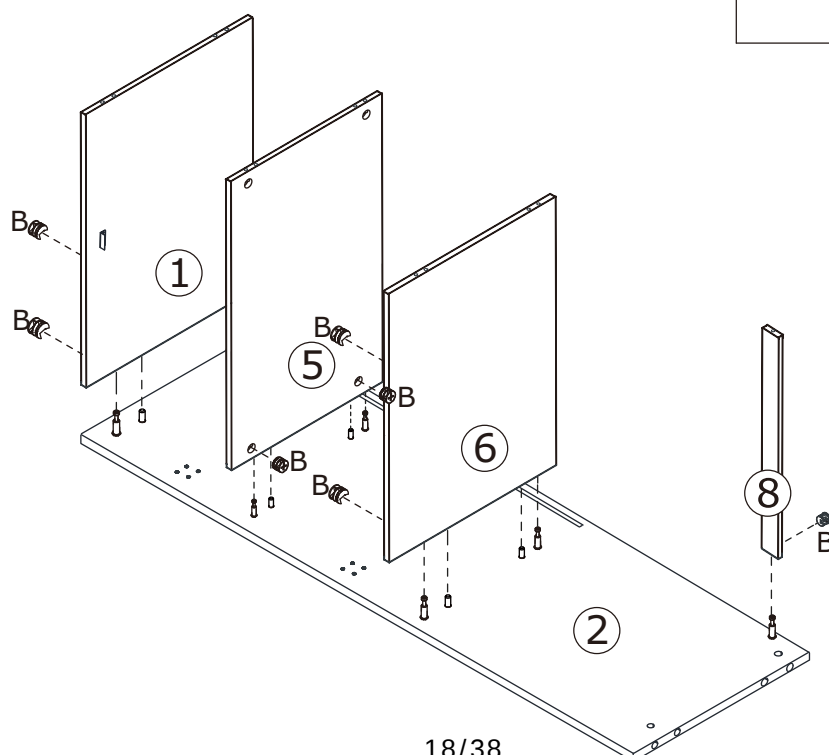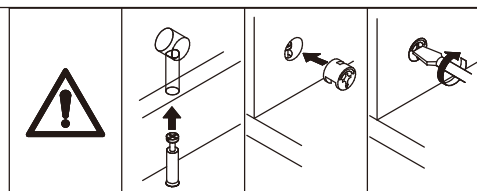

29

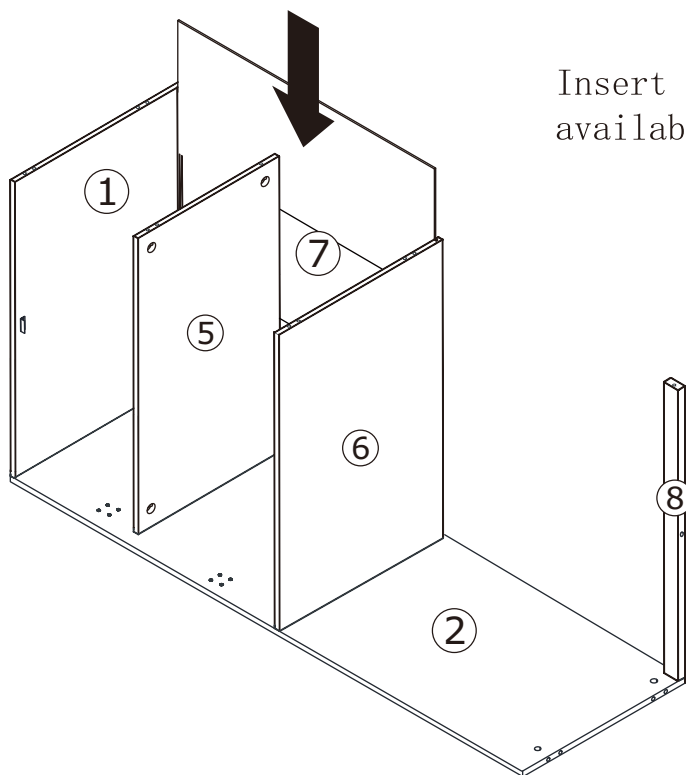 

Insert back board 7 along available grooves as shown.

30

 
 
 
B x 7





Ø15 x 11 mm




Attach board 3 to board 1, 5, 6 and 8, add cam lock(B) into board 1, 5, 6, 8 and turn clockwise to tighten as shown.

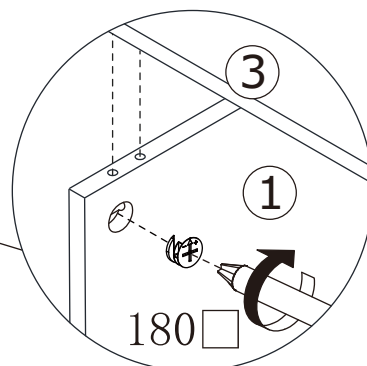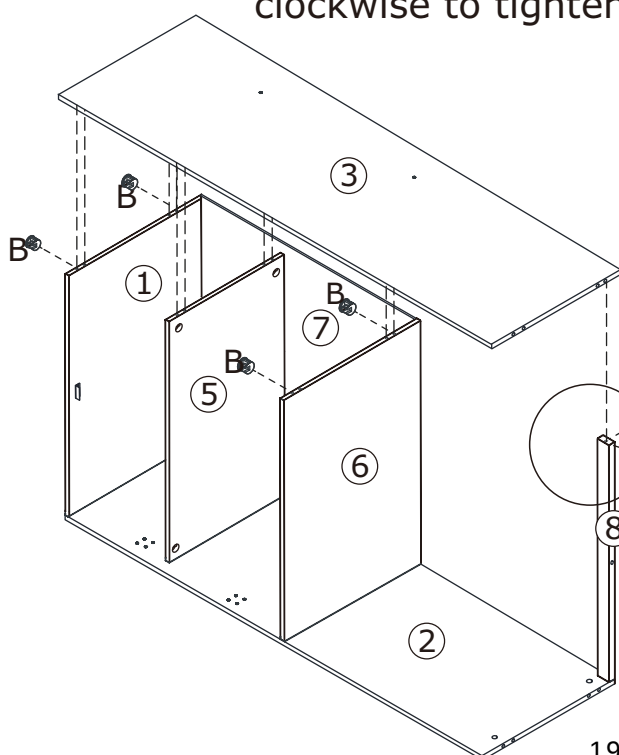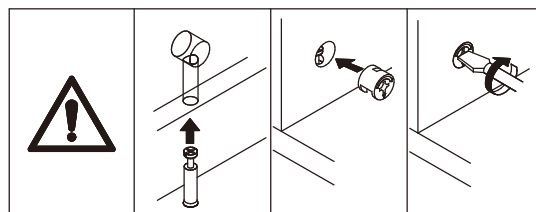

31

  G x 4 	F x 2  Ø4 x 22 mm	Q x 8  Ø3.5 x 14 mm	
--	--	--	---

 Fix hinge(G) to board 37 with screw(Q), fix knob(F) as shown.

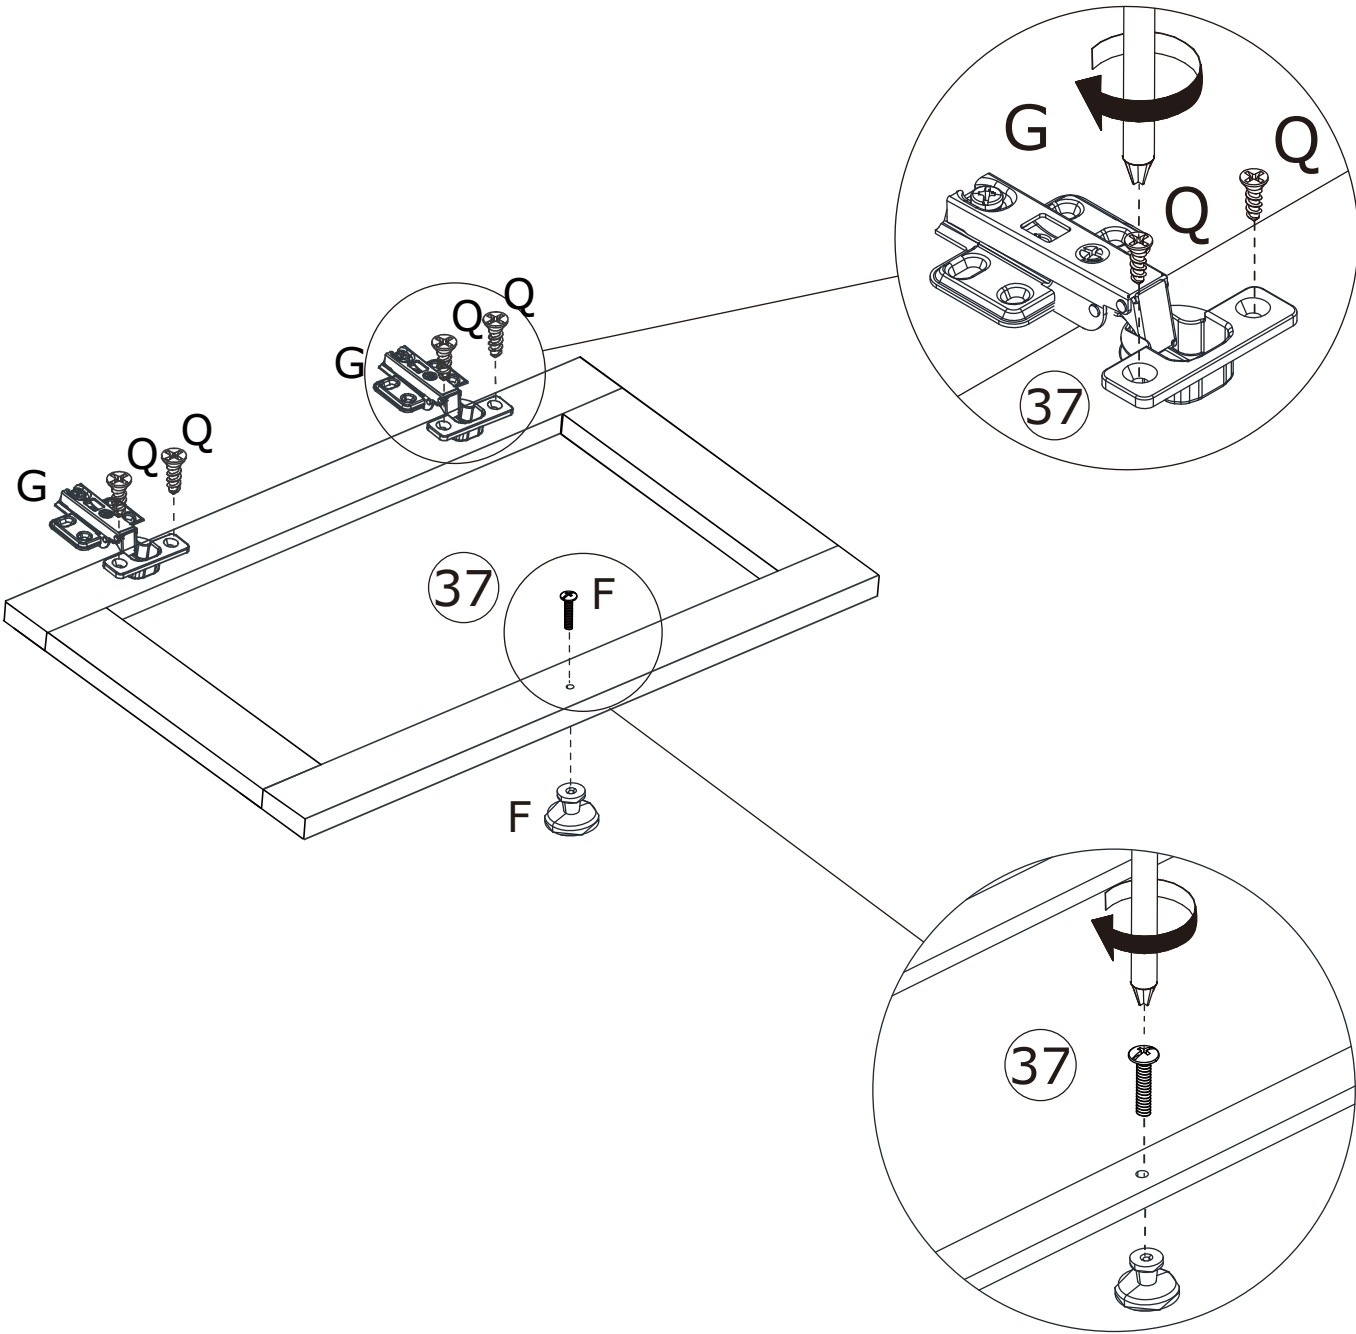


x2

32


Q x 16



 Ø 3.5 x 14 mm



 Assemble door panel 37 and 37 to board 2 and 3 by fixing hinge with screw(Q) as shown.

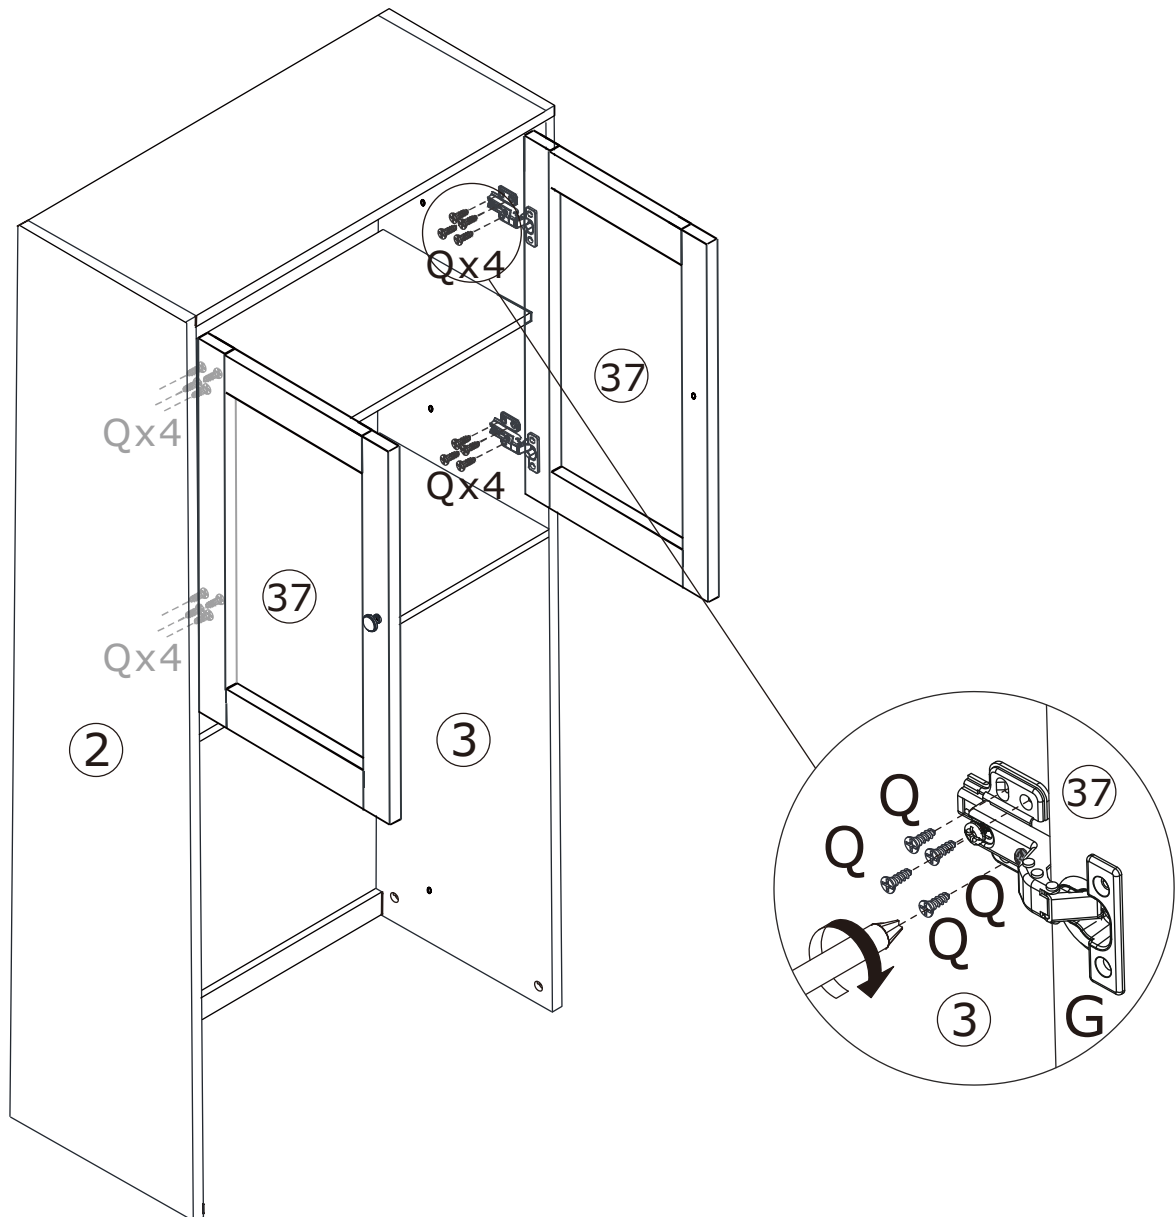


33




B x 5



 
Ø15 x 11 mm




   Attach the component to the cabinet (assembled in step 25), add cam lock(B) into and turn clockwise to tighten as shown.


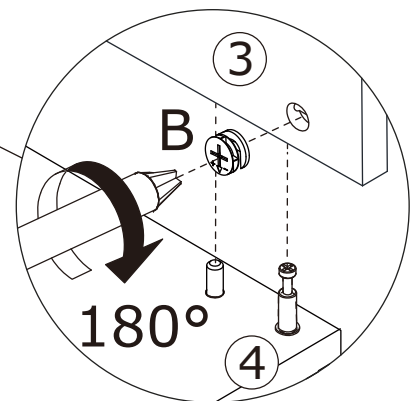
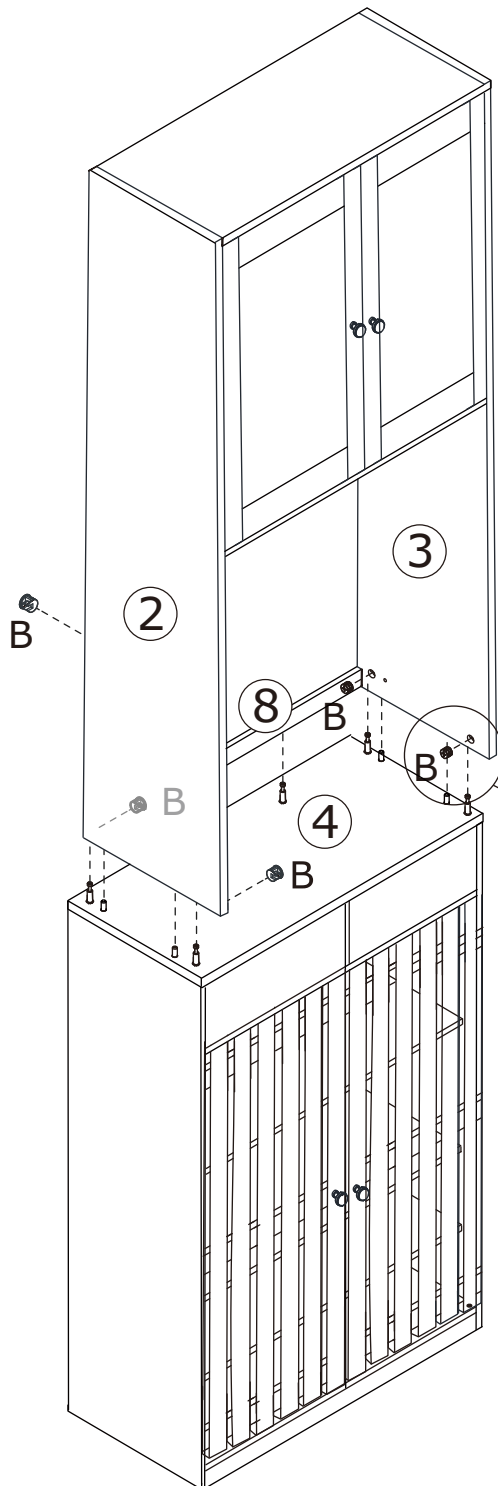
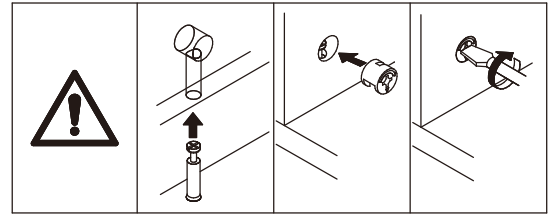


34

 A x 3  Ø6 x 35 mm	C x 2  Ø8 x 30 mm
--	--

 


    Screw eccentric rod(A) and insert wooden dowel(C) into board 19 at first.

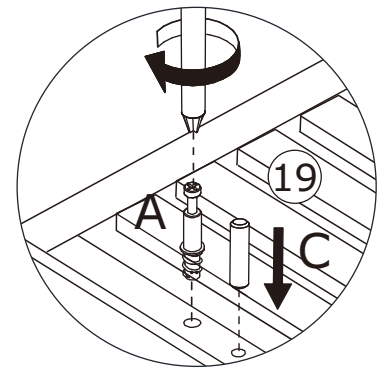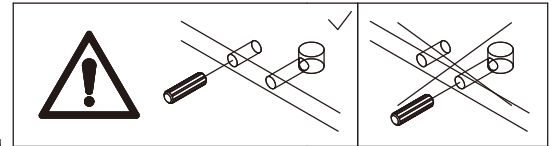
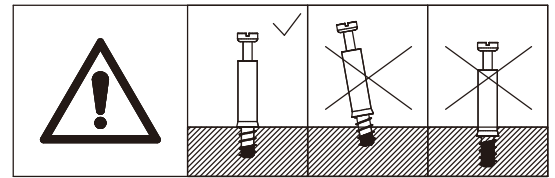
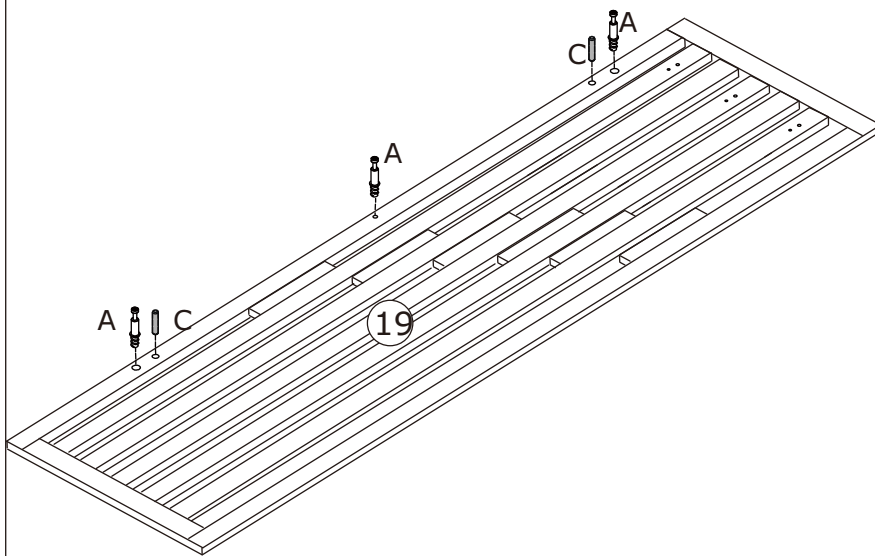


35


 
B x 3  Ø15 x 11 mm



 
 
 
Attach board 18 to board 19, add cam lock(B) into board 18 and turn clockwise to tighten as shown.

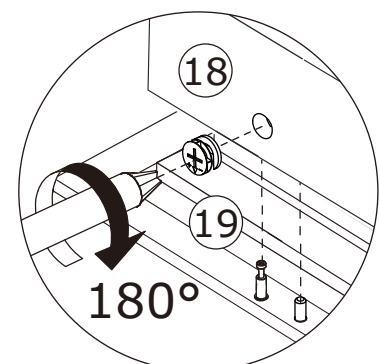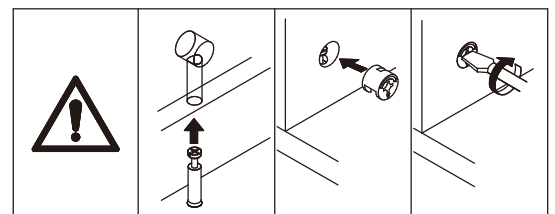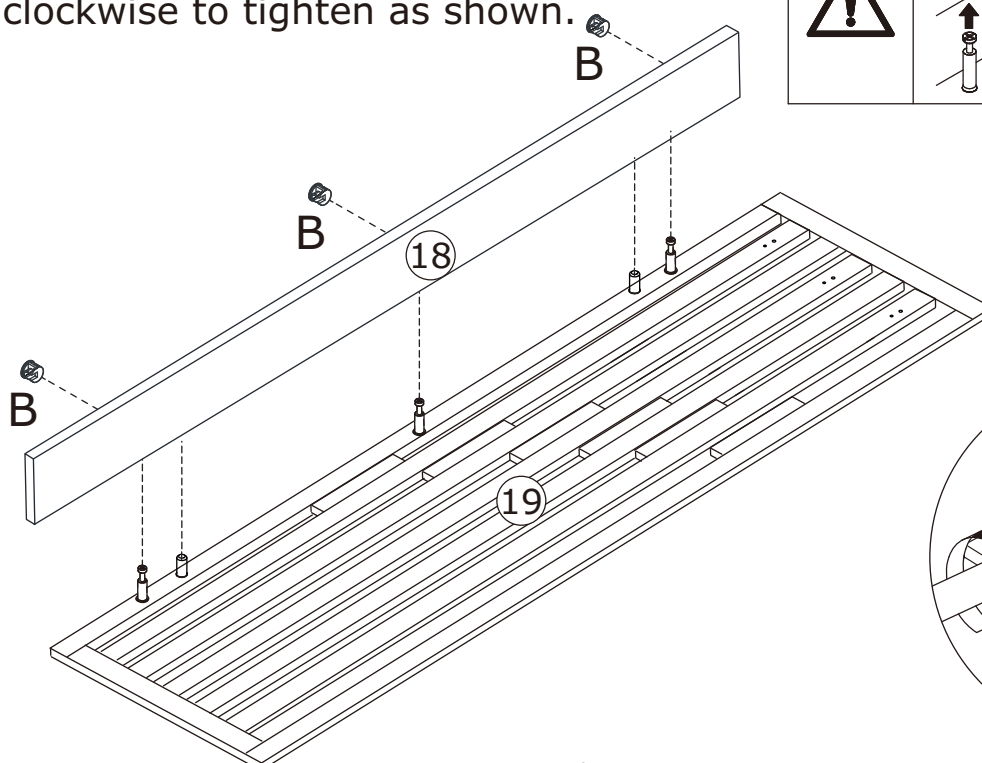



36

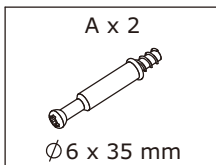  

 
 
 
Screw eccentric rod(A)
into board 23 at first.

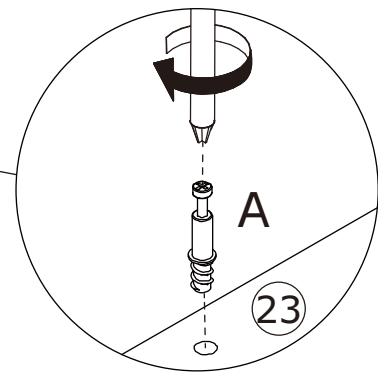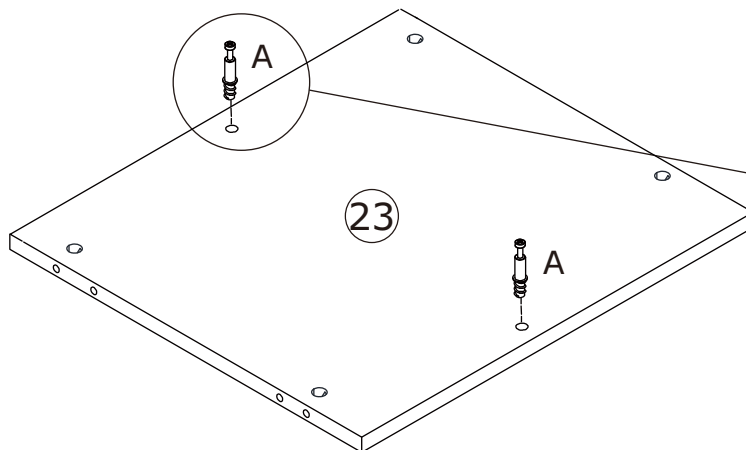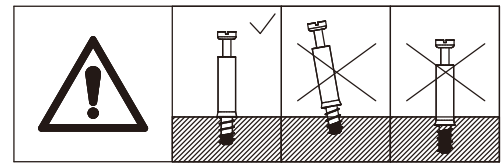



37

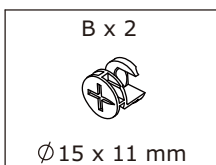  



 
 
 
Attach board 23 to board 24, add
cam lock(B) into board 24 and turn
clockwise to tighten as shown.

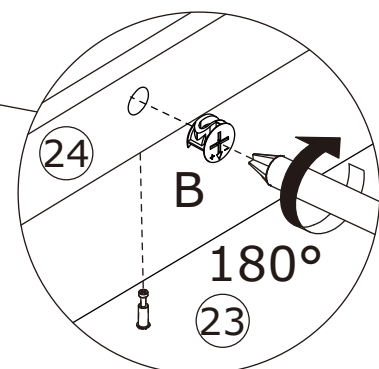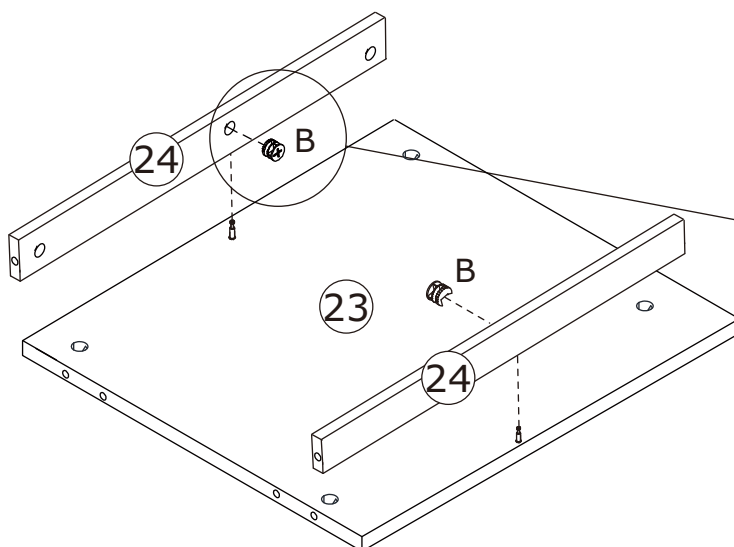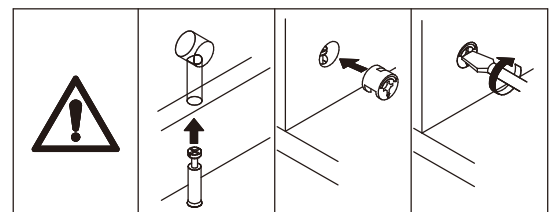



38

  A x 4  Ø 6 x 35 mm	C x 2  Ø 8 x 30 mm	D x 1  L=300 mm	E x 2  Ø 3 x 12 mm	
---	---	--	--	---

  
 
 
 
Fix rail(D) to board 21 with screw(E) as shown. Screw eccentric rod(A) and insert wooden dowel(C) into board 21 at first.

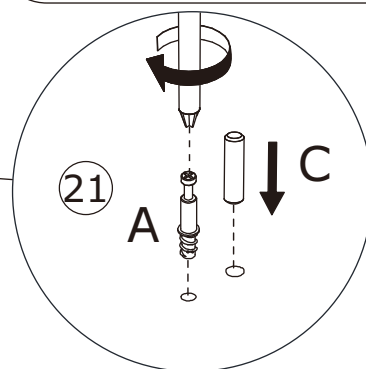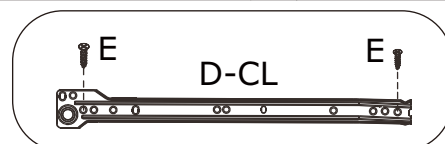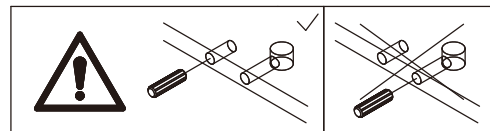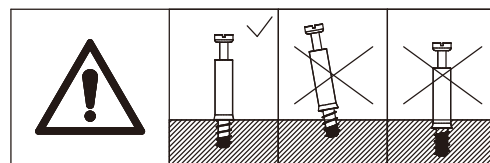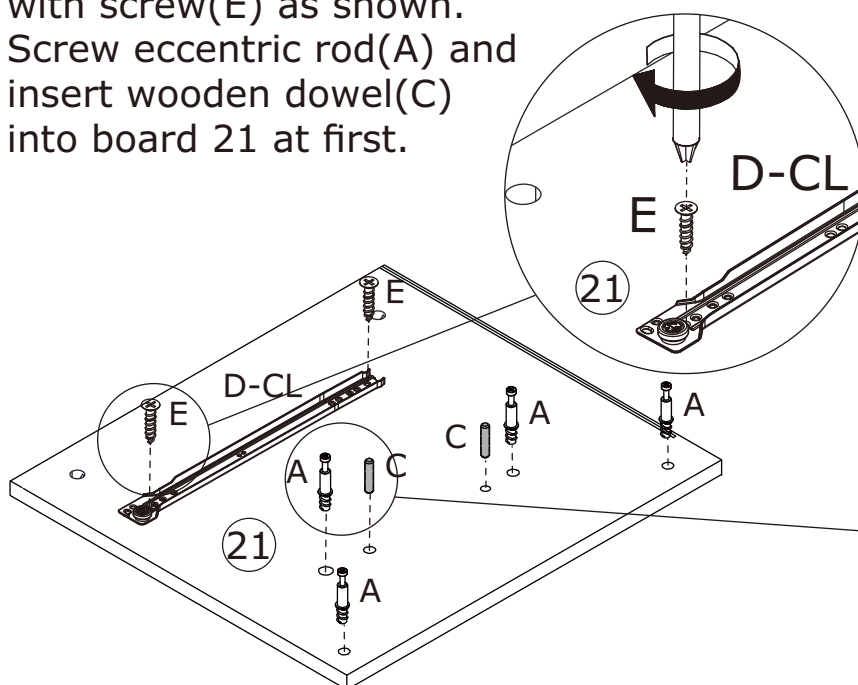

39

  A x 4  Ø 6 x 35 mm	C x 2  Ø 8 x 30 mm	D x 1  L=300 mm	E x 2  Ø 3 x 12 mm	
---	---	--	--	---

    Fix rail(D) to board 22 with screw(E) as shown. Screw eccentric rod(A) and insert wooden dowel(C) into board 22 at first.

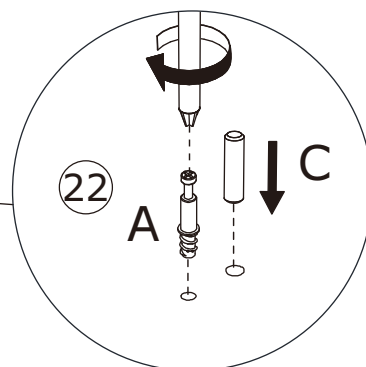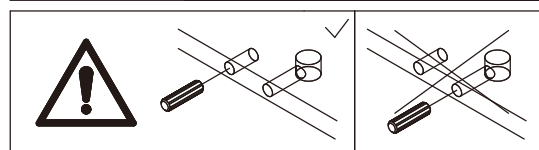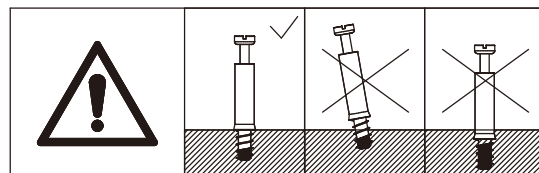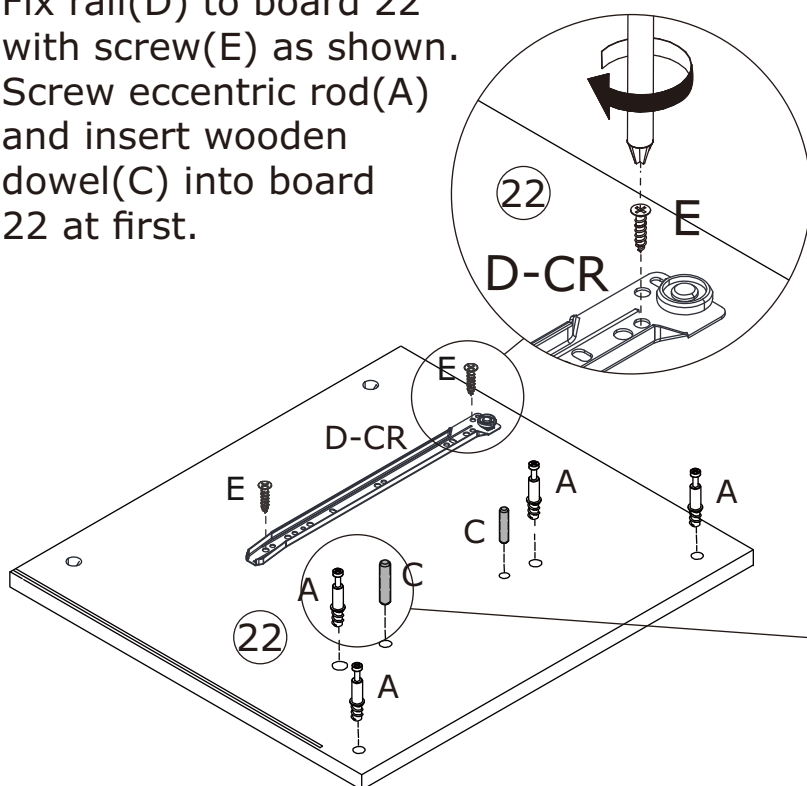


40





B x 4



 Ø15 x 11 mm



    Attach board 21 to board 23 and 24,
add cam lock(B) into board 23,
24 and turn clockwise to
tighten as shown.

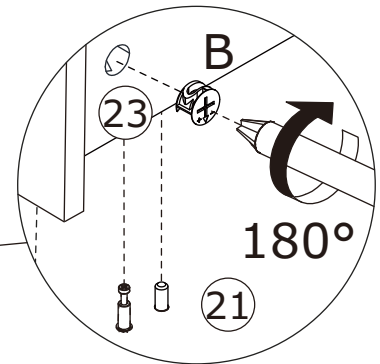
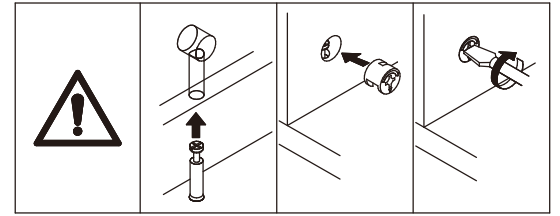
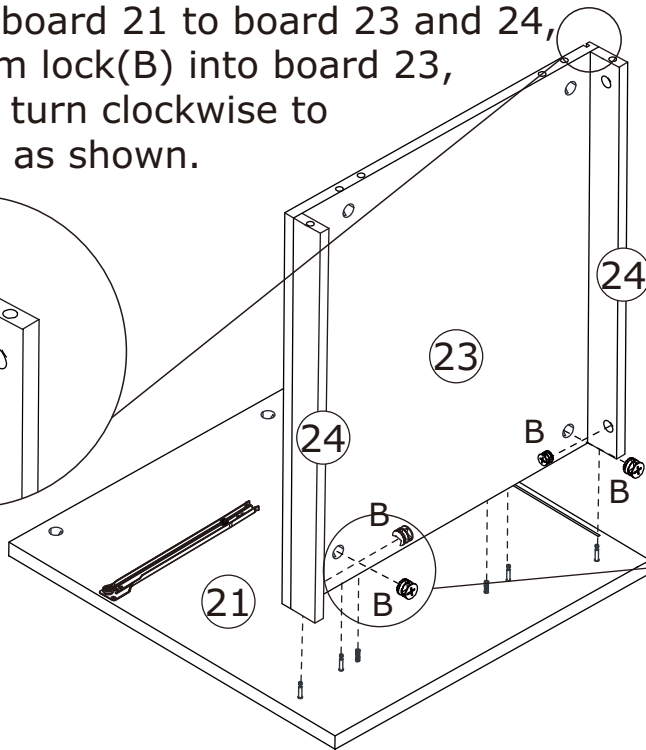
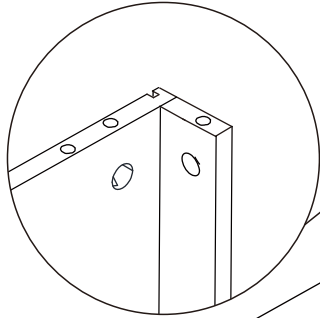


41

B x 4




    Ø15 x 11 mm

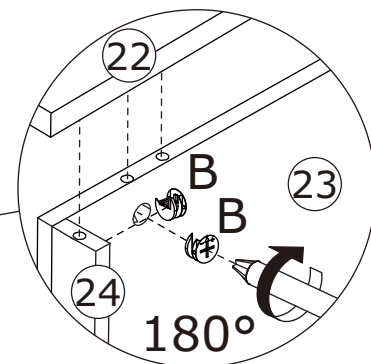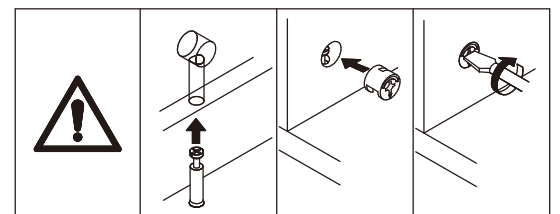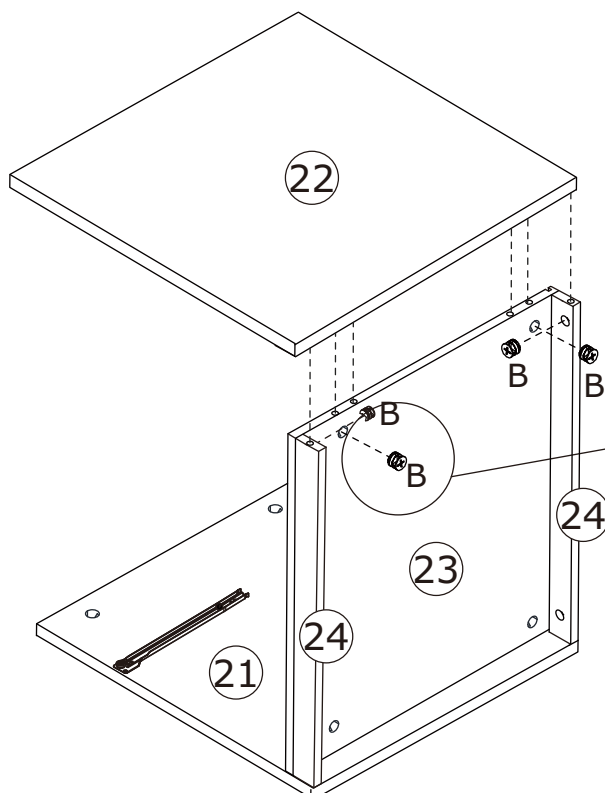


Attach board 22 to board 23 and 24,
add cam lock(B) into board 23, 24
and turn clockwise to tighten as shown.

 
42

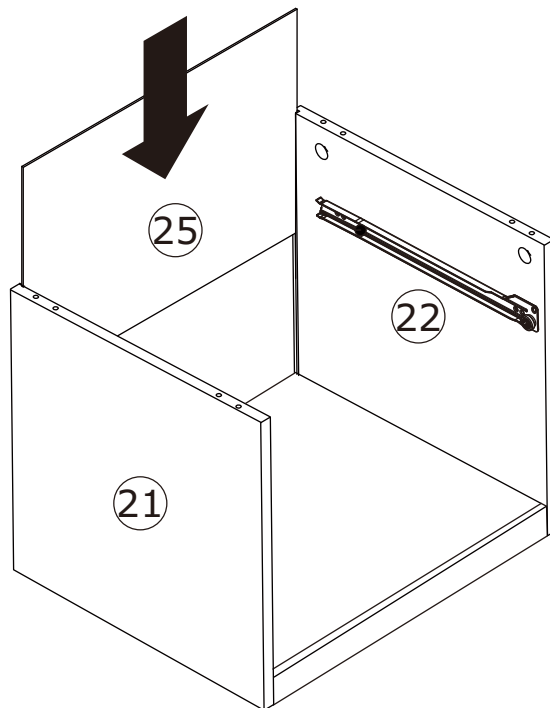




Insert back board 25 along available grooves as shown.

 43

A x 4

  Ø 6 x 35 mm

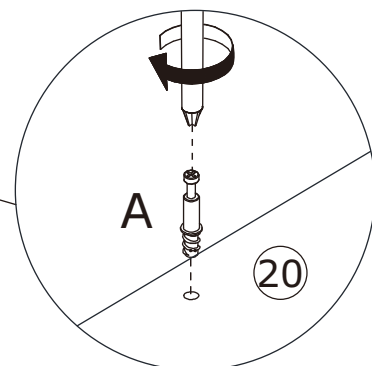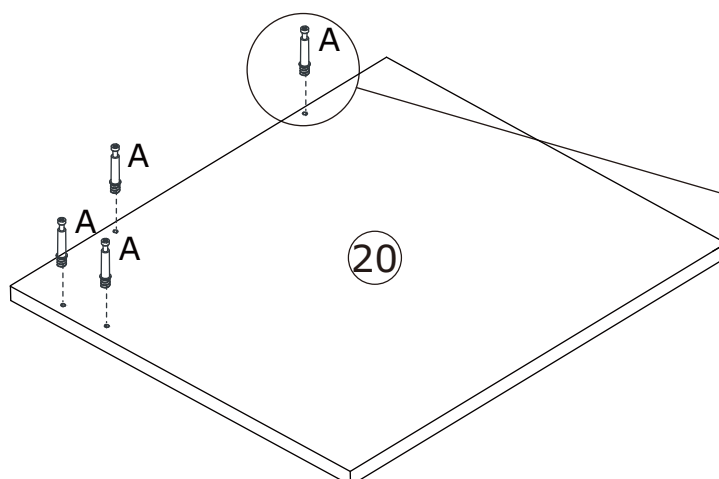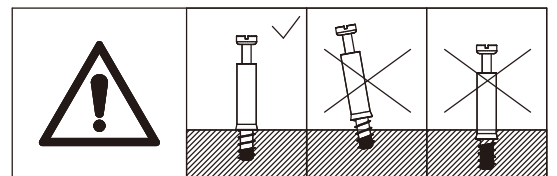   


Screw eccentric rod(A)
 into board 20 at first.





44



 
A x 4

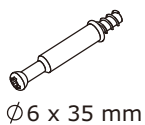

C x 4

  

   Screw eccentric rod(A) and insert wooden dowel(C) into board 20 at first.


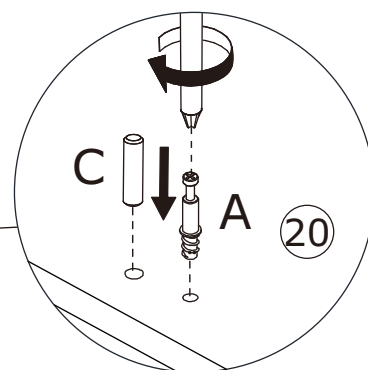
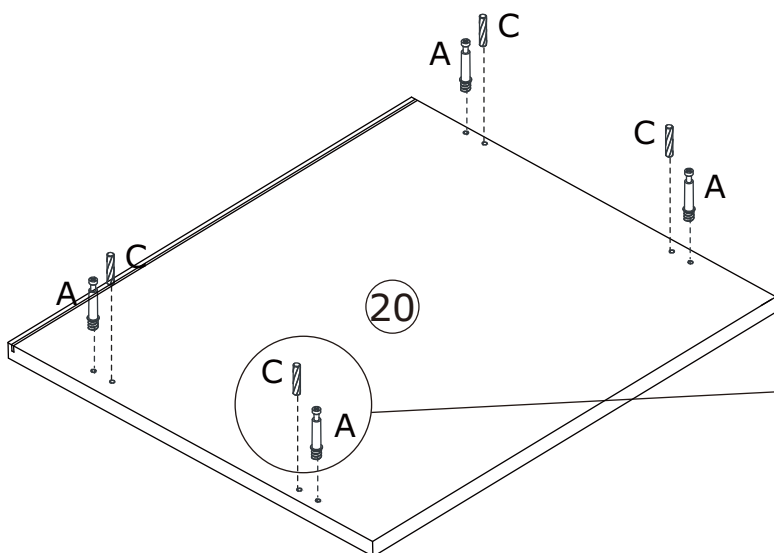
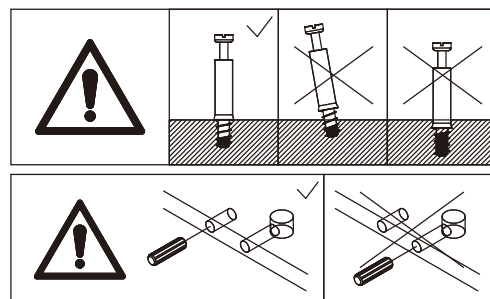


45

B x 4



    Ø15 x 11 mm

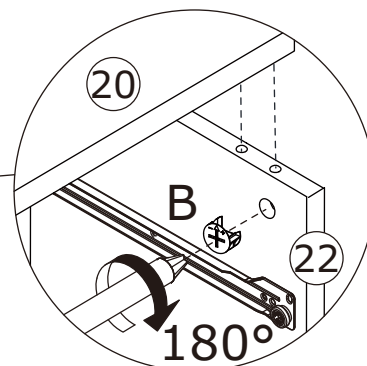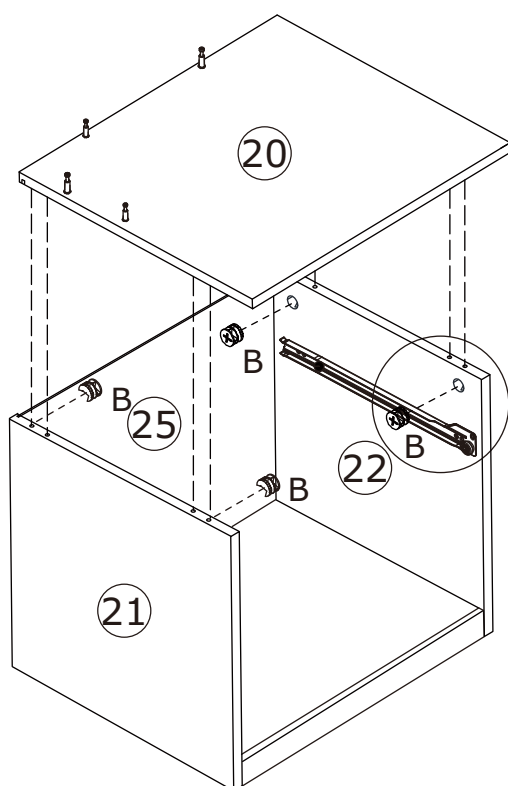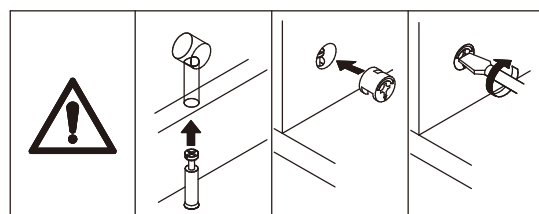



Attach board 20 to board 21 and 22, add cam lock(B) into board 21, 22 and turn clockwise to tighten as shown.

46



B x 4




 
 
Ø15 x 11 mm

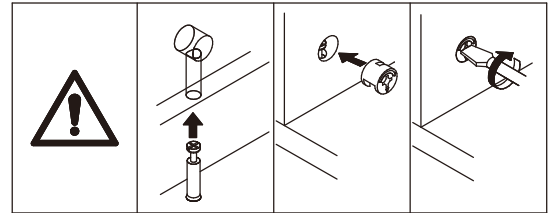

  
Attach board 18 and 19 to board 20 ,
add cam lock(B) into board 18, 19
and turn clockwise to tighten as shown.

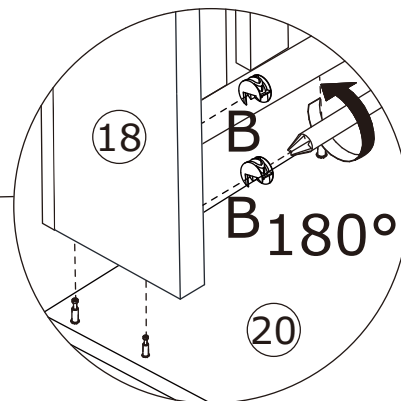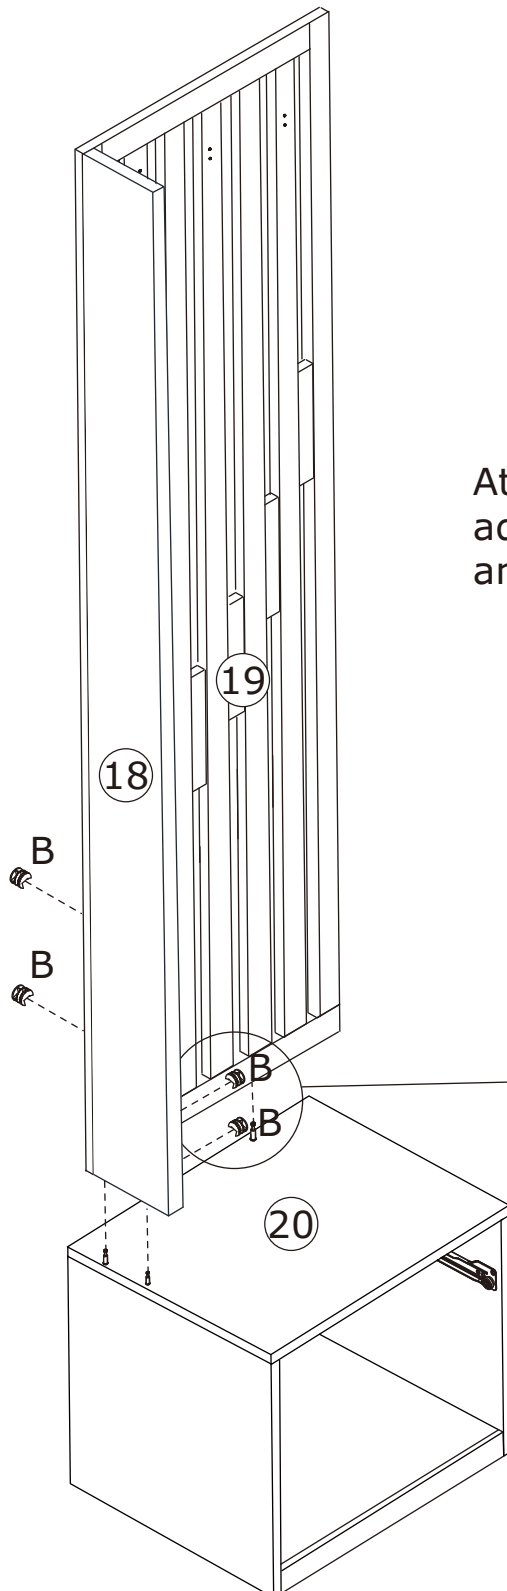

47

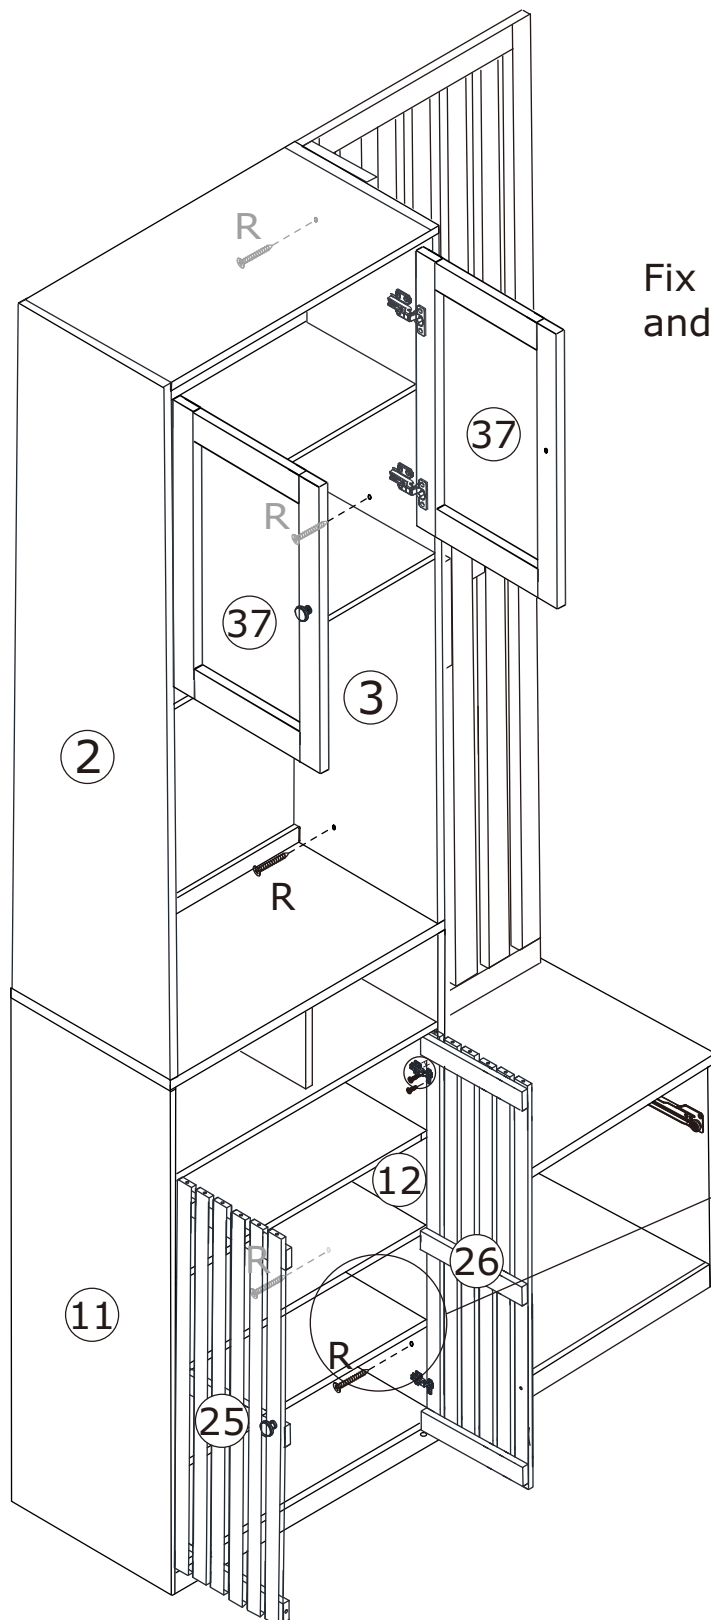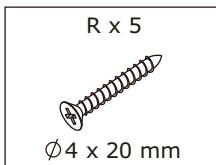   

 Fix board 3 and 11 to board 18 and 21 with screw(R) as shown.

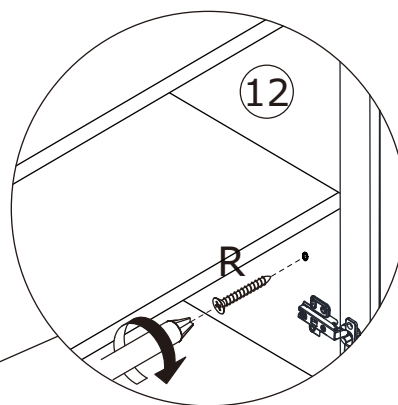



48

E x 16





Ø 3 x 12 mm

 
 
J x 16

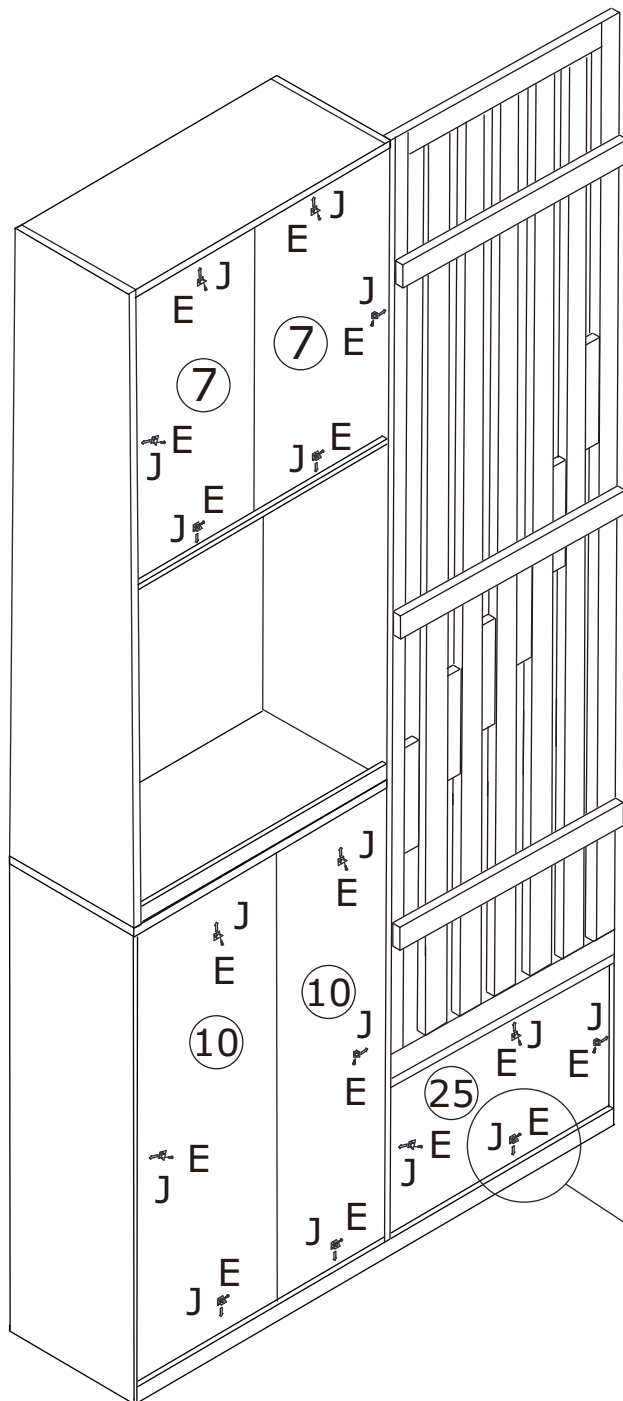

  
Insert buckle(J) into back slots and fix to tighten with screws(E) as shown.

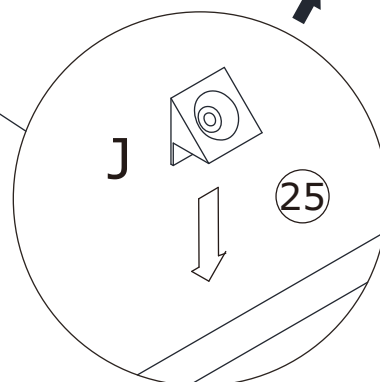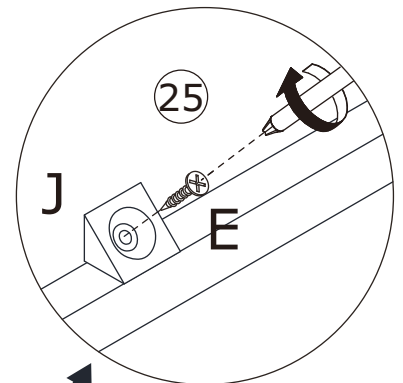

49

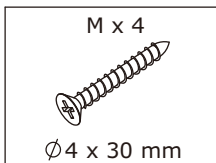  


 Fix board 32 and 33 to board 34 with screw(M) as shown.

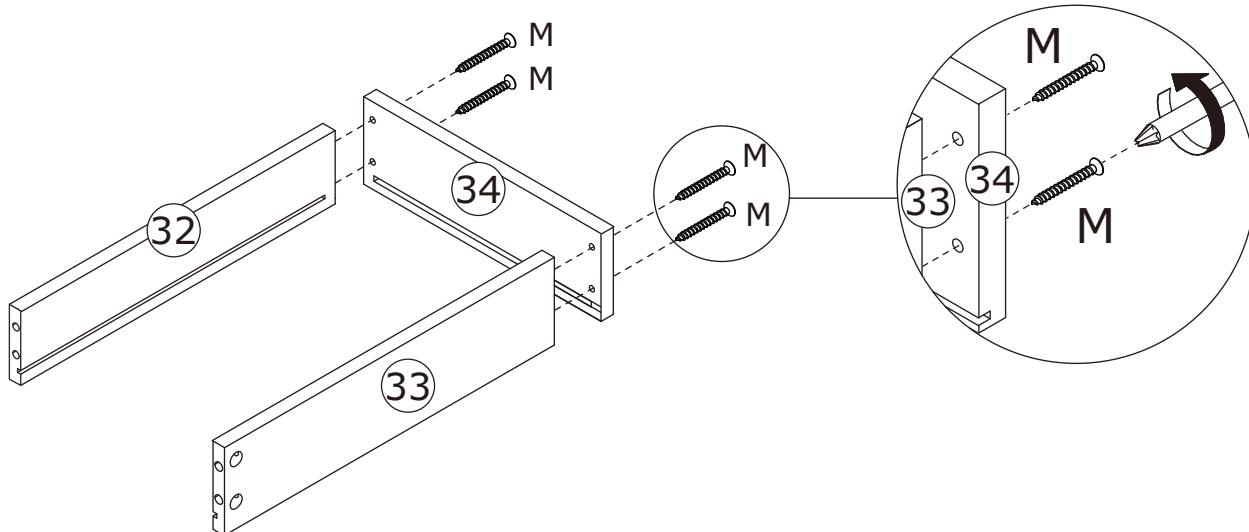


50

 Insert bottom board 35 along available grooves as shown.


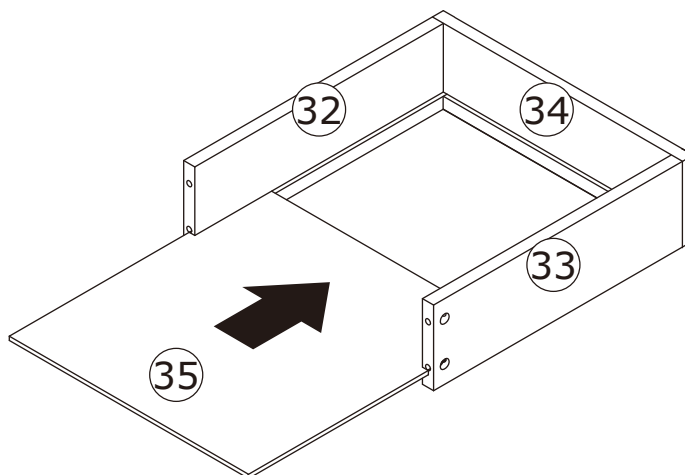


51



 
A x 4

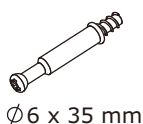

F x 1

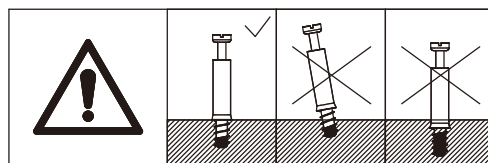  

   Screw eccentric rod(A) into board 36, fix knob(F) at first.

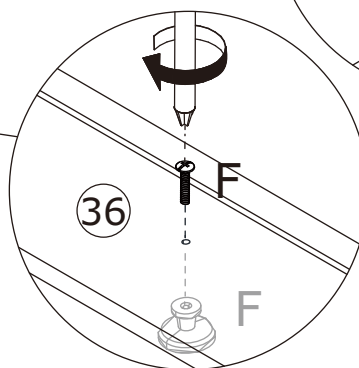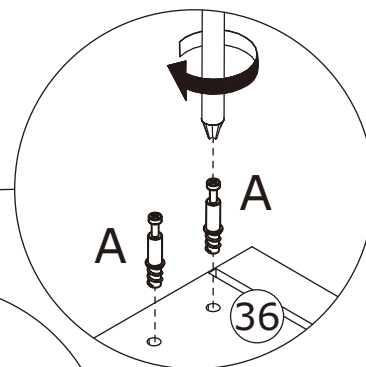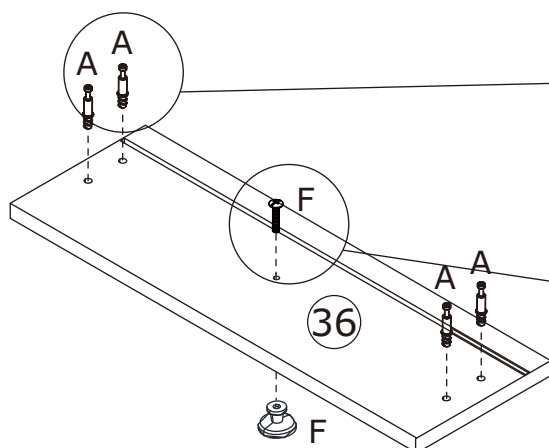


52



B x 4




 
Ø15 x 11 mm

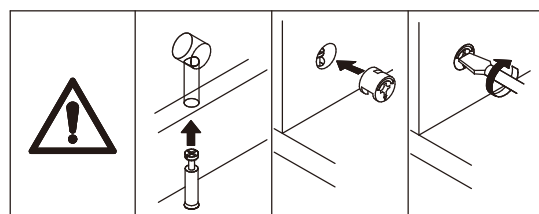

 
 
Attach board 36 to board 32 and 33, add cam lock(B) and turn clockwise to tighten as shown.

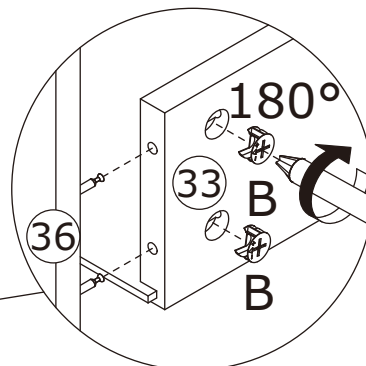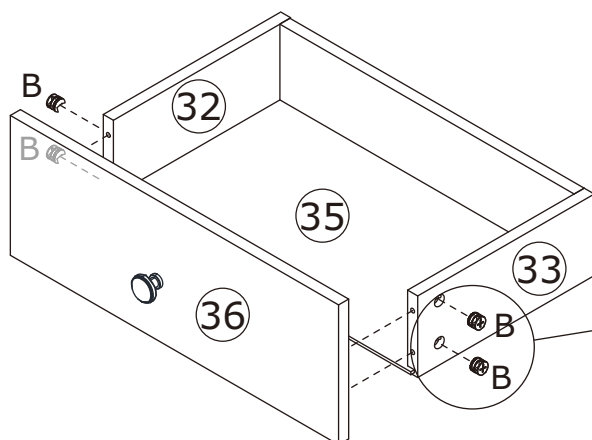


53

  
D x 1  L=300 mm	E x 4  Ø3 x 12 mm	
--	--	---

  Fix runner(D-DL) and (D-DR) to board 32 and 33 with screw(E) as shown.

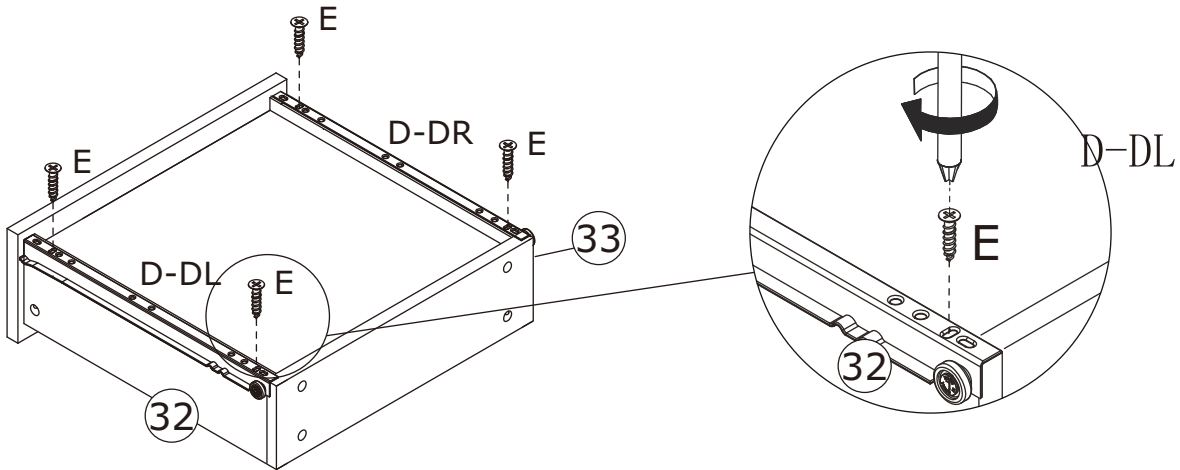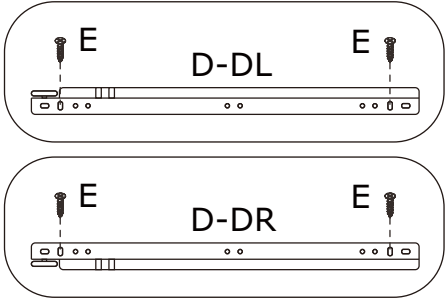

54

 E x 6  Ø3 x 12 mm	T x 3 	
--	--	---

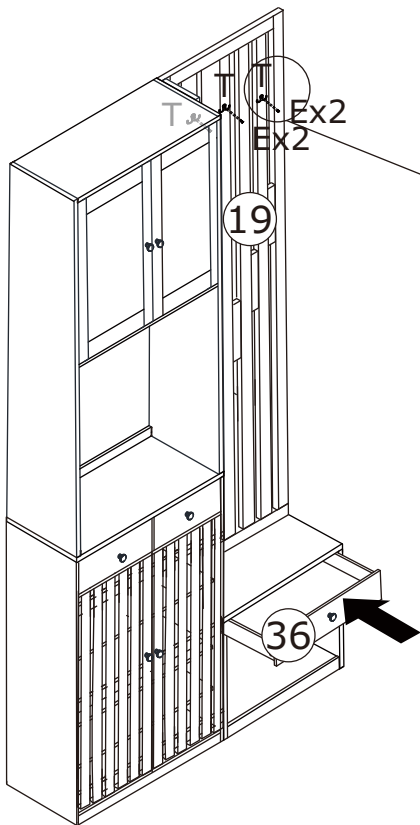 

Fix hook(T) to board 19 with screw(E) as shown.

55

 
 
 
 
 
L x 4




K x 76









Place seat cushion
39 on board 20.

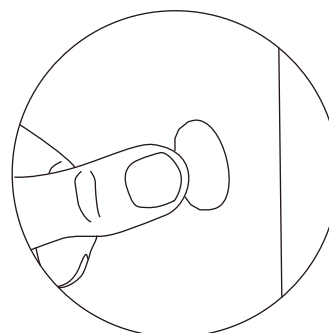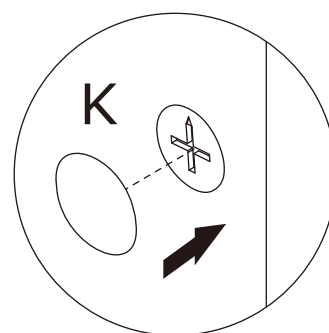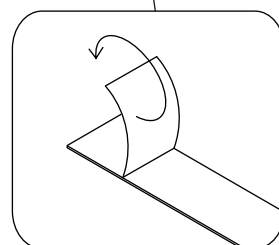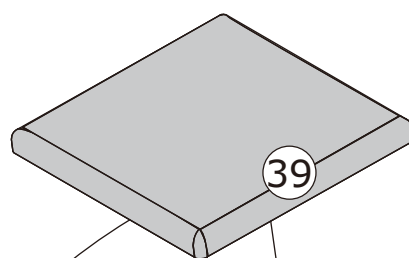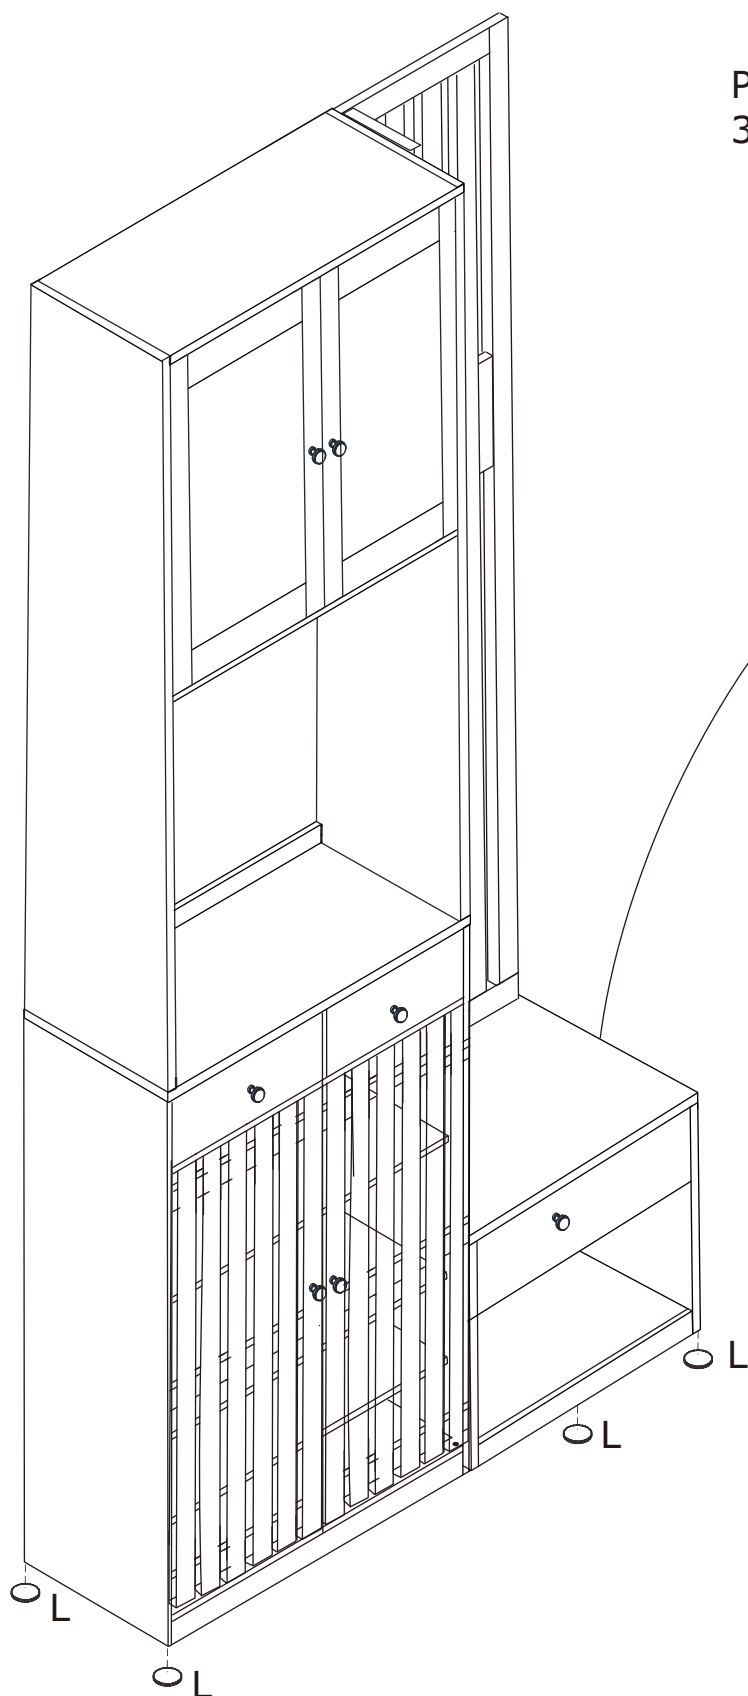

56

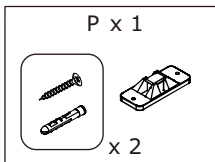 

      Drill holes on your wall, and knock part(P) into.

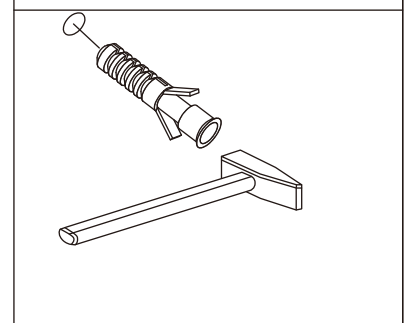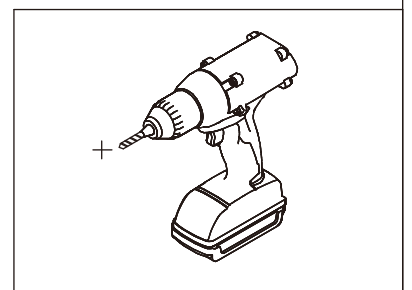
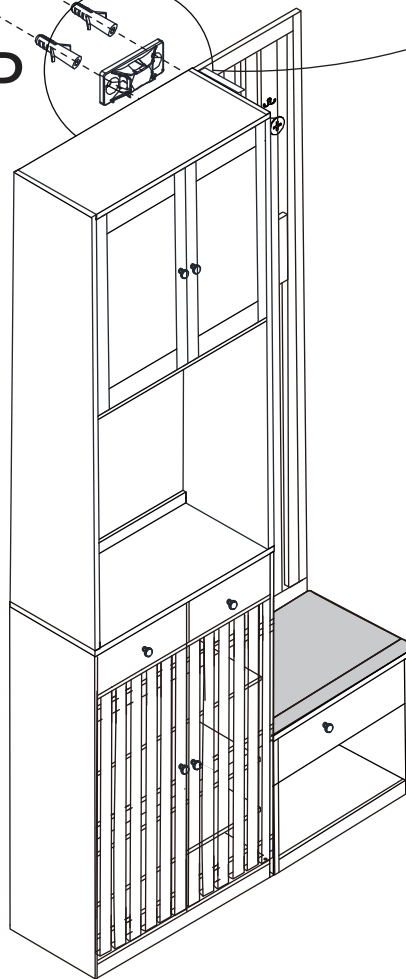
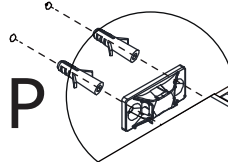
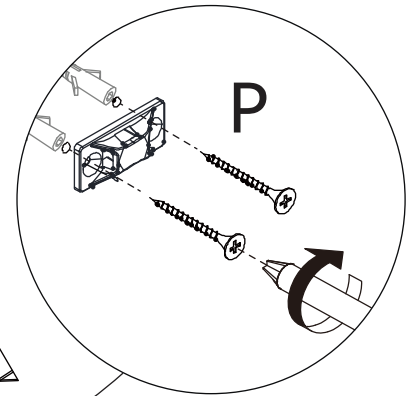
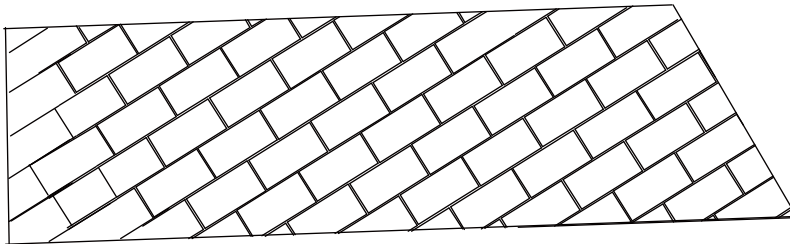



57

P x 1









 
 
 
 
 
 
Install anti-tipping device as shown.

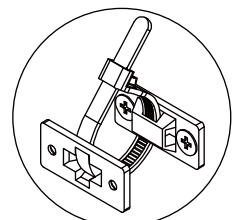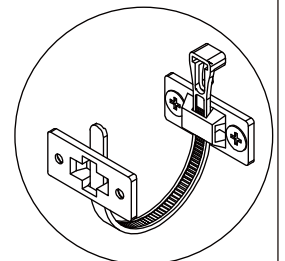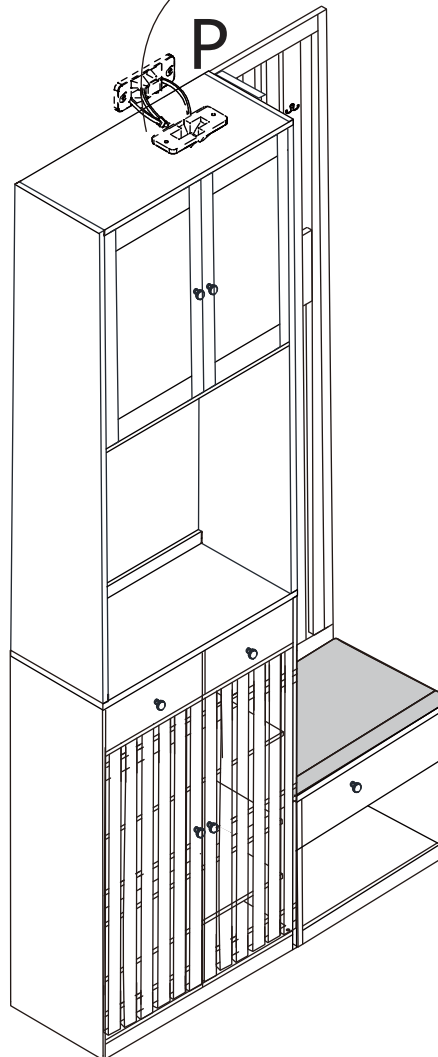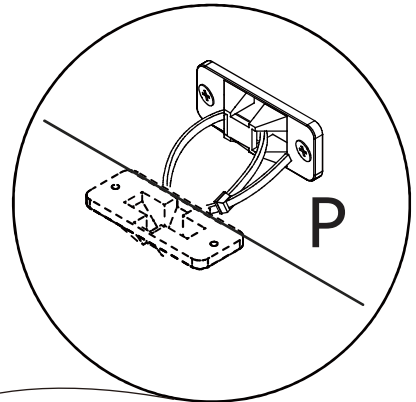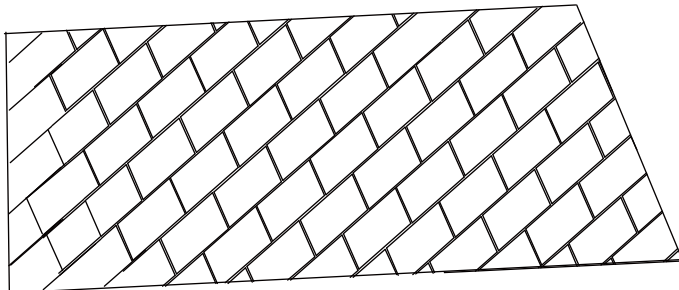



If doors are still not aligned if the hinges are properly correctly, please watch the video.
            
<https://youtu.be/n0Lb36SoODM>

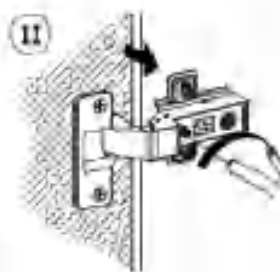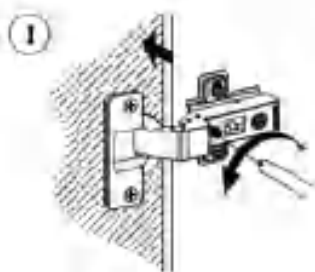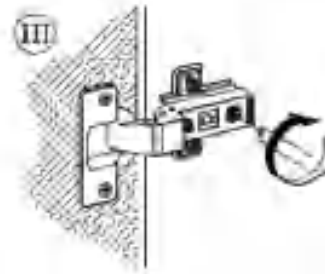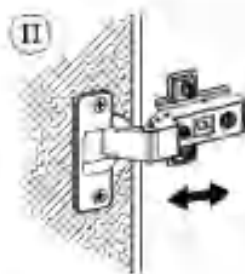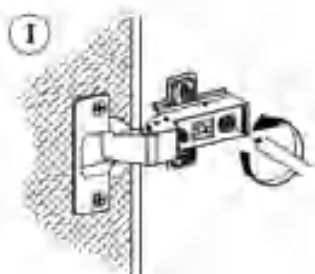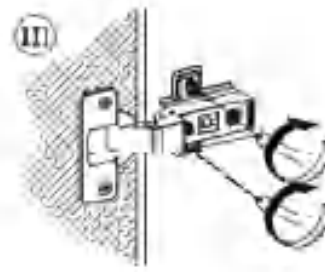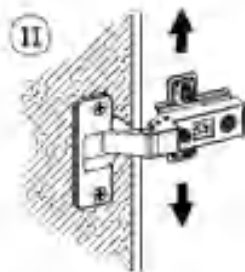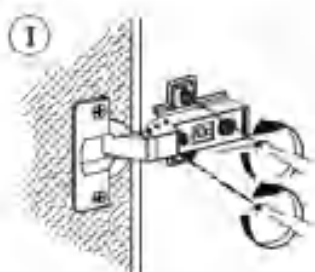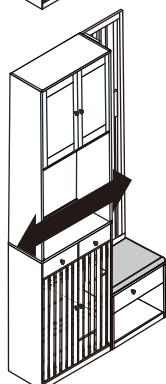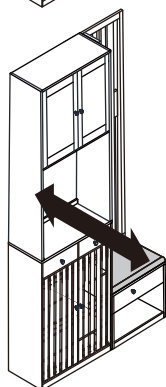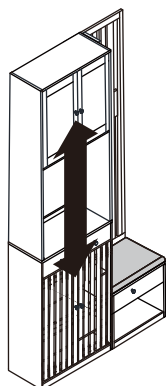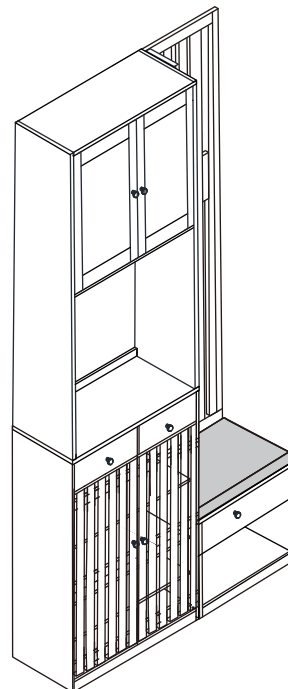

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



0000 0000000000 0 0 00000 0



000000000000